


ASSEMBLY INSTRUCTION


MODEL:18046-995	Boom - Single Chair	Corduroy	Beige
18046-888	Boom - Single Chair	Velvet	Black
18046-987	Boom - Single Chair	Velvet	Blue
18046-980	Boom - Single Chair	Velvet	Beige
18046-989	Boom - Single Chair	Velvet	Pink
18046-894	Boom - Single Chair	Velvet	Green
18046-000	Boom - Single Chair	Teddy	White
18046-005	Boom - Single Chair	Teddy	Grey / Black
18046-008	Boom - Single Chair	Teddy	Black / Black

Parts List


Ax1

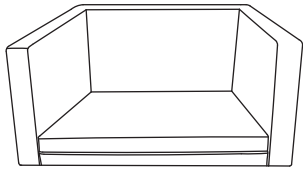


Ex1

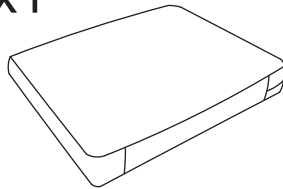

Bx4

 


Fx1

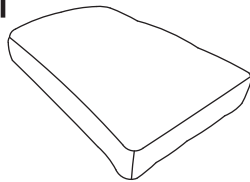


Cx16




Gx2

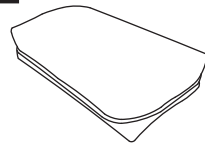


Dx1

 

(1)

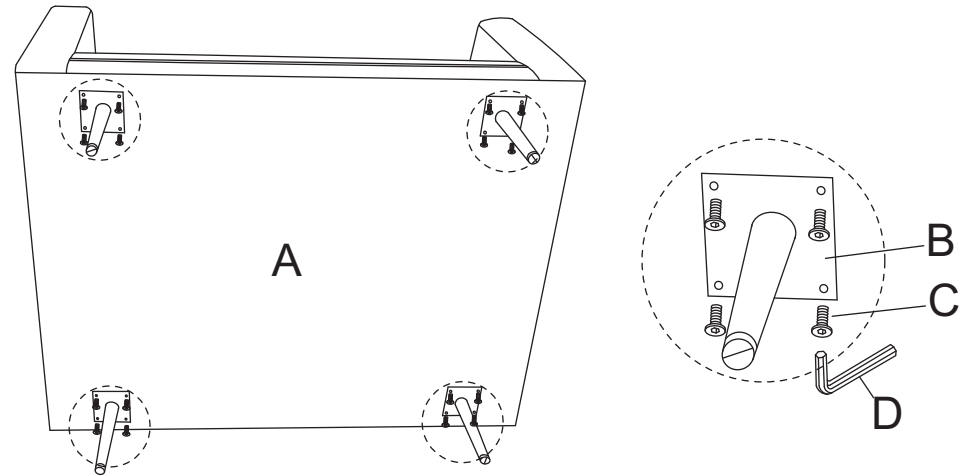

(2)

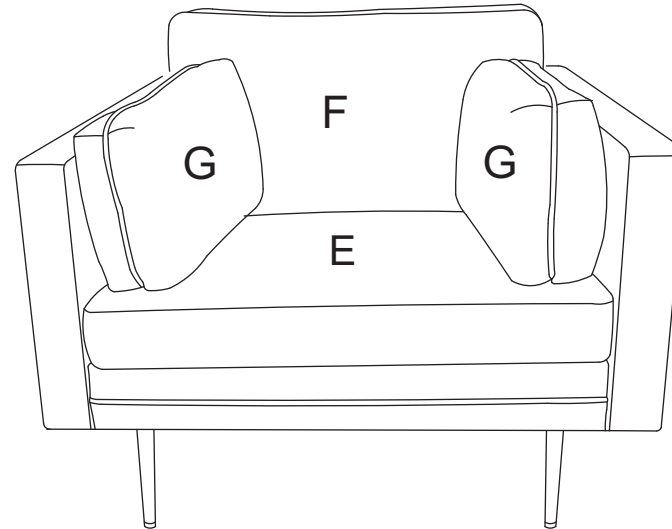

OBS legs and hardware are packed inside of the sofa!
Open the zipper on the bottom of the sofa for the parts.