





READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Maintenance work on electrical connections of the chair or on electrical auxiliary / control connections may only be carried out by qualified electricians. Before starting troubleshooting, the mains plug must be unplugged. In order to avoid accidents, please read the following notes regarding use:



- WARNING Beware of moving parts
- WARNING Do not allow children to play with this item of furniture
- WARNING Do not leave children under 14 years of age unsupervised with this item of furniture
- WARNING Do not allow children under 14 years of age operate this item of furniture
- WARNING Check for the presence of pets before operating this item of furniture WARNING Disconnect this item from the power supply before moving or cleaning.
- WARNING Do not allow children to play with the furniture.
- WARNING Do not sit on the armrests or the backrests.
- WARNING Important safety instructions. It is important for the safety of persons to follow these instructions. Save these instructions.
- WARNING This product is not suitable for self-assembly/installation. Assembly and installation should be carried out by a competent person only.
- WARNING This item of furniture contains no user maintainable parts. In the event of a fault contact your supplier.
- WARNING The product is suitable for the private household and not for the commercial purpose.
- Examine the appliance frequently for signs of wear or damage. If there are such signs or if the appliance has been misused or does not work, contact the supplier for further information.
- The leg rest part is not designed to support the weight of user!!!
- Make sure the item is set up in a flat, non-sloping place.
- Keep children of less than 14 years away from the furniture unless they are constantly under surveillance. -The furniture can be operated by person of 14 years and older if they have been instructed concerning use of the furniture in a safe way and understands the hazards involved.
- When operating a switch that initiates and maintains the movement of the furniture or terminates the movement of the furniture or causes a change of the direction of the movement of the furniture, make sure that other persons are kept away.
- Placement of furniture to avoid creating entrapment hazards with other furniture.
- This appliance can be operated by person aged from 14 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.