



Warnings and Precautions for User Manual:

Improper handling of the parasol can lead to damage to the parasol.

Do not hang any objects on the parasol.

In the event of rain or snow, the umbrella must be closed - risk of breakage.

If the wind picks up, close the umbrella immediately and secure it adequately (tape, protective cover).

Please close your umbrella when it is windy ≥ 4 .

Never leave the open parasol unattended.

Do not leave children unsupervised with the umbrella.

Never light grills (gas, charcoal, electric) or open fire under or next to the sunshade - risk of fire. The screen can be damaged by flying sparks.

Never use heaters (gas, infrared) under the umbrella – risk of fire.

Check the parasol regularly for damage.

Discontinue use of the parasol if any part of the parasol is cracked, cracked or deformed.

Regularly check all load-bearing parts such as struts. Tighten loose screws.