06440003/01 RIO ZL07Z MX Logistika SL,spol.s.r.o. ROZNAVSKA 32, SK-82104 BRATISLAVA, Slovakia

E-Mail: info@moebelix.at





Can only operated in conjunction with a power supply and battery power pack as manufacture provided.







READ CAREFULLY AND KEEP FOR FUTURE REFERENCE


Maintenance work on electrical connections of the chair or on electrical auxiliary / control connections may only be carried out by qualified electricians. Before starting troubleshooting, the mains plug must be unplugged. In order to avoid accidents, please read the following notes regarding use:



- WARNING Beware of moving parts
- WARNING Do not allow children to play with this item of furniture
- WARNING Do not leave children under 14 years of age unsupervised with this item of furniture
- WARNING Do not allow children under 14 years of age operate this item of furniture
- WARNING Check for the presence of pets before operating this item of furniture
- WARNING Disconnect this item from the power supply before moving or cleaning.
- WARNING Do not allow children to play with the furniture.
- WARNING Do not sit on the armrests or the backrests.
- **WARNING** Important safety instructions. It is important for the safety of persons to follow these instructions. Save these instructions.
- **WARNING** This product is not suitable for self-assembly/installation. Assembly and installation should be carried out by a competent person only.
- WARNING This item of furniture contains no user maintainable parts. In the event of a fault contact your supplier.
- WARNING The product is suitable for the private household and not for the commercial purpose.
- Examine the appliance frequently for signs of wear or damage. If there are such signs or if the appliance has been misused or does not work, contact the supplier for further information.
- The leg rest part is not designed to support the weight of user!!!
- Make sure the item is set up in a flat, non-sloping place.
- Keep children of less than 14 years away from the furniture unless they are constantly under surveillance.
- -The furniture can be operated by person of 14 years and older if they have been instructed concerning use of the furniture in a safe way and understands the hazards involved.
- When operating a switch that initiates and maintains the movement of the furniture or terminates the movement of the furniture or causes a change of the direction of the movement of the furniture, make sure that other persons are kept away.
- Placement of furniture to avoid creating entrapment hazards with other furniture.
- This appliance can be operated by person aged from 14 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- This appliance shall not be installed in area where the general public including children have access.

- This item of furniture contains no user maintainable parts. In the event of a fault contact your supplier.
- The appliance is only to be used with the power supply unit provided with the appliance.
- Use the product only for its intended purpose.
- Keep children away from the packaging material. Be careful not to put them over your head or swallow parts of them. Suffocation !!!
- Do not stand or sit on the extended backrest or footrest. Do not stand on the chair when the stand-up aid is raised! Regularly check electrical cables and connections for damage. Damage must be remedied immediately by an authorized specialist or specialist. The appliance must not be opened or repaired by yourself!
- The product may not be repaired or opened in case of defects. If the product is defective, please return it to an authorized dealer or ask for repair.
- Unplug the power cord from the wall outlet when the chair is taken out of service for a long period of time,
- Keep your furniture away from direct sunlight.
- To clean, use a damp cloth or sponge or wipe dry with a lint-free cotton cloth.
- Do not use cleaning fluid or alcohol to clean the chair surface.
- Cleaning and user maintenance shall not be made by children.
- Always disconnect the furniture from the supply before assembling, disassembling, performing maintenance or cleaning.

Max loading weight: 120 kg

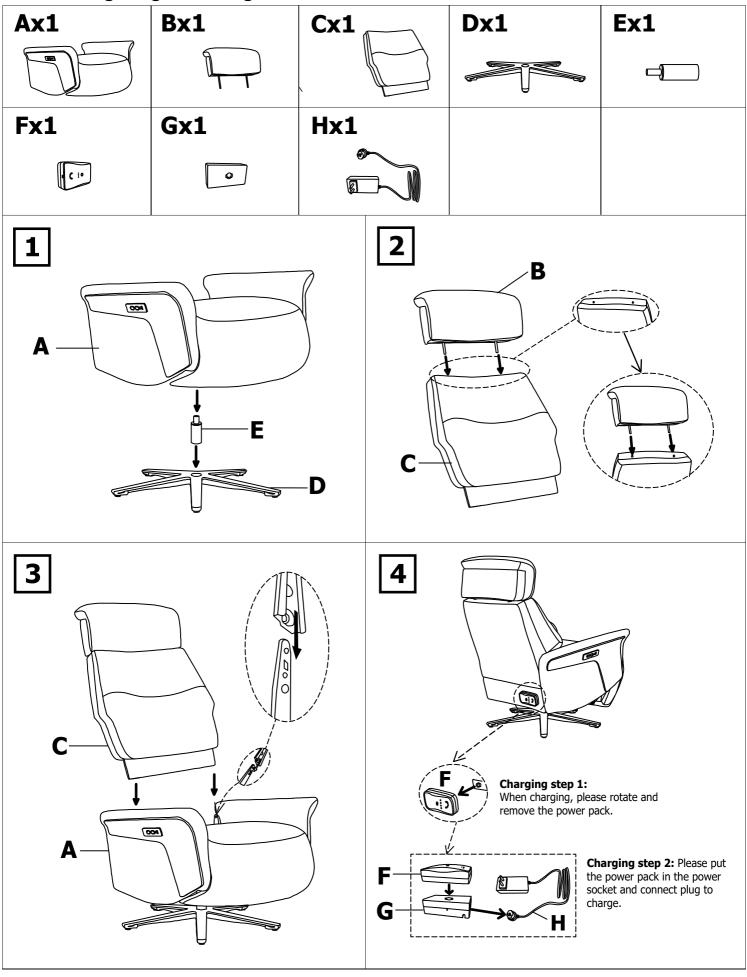

mm 10 20 30 40 50 60 70 80 90 100 110 120 130 140 150

Function: Normal USB port Headrest angle USB-C port -Headrest height adjustable by hand. adjustable by hand. This button front controls This button front controls backrest reclining. footrest open. 00:1 0011 Behind of this button controls Behind of this button controls footrest resume to normal. backrest resume to normal. This button also control all function return to normal position, No reclining and No open footrest. 001 00n



In the event of an emergency, the power socket must be easily accessible so that the power plug can be pulled out without any problems.

Power pack

1. Specifications

Cell: 18650, 25.2V, 2550mAh, 65Wh

Ambient temperature range:

0~+45°C during charging

0~+40°C during discharging

Humidity:

 
20%~85% RH

Storage and transport conditions:


Short-term (less than 1 month): -10°C~+45°C, Long-term (less than 12 months): -10°C~+35°C

1.1 External dimensions:

1.1.1 Battery Pack




 1.1.2 Connector



The connector of input and output in picture are only for information, please take practicality as standard.


1.2 Connection:

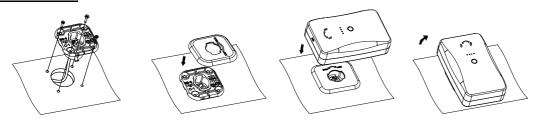

1.3 Charge:

If battery is humming, please recharge immediately.

 1) Charge by specified charger



2) Charge by Type-C



ye	Current	Time		
Voltage	Current	Time	Charing	Fully Charged
١V	2A	1.8H	Red	Green
	2A	11.5H	see below	see below
	łV			

The Led light indicating when charged by Type-C

1 LED: Flash 25% capacity charged 2 LED: Flash 50% capacity charged 3 LED: Flash 75% capacity charged 4 LED: ON 100% fully charged

2. Safety:

- Charge battery pack before first use once completely. The charging time by specified charger is approximately 1.8 hours. The charging time by Type-C is approximately 11.5 hours.
- If battery pack is humming, please recharge immediately.
- WARNING-use of Li-Ion batteries must be extremely carefully. All instructions provided with the battery pack must be read.
- Battery pack should be treated with great care! Do not throw, drop, or expose it to strong vibrations. If unit has been damaged, it must not be put into operation.
- Do not expose to fire or disassemble!
- Do not immerse in water!
- · Keep away from children!
- · Storage in dry well-ventilated area.
- The voltage or amperage of battery must not be exceeded. Use with the provided power supply only.
- Operate and Store battery within those parameters.
- Charge the battery pack every 3 months, otherwise the battery may be damaged.

Troubleshooting


Problem	Possible reason	Solution
The chair does not react	The power button is not turned on or not connected the cable.	Check power button and power cable
The functions stop abruptly	The chair was too long in operation.	Stop functions for 1/2 h.

Dimensions:

At normal position:

Height: 106 cm, Width: 74 cm, Depth: 83 cm,

Weight: 38.50 kg

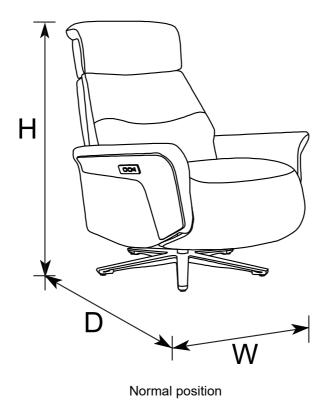

Importer: MX Logistika SL,spol.s.r.o., ROZNAVSKA 32, SK-82104 BRATISLAVA, Slovakia

Manufacturer: RRR Company Limited(Thailand), 183 Regent House 17th Floor, Lumpini, Patumwan,
Bangkok Thailand 10330

Disposal instructions:



According to the European WEEE Directive, electrical and electronic devices must not be disposed of with household waste. Its components must be recycled or disposed of separately, because toxic and dangerous components can cause lasting damage to the environment if they are improperly disposed of.

As a consumer, you are obliged under the Electrical and Electronic Equipment Act (ElektroG) to return electrical and electronic devices at the end of their service life to the manufacturer, the point of sale or to public collection points set up for this purpose free of charge. Details are regulated by the respective state law. The symbol on the product, the operating instructions and/or the packaging refers to these regulations. With this type of material separation, recycling and disposal of altar devices, you are making an important contribution to protecting our environment.

Product labeling and symbols











NAMEPLATE

Electric Chair Year/Month: 25/03 Electric Chair 100-240 VAC 50-60Hz, 1.6A Max. 2 min ON and 18 min OFF (10%)

SYMBOLS



Be part of in the electrical and electronic equipment waste



CE marking (includes compliance with EU health, safety and Environmental management)



For indoor use. The Resting and Lift up is only suitable as a seat indoors by a maximum of one person.



Pay attention to instruction manual and warning.



Class II equipment

The chair may be used a maximum of 2 minutes under maximum load, then a dwell time of up to 18 minutes must be stopped.

Max 2/18