


C40595MX / 82271370

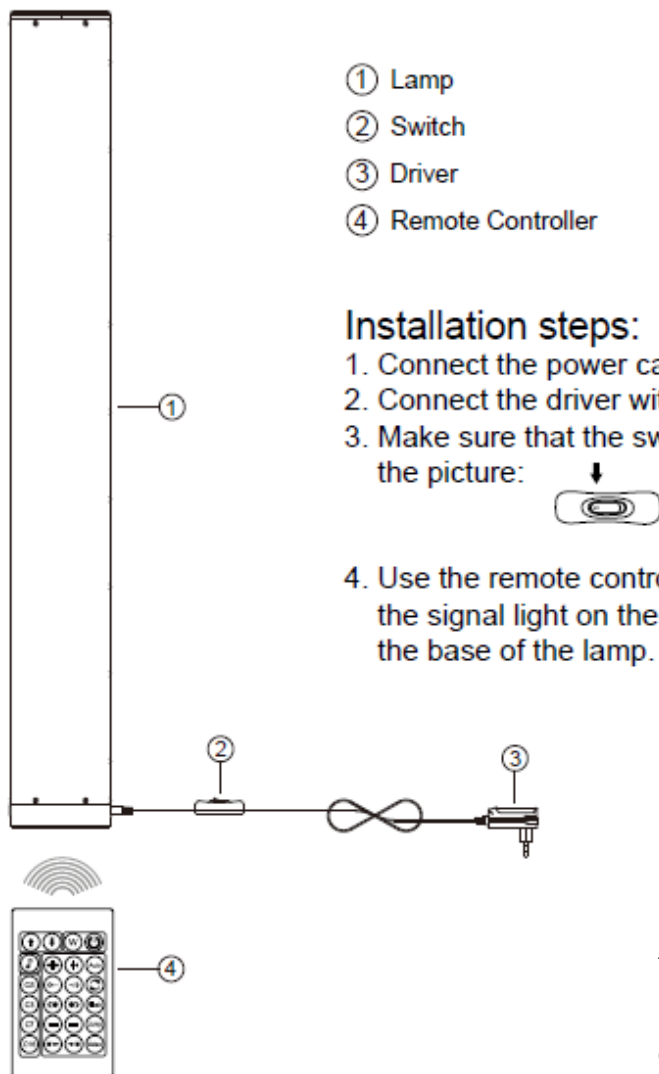

- ① Lamp
- ② Switch
- ③ Driver
- ④ Remote Controller

Installation steps:


1. Connect the power cable with the lamp.
2. Connect the driver with the main power.
3. Make sure that the switch is pressed to the side as the picture: 

4. Use the remote controller change the color modes, the signal light on the controller should be targeted to the base of the lamp.

DE: Dieses Produkt enthält eine Lichtquelle der Energieeffizienzklasse: F

HU: A termék a következő energiasztályba tartozó fényforrást tartalmaz: F

BG: Този продукт съдържа източник на светлина с клас на енергийна ефективност: F

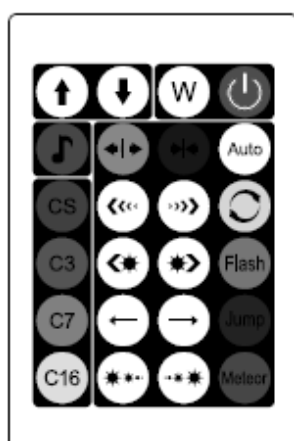

Brightness/Speed/ Sensitivity +	Brightness/Speed/ Sensitivity -	White	On/Off
4 kinds of Music mode	Effect-Spreading	Effect-Gathering	Effect-Auto
Single static color options	Effect-Chasing left (CS, C3, C7, C16)	Effect-Chasing right (CS, C3, C7, C16)	Effect-Colorful fluttering
3 static color options	Effect-Horse racing left (CS, C3, C7, C16)	Effect-Horse racing right (CS, C3, C7, C16)	Effect-Flashing (CS, C3, C7, C16)
7 static color options	Effect-Flowing left (CS, C3, C7, C16)	Effect-Flowing right (CS, C3, C7, C16)	Effect-Jump (CS, C3, C7, C16)
16 static color options	Effect-Queue flowing left (CS, C3, C7, C16)	Effect-Queue flowing right (CS, C3, C7, C16)	Effect-Colorful queue trailing right

DE: Leuchtmittel nicht austauschbar

HU: Izzó nem cserélhető

BG: Крушката не се сменя



DE: Austausch des Betriebsgeräts durch den Endkunden.

HU: Működtetőeszköz cseréje felhasználó által

BG: Смяна на пусково-регулиращата апаратура от крайния клиент

