




 

 
 


D - Montageanleitung GB - Assembly instructions NL - Handleiding voor de montage
PL - Instrukcja montażu TR - Montaj talimatı RU - Инструкция по монтажу
RO - Instrucțiuni de montaj IT - Istruzioni di montaggio FR - Notice de montage
SK - Návod na montáž CZ - Montážní návod HU - Szerelési útmutató

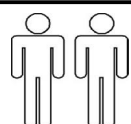

1/1

NALO OTM.2F

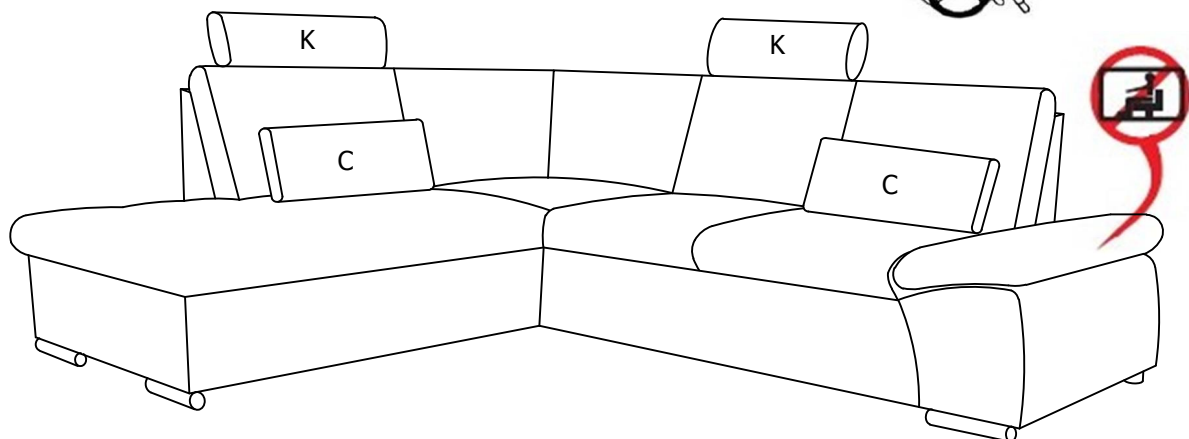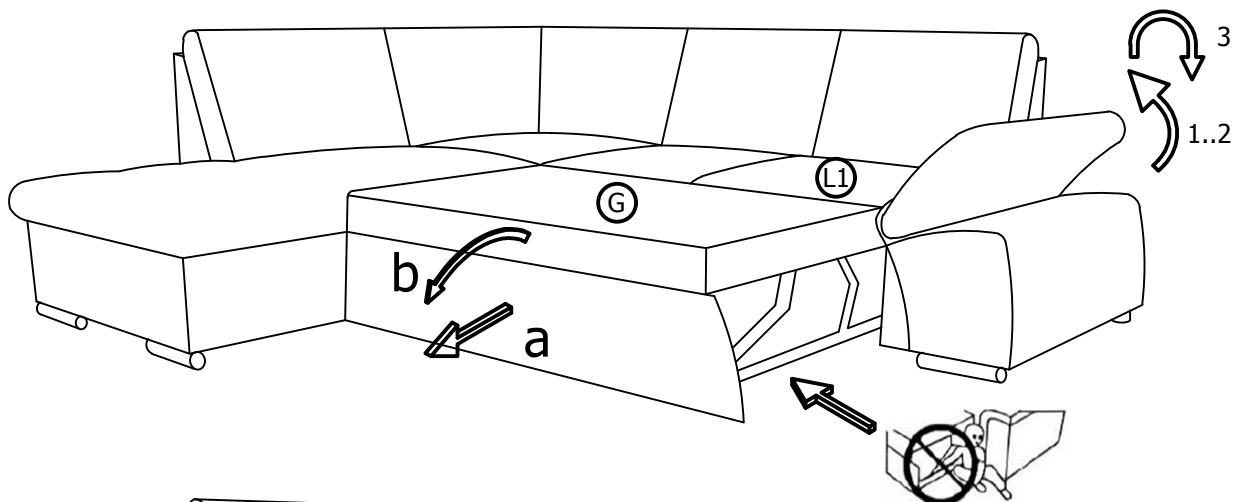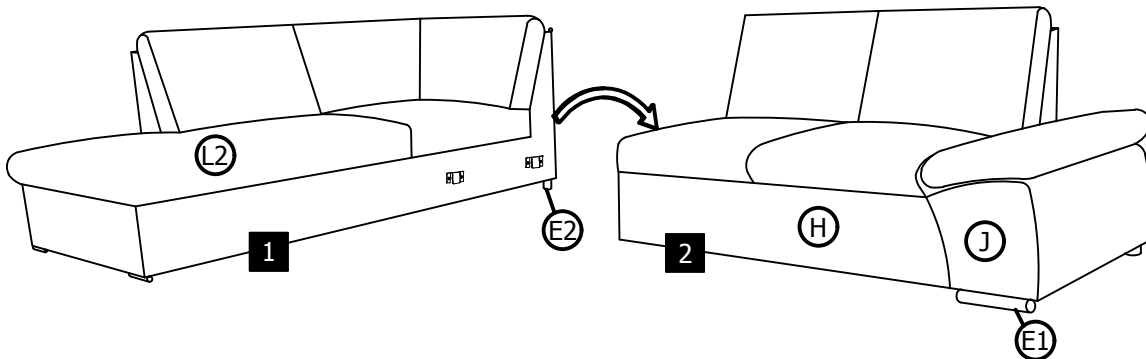

Service-Dienstverlening-Serwis-Service-Сервисная Служба-Assistenza-Szerviz

Typ-Type-Típ-Típus-Tipo **L2F**

C	L1
E1	L2
E2	
G	
H	
J	
K	

