
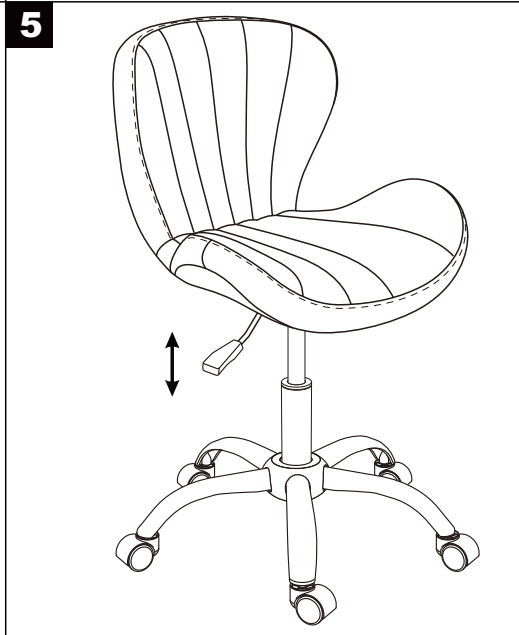
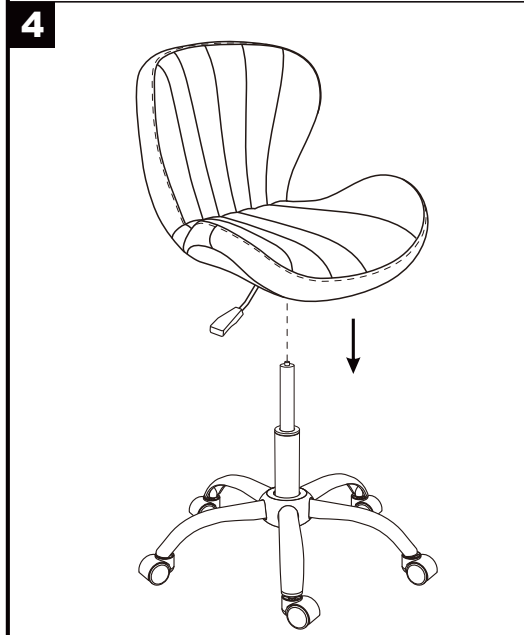
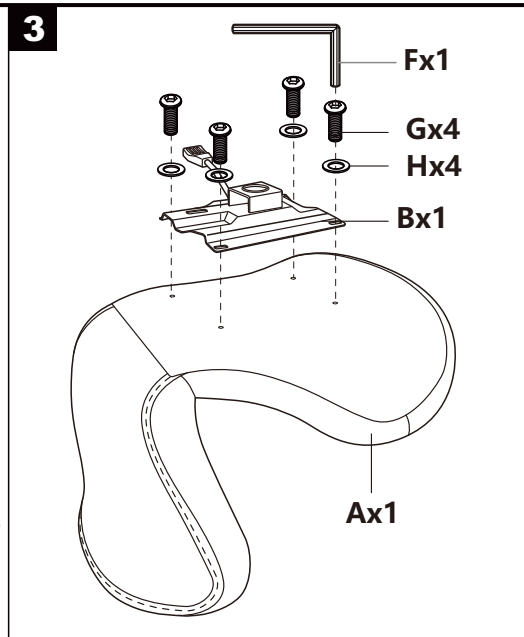
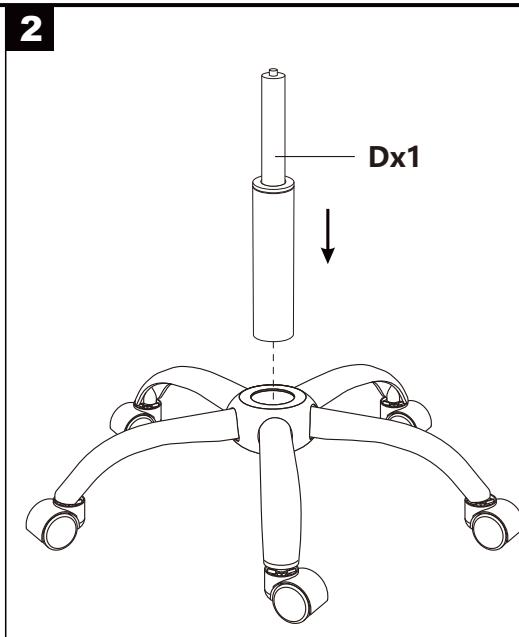


<b>Ax1</b> 	
<b>Bx1</b> 	
<b>Cx1</b> 	
<b>Dx1</b> 	
<b>Ex5</b> 	
<b>Fx1</b> 	
<b>Gx4</b>  M6x20mm	<b>Hx4</b> 

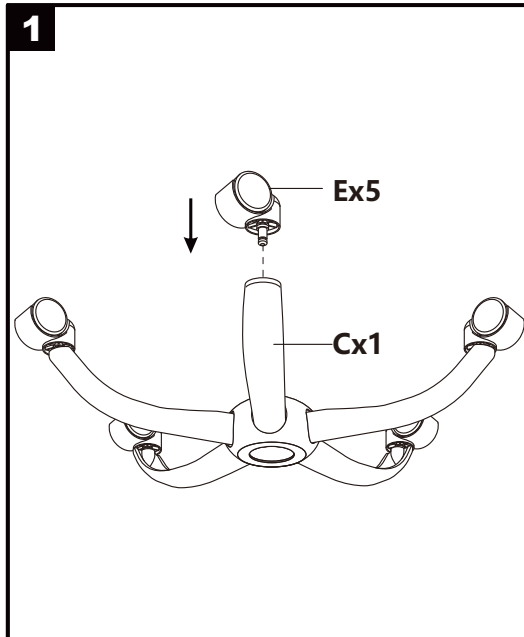

For domestic use only. (EN)

Nur für den Haushaltsgebrauch. (DE)

Pouze pro používání v domácnosti. (CZ)

Endast för hushållsbruk. (SE)

Len na používanie v domácnosti. (SK)

Samo za domačo uporabo. (SI)

Kizárólag háztartási használatra alkalmas. (HU)

Samo za korištenje u kućanstvu. (HR)

Само за домашна употреба. (BGR)

Doar pentru uz casnic. (RO)

Réservé à un usage domestique uniquement. (FR)

Tylko do użytku domowego. (PL)

Prodotto destinato al solo uso domestico. (IT)

Isključivo za upotrebu u domaćinstvu. (RS)