

operation. The period can vary depending on frequency and conditions of usage.

Important notice:

The push button (transmitter) can be installed on to wooden or brick walls without any problem. However, never place the push button directly on to metal surfaces or materials containing metal such as plastic constructions of windows and doors with metal frame. The transmitter may not function correctly.

Starting up

1. Connect the bell to an electric network. A green LED diode will light up in the front side of the bell permanently and a chime will sound once. Then the bell is ready to be matched.
2. Push the ringing button on the pushbutton (transmitter). A chime will sound and the pushbutton will be matched.
3. To match other pushbuttons, repeat the procedure according to point 2.
4. Pushbuttons can be matched within 25 seconds from inserting the bell into a power socket.
5. If you want to match other pushbuttons later, proceed according to point 1 and 2.
6. You can match a maximum of 8 pushbuttons this way.
Note: If you match another pushbutton (9th and more), the memory of the first pushbuttons will be erased automatically in reverse order.
7. Transmission range is 60 m in open space and with no magnetic interference. This range is influenced by local conditions, such as number of walls through which the signal must go, metal doorframes and other items that can influence transmission of the radio signal (presence of other radio means working with similar frequency such as wireless thermometers, gate operating device etc.) The range of transmission can drop down rapidly under influence of these factors.
8. The door chime has a switch for three different modes of operation:
 - a. acoustic signal only
 - b. light signal only (intensive flashing for approx. 5 seconds)




 Please read the Operating Manual carefully for a correct operation of the wireless chime.

Chime push button:
Power supply: battery 1× 3 V (CR2032)
Radius: up to 60 m in open space (in urban area it can get reduced to one fifth or even less)
IP code: IP44
Chime:
Broadcast frequency: 433.92 MHz, 10 mW e.r.p. max.
Power supply: 230 V~/50 Hz
Number of chimes: 1
Pairing method: self-learning function
Possibility to pair more pushbuttons: yes (max 8)

Chime push button (transmitter)

1. Using appropriate screwdriver unscrew the little screw on the bottom part of the button.
2. Screw down on to a wall the back cover using two screws (not enclosed) or use double sided adhesive tape (also not part of the package). Before starting the installation make sure that the set works on the place you have selected in a smooth and reliable manner. Despite the push button being resistant against weather conditions it is better to use appropriate position, so the button is protected e.g. place it in a niche.
3. Open the battery box cover. Following the scheme under the contacts insert battery 3 V, type CR2032. Pay attention to correct polarity of inserted batteries!
4. Reassembly the push button and secure it with the screw.
5. Press the button. The press is accompanied by a gleam of red LED diode which signalizes that the push button transmitted radio signal.

oprava se skládá z tlačítka zvonku (vysílače) a domácího zvonku (přijímače).
Domácí zvonek je určen k trvalému připojení k elektrické síti o napětí 230 V/50 Hz.
Přenos mezi tlačítkem a zvonekem zabezpečují rádiové vlny na kmitočtu 433,92 MHz,
dosah závisí na místních podmínkách a je až 60 m ve volném prostoru bez rušení.

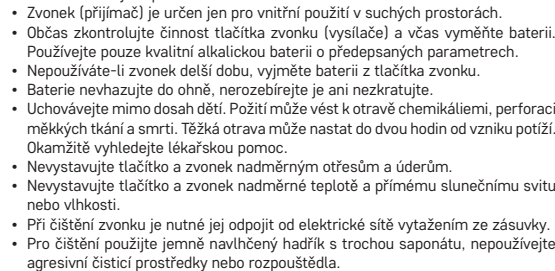

Zvonček nezvoni:

- Zvonček môže byť mimo daný dosah.
- Upravte vzdialenosť medzi jednotkami (tlačítko zvončeka a domový zvonček), rozsah môže byť ovplyvnený miestnymi podmienkami.

1. Podłączmy dzwonek do sieci elektrycznej. W przedniej części dzwonka zaczyna ciągle świecić zielona lampka sygnalizacyjna (dioda LED) słychać jedno dzwonięcie i dzwonek jest gotowy do parowania.
2. W przycisku (nadajnik) naciskamy jeden raz przycisk dzwonięcia, odzywa się melodia i następuje sparowanie.
3. Aby sparować następne przyciski trzeba powtórzyć procedurę z punktu 2.
4. Parowanie przycisków trzeba wykonać w czasie do 25 sekund od włączenia dzwonka do gniazdka.

GARANCIJSKA IZJAVA

1. Izjavljamo, da jamčimo za lastnosti in brezhibno delovanje v garancijskem roku.
2. Garancijski rok prične teči z datumom izročitve blaga in velja 24 mesecev.
3. EMOS SI, d.o.o. jamči kupcu, da bo v garancijskem roku na lastne stroške odpravil vse pomanjkljivosti na aparatu zaradi tovarniške napake v materialu ali izdelavi.
4. Za čas popravila se garancijski rok podaljša.
5. Če aparat ni popravljen v roku 45 dni od dneva prijave okvare lahko prizadeta stranka zahteva novega ali vračilo plačanega zneska.
6. Garancija preneha, če je okvara nastala zaradi:
 - nestrokovnega-nepooblaščenega servisa
 - predelave brez odobritve proizvajalca
 - neupoštevanja navodil za uporabo aparata
7. Garancija ne izključuje pravic potrošnika, ki izhajajo iz odgovornosti prodajalca za napake na blagu.
8. Če ni drugače označeno, velja garancija na ozemeljskem območju Republike Slovenije.
9. Proizvajalec zagotavlja proti plačilu popravilo, vzdrževanje blaga, nadomestne dele in priklopne aparate tri leta po poteku garancijskega roka.
10. Naravna obraba aparata je izključena iz garancijske obveznosti. Isto velja tudi za poškodbe zaradi nepravilne uporabe ali preobremenitve.

NAVODILA ZA REKLAMACIJSKI POSTOPEK

Lastnik uveljavlja garancijski zahtevek tako, da ugotovljeno okvaro prijavi pooblaščen delavnici (EMOS SI, d.o.o., Rimska cesta 92, 3311 Šempeter v Savinjski dolini) pisno ali ustno. Kupec je odgovoren, če s prepozno prijavo povzroči škodo na aparatu. Po izteku garancijskega roka preneha pravica do uveljavljanja garancijskega zahtevka. Priložen mora biti potrjen garancijski list z originalnim računom. EMOS SI, d.o.o. se obvezuje, da bo aparat zamenjal z novim, če ta v tem garancijskem roku ne bi deloval brezhibno.

ZNAMKA: Brezžični zvonec

TIP: 98080S

DATUM IZROČITVE BLAGA: _____

Servis:

EMOS SI, d.o.o., Rimska cesta 92,
3311 Šempeter v Savinjski dolini
tel: +386 8 205 17 21
e-mail: reklamacije@emos-si.si