# B422115-3 & B422115-42

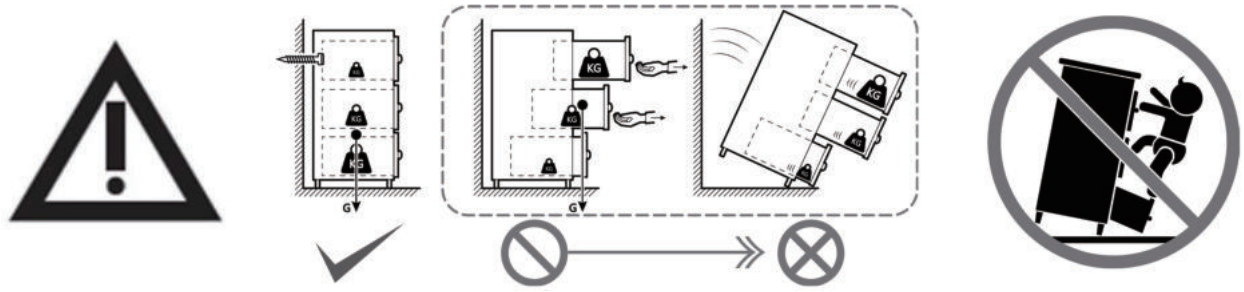

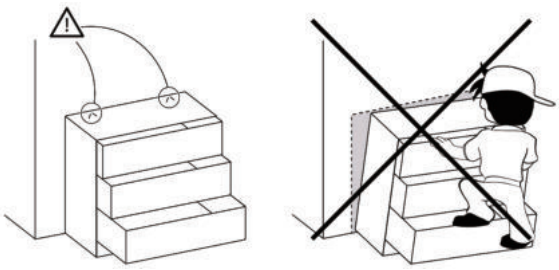

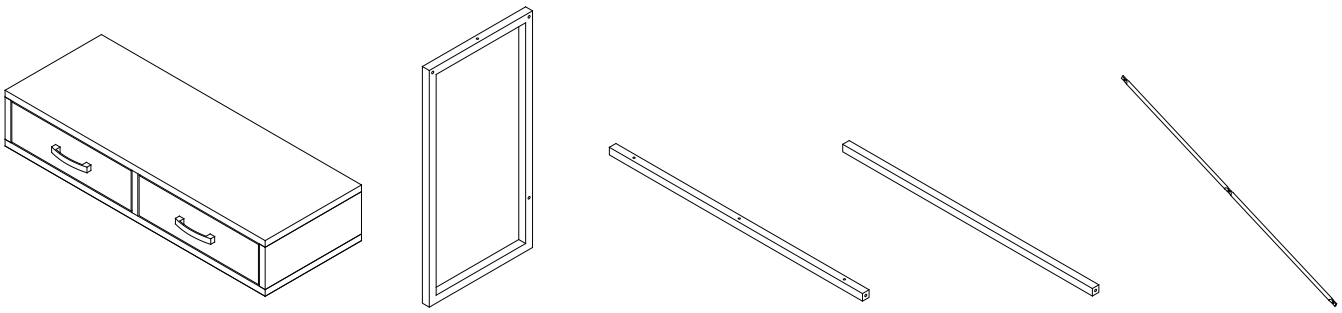

① x1 ② x2 ③ x2 ④ x1 ⑤ x2

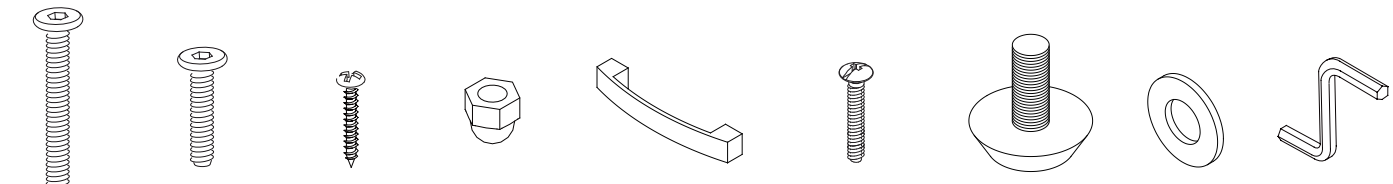

Ⓐ x6 Ⓑ x5 Ⓒ x8 Ⓓ x1 Ⓔ x2 Ⓕ x4 Ⓖ x4 Ⓗ x1 Ⓙ x1

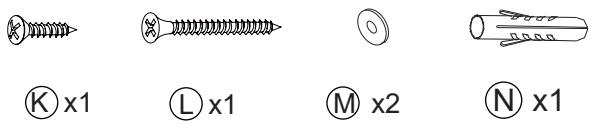

Ⓚ x1 Ⓛ x1 Ⓜ x2 Ⓝ x1 Ⓞ x1

1

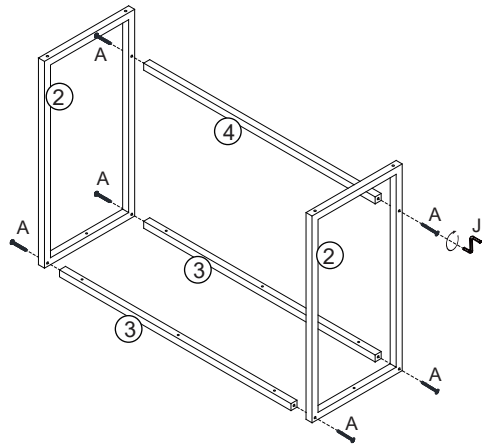


2

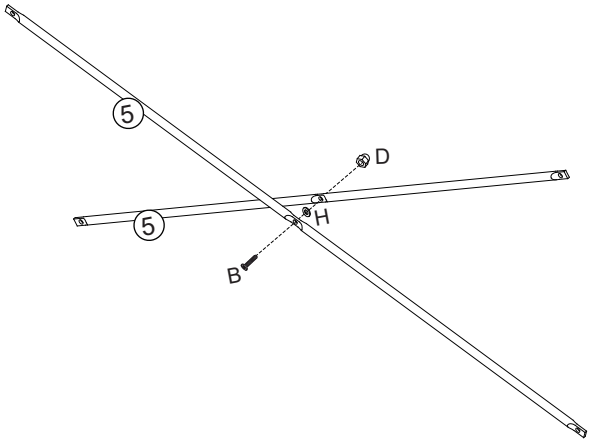

# B422115-3 & B422115-42

3

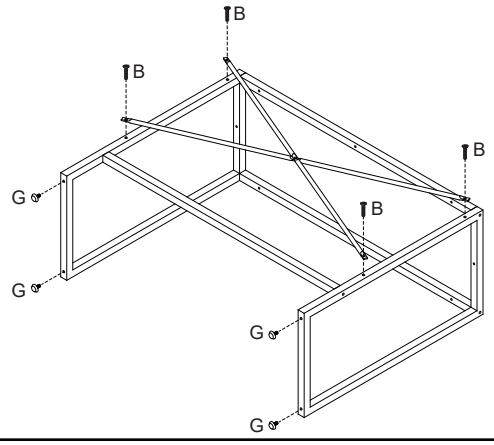


4

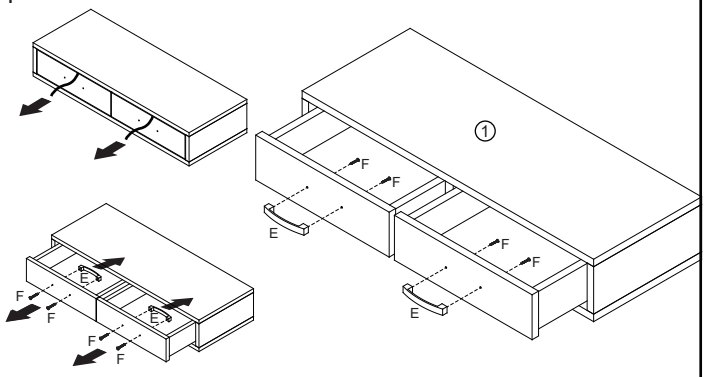


5

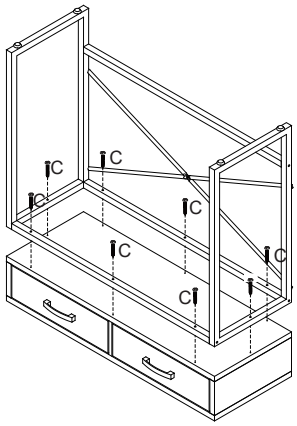


6

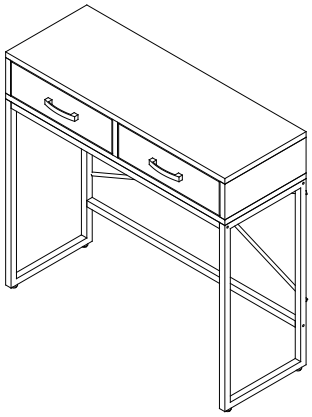

7

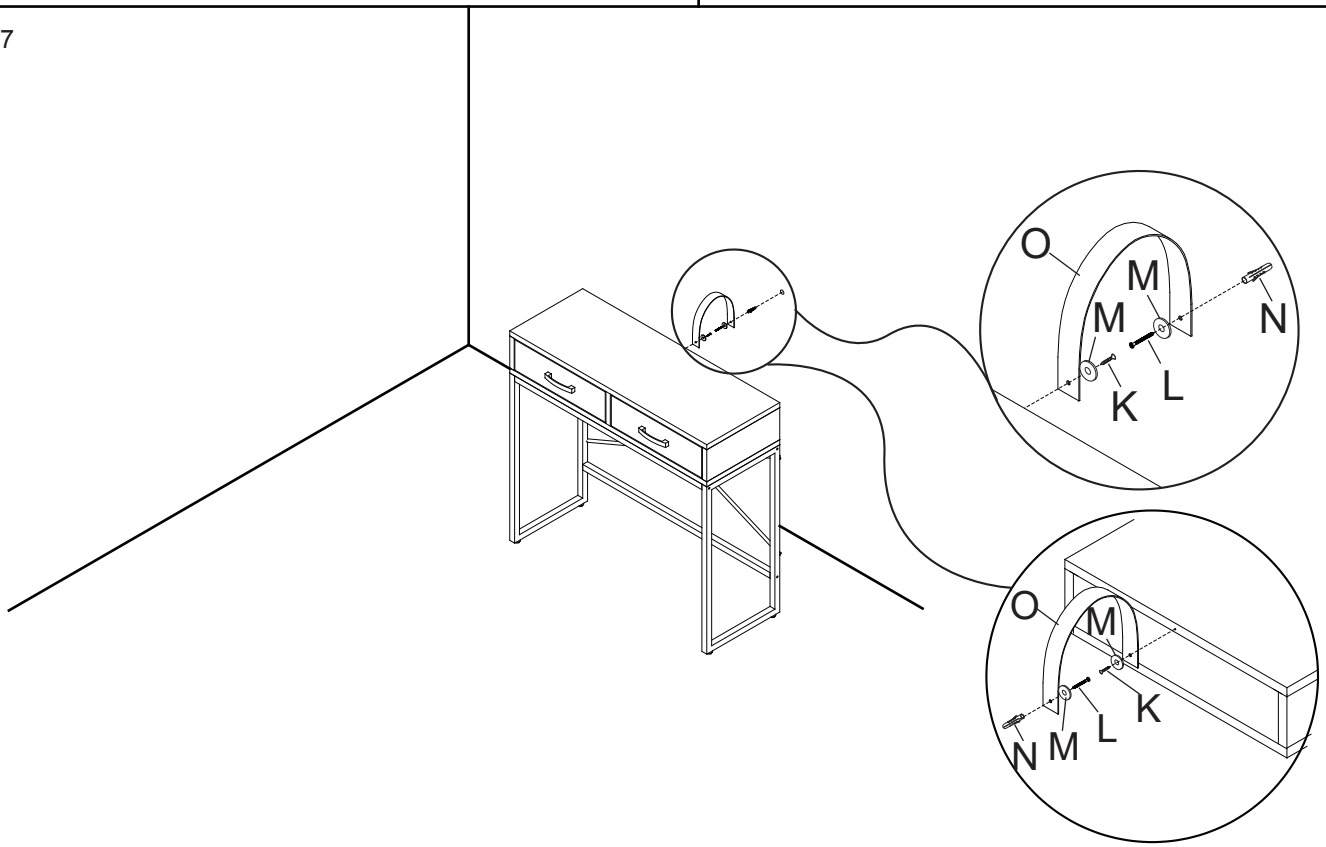

best home products Handels GmbH
Gewerbestrasse 3,
A-9184 St Peter,Austria
www.bhp-interior.com
office@bhp-austria.com

# B422115-3 & B422115-42

EN Warning
Serious or fatal crushing injuries can occur from furniture tip over. In order to prevent overturning, this product must be used with the wall attachment device provided. To help prevent tip over:
•
Install wall attachment device provided.
•
Place heaviest items in the lower drawers.
•
Do not set heavy objects on top of this product.
•
Never allow children to climb or hang on drawers.
•
Never open more than one drawer at a time.
•
Use of wall attachment device will reduce, but not eliminate the risk of tipping.
Important
•
Installation should be carried out exactly according these instructions – otherwise a safety risk can occur if incorrectly installed.
•
Regularly check that anchors are securely maintained.
•
Stability of tall items may be affected by thick pile carpet or uneven floors.
•
A wall attachment device is provided with your product; however, you will need to source suitable fixings for your wall type.
•
Check for any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).
•
Your local hardware store will have the necessary drills and fixings and can offer advice if needed. If in doubt, engage the services of a qualified tradesperson to install and anchor the product.

DE Warnung
Schwere oder tödliche Verletzungen können durch Umkippen des Möbelstückes verursacht werden. Zur Verhinderung des Umkippens muss dieses Produkt mit dem mitgelieferten Wandbefestigungsgerät benutzt werden. Zur Verhinderung des Umkippens:
•
Montieren Sie das mitgelieferte Wandbefestigungsgerät.
•
Legen Sie die schwersten Gegenstände in die unteren Schubladen.
•
Stellen Sie keine schwere Gegenstände auf die Oberseite dieses Produkts.
•
Erlauben Sie niemals Kindern auf die Schubladen zu klettern oder sich an ihnen festzuhalten.
•
Ziehen Sie niemals mehr als eine Schublade gleichzeitig heraus.
•
Der Einsatz des Wandbefestigungsgeräts reduziert die Kippgefahr, beseitigt sie aber nicht.
WICHTIG
•
Die Installation sollte genau nach diesen Anweisungen durchgeführt werden - sonst kann bei fehlerhafter Installation ein Sicherheitsrisiko auftreten.
•
Überprüfen Sie regelmäßig, ob die Dübel gesichert sind.
•
Die Stabilität von hohen Gegenständen kann durch dickflorige Teppiche oder unebene Böden beeinträchtigt werden.
•
Ein Wandbefestigungsgerät wird zusammen mit dem Produkt geliefert; Sie müssen jedoch für Ihre Wandart geeignete Befestigungselemente selbst beschaffen.
•
Überprüfen Sie, ob es elektrische Leitungen oder Rohre innerhalb der Wand gibt, bevor Sie jegliche Löcher bohren (wenn Sie nicht sicher sind, bitte wenden Sie sich an einen qualifizierten Fachhandwerker für professionelle Beratung).
•
Sie werden die notwendigen Bohrer und Befestigungen bei Ihrem örtlichen Haushaltswarenladen finden. Dort können Sie, falls notwendig, auch Beratung erhalten. Im Zweifelsfall wenden Sie sich an einen qualifizierten Fachhandwerker für die Montage und Verankerung des Produkts.