




# ASSEMBLY INSTRUCTION 24590002/01

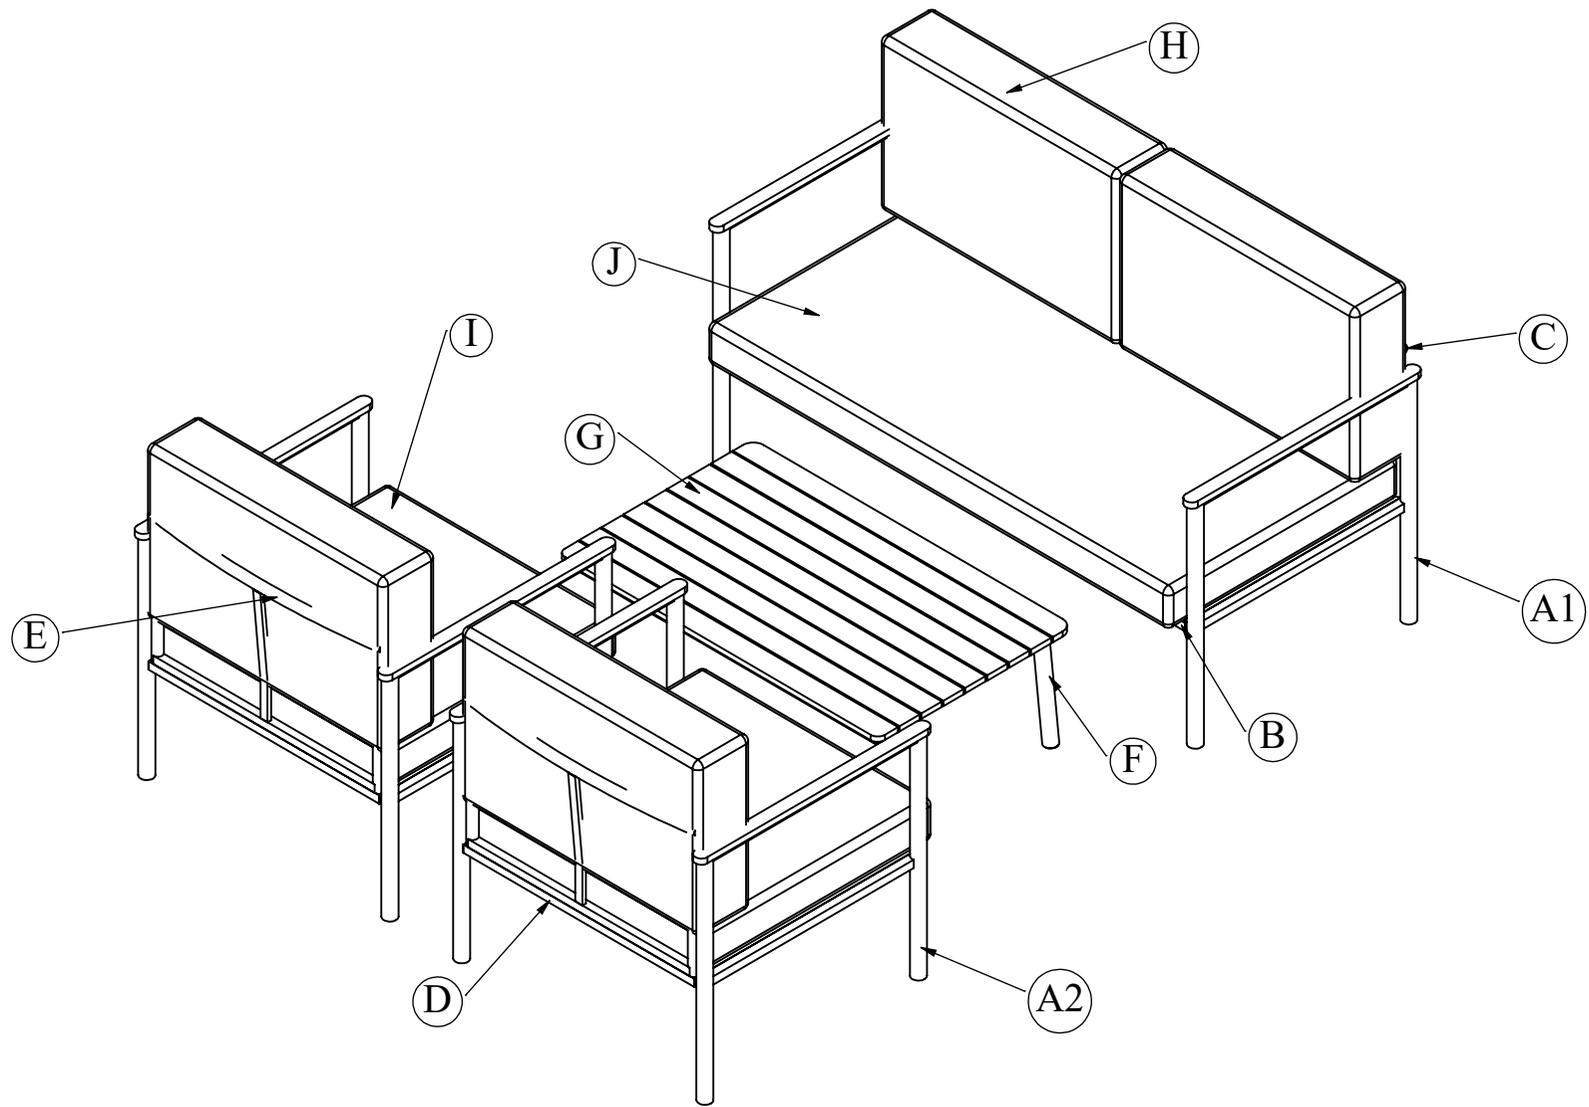


A1 x3

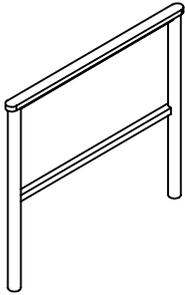


A2 x3

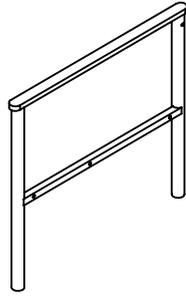


B x1

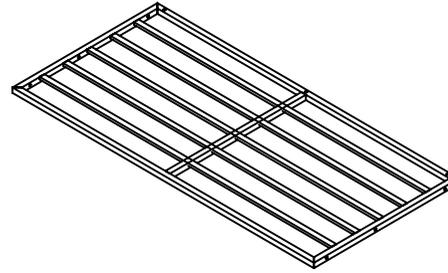


C x1

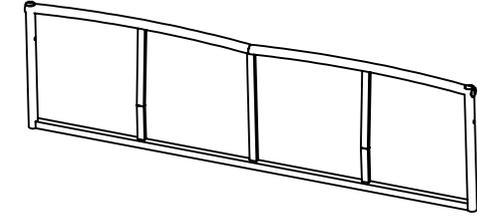

D x2

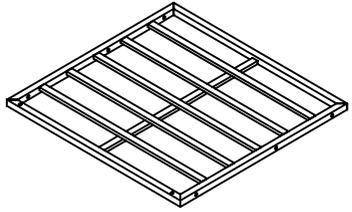


E x2

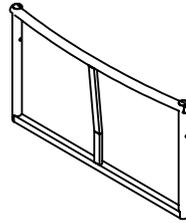

F x4




G x1

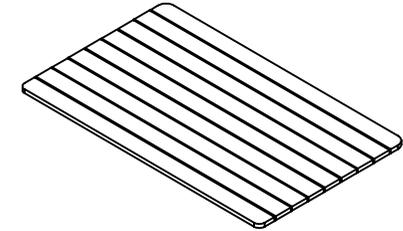


H x1




I x4

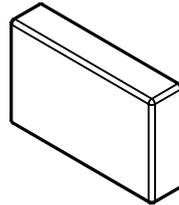

J x2

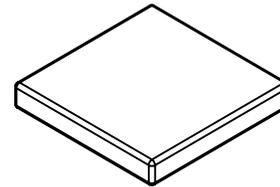


K x1

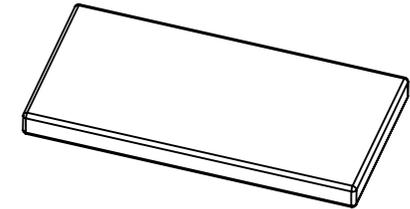


No	1	2	3	4	5
Part Image					
Part Name	Bolt M6 x 15	Bolt M6 x 35	Bolt M6 x 40	Washer M6	Allenkey
Q.Ty	14 pcs	25 pcs	6 pcs	31 pcs	1


Step 1

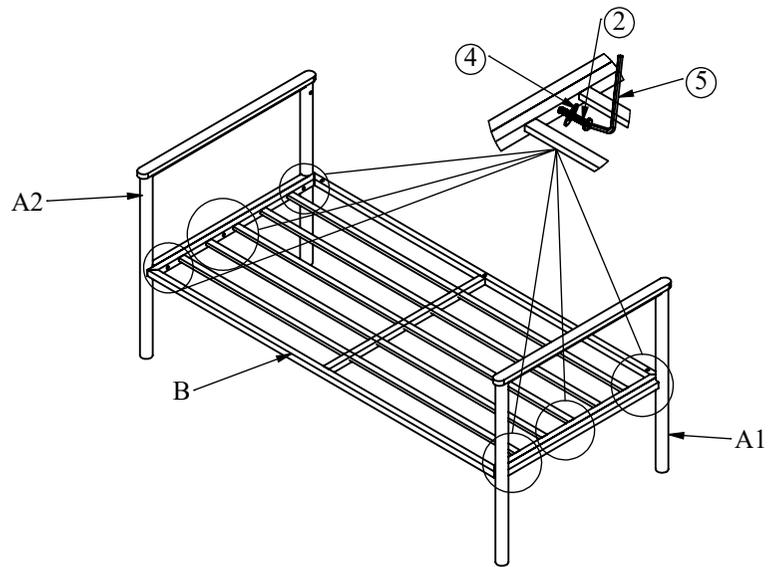


Step 2

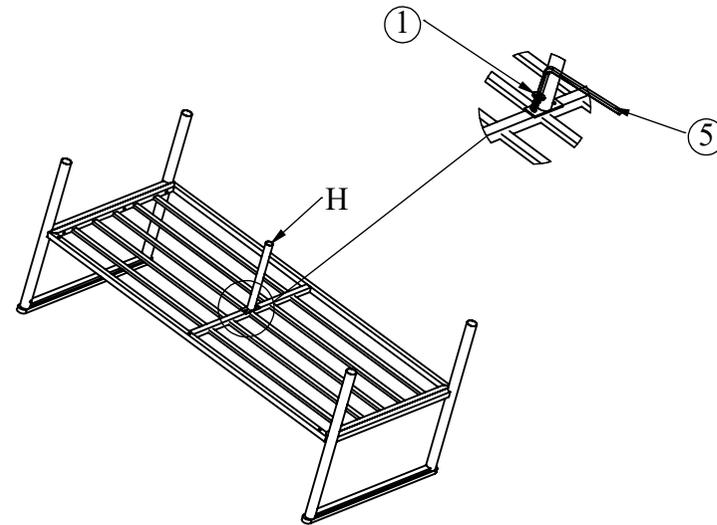


Step 3

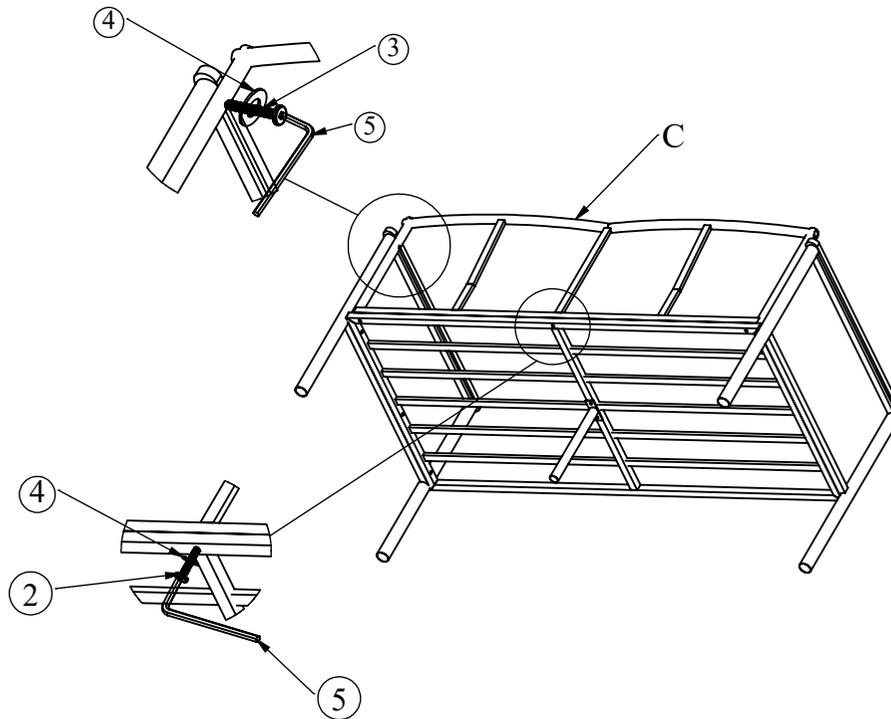


Step 4

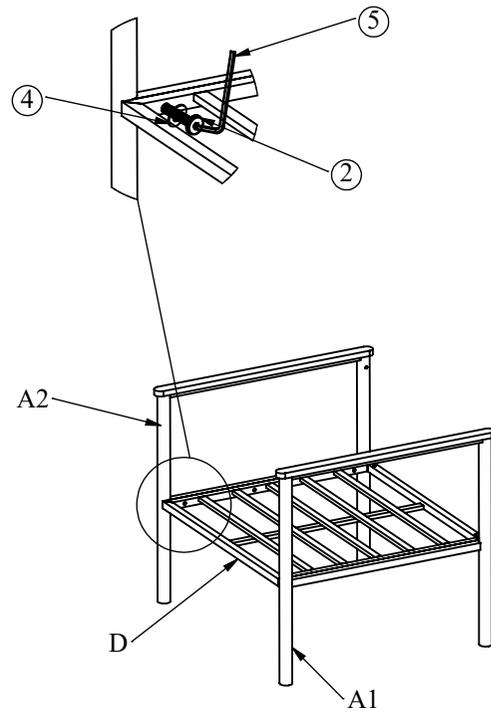

Step 5

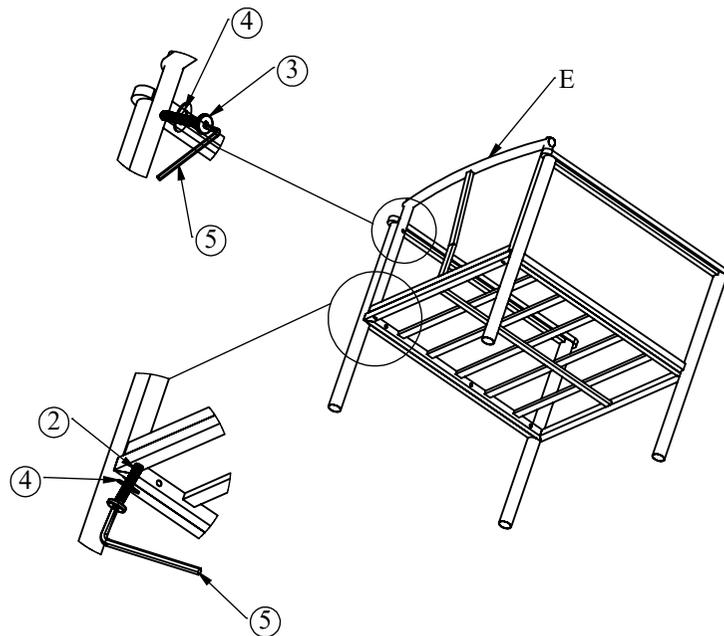

Step 6

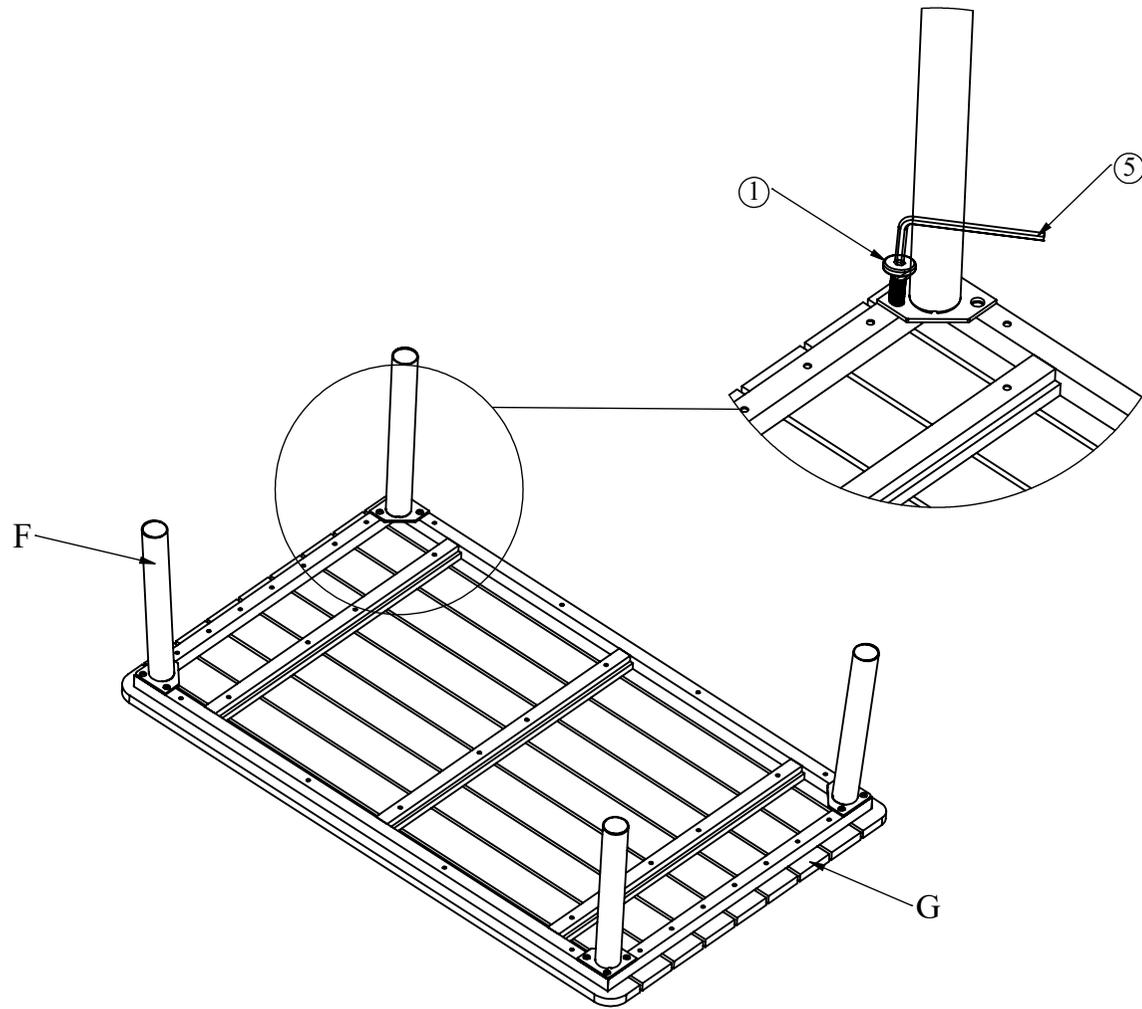

Finish

