


ASSEMBLY INSTRUCTIONS-09540021/01

HARDWARE LIST


1

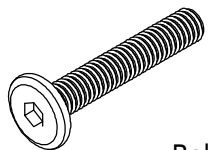

x 28

Bolt (M6 x 45)

2



x 44


3



x 2



Allen key

4

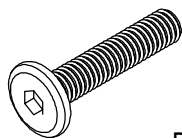


x 16

Bolt (M6 x 35)

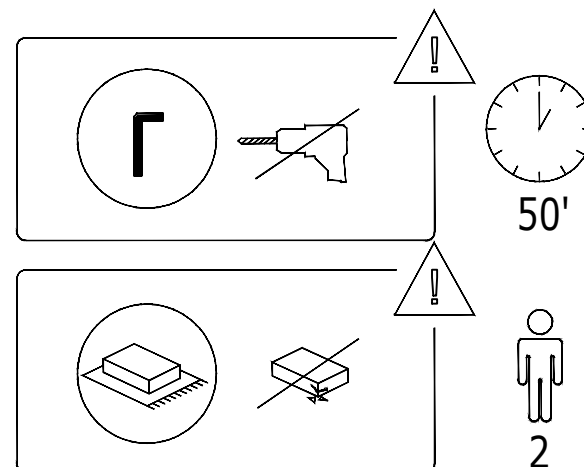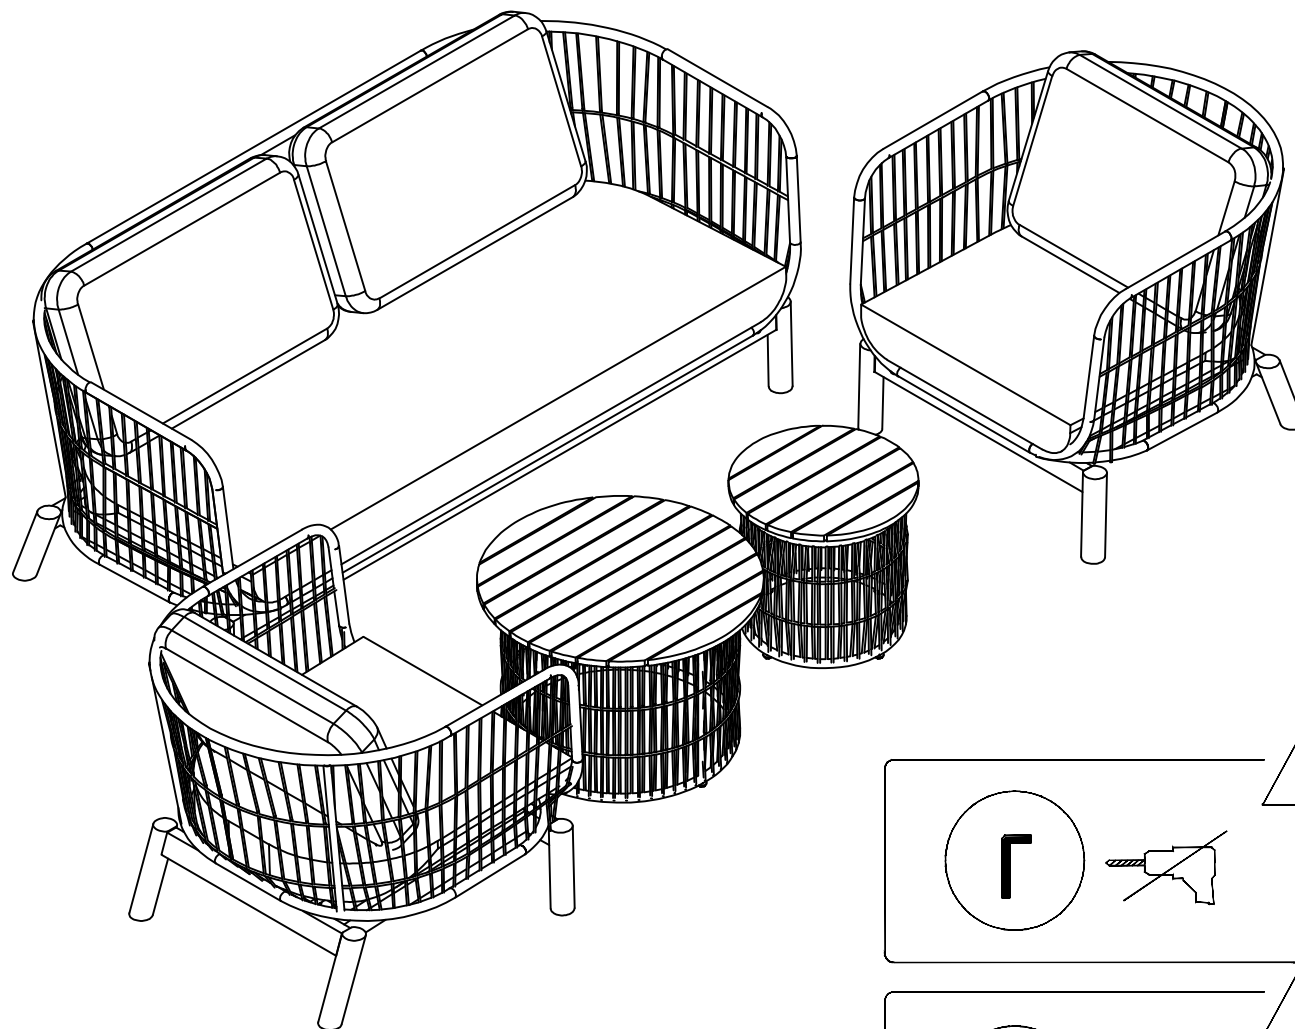


PART LIST


A x2

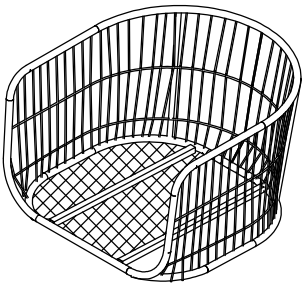


B x1

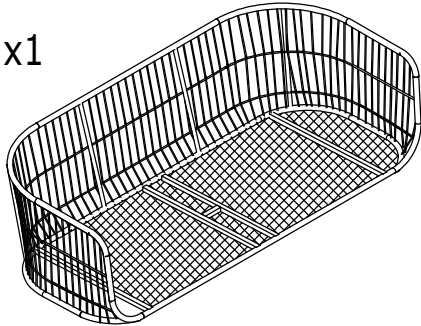


C x1

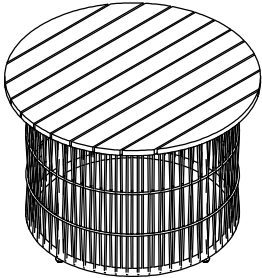


D x1

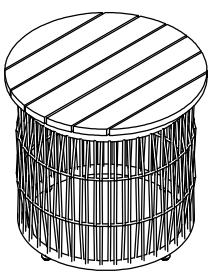


E x1

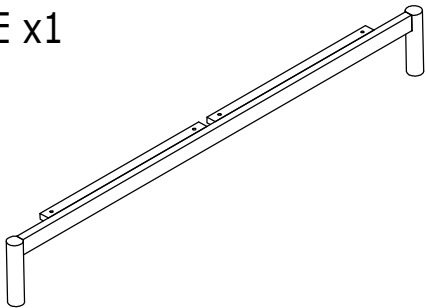


F x1

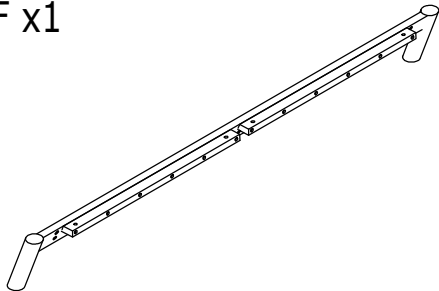


G x2

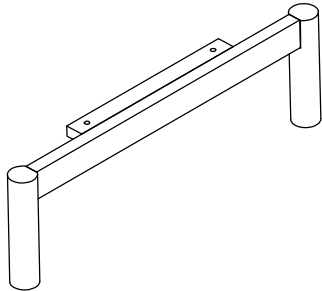


H x2

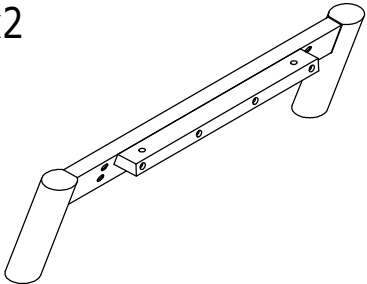


J x3

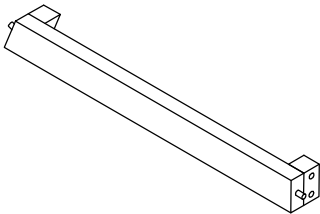

K x3

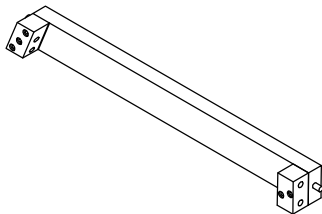


L x1

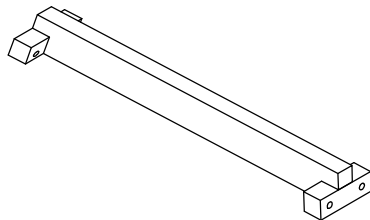


M x1




N x1

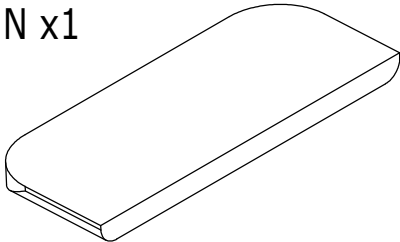


P x2

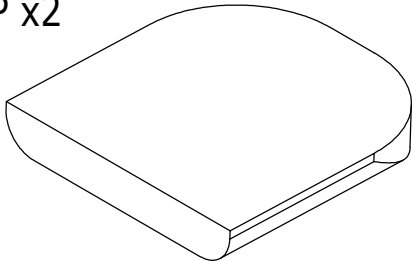


Qx2

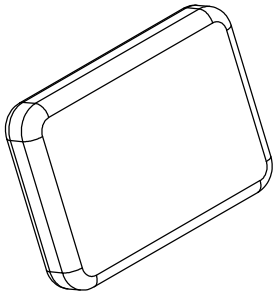

R x2



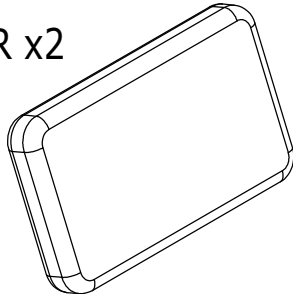


S x1


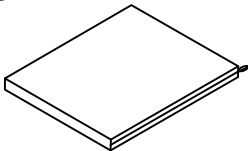


Cover


STEP 1

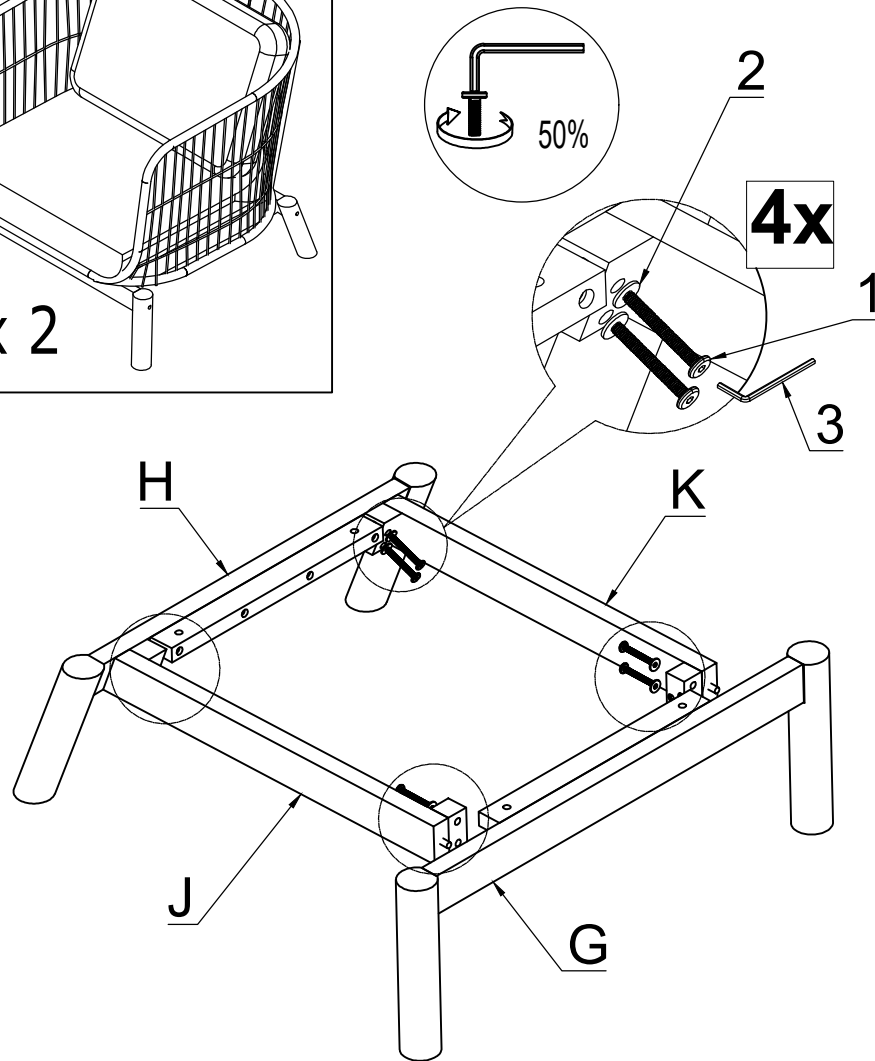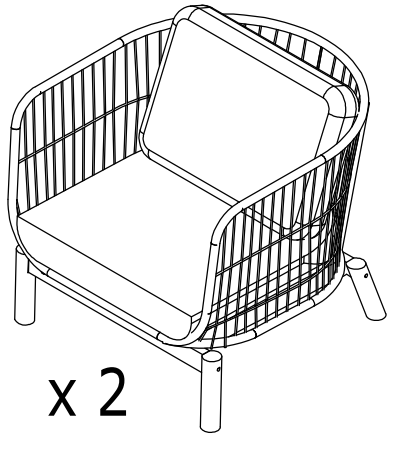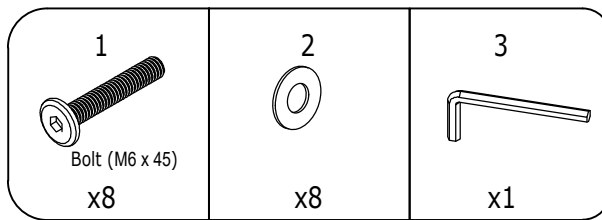



STEP 2

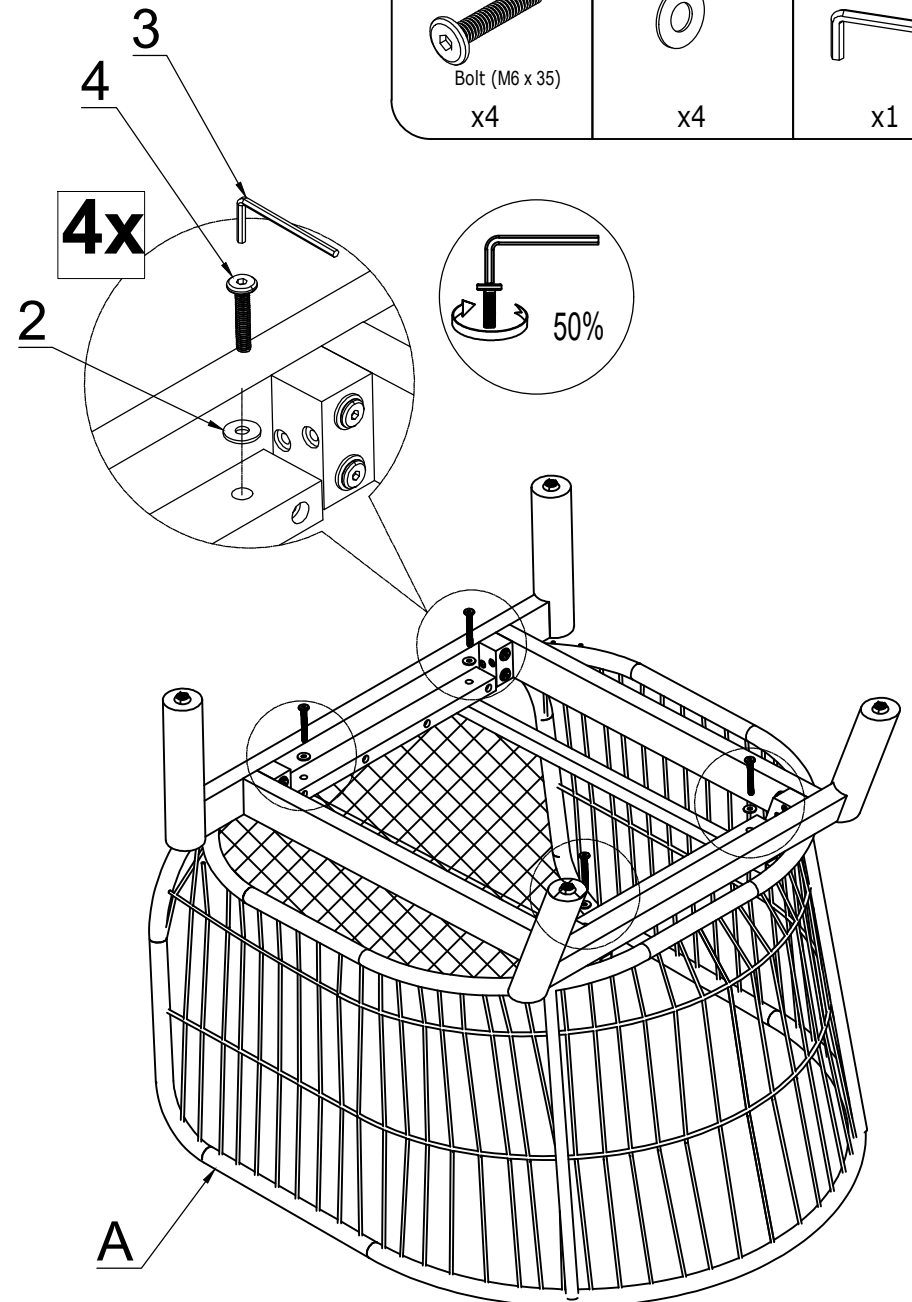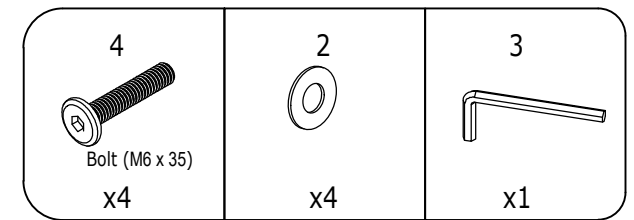


STEP 3

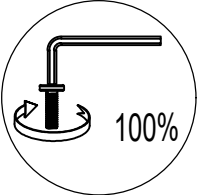



4x

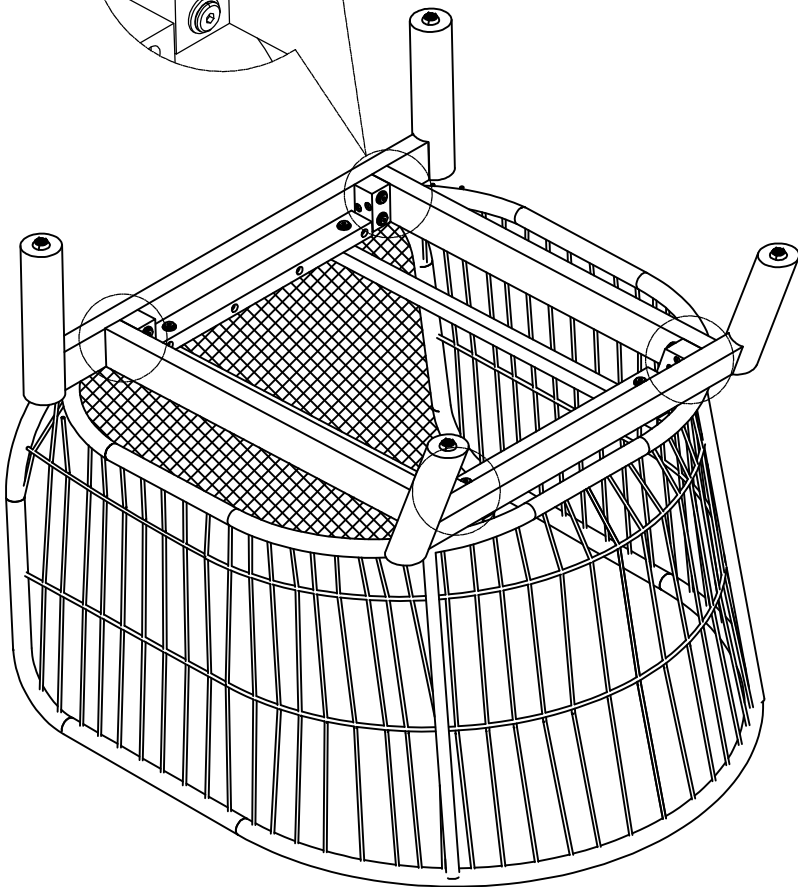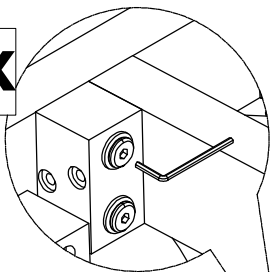



STEP 4

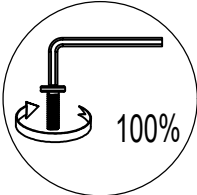


4x

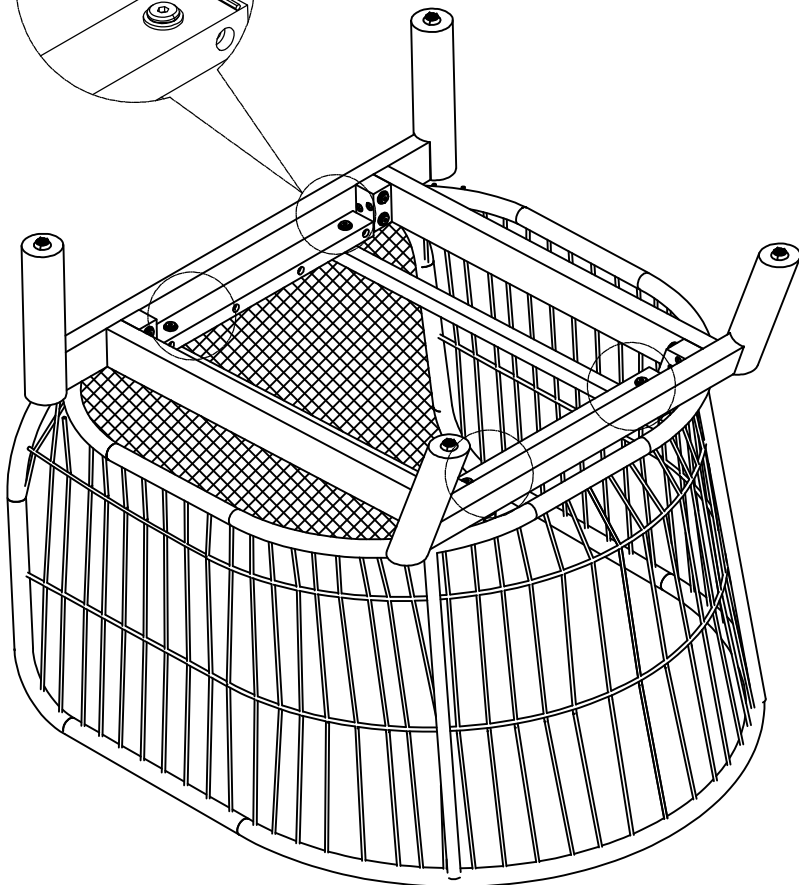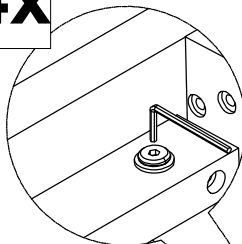



STEP 5

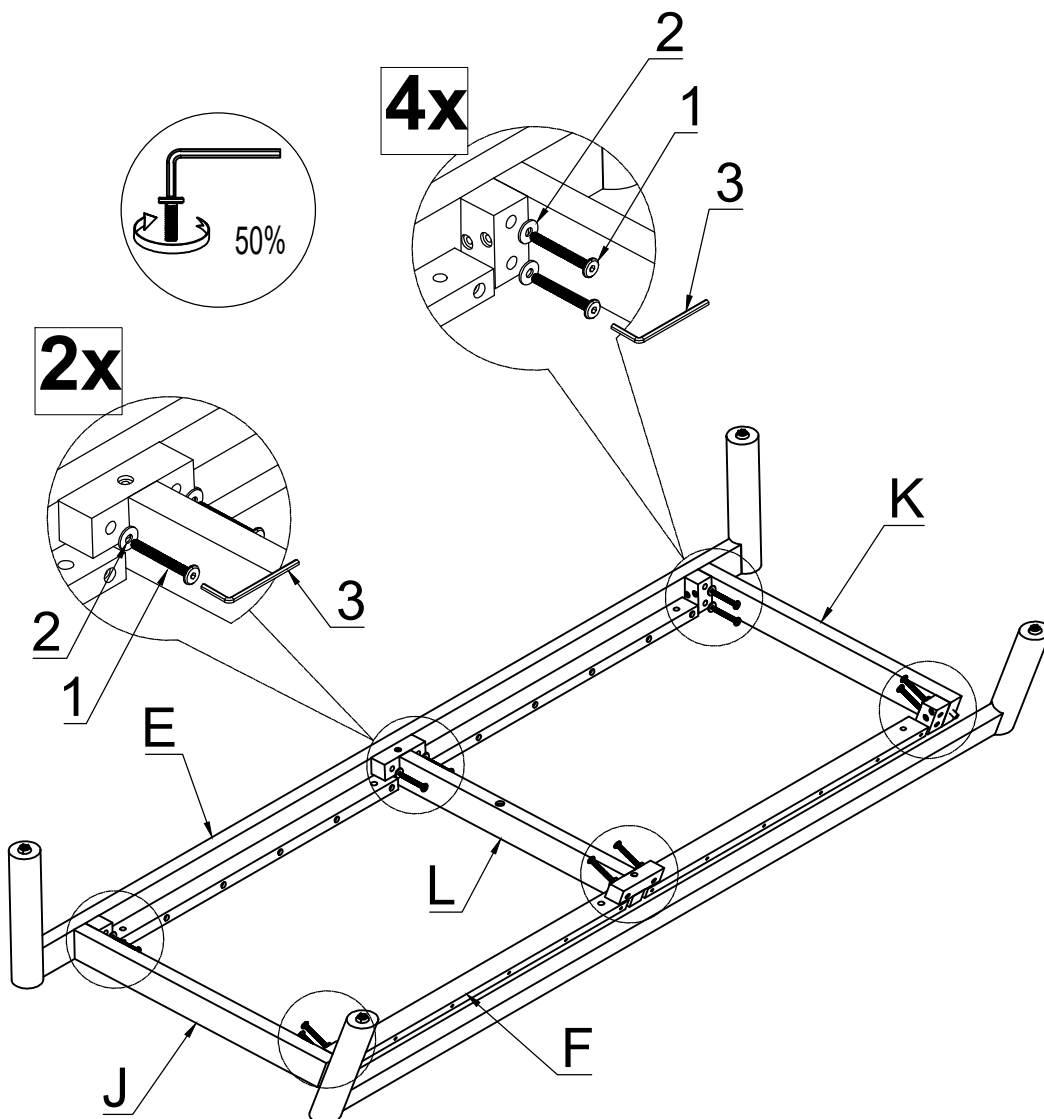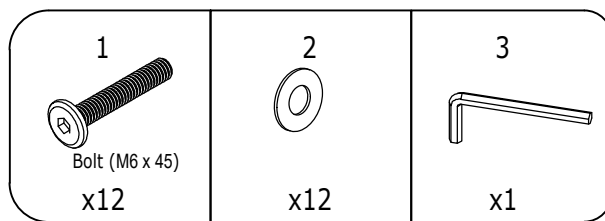


STEP 6

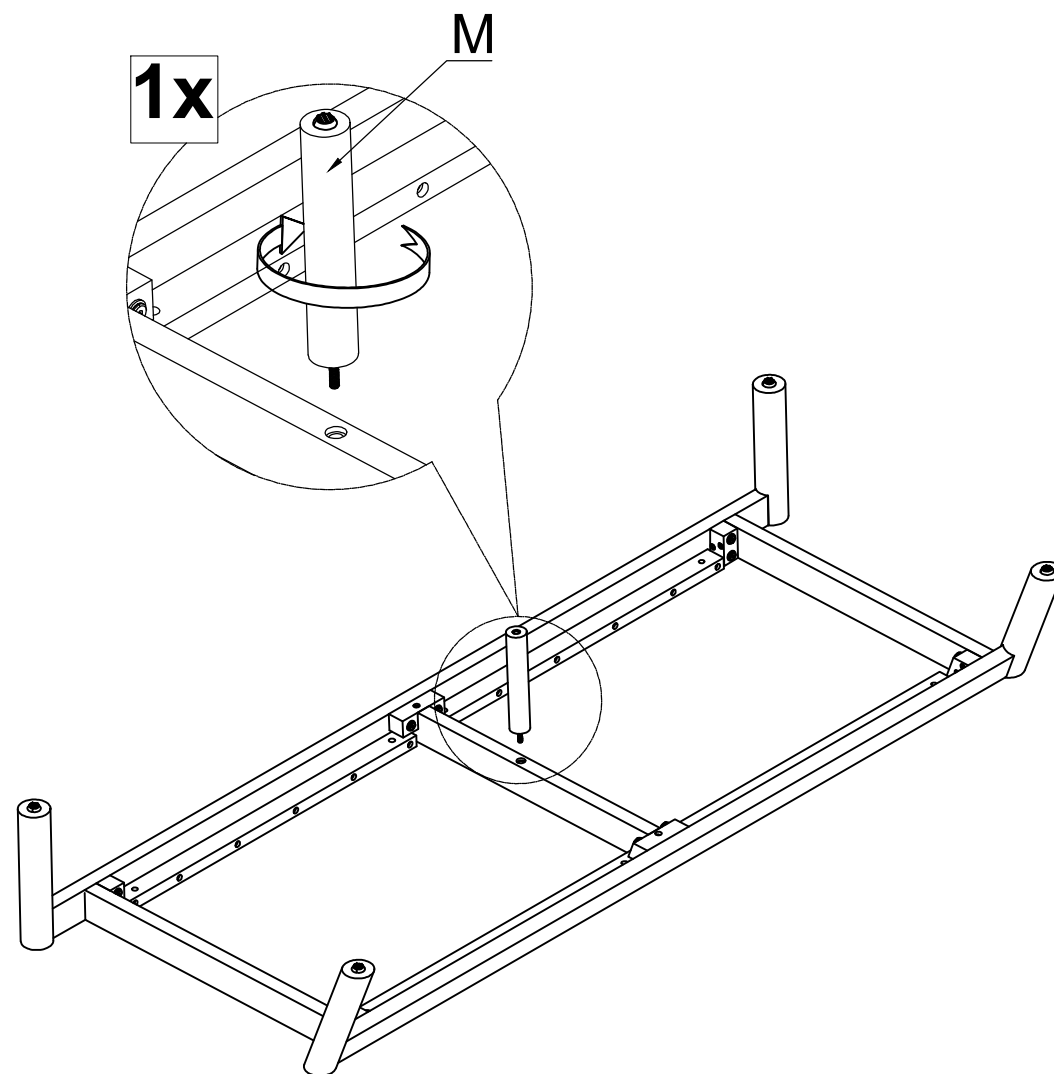


STEP 7

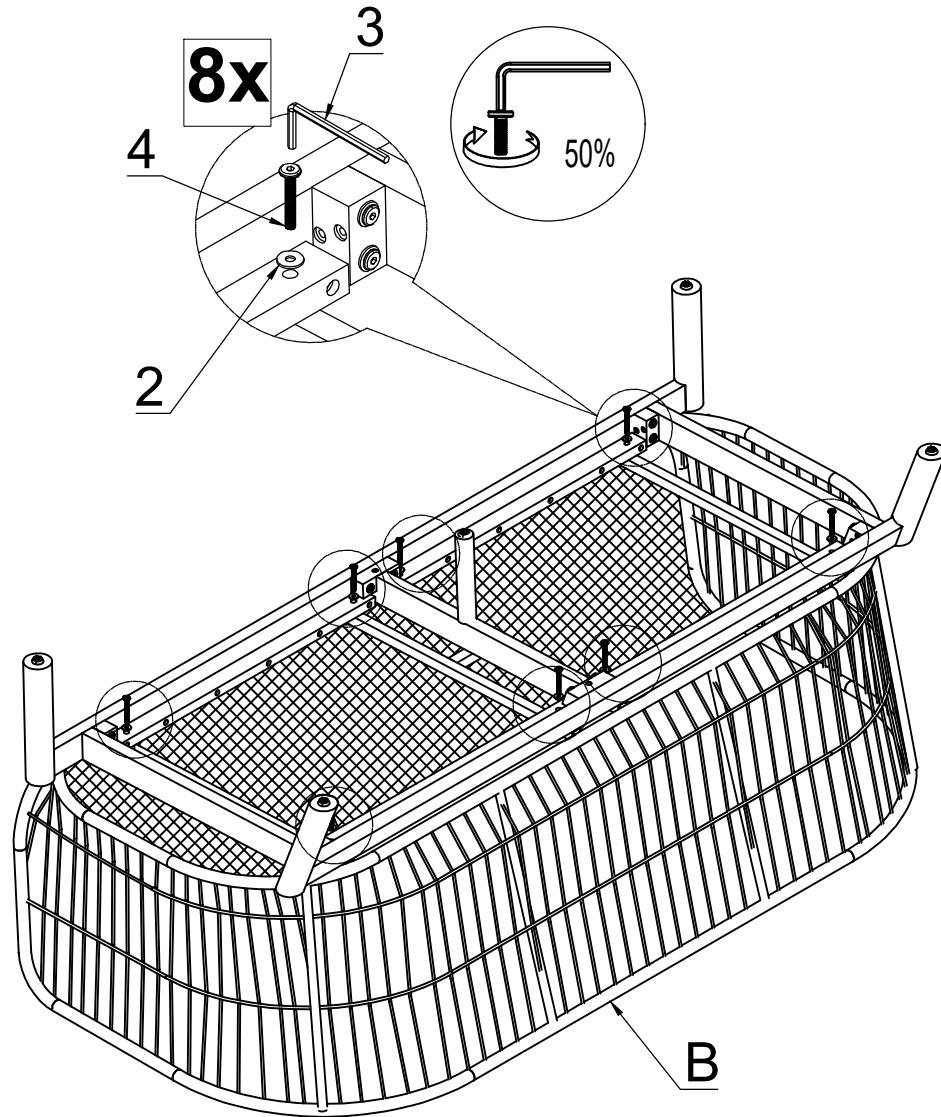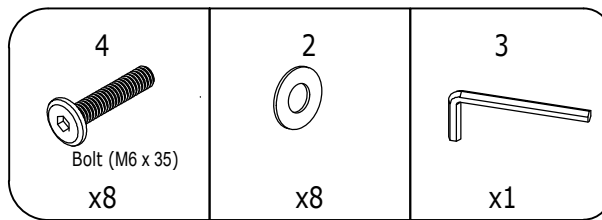


STEP 8

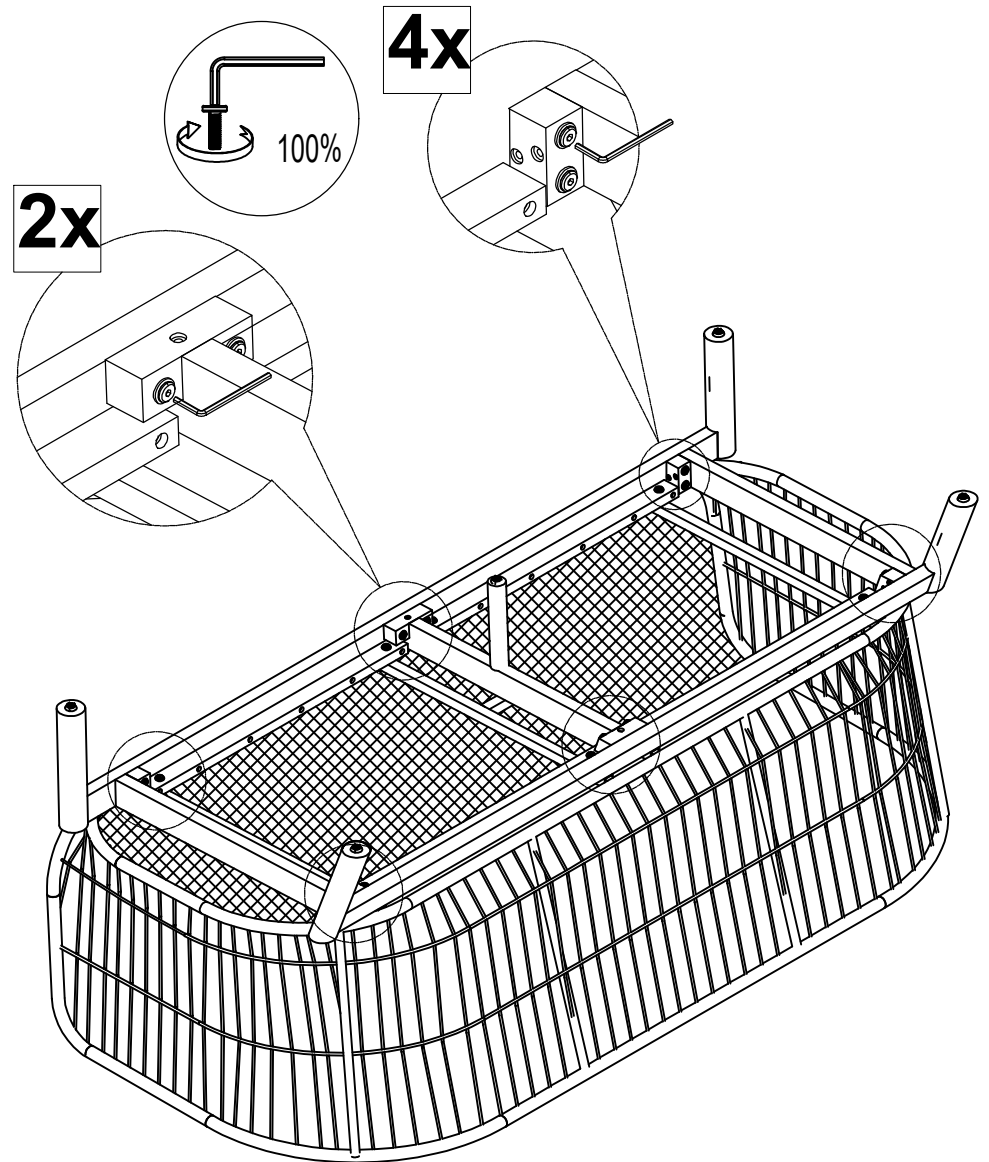

STEP 9

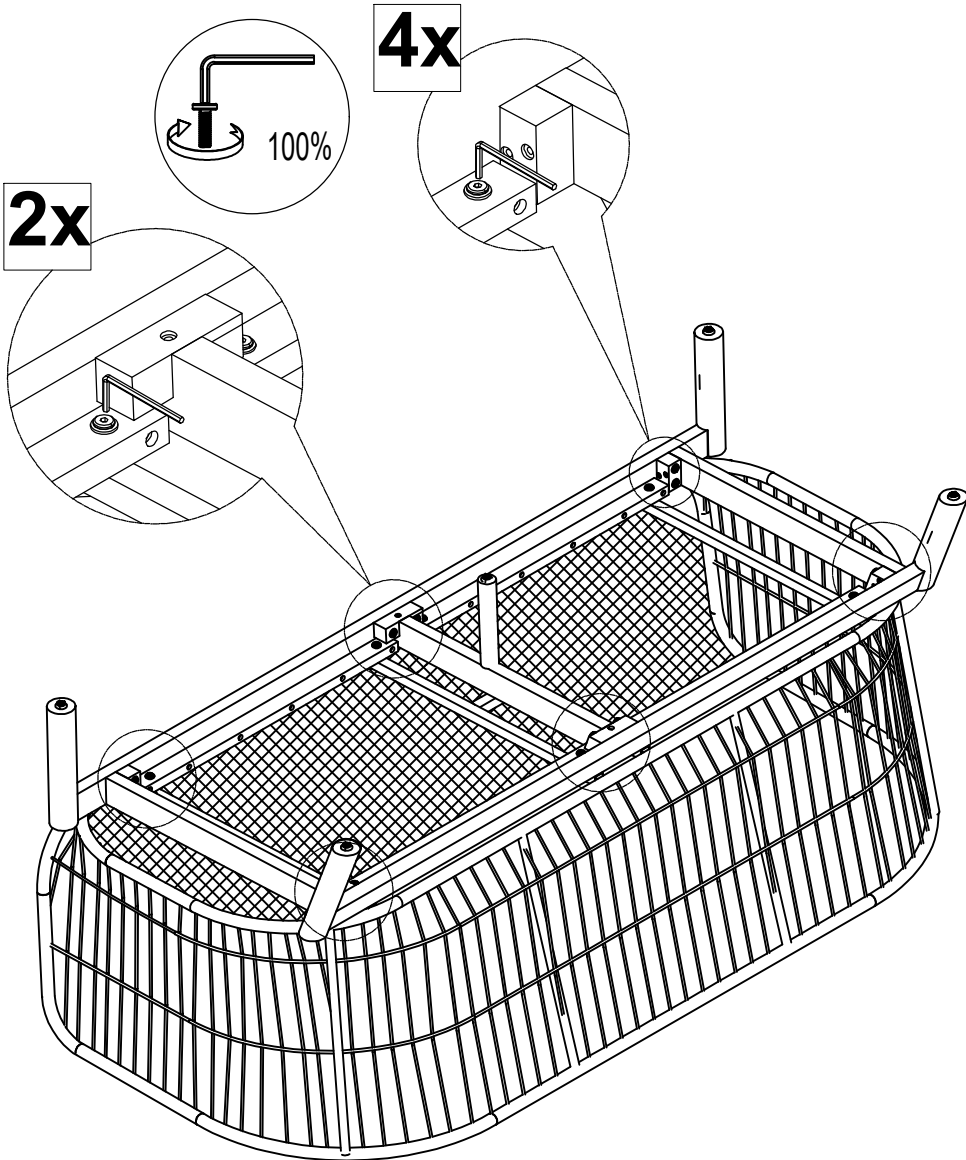

STEP 10

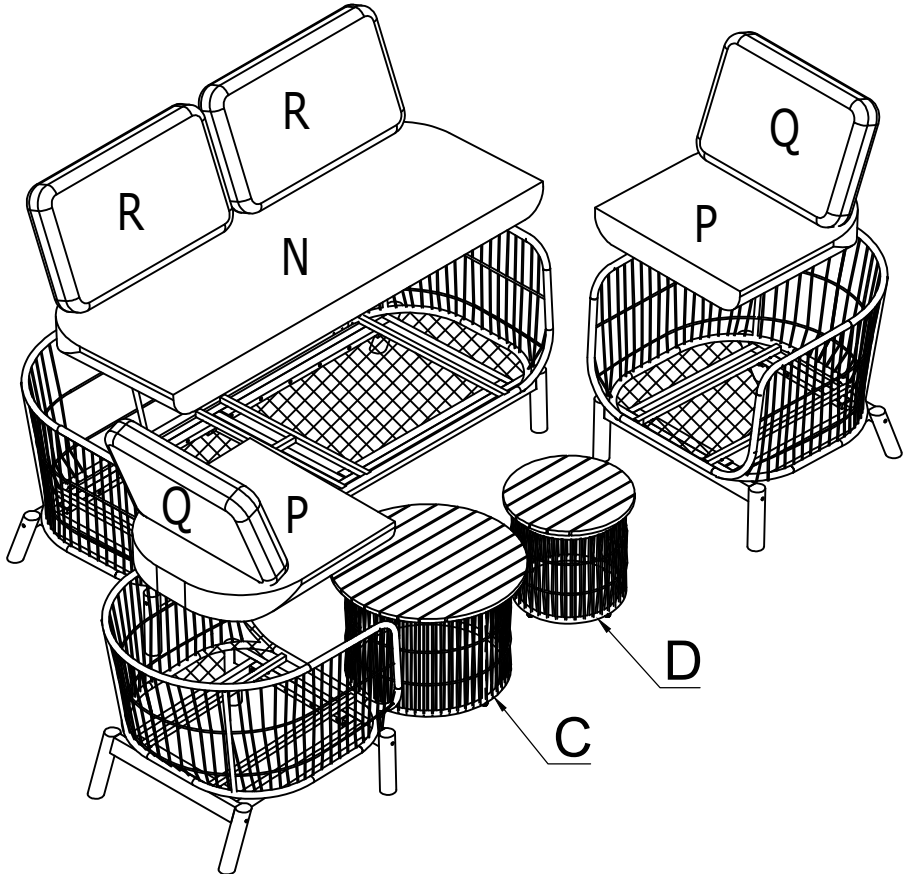

Cover for Milia sofa set

