
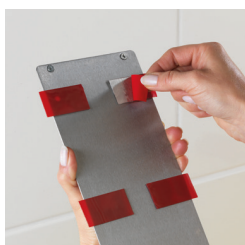
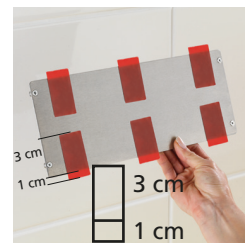


- Ⓧ Montageanleitung
- Ⓢ Assembly Instructions
- Ⓔ Instrucciones de montaje
- ⓕ Instructions de montage
- Ⓛ Istruzioni per il montaggio
- Ⓝ Montage-instructie

- Ⓟ Instruções de montagem
- Ⓝ Montagevejledning
- Ⓢ Monteringsanvisning
- Ⓟ Instrukcja montażu
- Ⓢ Οδηγία μοντάζ
- Ⓒ Návod k montáži

- Ⓢ Navodilo za montažo
- Ⓢ Návod na montáž
- Ⓟ Szerelési útmutató
- Ⓢ Инструкция по монтажу
- Ⓝ Montaj kılavuzu

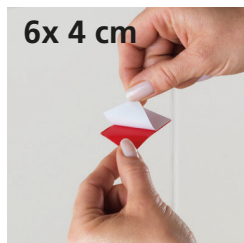

Demontage



- Ⓧ Vor dem Bohren den Verlauf von Strom- und Wasserleitungen unbedingt überprüfen und berücksichtigen.
- Ⓢ Prior to drilling, definitely inspect and take into consideration the course of electrical cabling and water pipes.
- Ⓔ Antes de taladrar considerar y revisar el recorrido de las tuberías de agua y las de conducción de corriente eléctrica.
- ⓕ Avant de percer les trous, vérifiez absolument où passent les conduites de courant et d'eau et en tenir compte.
- Ⓛ Prima di fare dei fori controllare e tenere assolutamente conto della posizione di condutture elettriche e delle tubature dell'acqua.
- Ⓝ Controleer voordat u gaat boren beslist eerst het verloop van elektrische leidingen en waterleidingen en houd hier bij het boren rekening mee.

- Ⓟ Antes de começar a furar verificar e tomar em consideração o lugar do assentamento das condutas de água e dos cabos eléctricos.
- Ⓝ Inden der bores, er det meget vigtigt at kontrollere, hvor strøm- og vandledningerne er ført, og tage højde for dette ved boringen.
- Ⓢ Kontrollera alltid var elkablar och vattenledningar går i väggen och borra inte på sådana ställen.
- ⓕ Przed rozpoczęciem wiercenia sprawdź i uwzględnij przebieg przewodów elektrycznych i rur wodnych.
- Ⓢ Πριν αρχίσετε να τρυπάτε, να ελέγξετε και να προσέξετε οποσδήποτε ενδεχόμενους αγωγούς ηλεκτρικού ή νερού.
- Ⓒ Před vrtním bezpodmínečně zkontrolujte a zohľadňte průběh (trasy) vedení elektrického proudu a vody.
- Ⓝ Pred vrtním bezpodmínečne skontrolujte a zohľadnite priebeh elektrických vedení a vodovodných potrubí.

- Ⓢ Pred vrtnjem obvezno preverite in upoštevajte potek električnih in vodovodnih vodov.
- Ⓢ Fűrés előtt okvetlenül vegye zszfigyelembe az áram- és vízvezeték elhelyezkedését.
- Ⓢ Перед сверлением обязательно проверить и принять во внимания место прохождения электрической проводки и водопровода.
- Ⓝ Delik açmadan önce elektrik ve su hatlarının nereden geçtiğini mutlaka kontrol edin ve bunları dikkate alarak çalışın.