

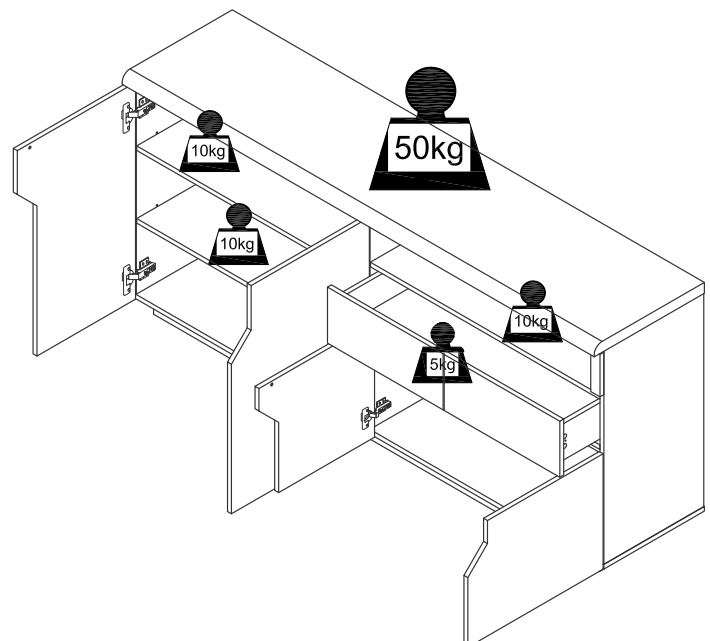
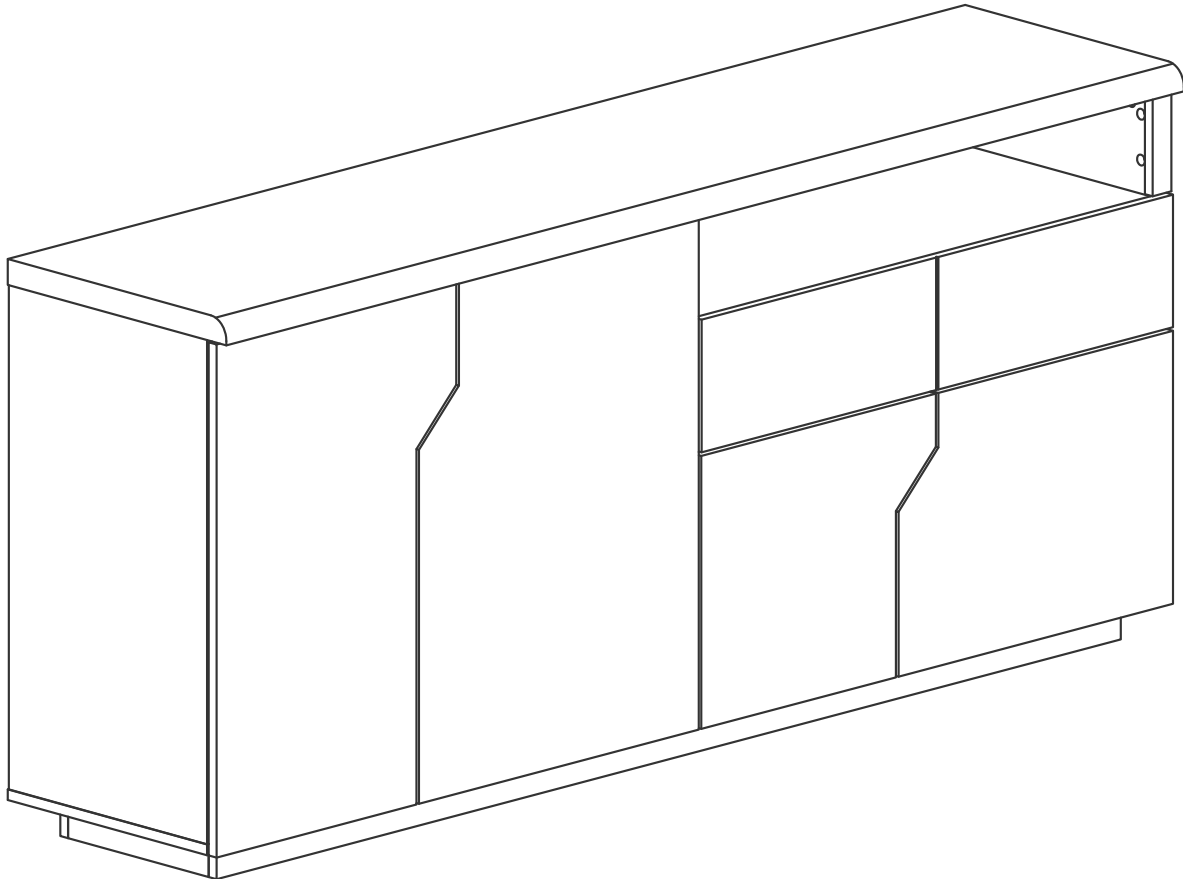


Assemble instruction



27980018/03

CARLOS

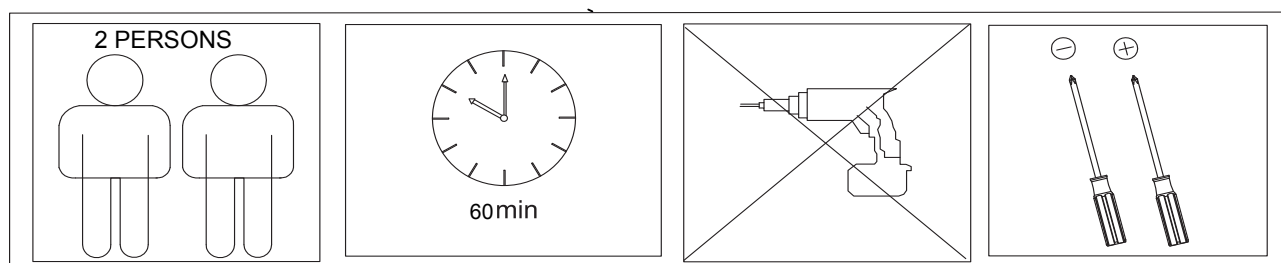


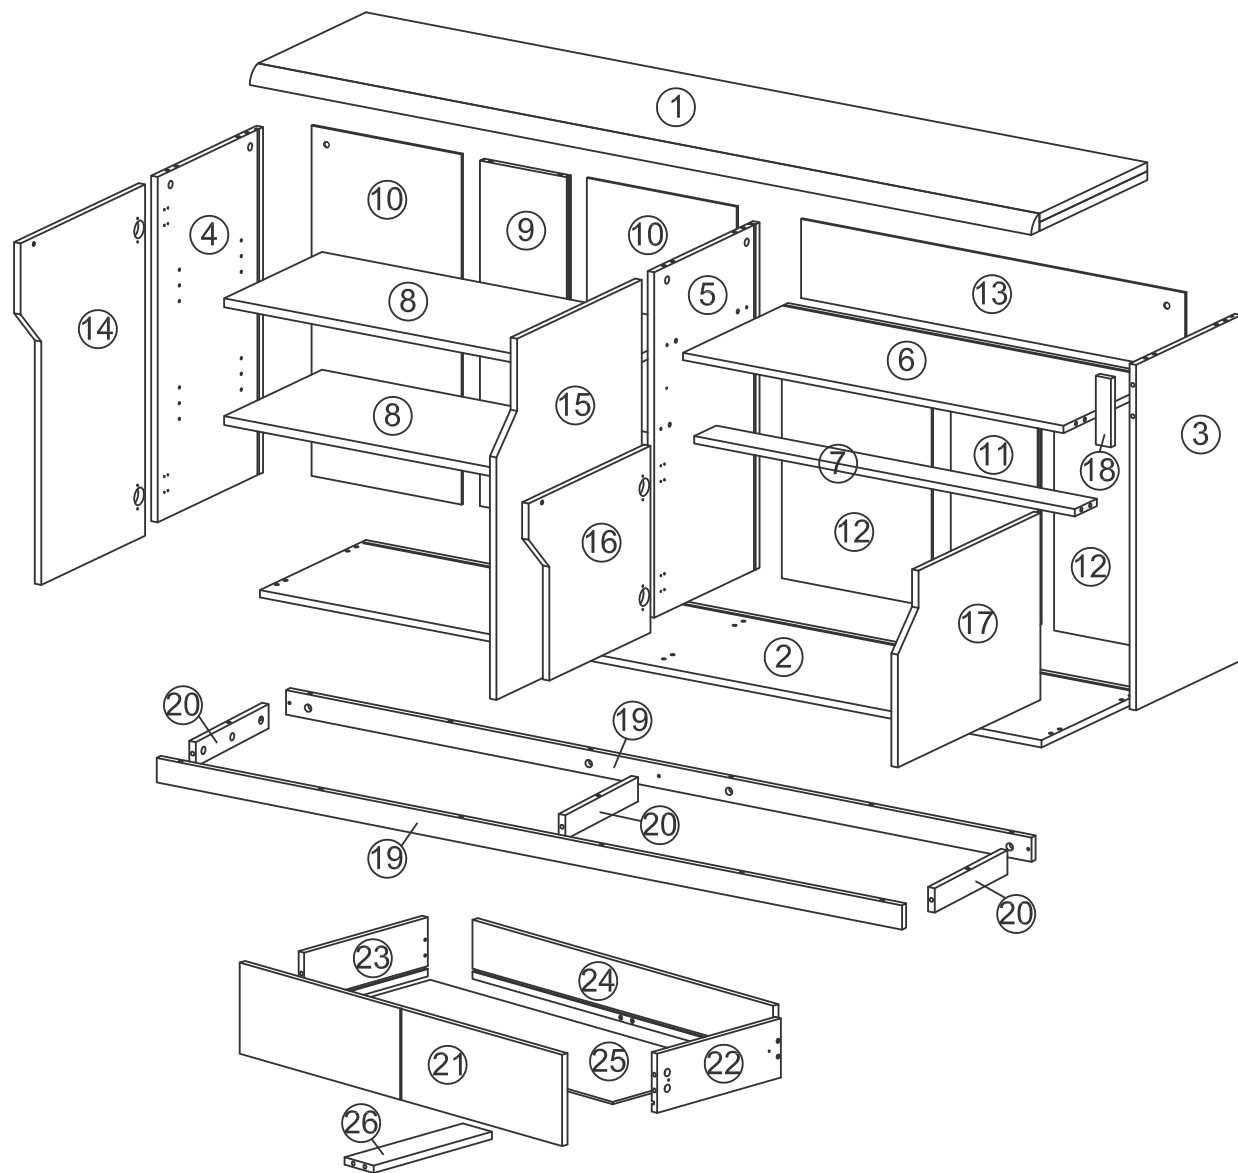

A	x41	B	x41	C	x22	D	x10	E	x6	F	x92	G	x8
M6*35mm		Ø15mm		Ø8*30mm		7*50mm				Ø3.5*14mm			
H	x1	I	x6	J	x16	K	x2	L	x6	M	x20	N	x2
M4		Ø4*35mm				Ø25mm						Ø8*30mm	
O	x2	P	x2	Q	x2	R	x4	S	x4	T	x4	U	x2
Ø4*45mm		340mm		340mm									

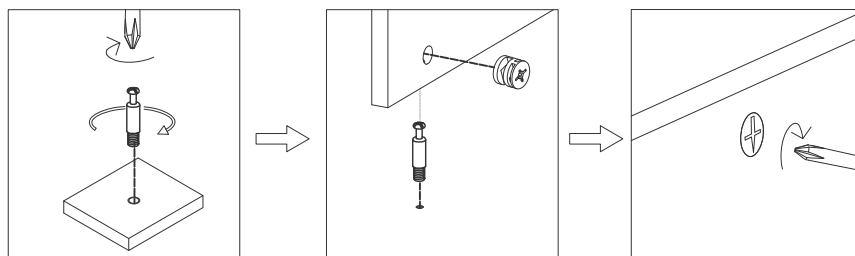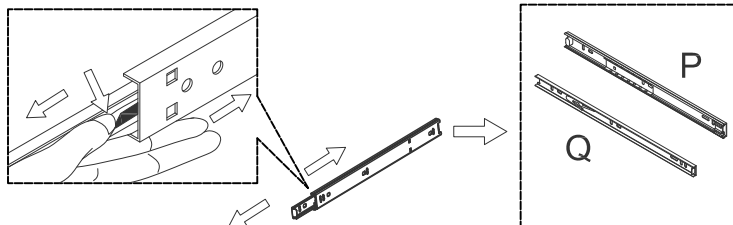


1.

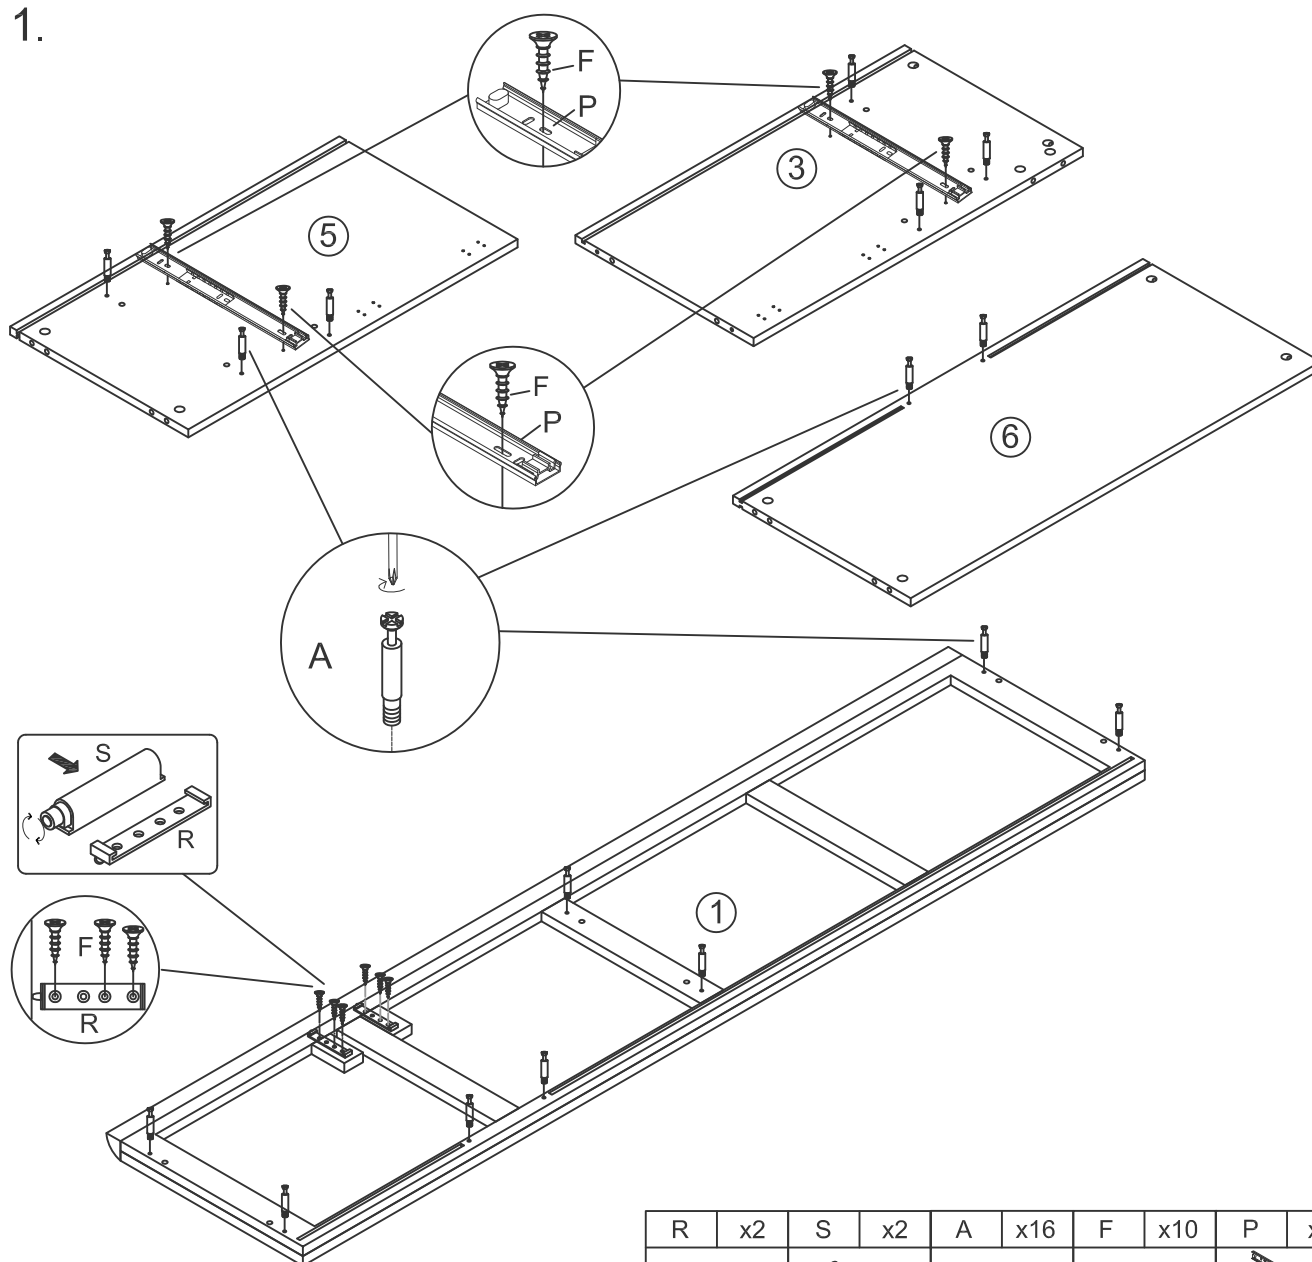

R	x2	S	x2	A	x16	F	x10	P	x2
									
				M6*35mm		Ø3.5*14mm		340mm	


2.

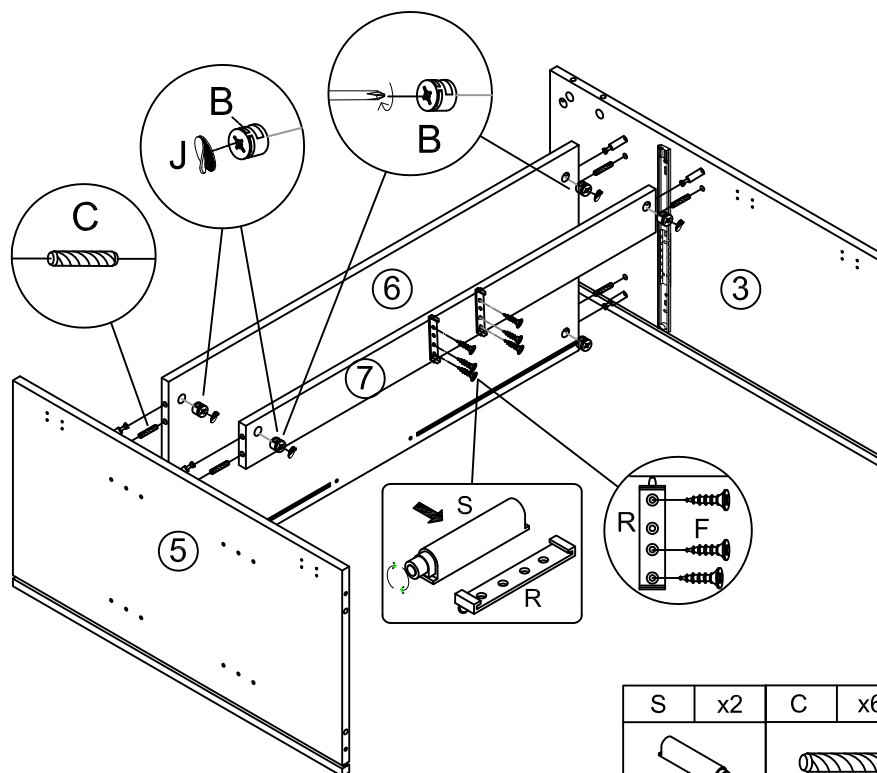

J	x4
R	x2


S	x2	C	x6	B	x6	F	x6
		Ø8*30mm		Ø15mm		Ø3.5*14mm	


3.

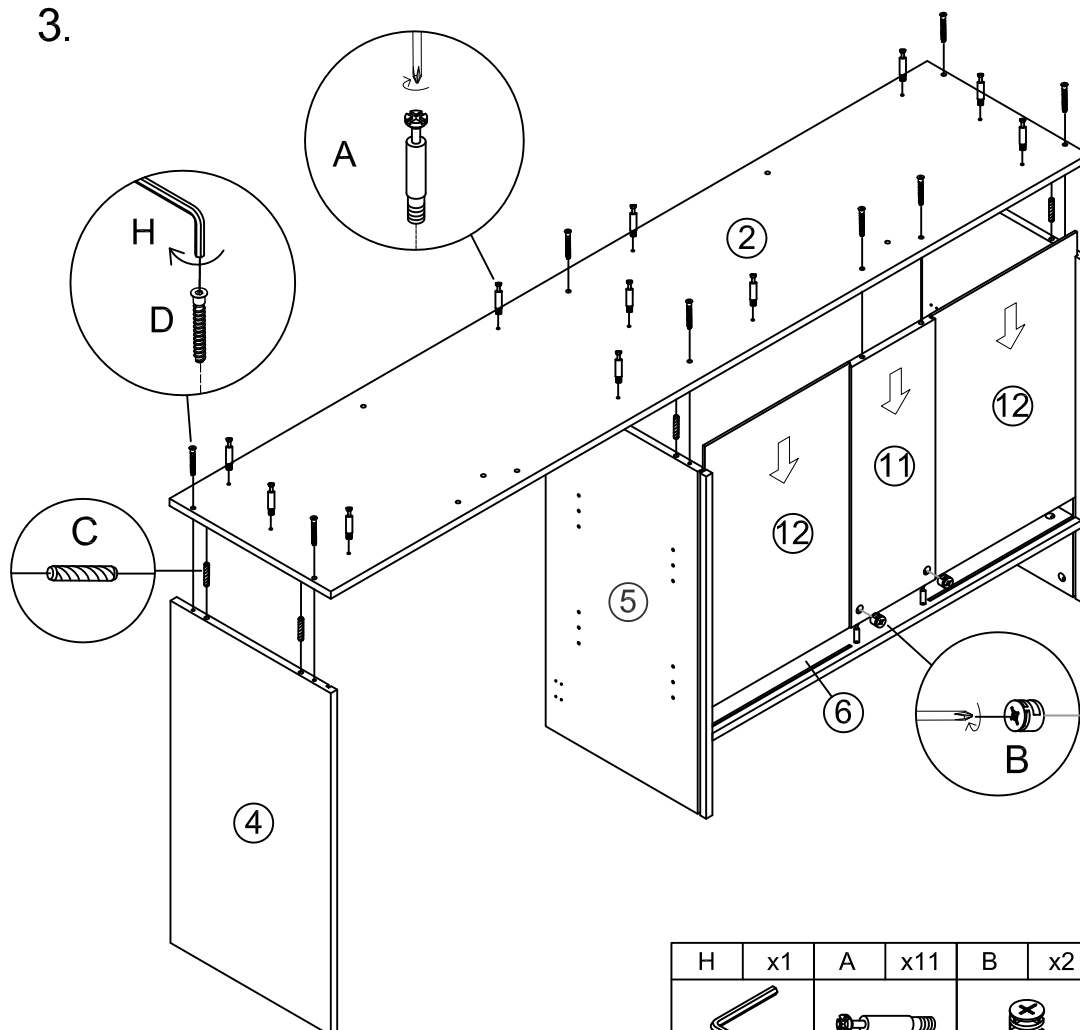


H	x1	A	x11	B	x2	C	x6	D	x8
M4		M6*35mm		Ø15mm		Ø8*30mm		7*50mm	

4.

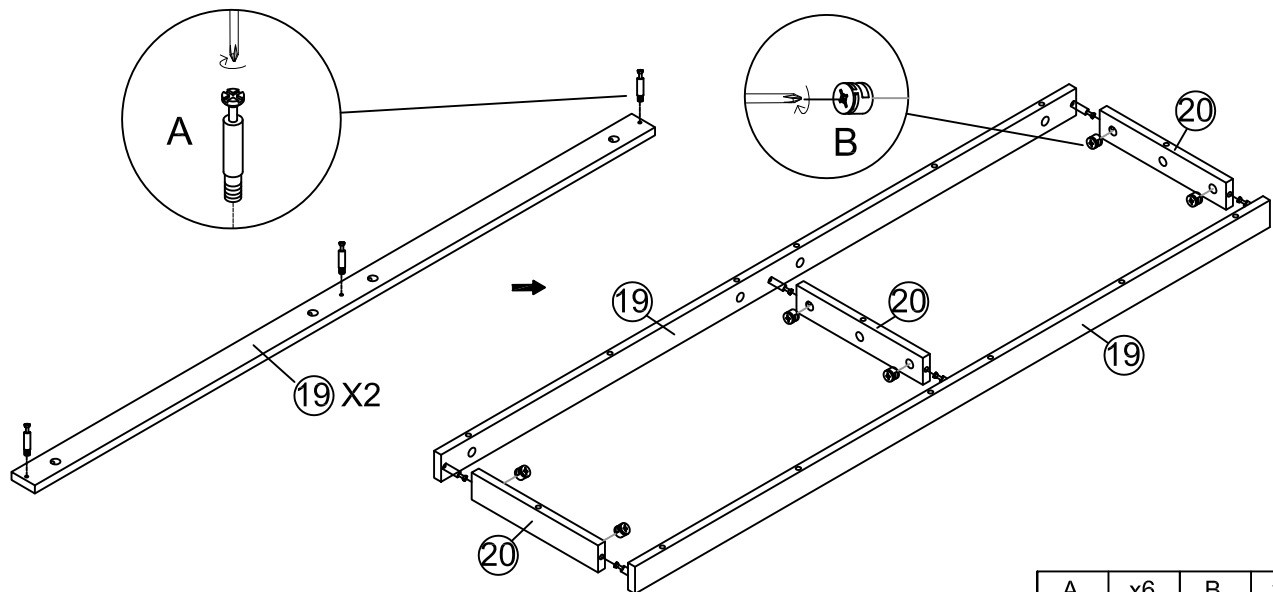


A	x6	B	x6
			
M6*35mm		Ø15mm	

5.

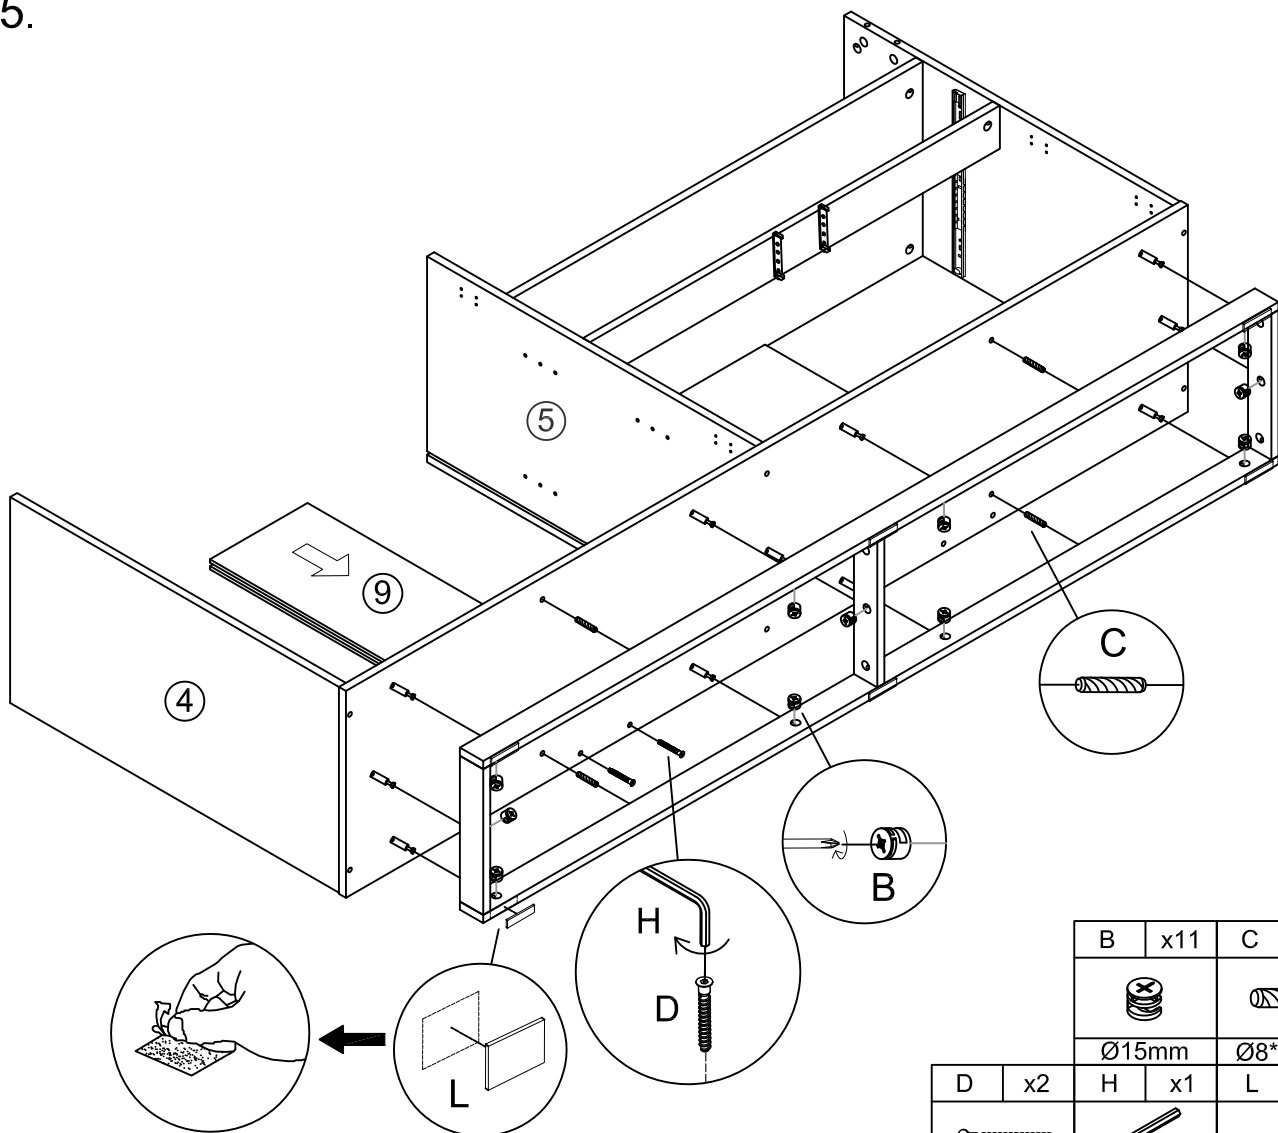


B	x11	C	x4
			
Ø15mm		Ø8*30mm	
D	x2	H	x1
			
7*50mm		M4	


6.

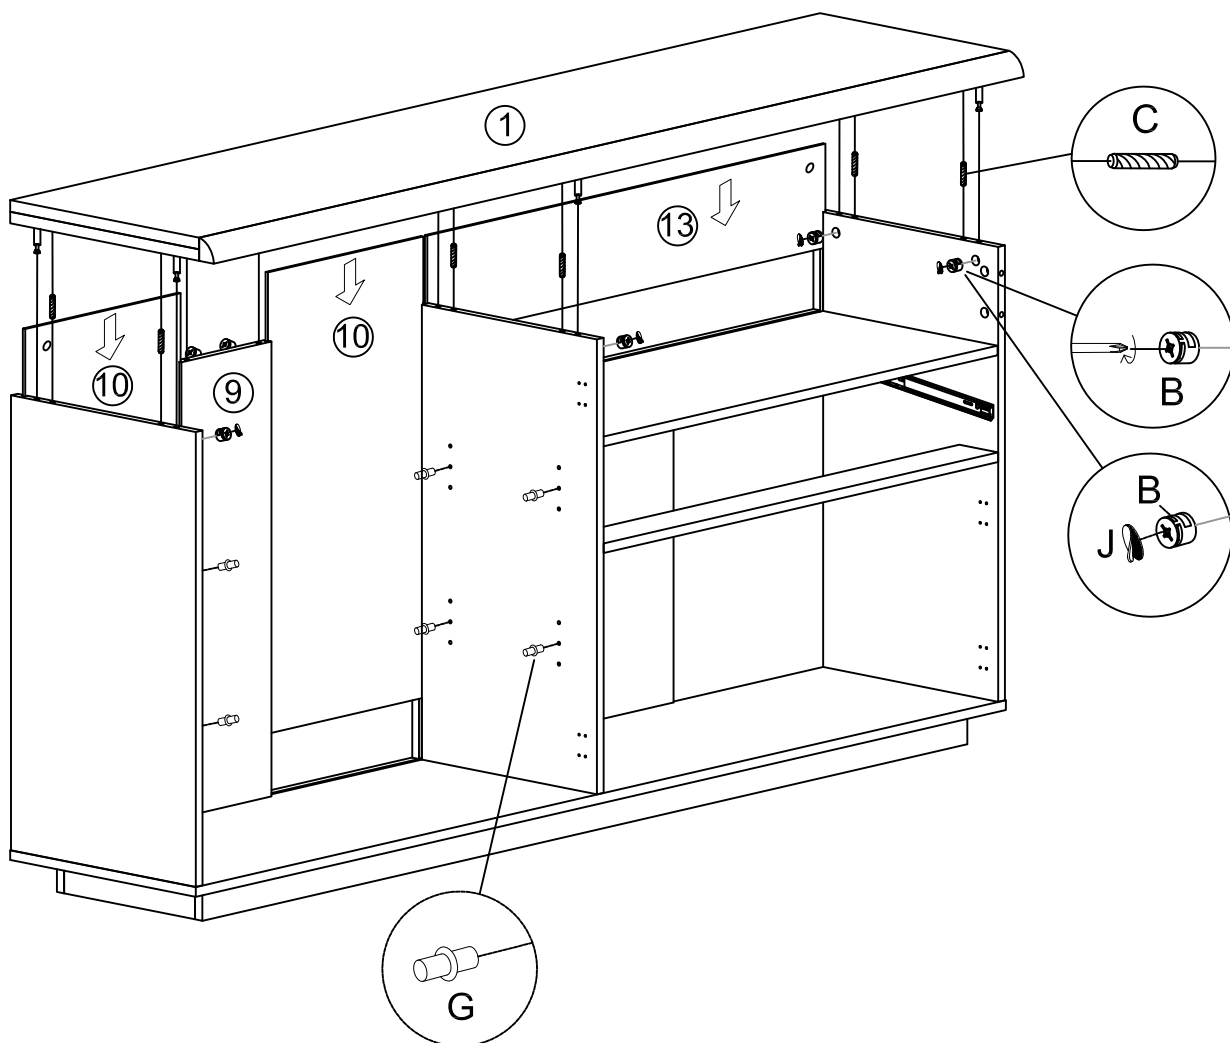


J	x6	B	x8	C	x6	G	x8
							
		Ø15mm		Ø8*30mm			

7.

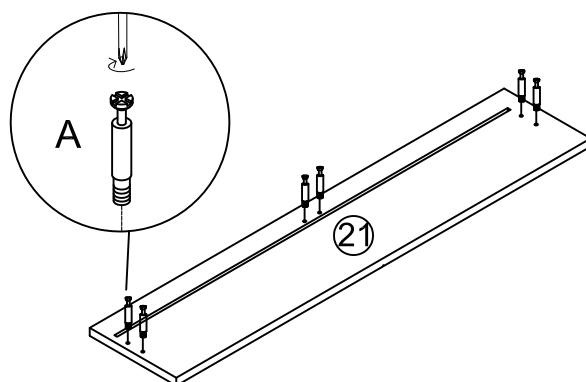


A	x6
	
M6*35mm	

8.

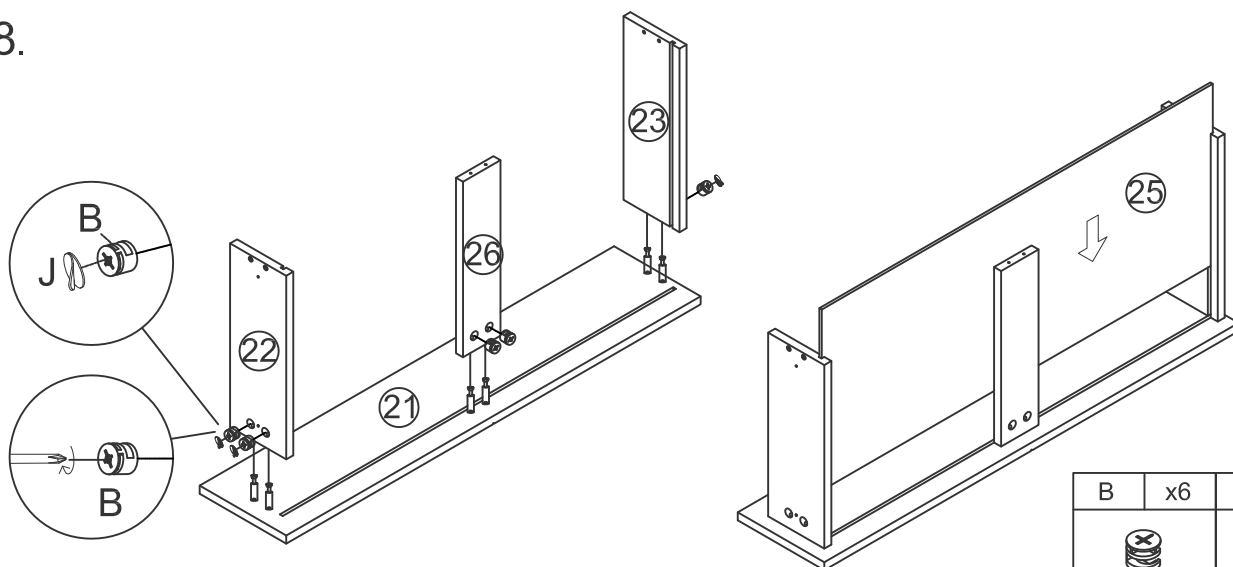


B	x6	J	x4
			
Ø15mm			

9.

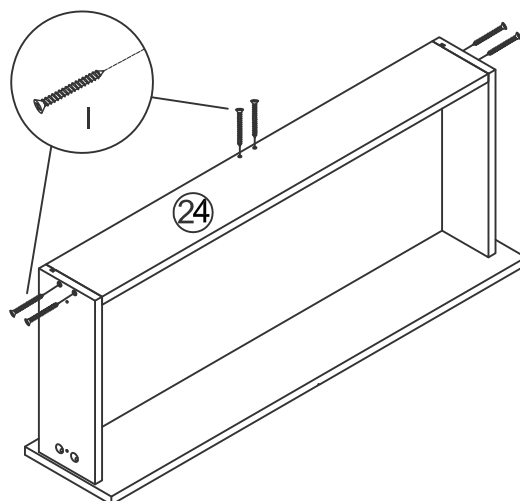


I	x6
	
Ø4*35mm	

10.

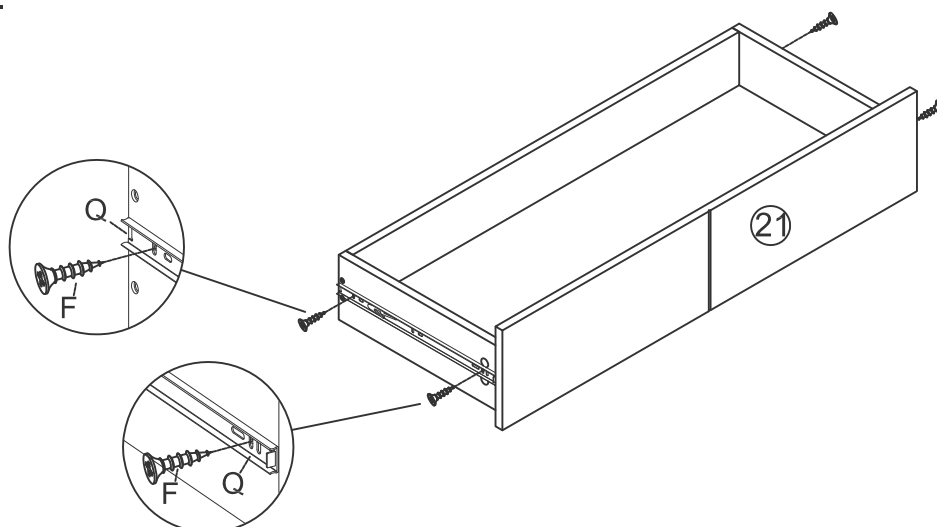


F	x4	Q	x2
			
Ø3.5*14mm		340mm	


11.

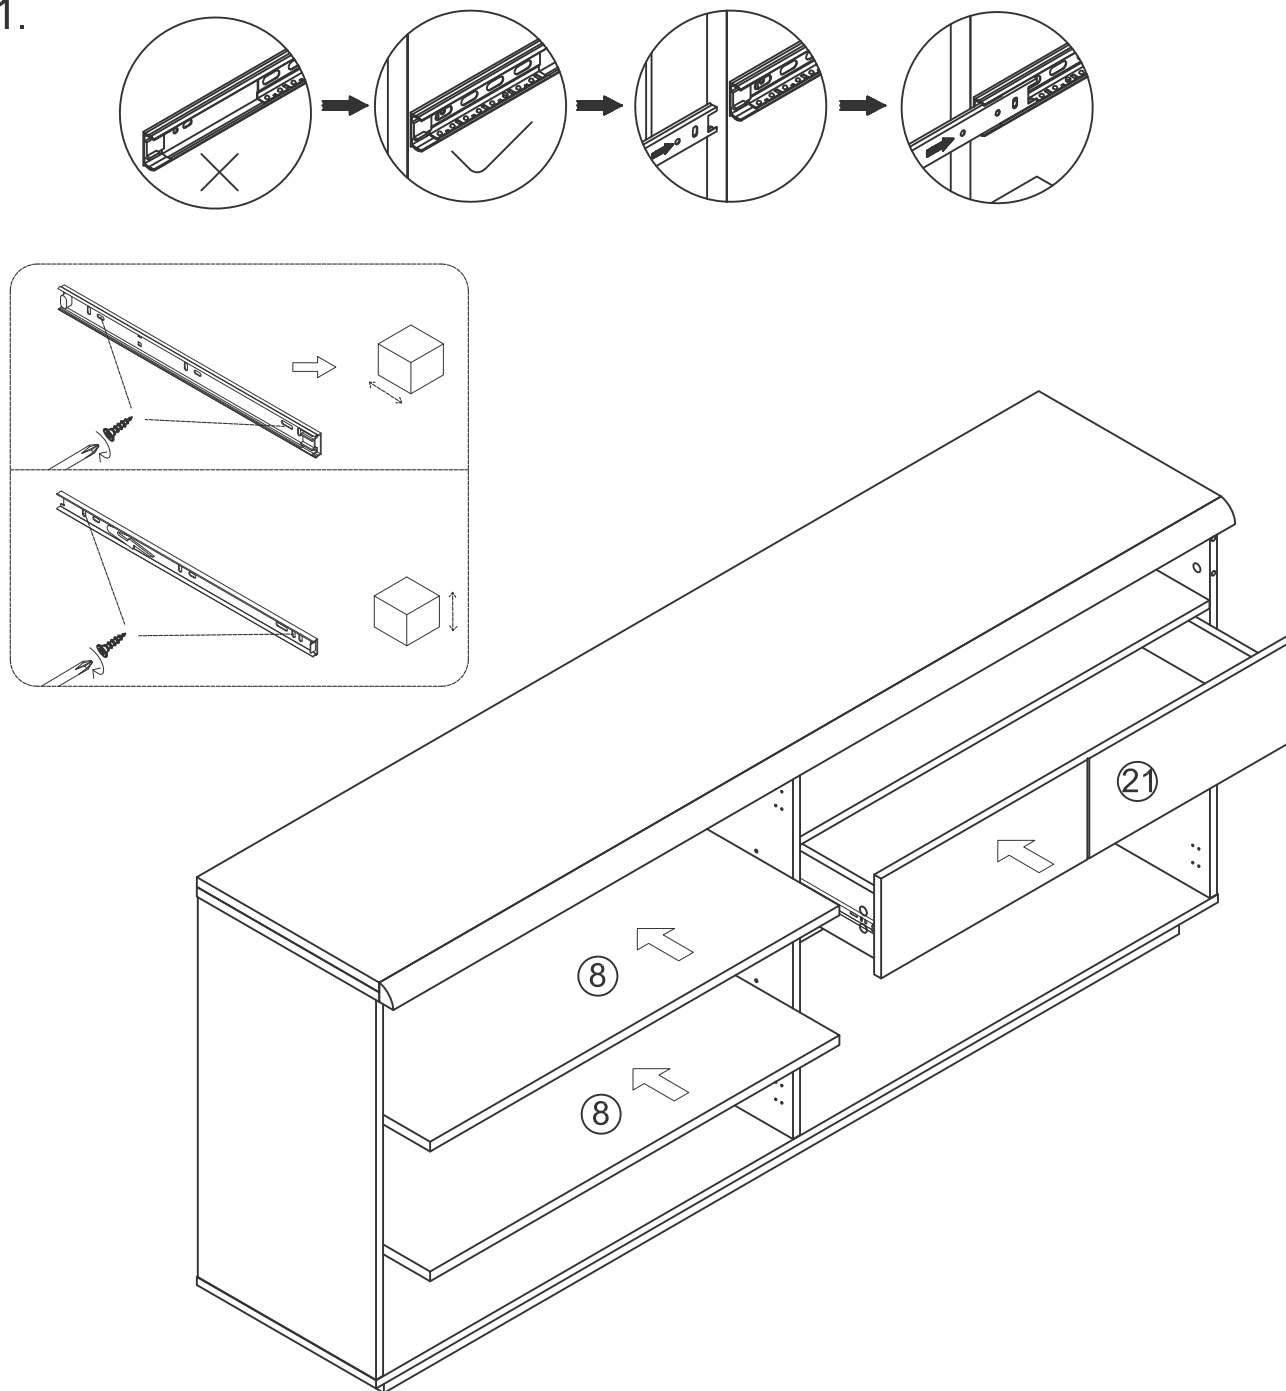


12.

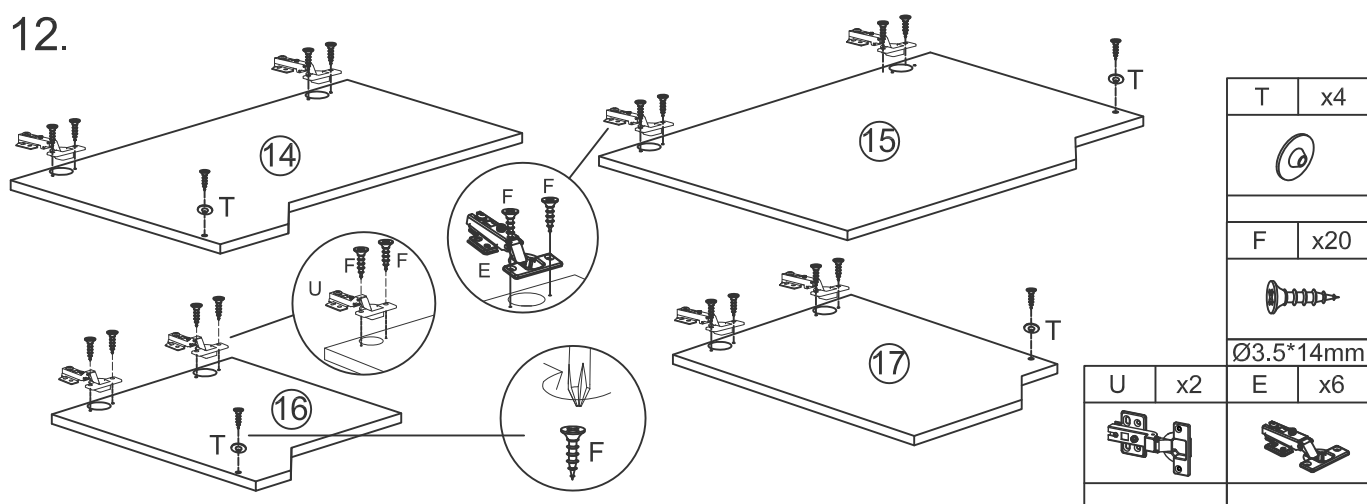


13.

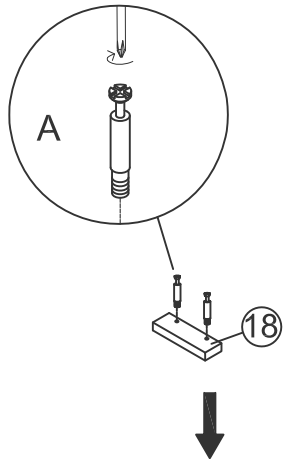


4.

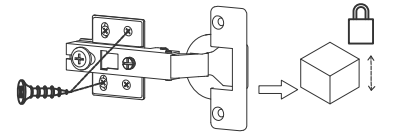








3.

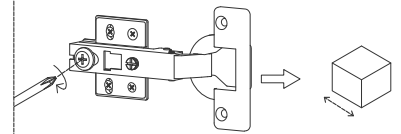


2.

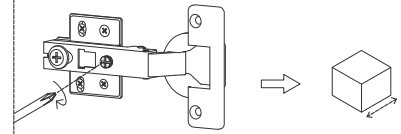


1.

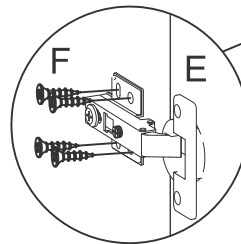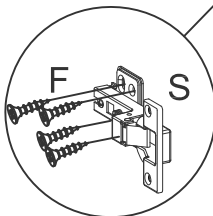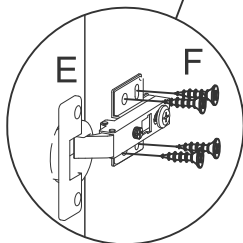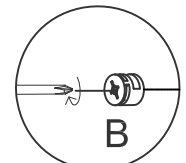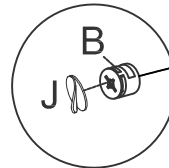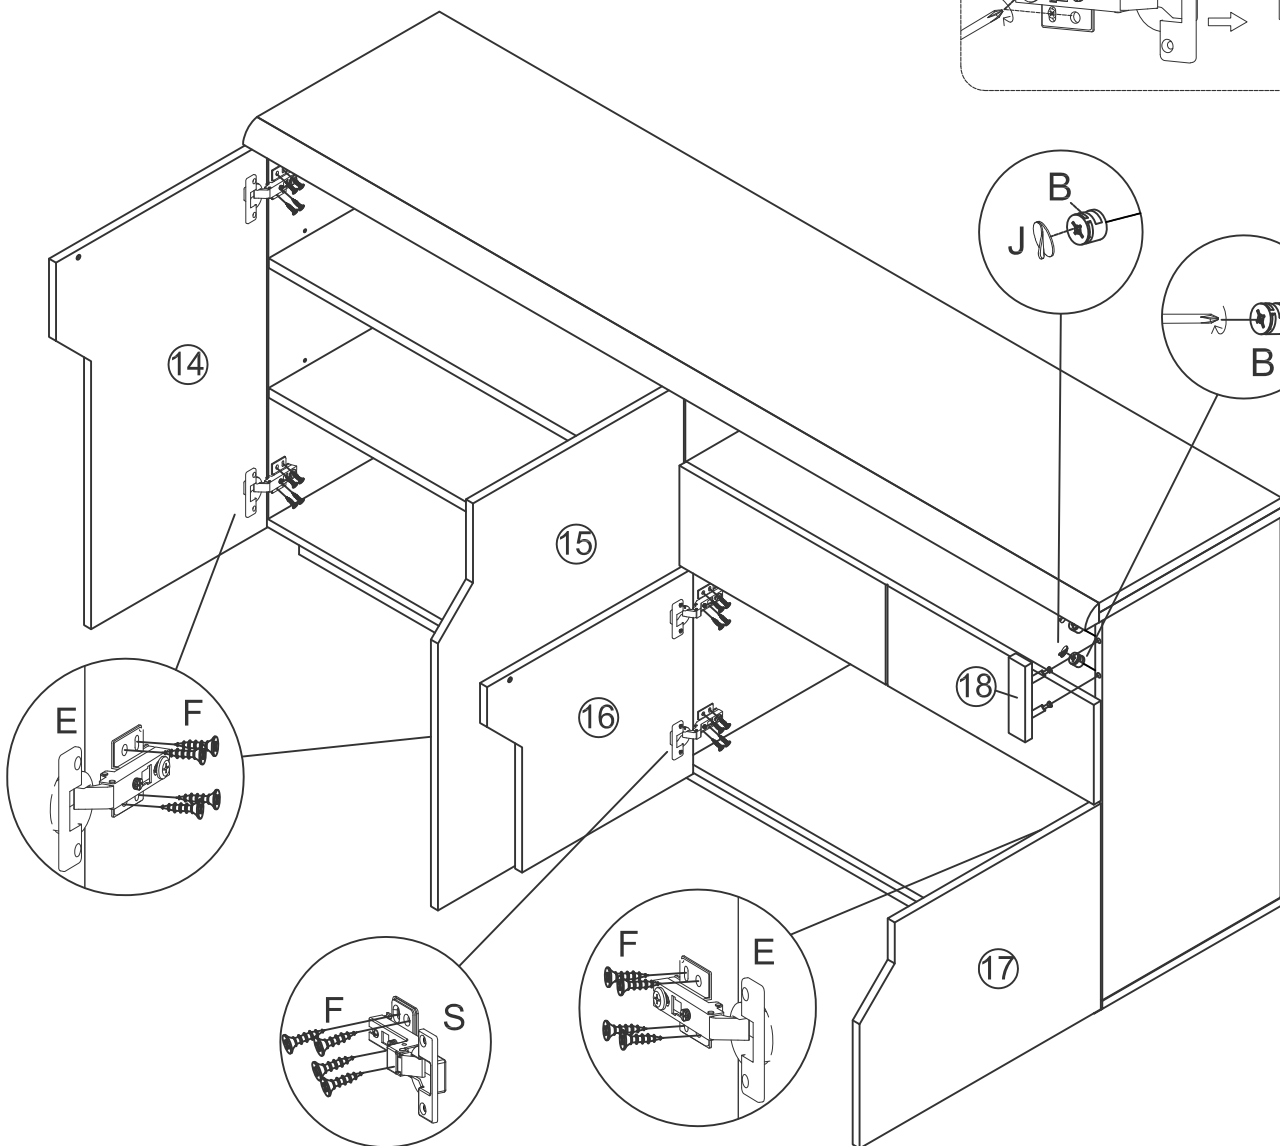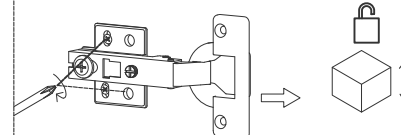

A	x2	B	x2	J	x2	F	x32	U	x2	E	x6
											
M6*35mm		Ø15mm				Ø3.5*14mm					

14.

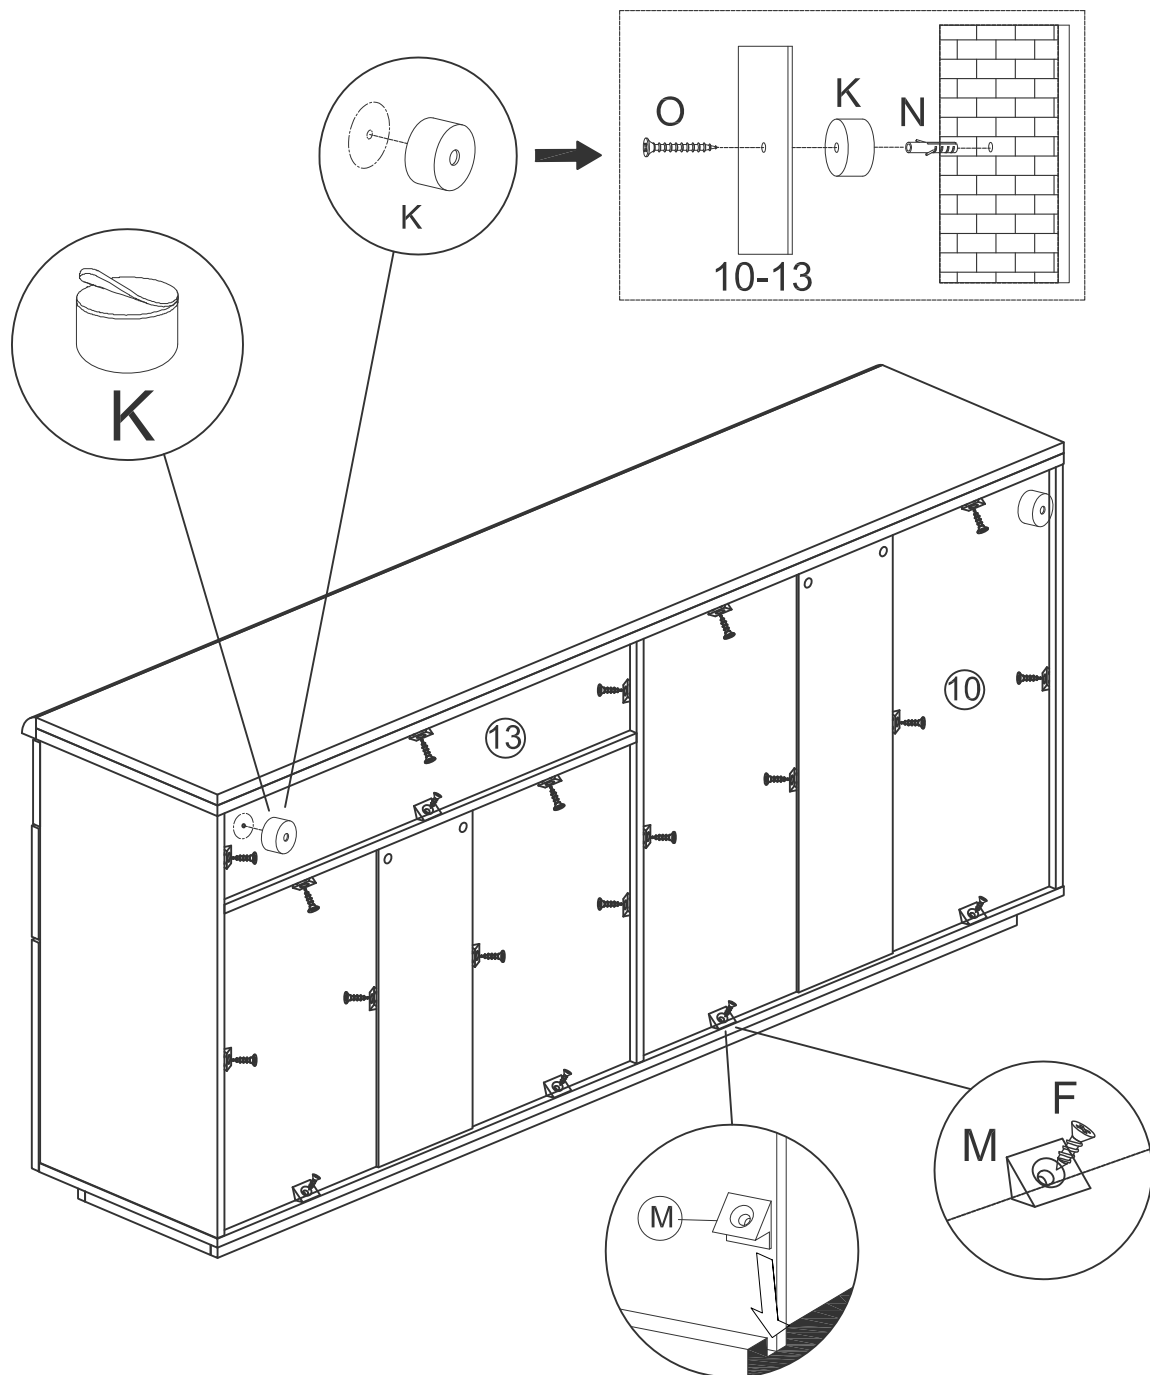

F	x20	M	x20	K	x2	O	x2	N	x2
									
Ø3.5*14mm				Ø25mm		Ø4*45mm		Ø8*30mm	