
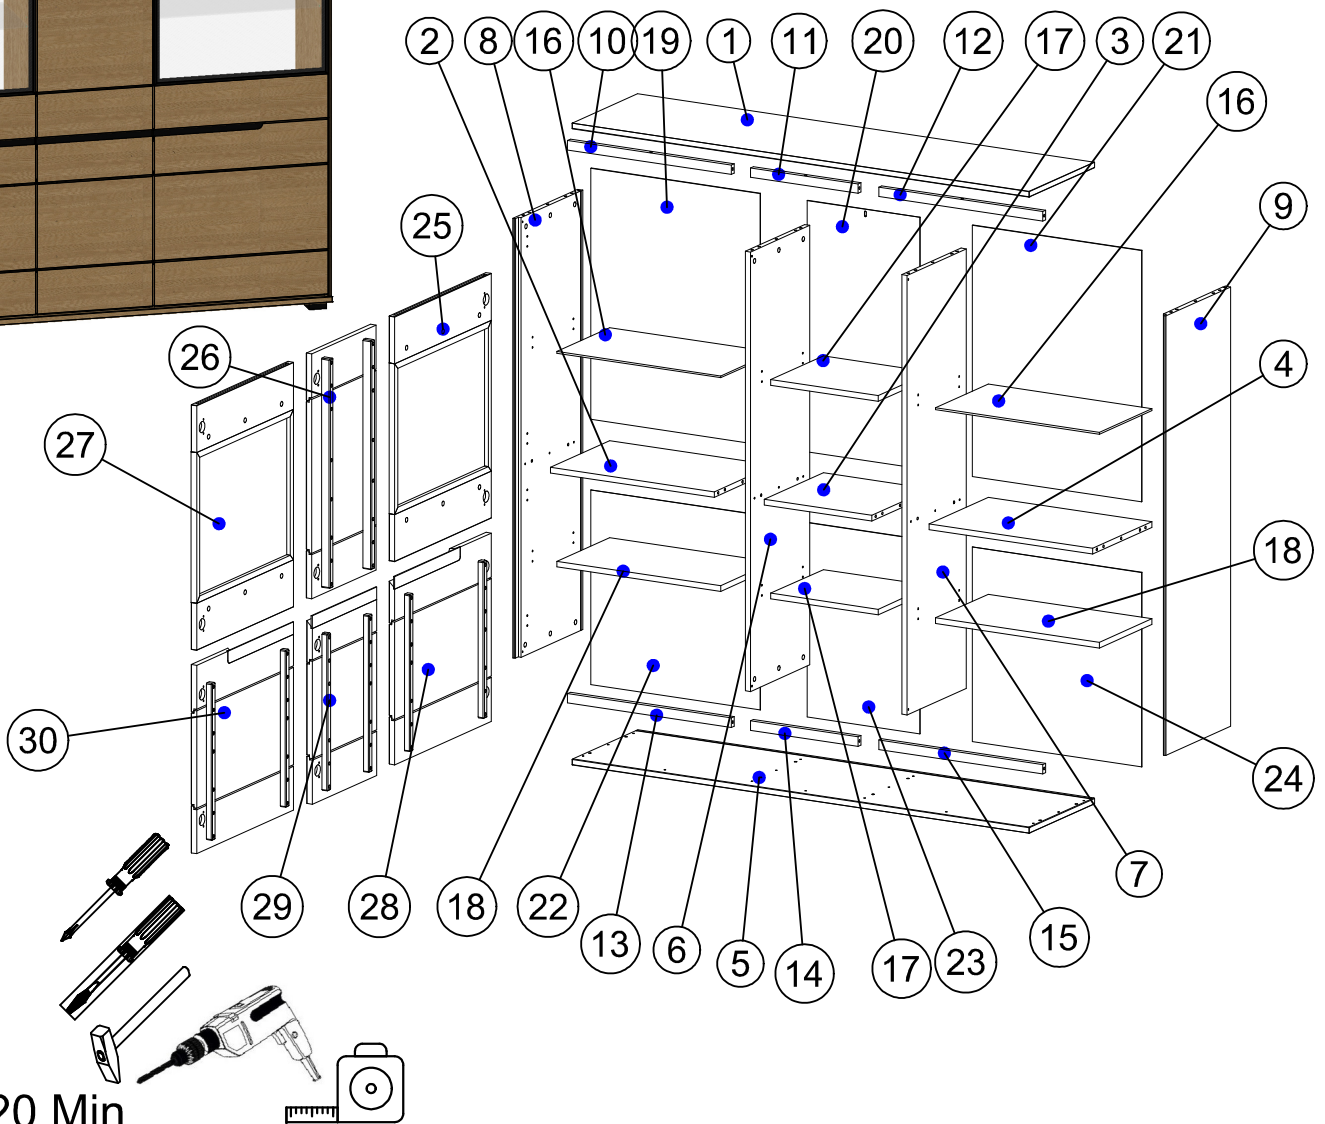
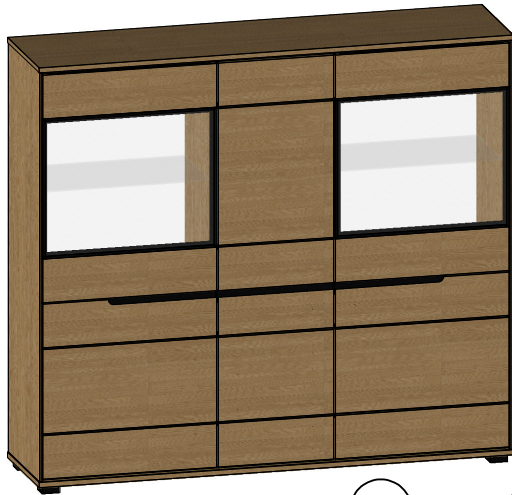


3995





Versionsnummer:

10.2023

Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.




A Ø 8x30 20	A1 Ø 8x50 4	B 34	D 34	D1 20/20	D2 6/6	E Ø 6.3x13 12	F 12	G Ø 4x30 10
H 40	I1 16	I2 8	J Ø 5x13 24	P 40	V 5	U 1	Q 26	

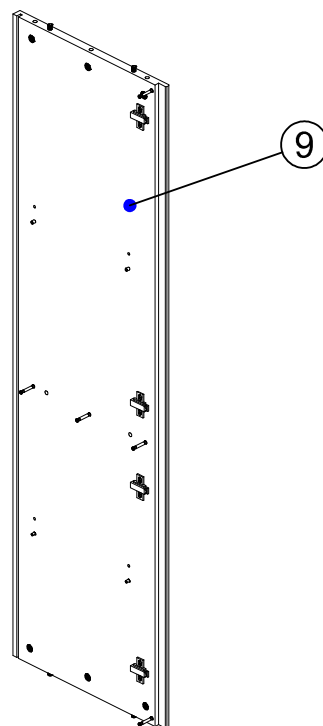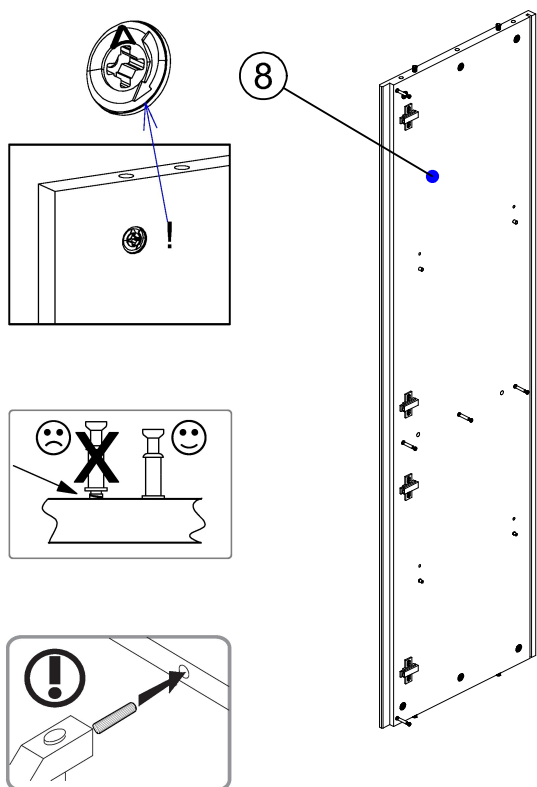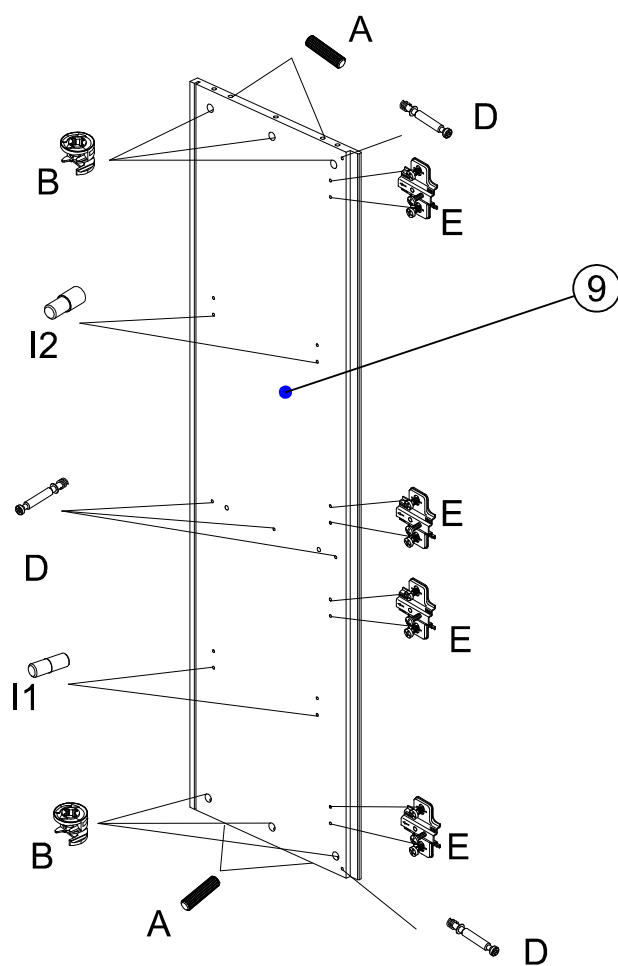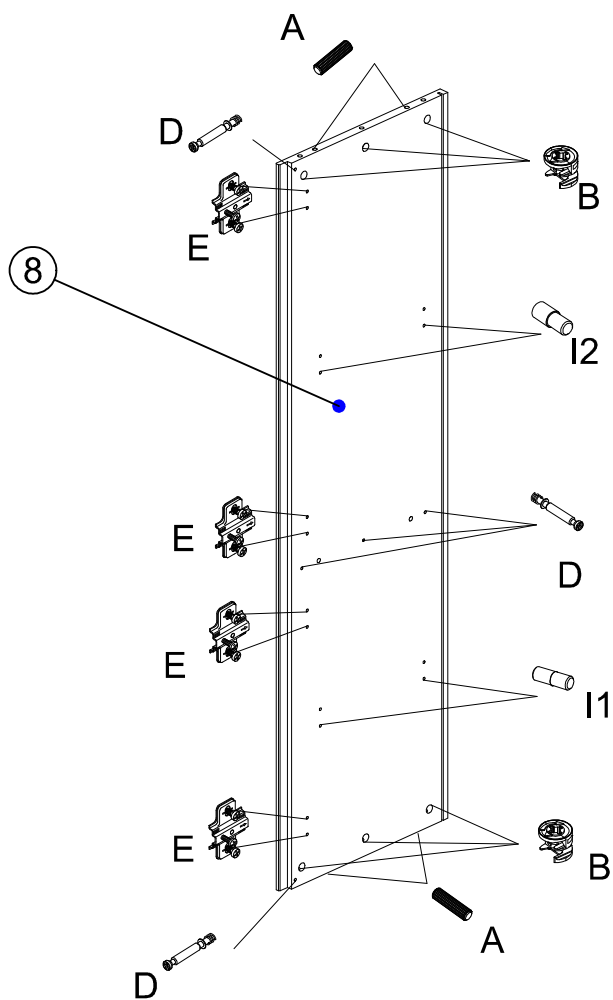

I

A  Ø 8x30 8	B  12	D  10	E  8	I1  4	I2  4
--	--	---	---	--	--

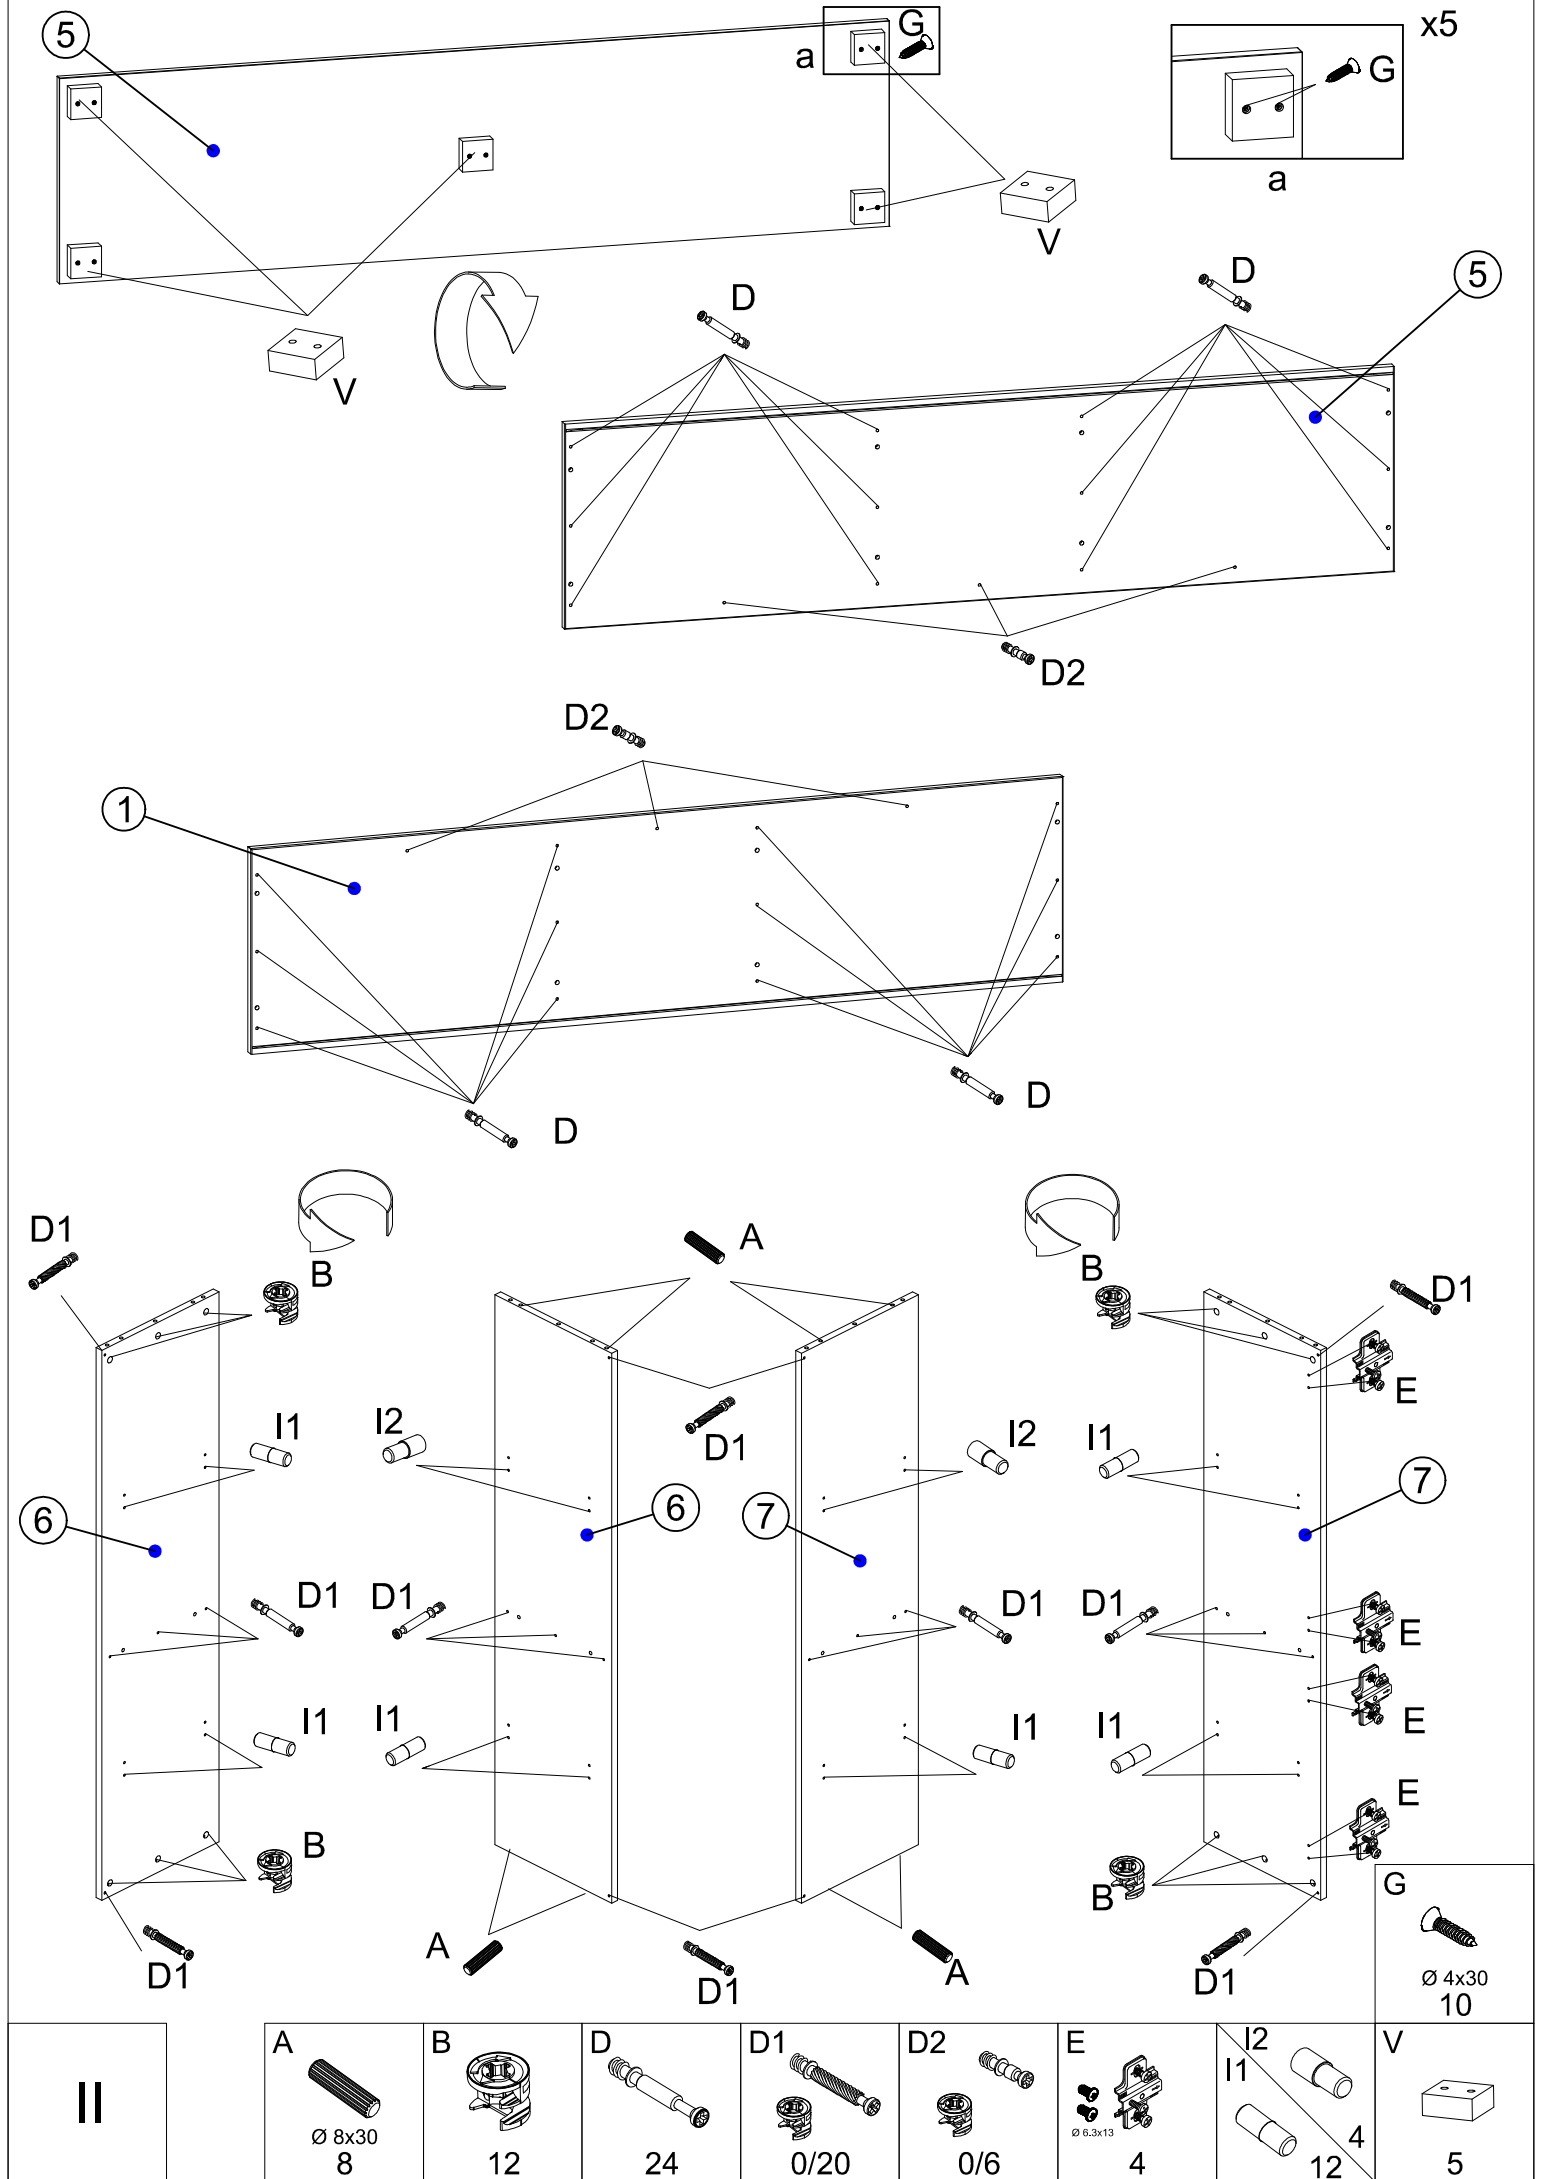

x5

Ø 4x30
10

II

Ø 8x30
8

12

24







0/20

0/6




Ø 6.3x13
4





4

5

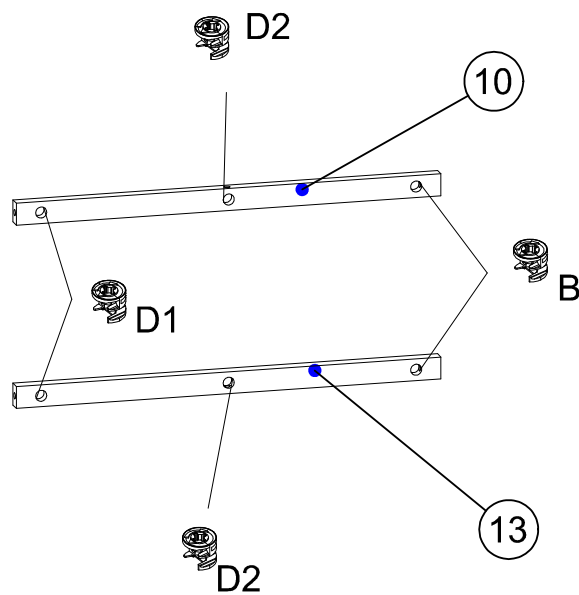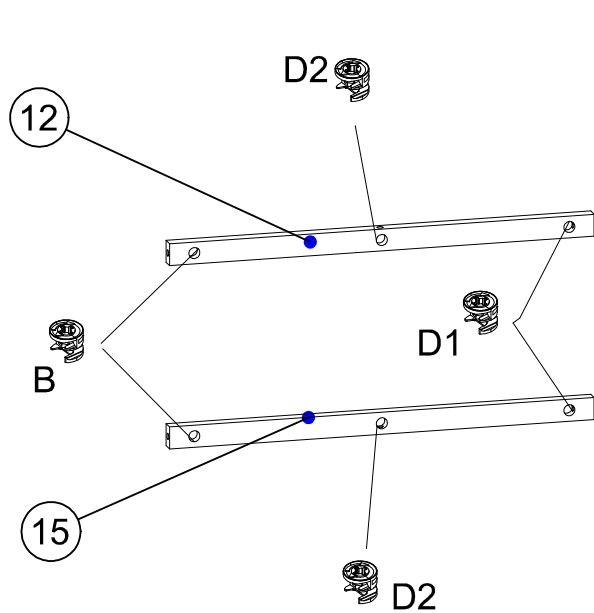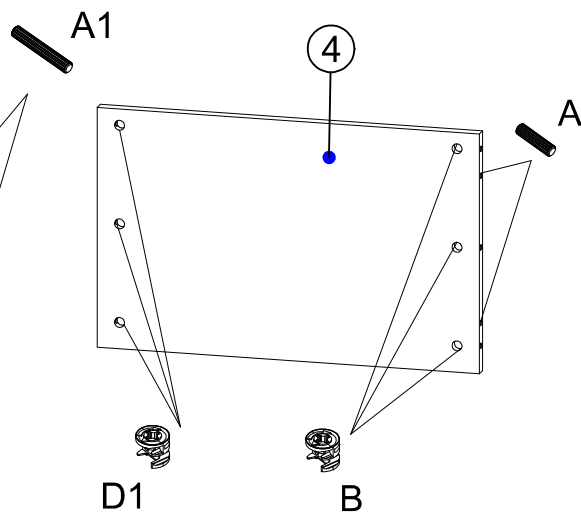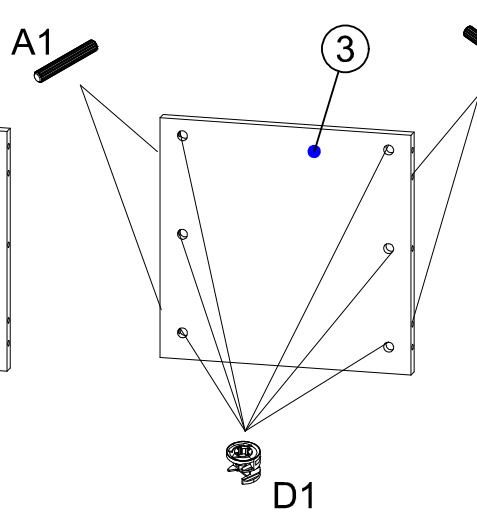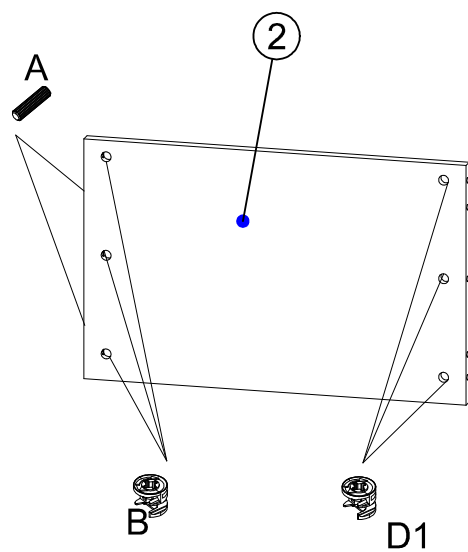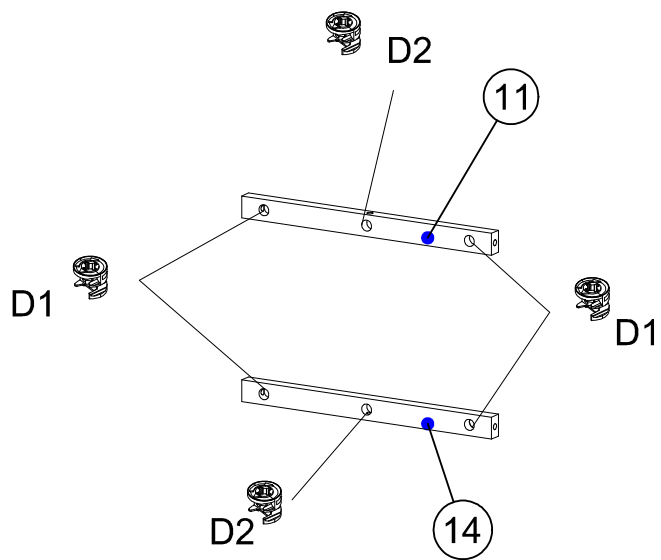



A  Ø 8x30 4	A1  Ø 8x50 4	B  10	D1  20/0	D2  6/0
--	--	--	---	--

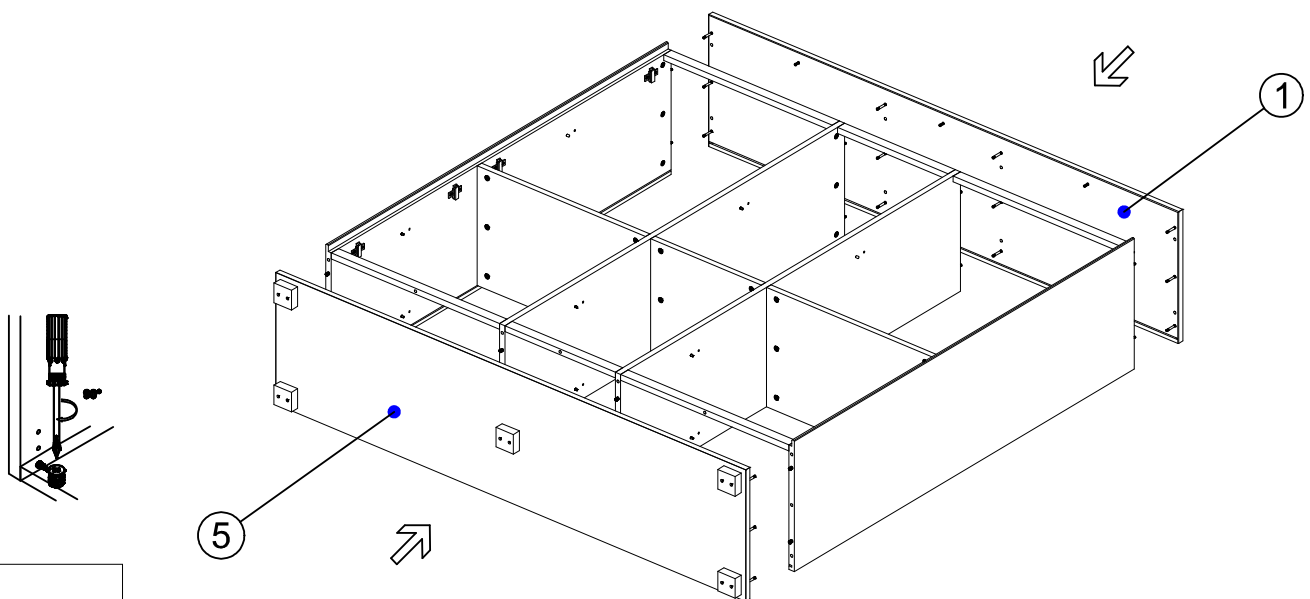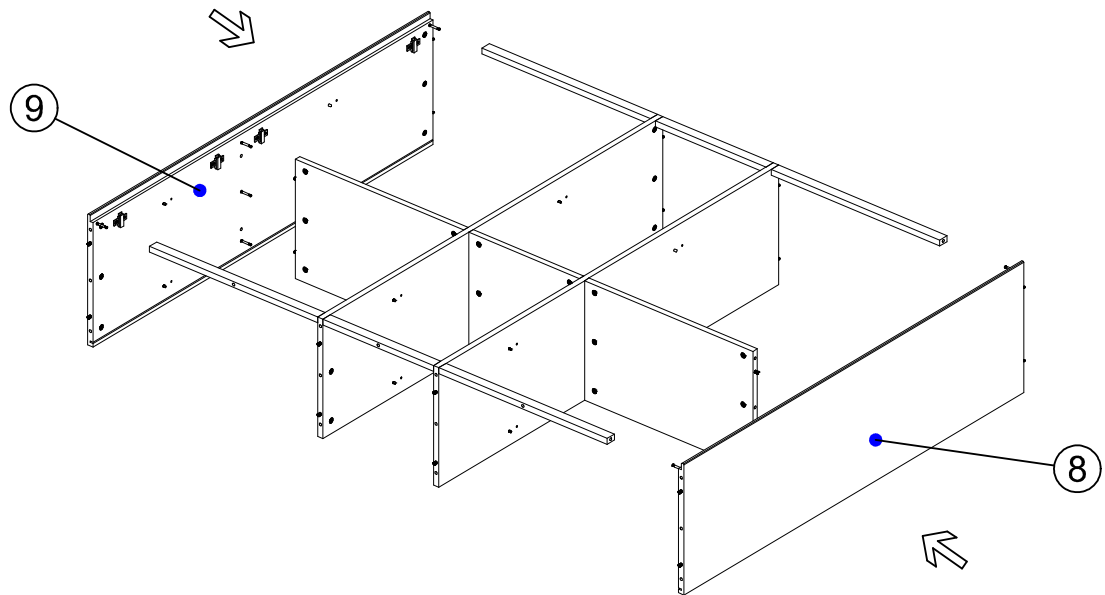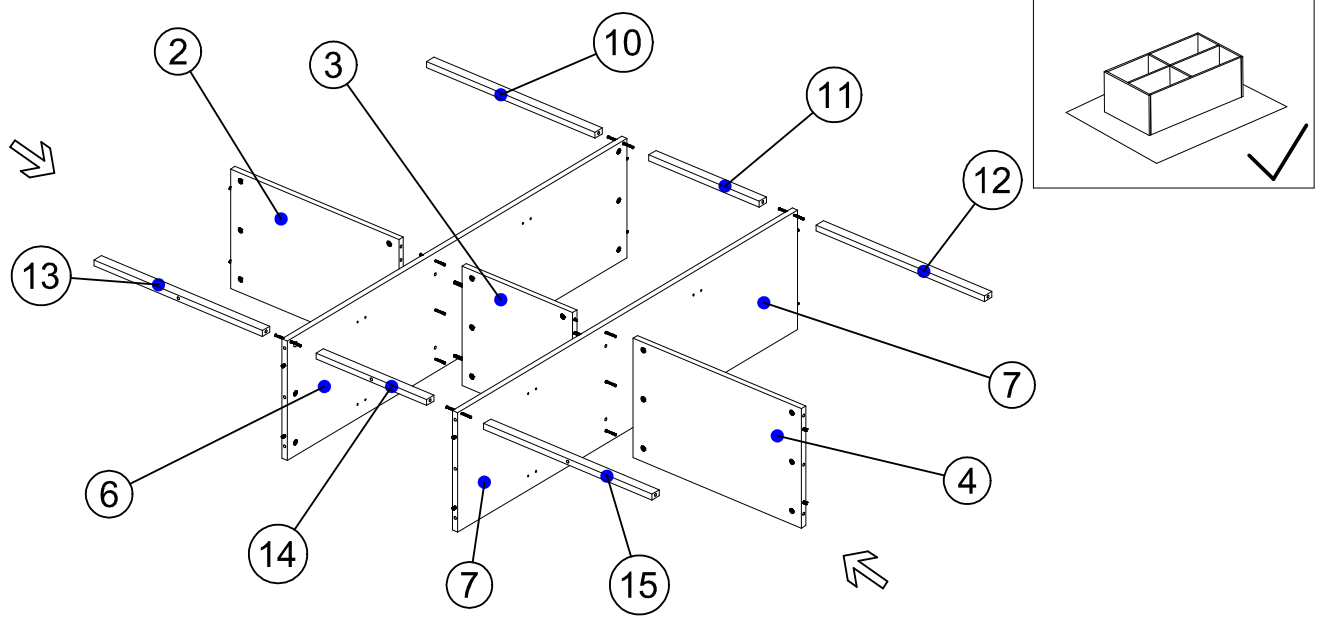


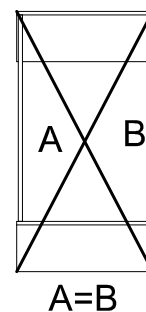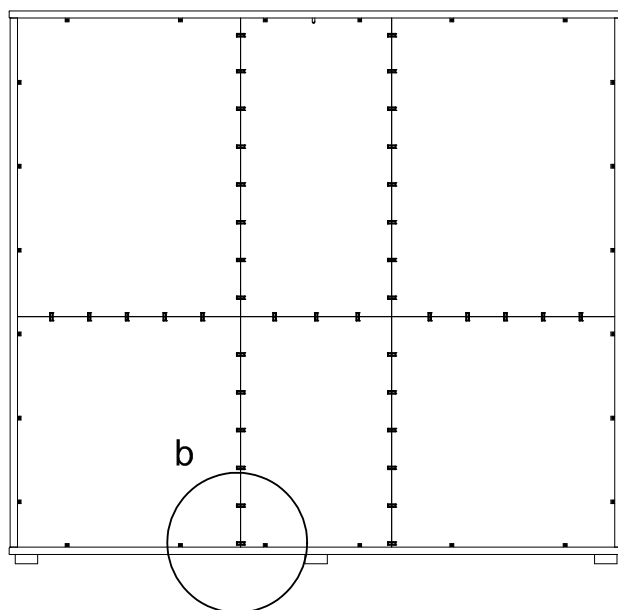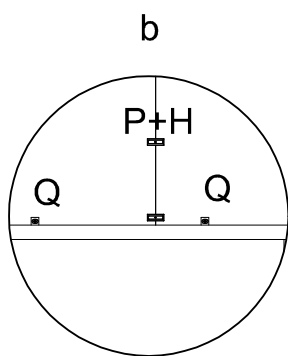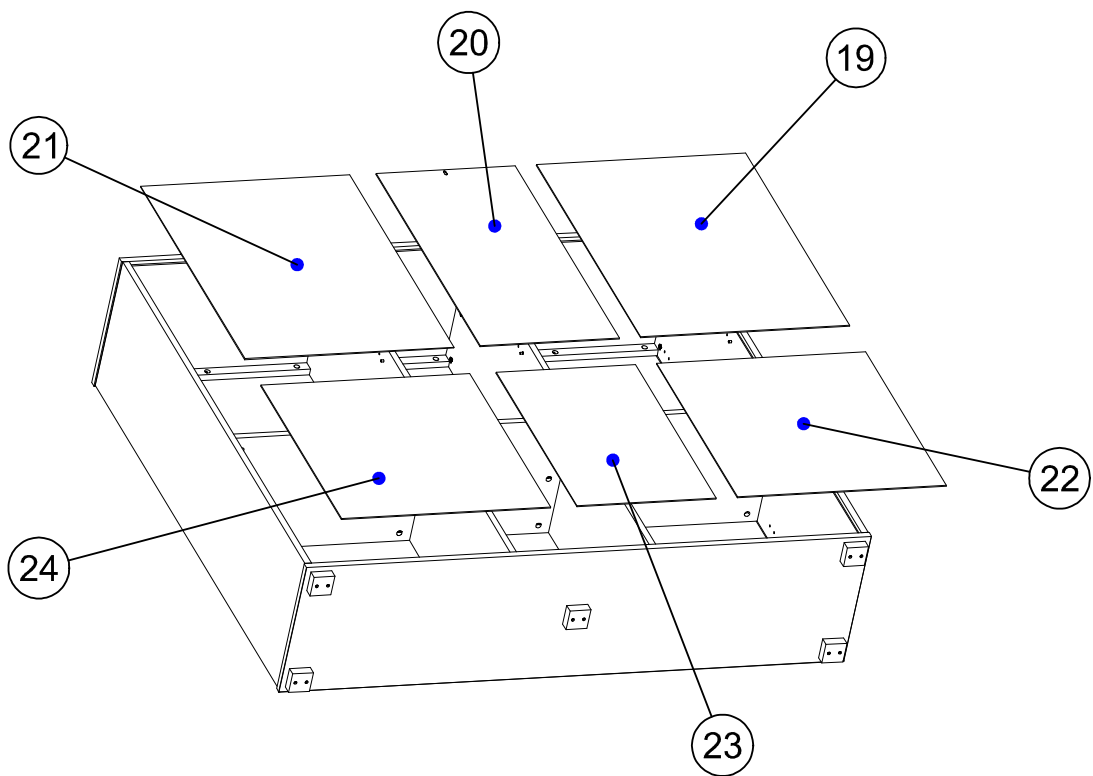

V

H	P	Q
40	40	26

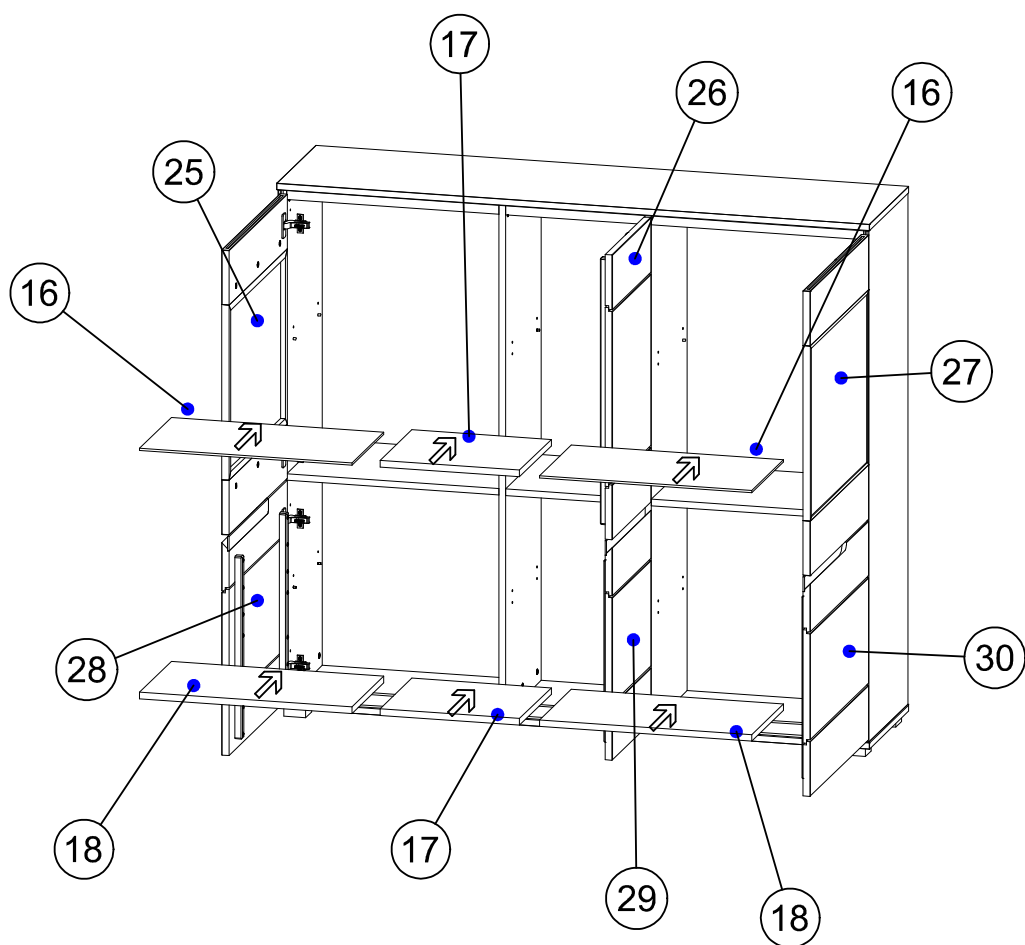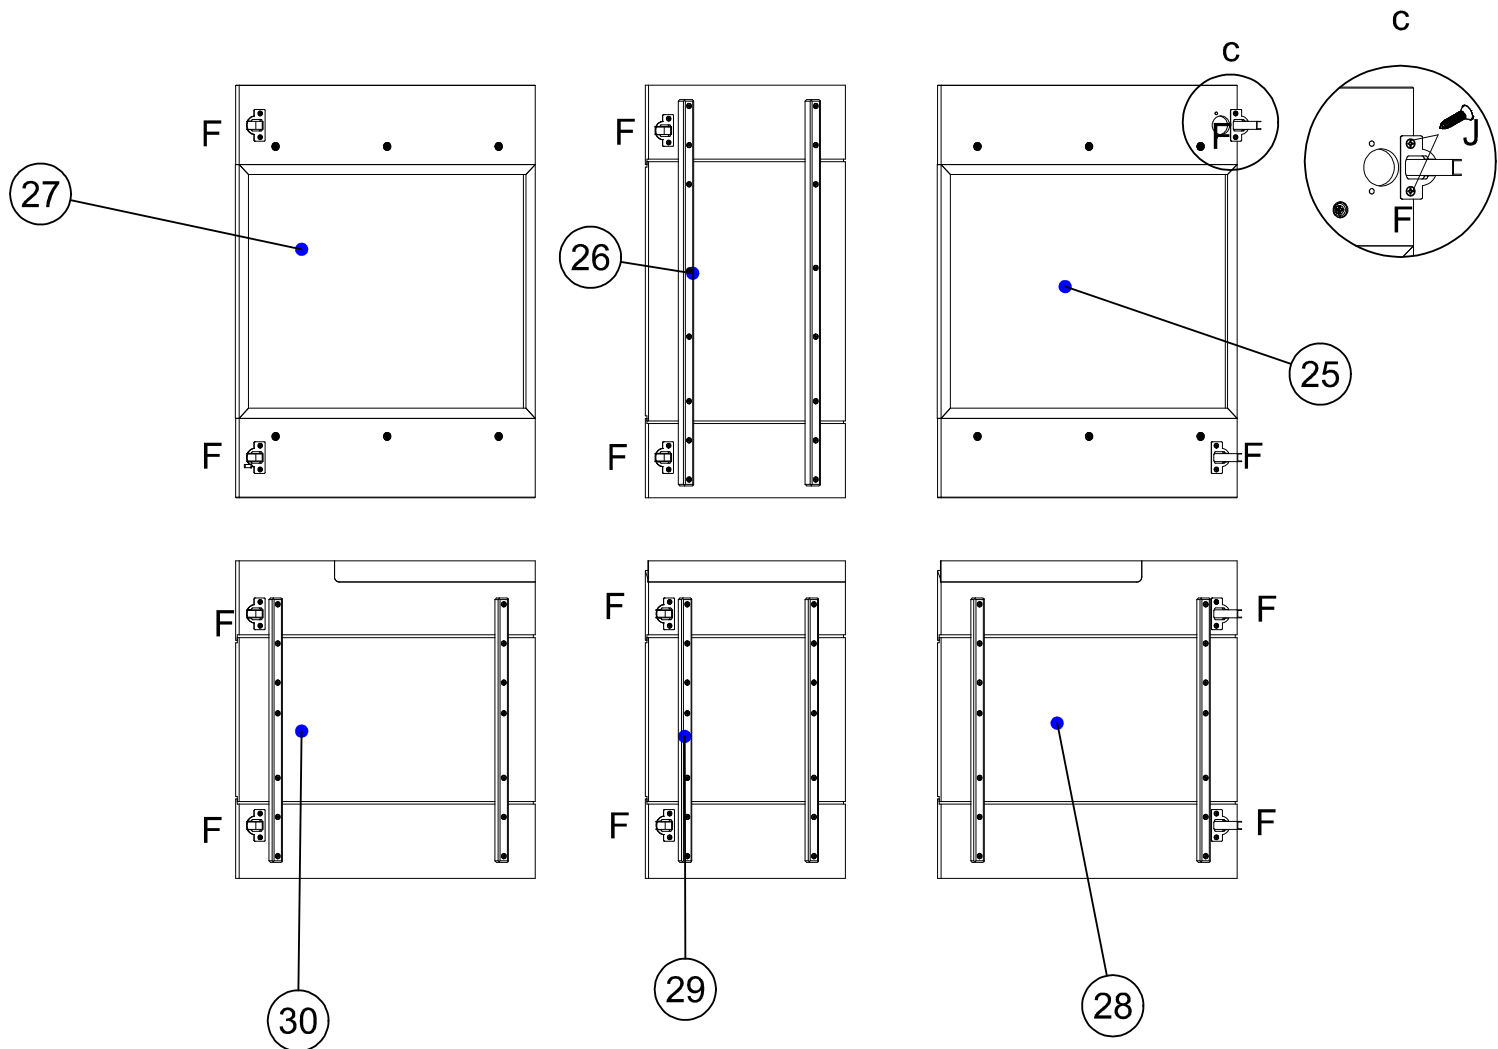

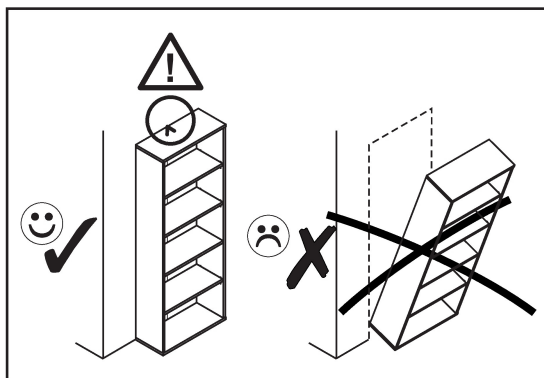

d

