
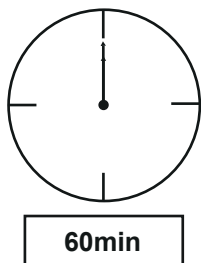
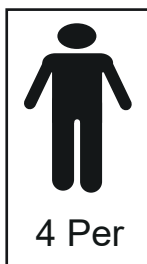
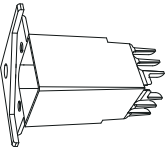
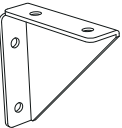










03480212-01

MX Logistika SL, spol.s.r.o.
ROZNAVSKA 32
SK-82104 BRATISLAVA
Slovakia




03480212-01

① x2		② x2		③ x1		④ x1		⑤ x2	
									
⑥ x1		⑦ x21		⑧ x1		⑨ x1		⑩ x1	
									
⑪ x4	⑫ x8	⑬ x4	⑭ x4	⑮ x1	⑯ x1	⑰ x1	⑱ x1	⑲ x1	
									

Ax16		Bx66		Cx8		Dx62		Ex44	
									
M8x15mm		M6x15mm		M8		M6			
Fx8		Gx1		Hx1		Ix1		Kx2	
									
								M6x45mm	

03480212-01

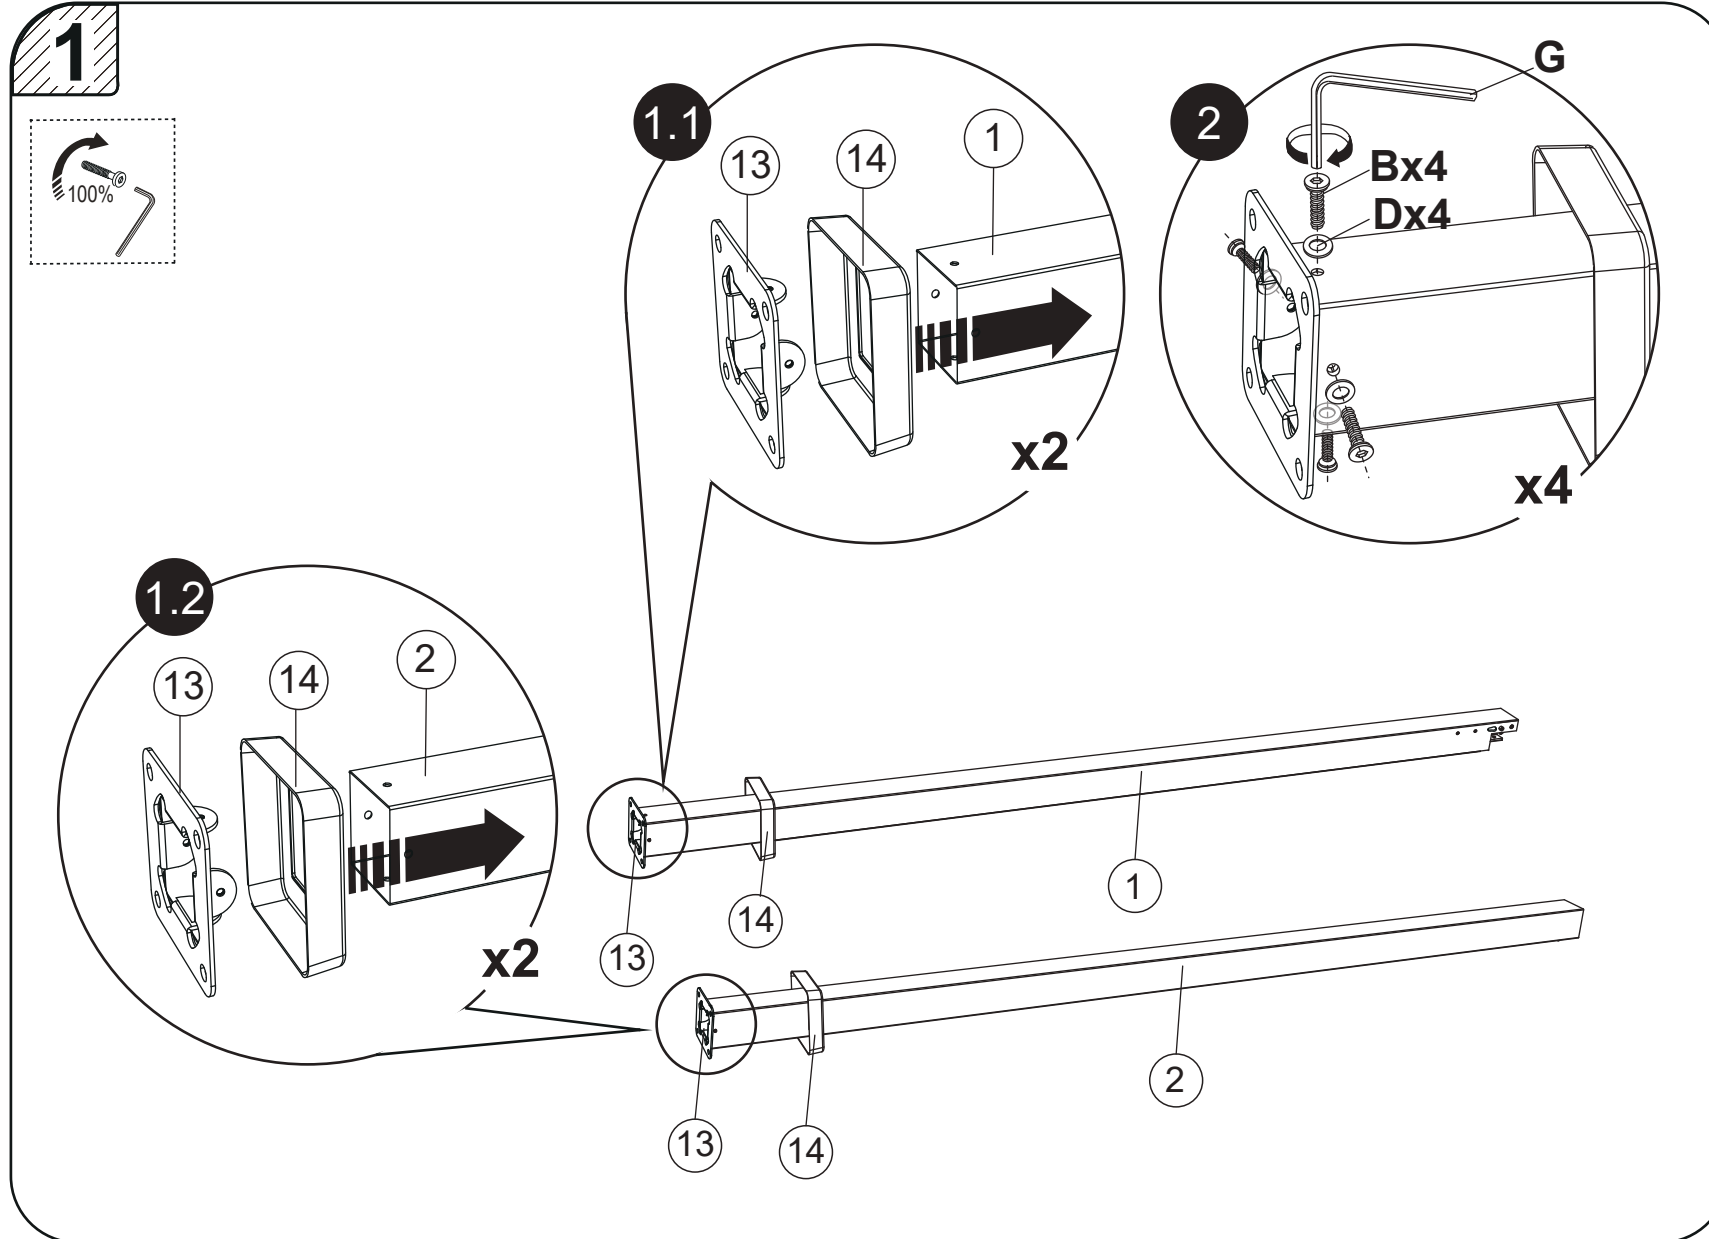


0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15cm

① x2
② x2
⑬ x4
⑭ x4
Bx16
M6x15mm
Dx16
M6
Gx1

03480212-01


2

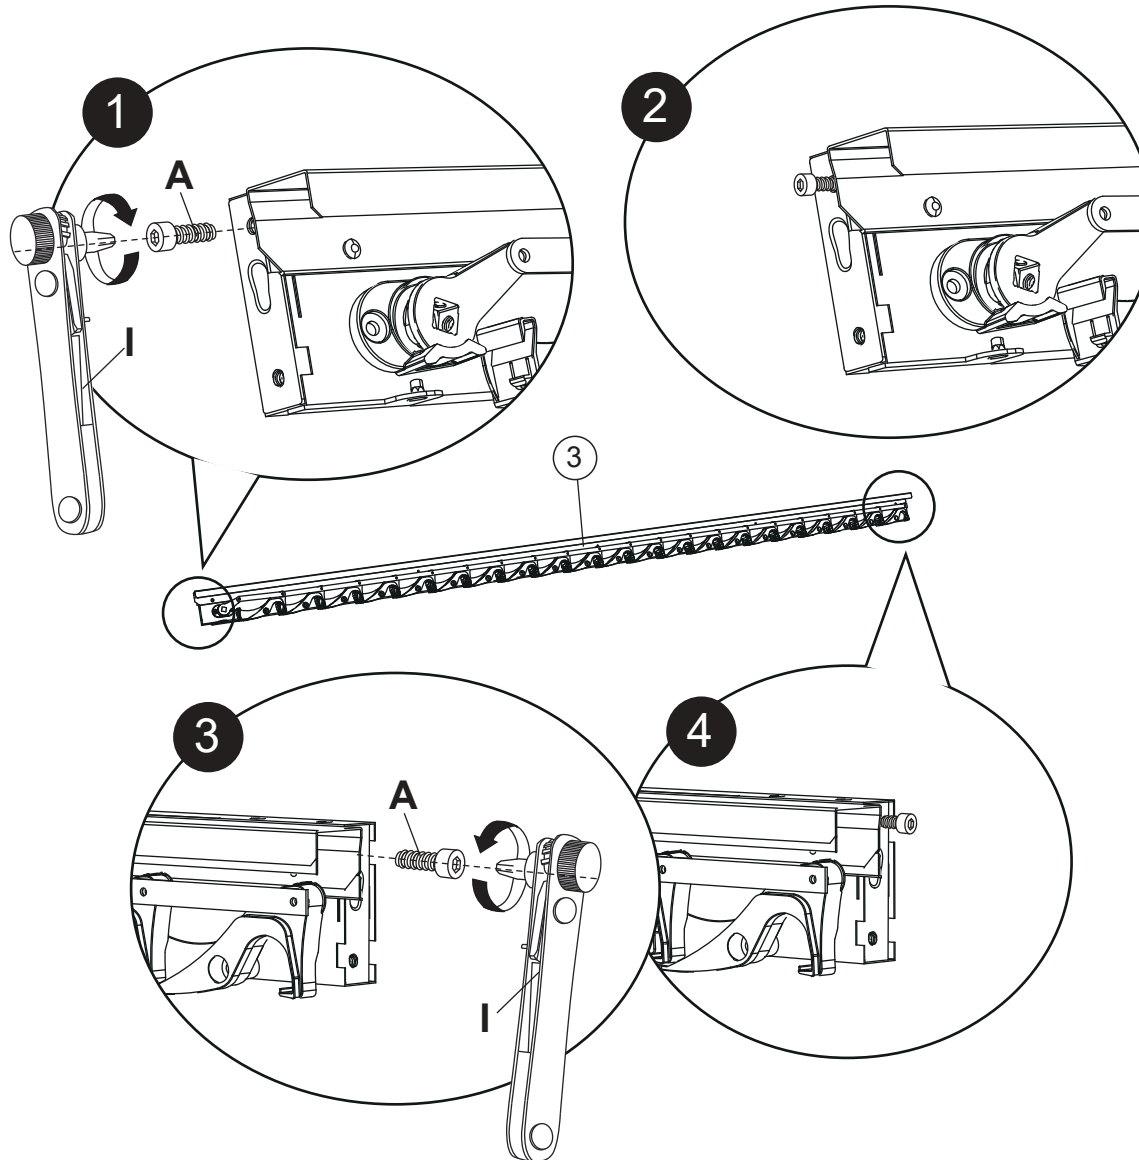

③ x1




Ax2





M8x15mm

Ix1



03480212-01


3

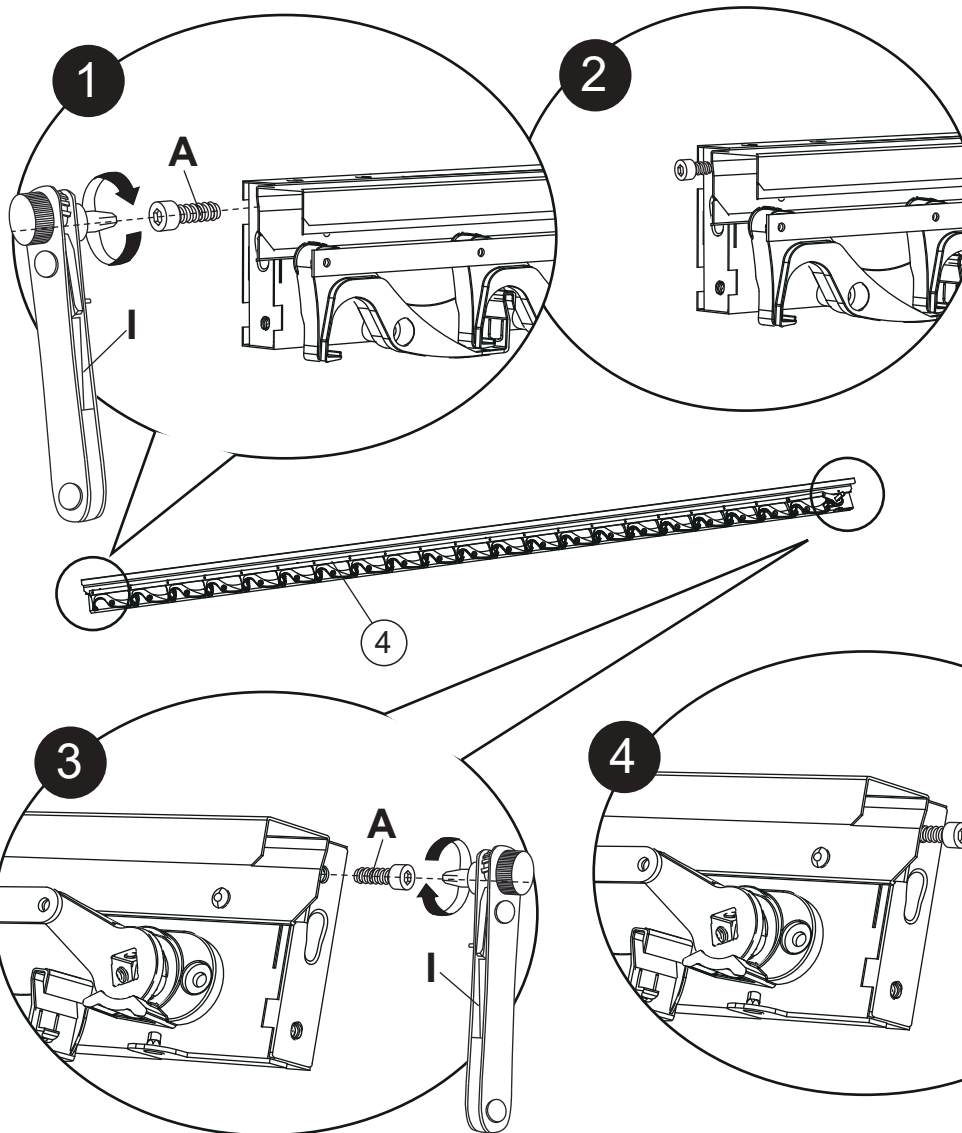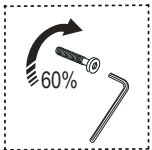

④ x1




Ax2








M8x15mm

Ix1




03480212-01

4

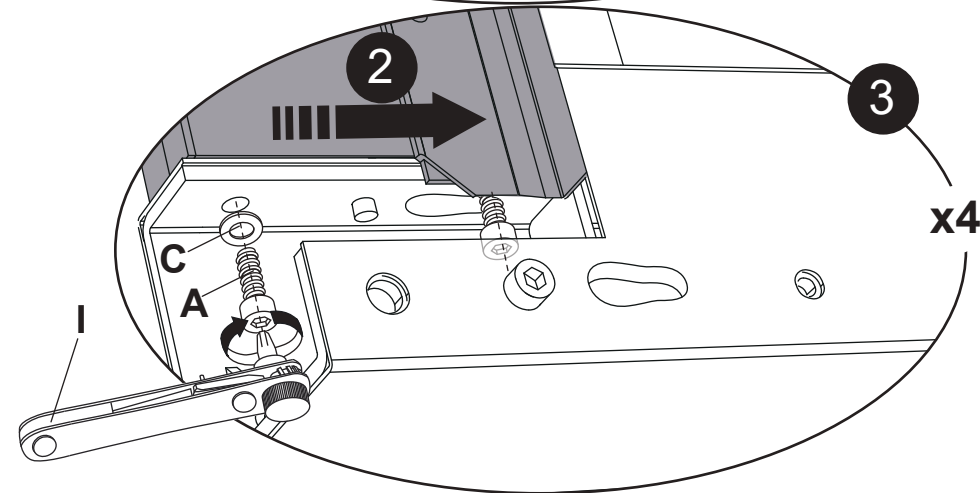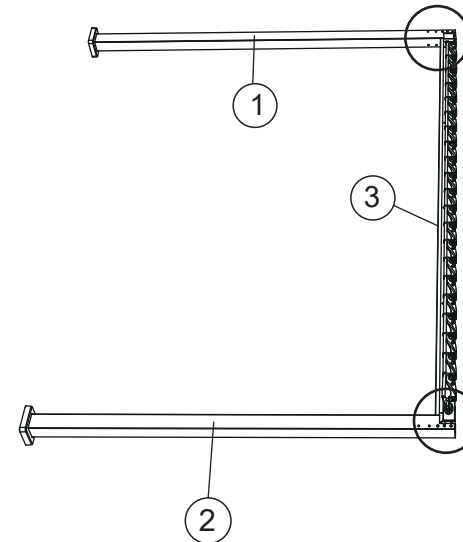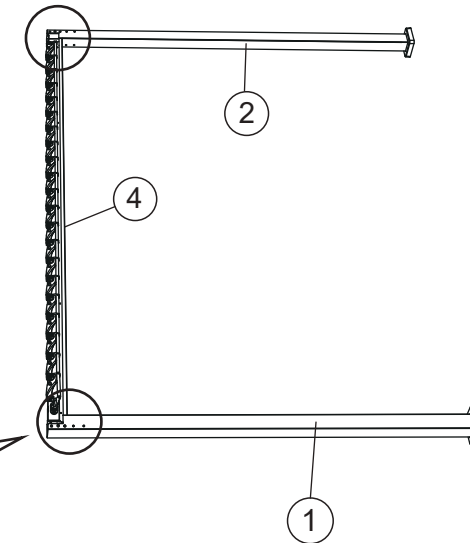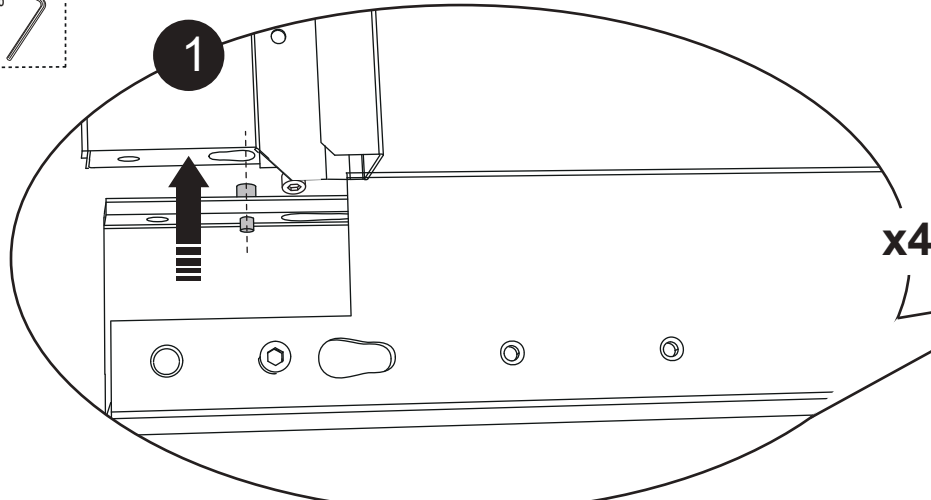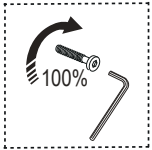

x4

Ax4




M8x15mm

Cx4



M8





lx1





03480212-01


6

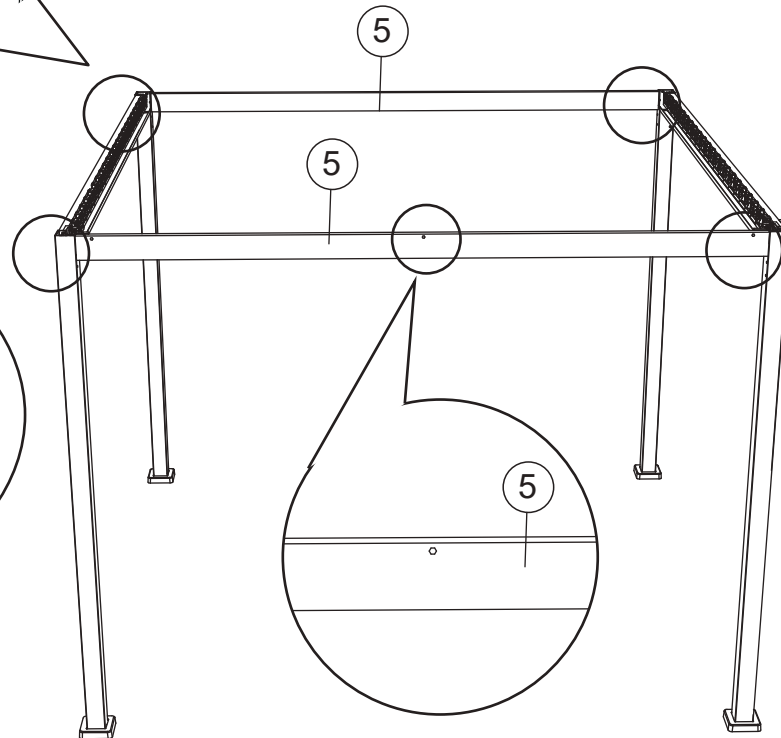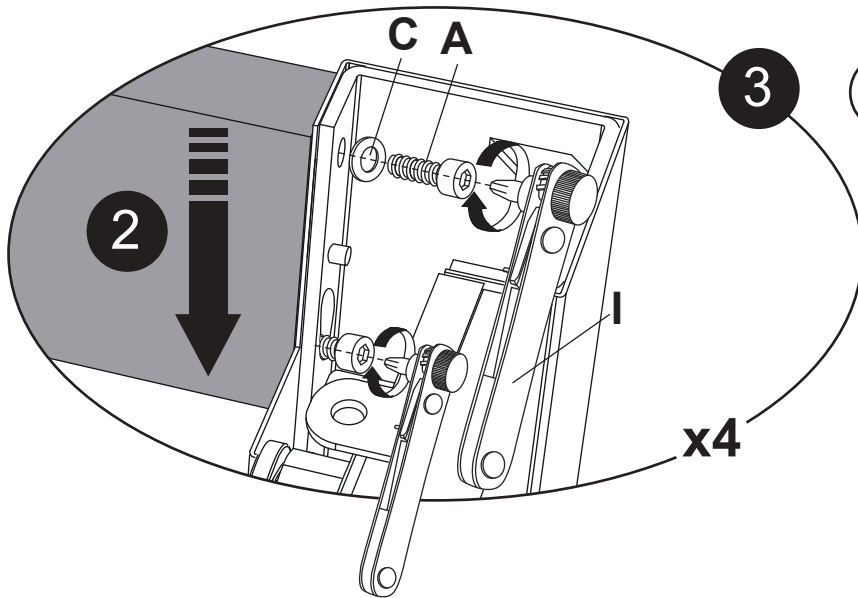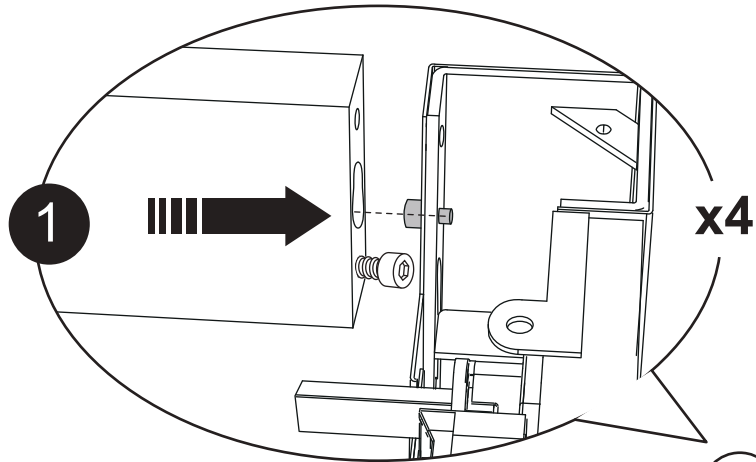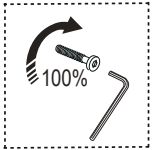

5 x2




Ax4




M8x15mm

Cx4



M8







Ix1




0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15cm

03480212-01


7

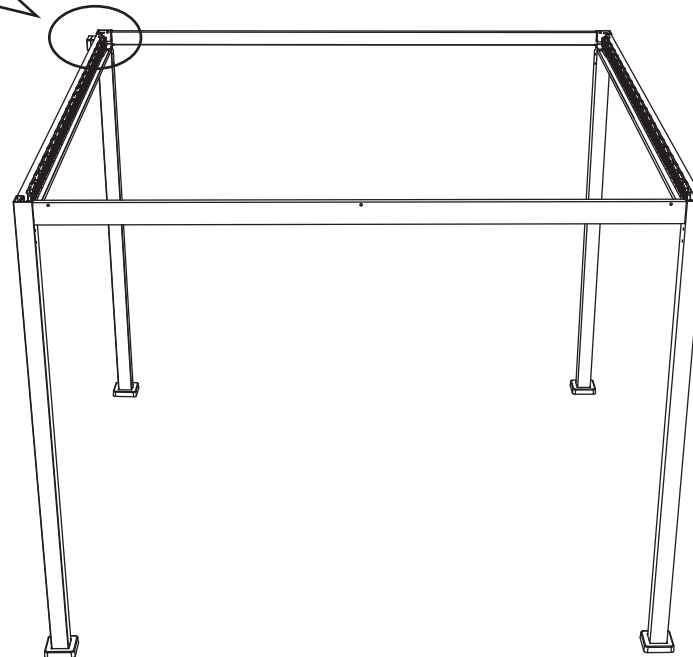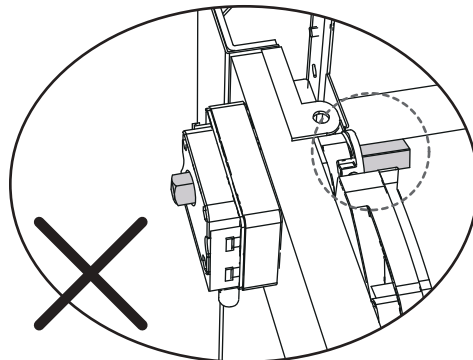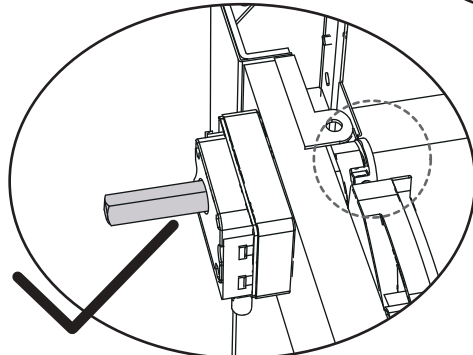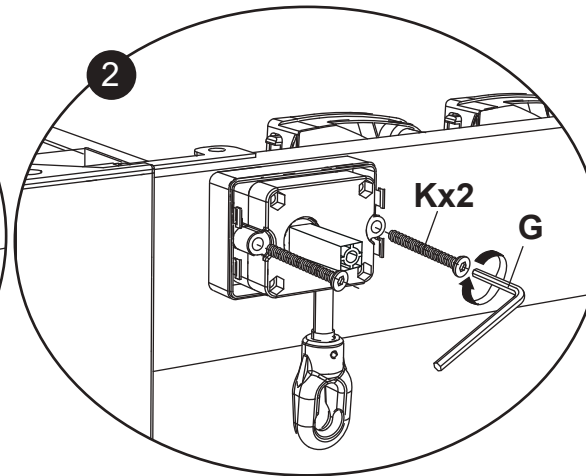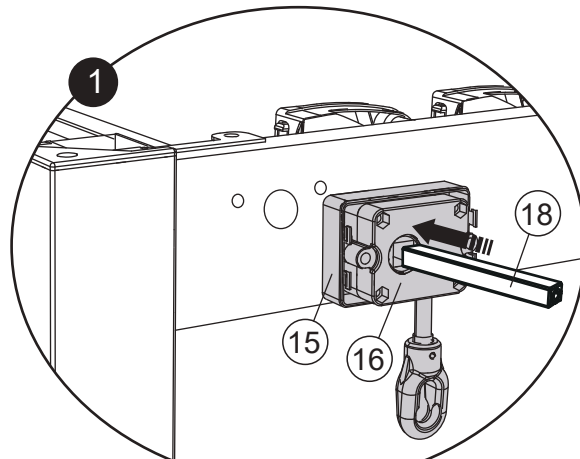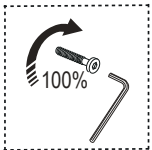


15 x1



16 x1

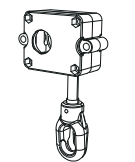

18 x1

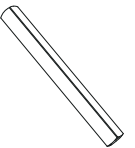

Kx2



M6x45mm

Gx1



0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15cm

8

Diagram illustrating the assembly of the chair frame, specifically the attachment of the seat backrests.

The main diagram shows the chair frame with the seat backrests being attached to the top rail (6).

Callout 1: Shows the backrest being inserted into the frame.

Callout 2: Shows the backrest being pushed into the frame.

Callout 3: Shows the backrest being secured with a nut (6).

Callout 4: Shows the backrest being pushed into the frame with a pin (6).

Callout 5: Shows the backrest being pushed into the frame with a pin (6).





Callout 6: Shows the backrest being pushed into the frame with a pin (6).

⑥ x1	
------	---





03480212-01

9

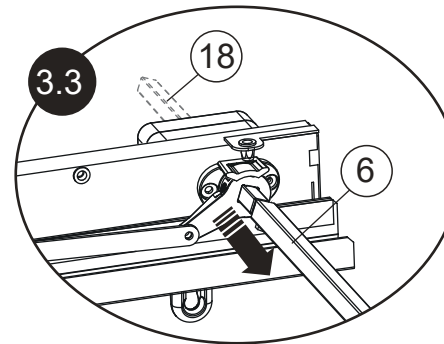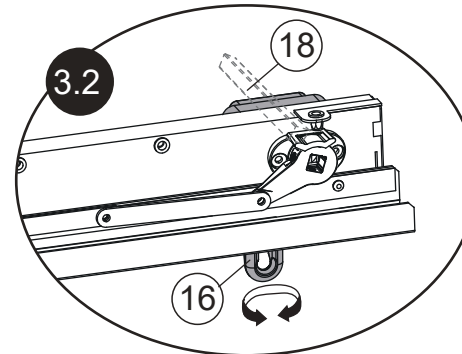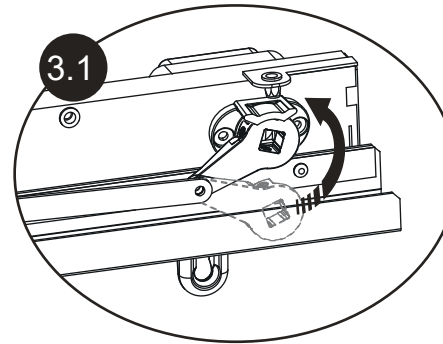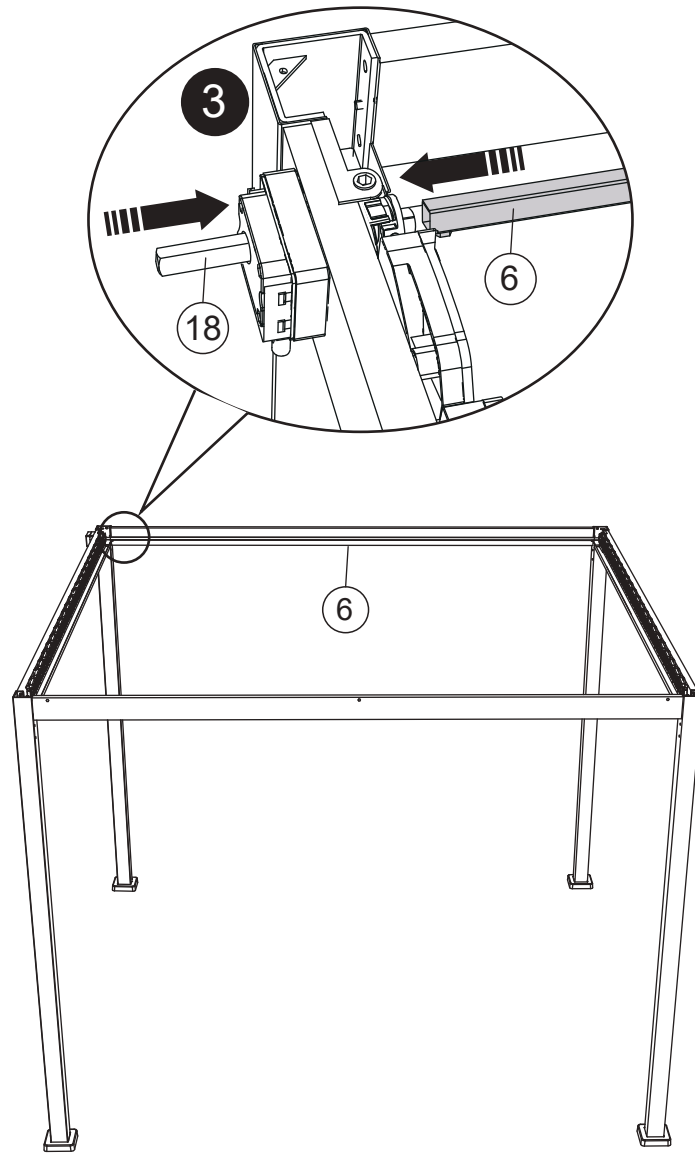




03480212-01

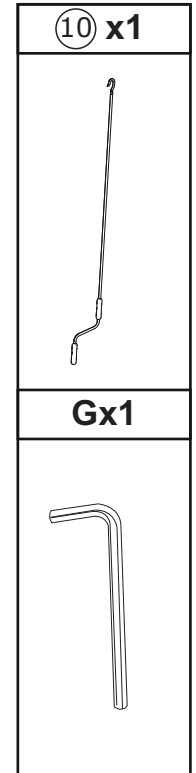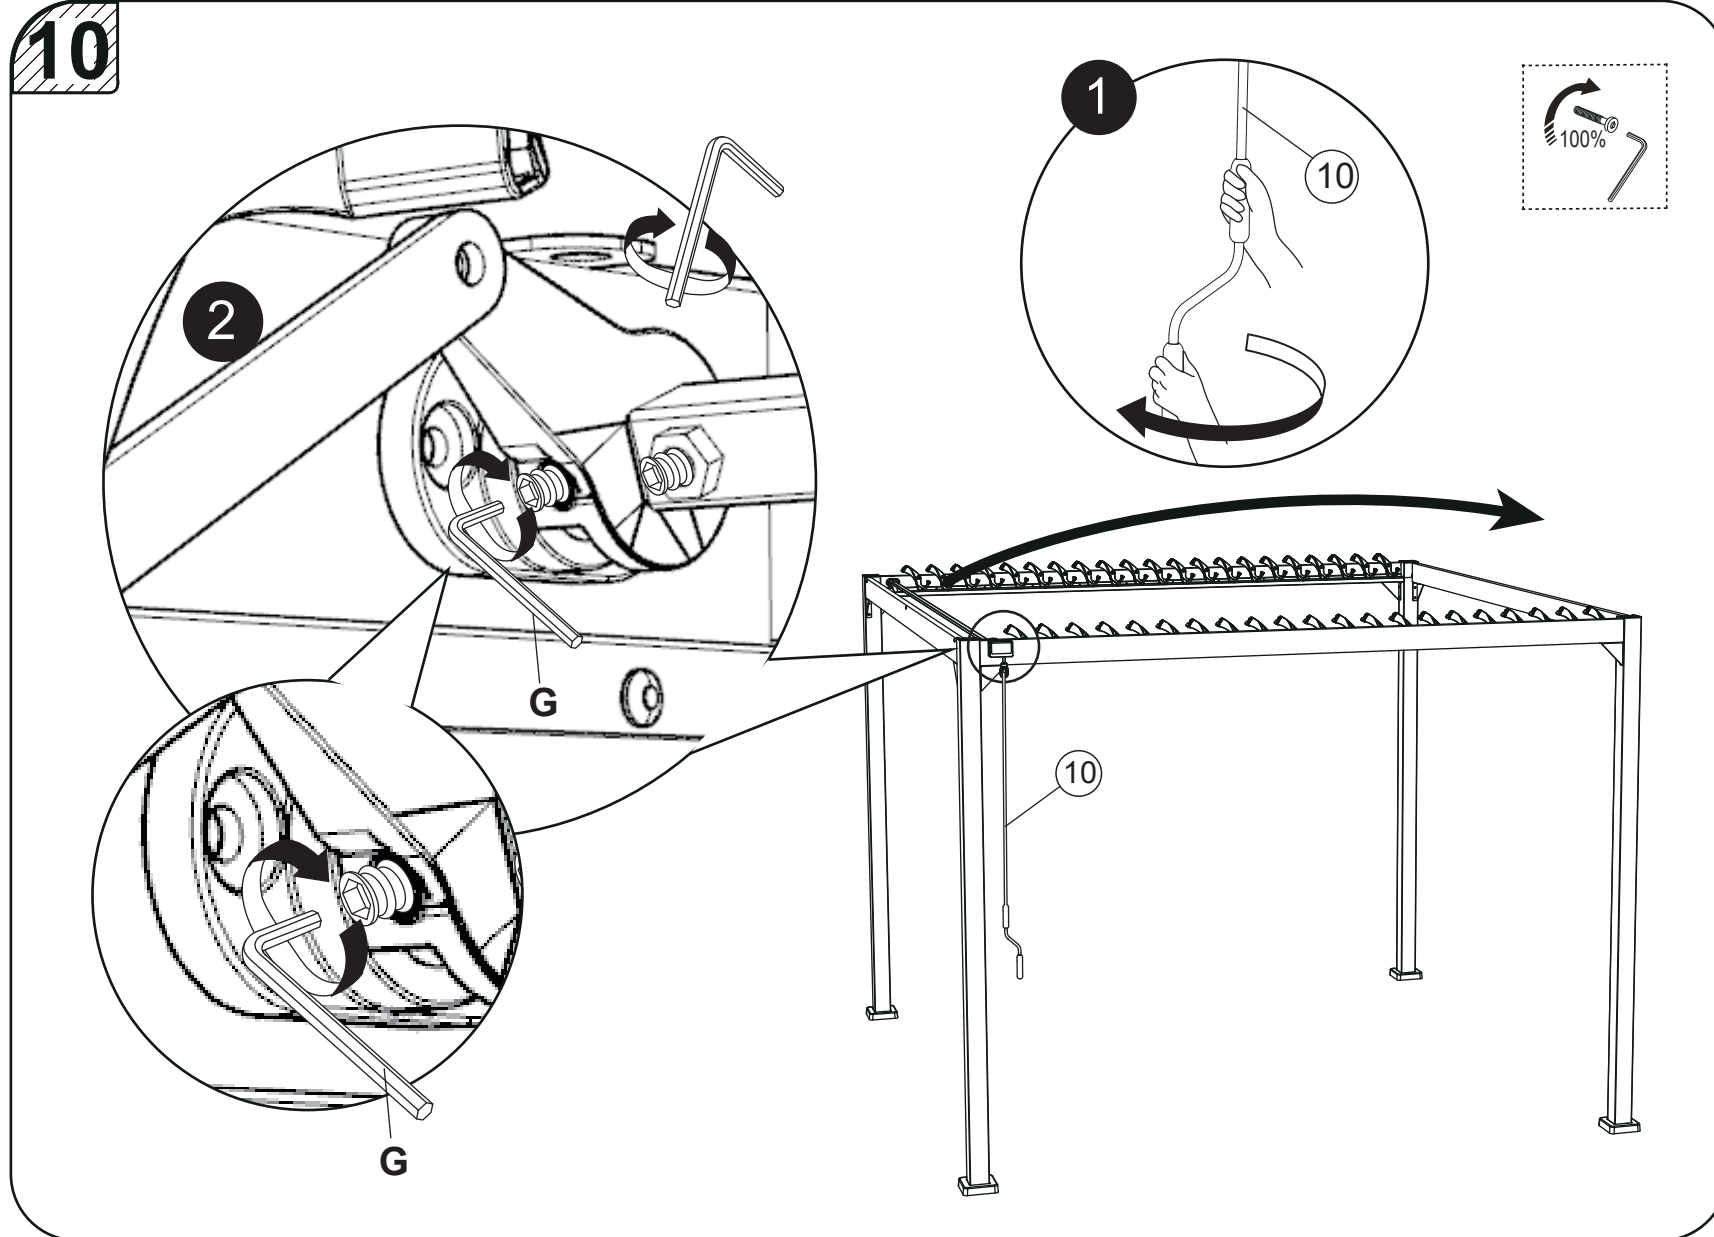

0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15cm

03480212-01


11

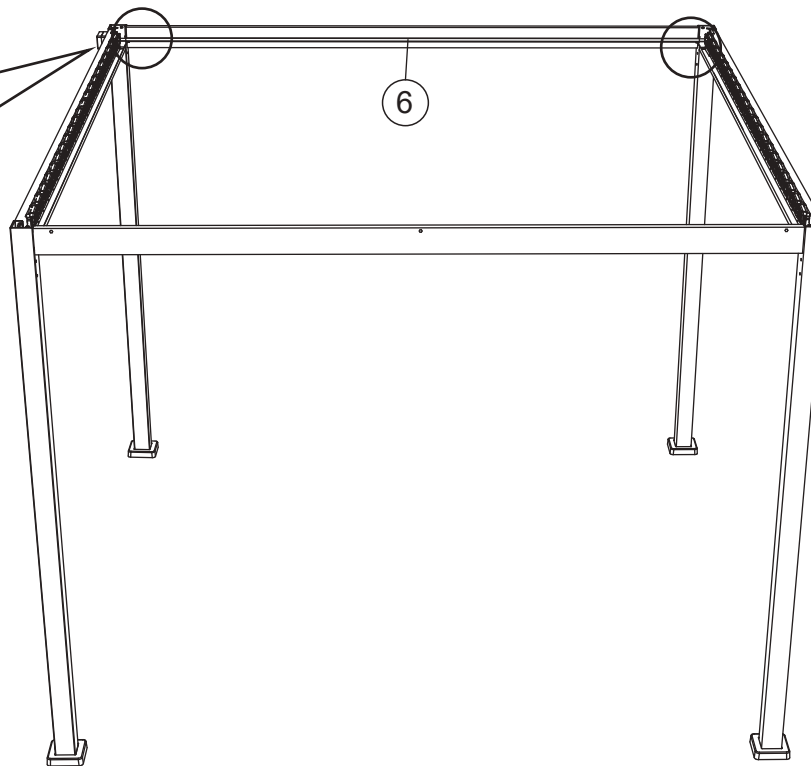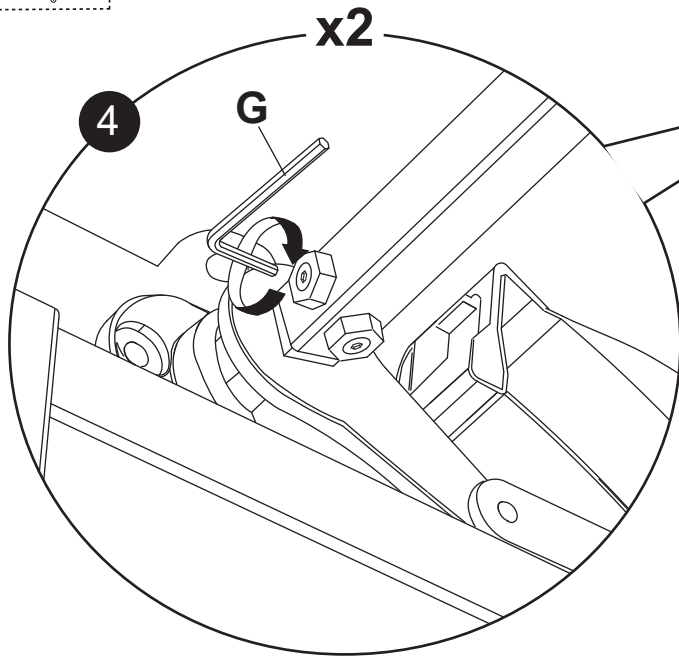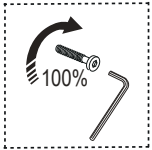

Gx1




03480212-01

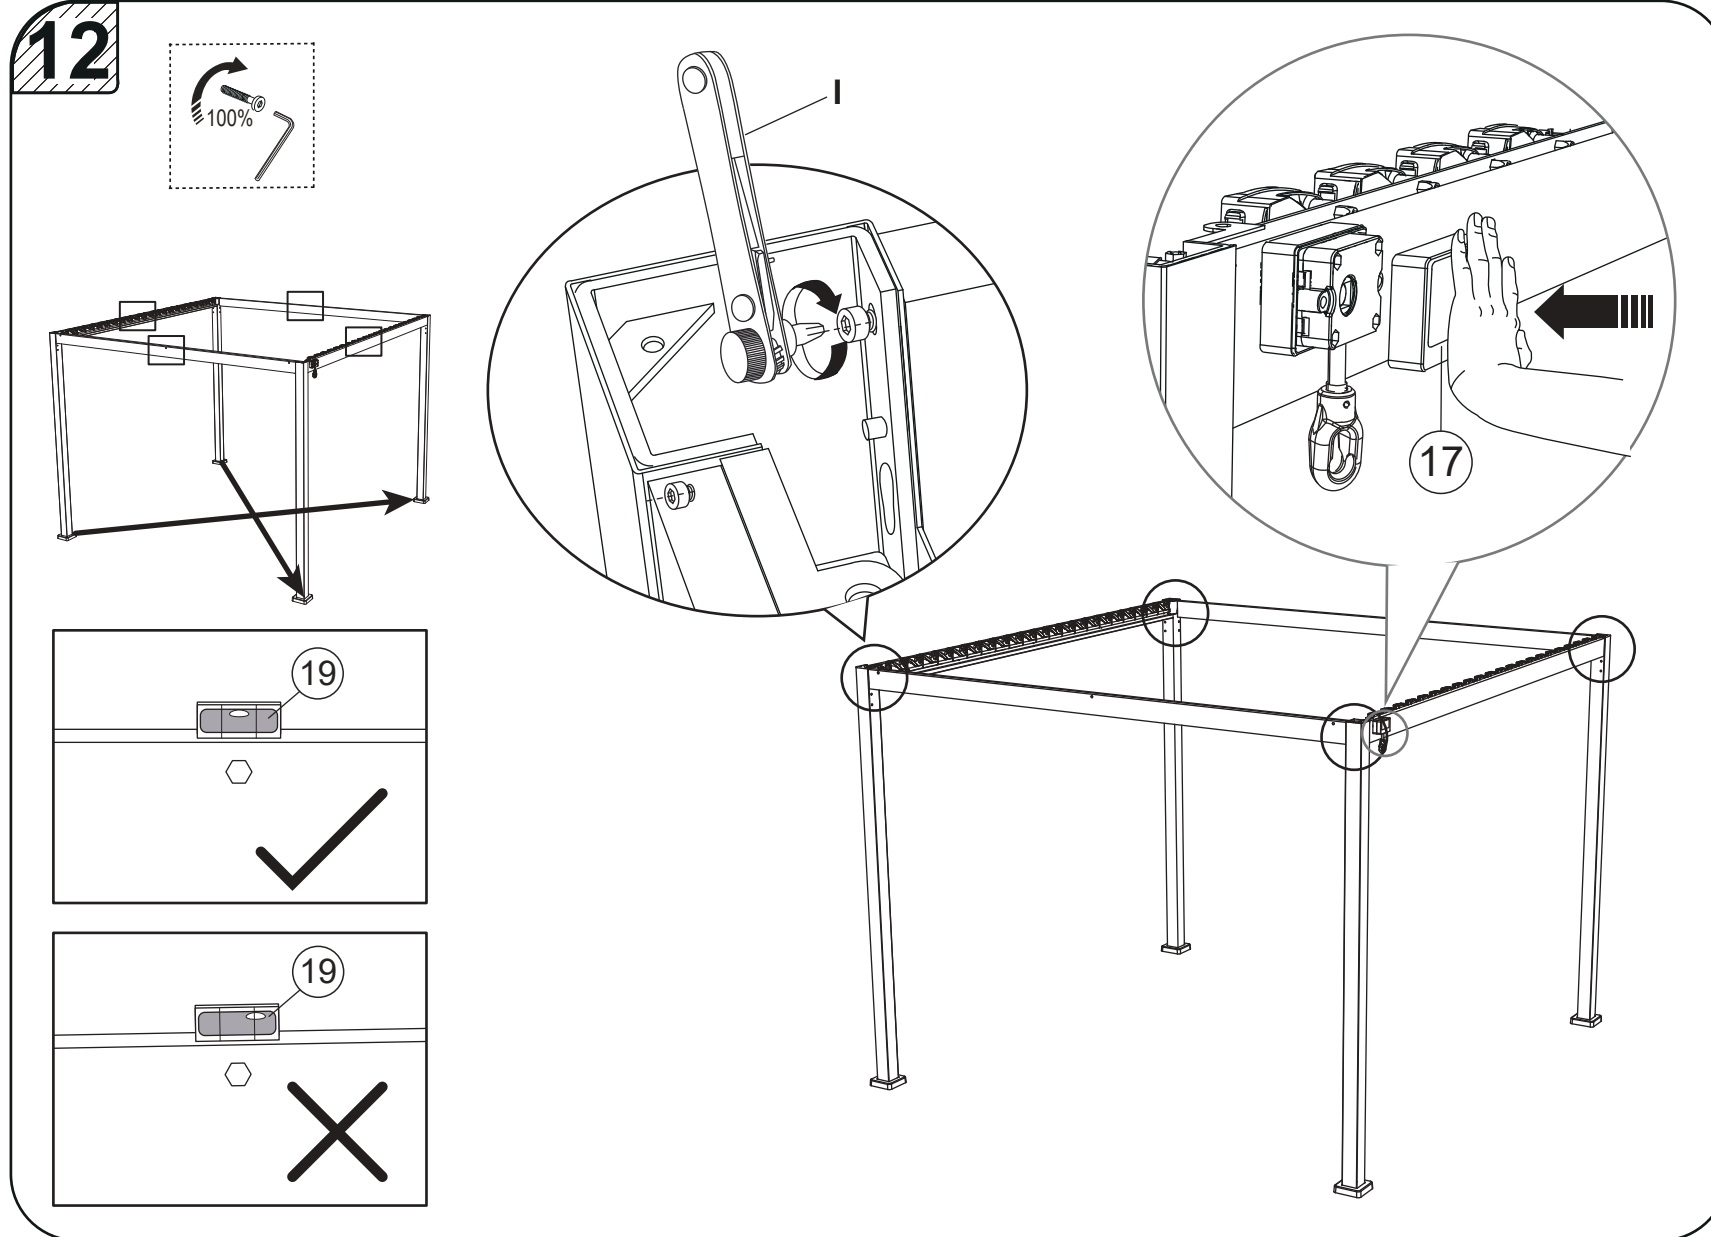


17 x1

19 x1


1x1





03480212-01

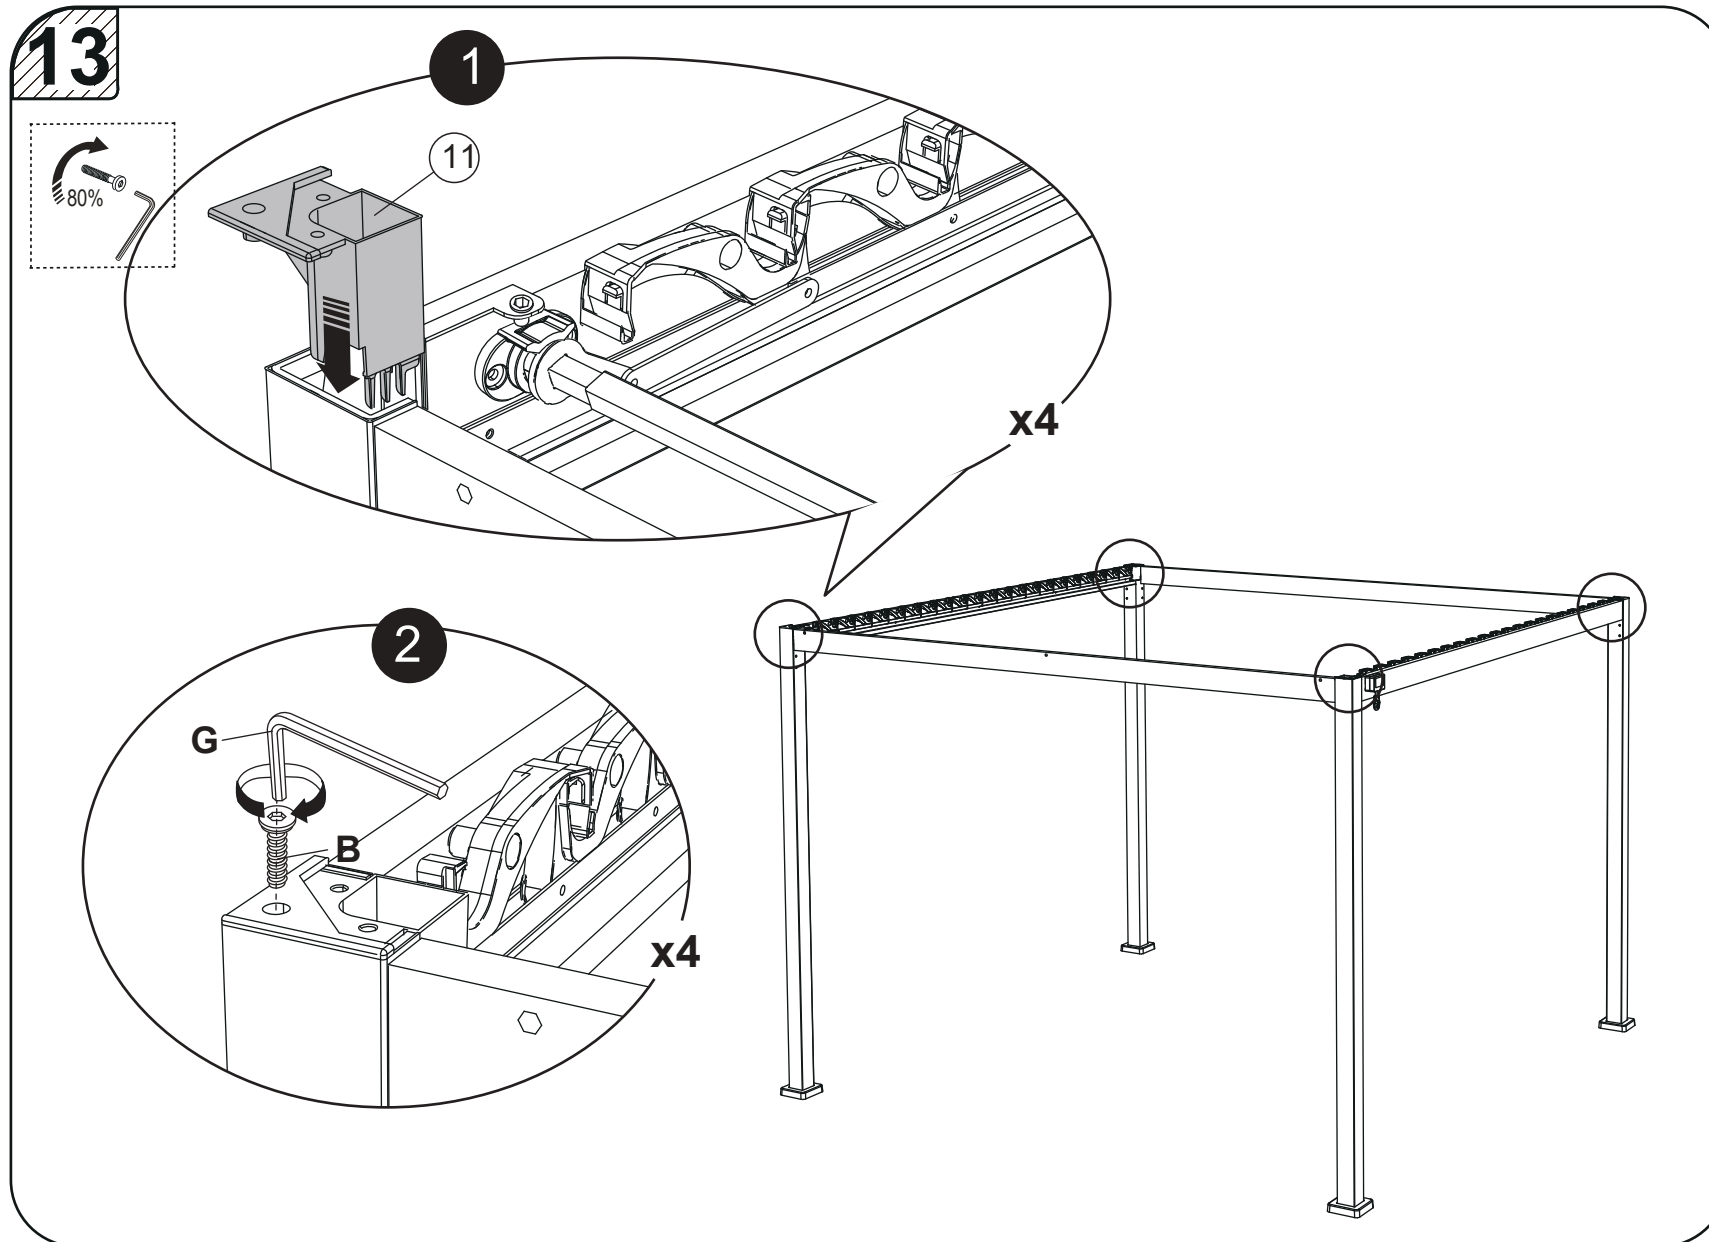

11 x4

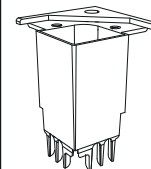

B x4




M6x15mm

G x1



0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15cm


03480212-01

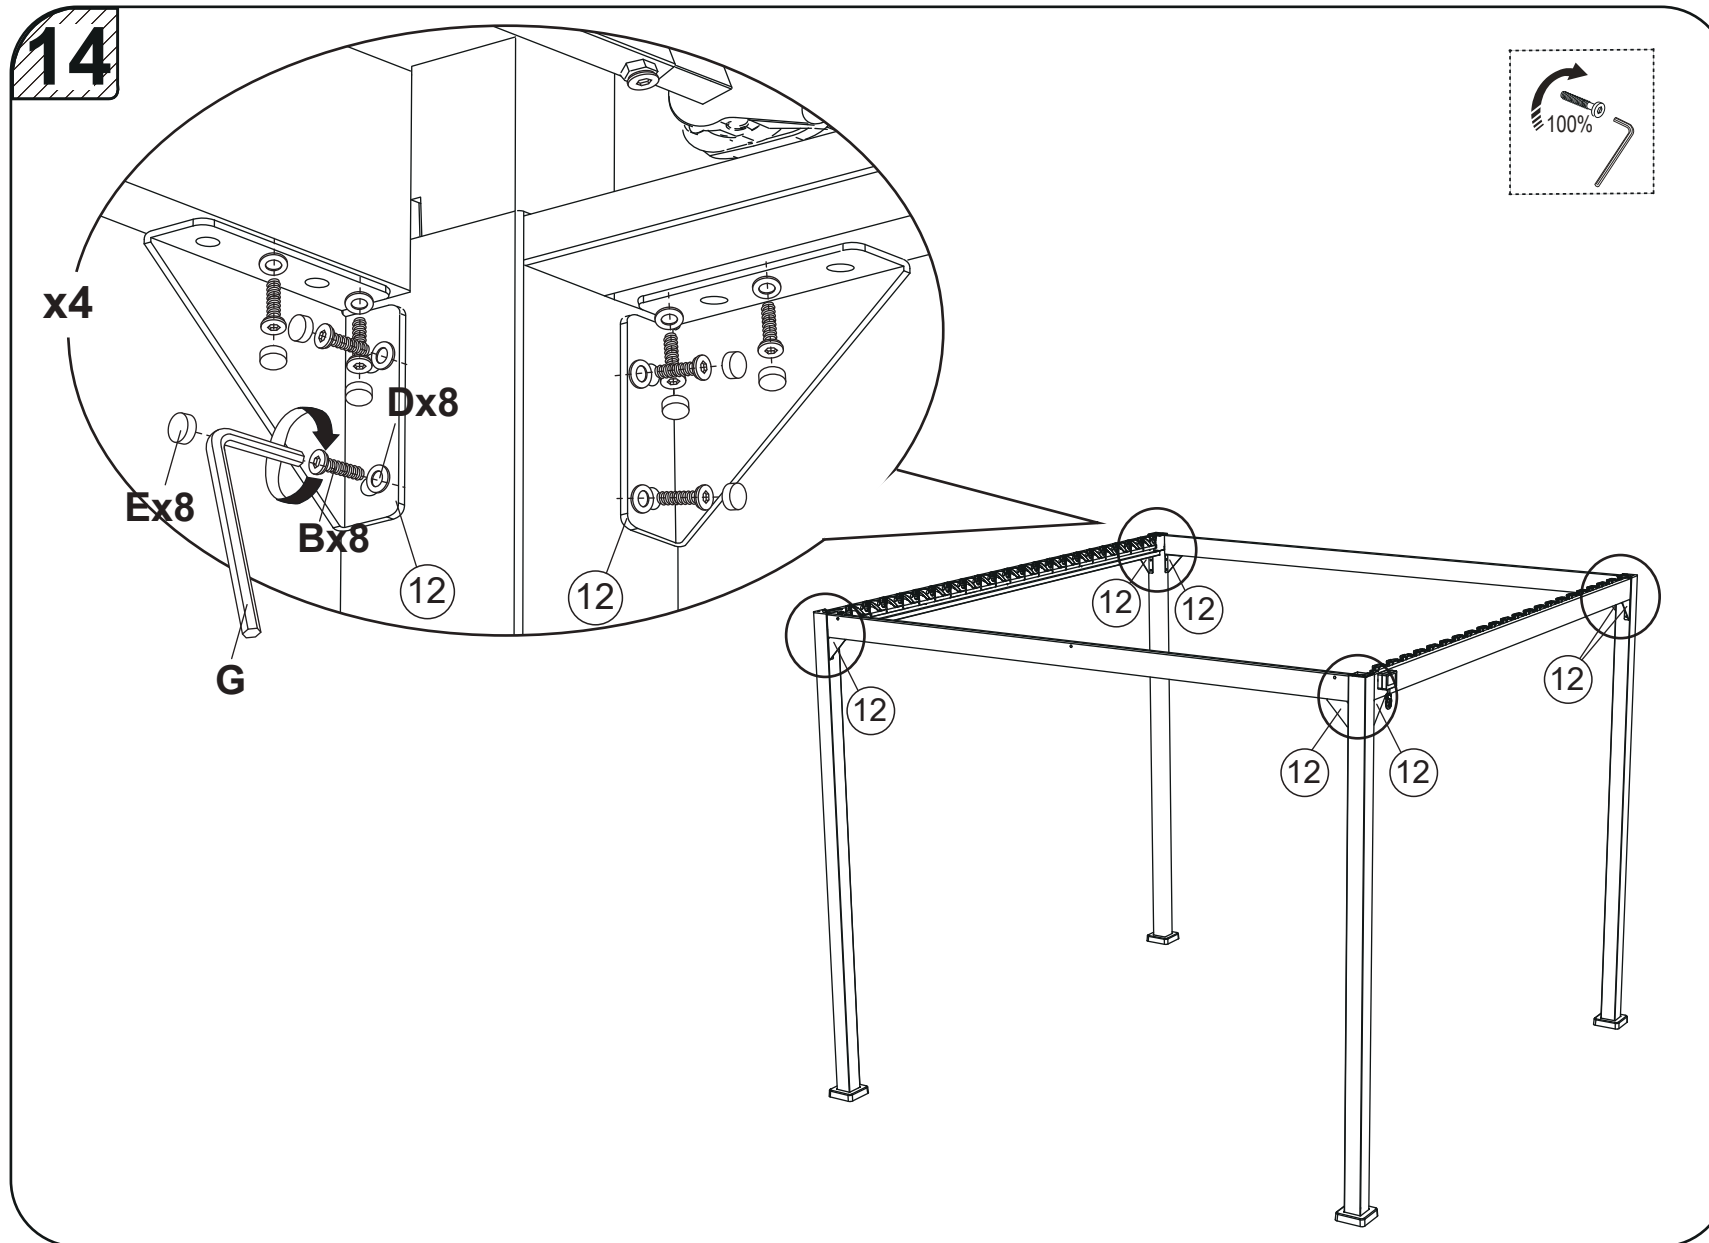


0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15cm

16/24

12 x8

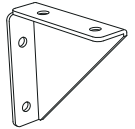

Bx32



M6x15mm

Dx32



M6

Ex32










Gx1









03480212-01

15

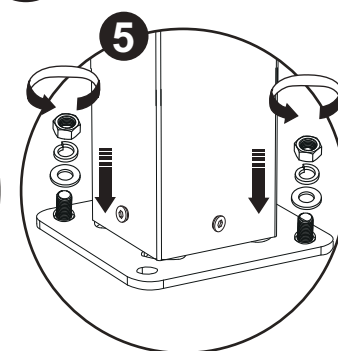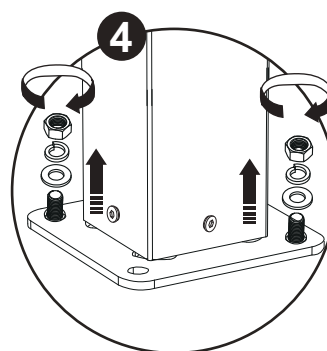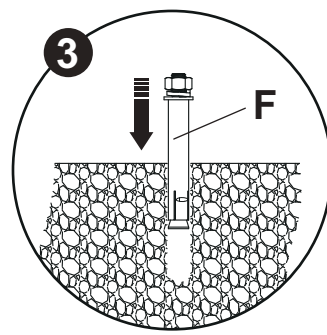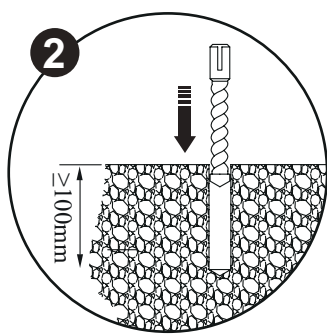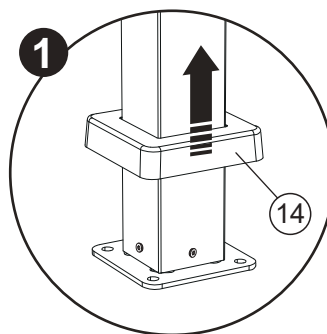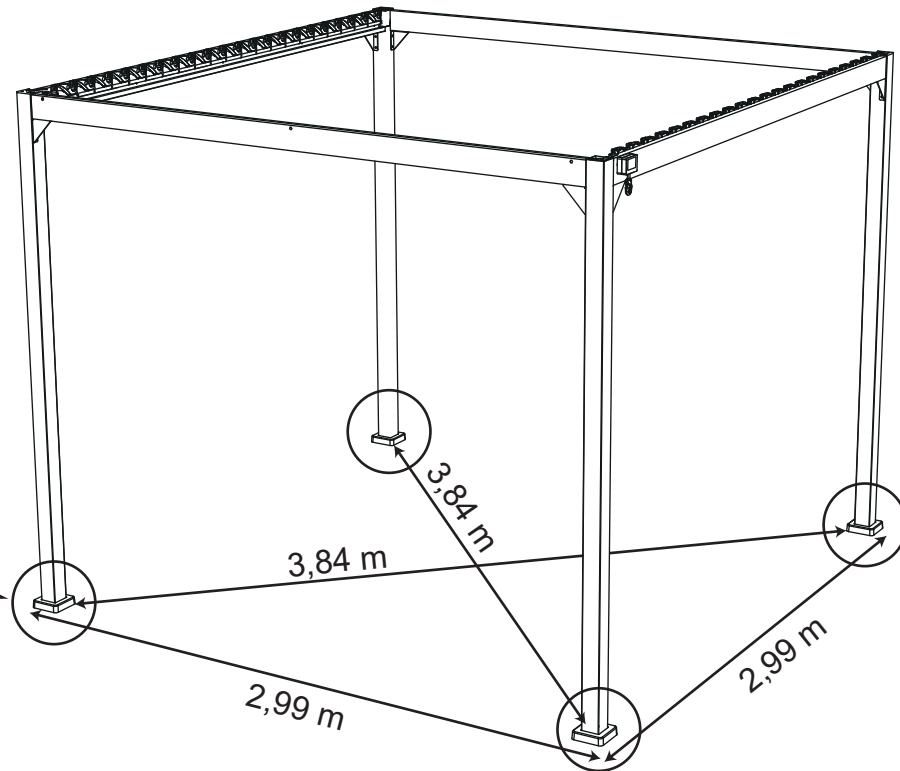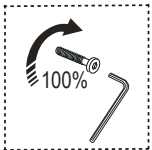

03480212-01

16

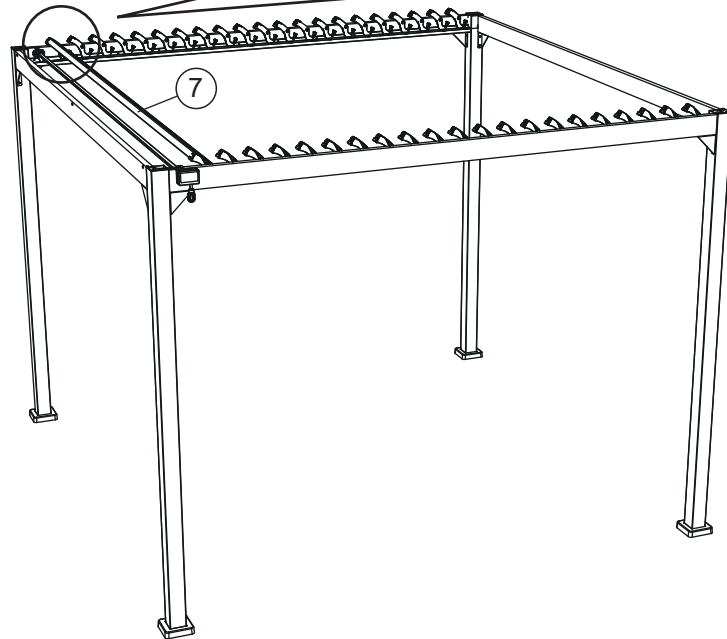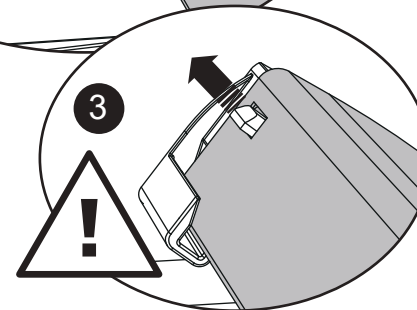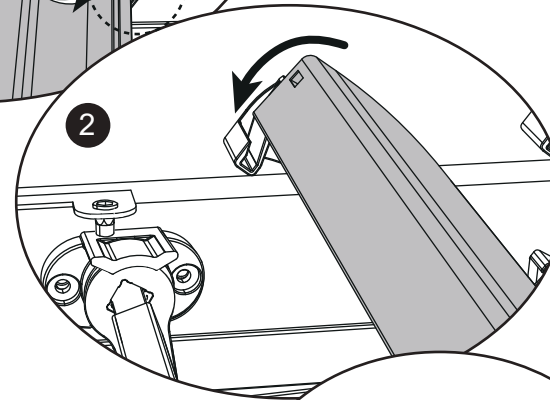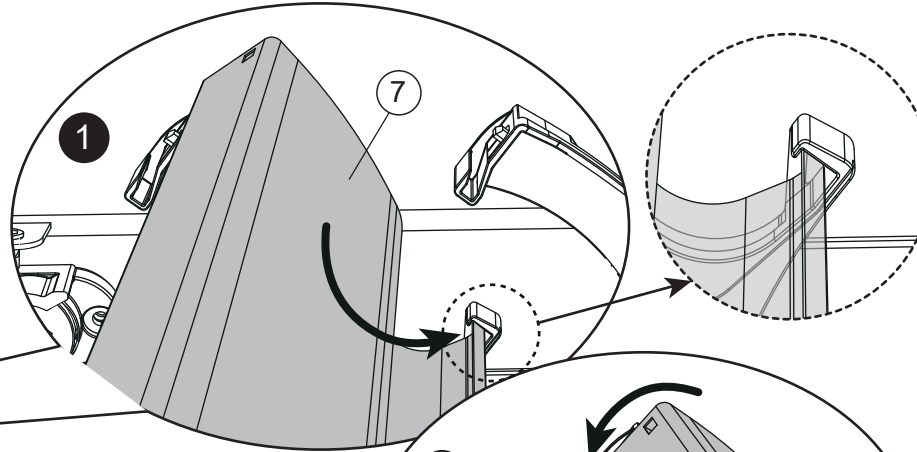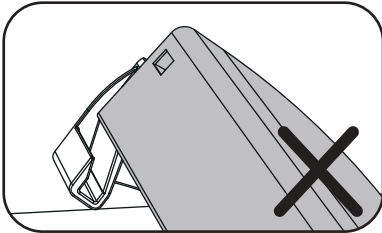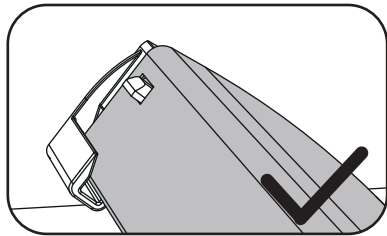








7 x1



0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15cm

03480212-01

17

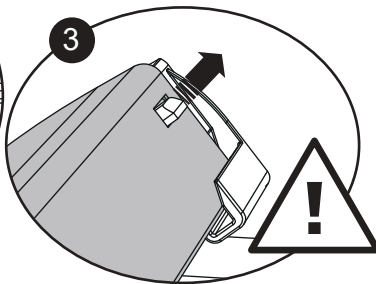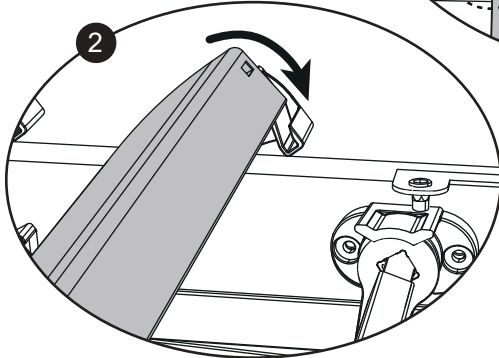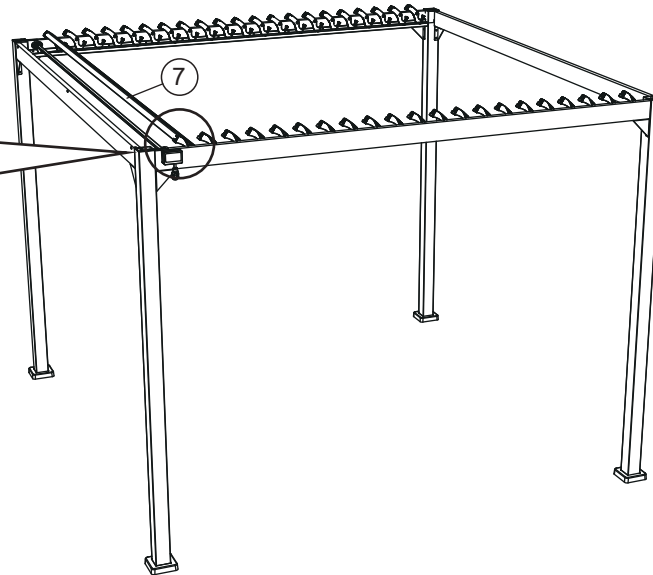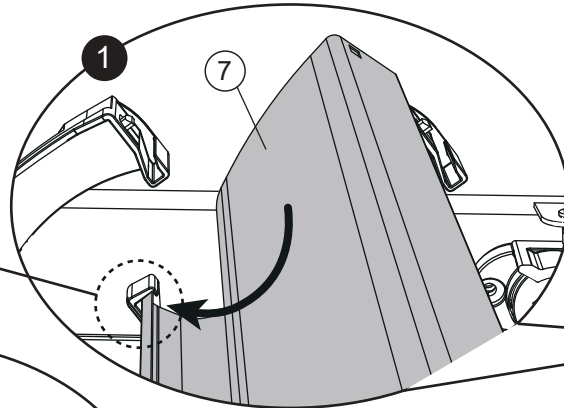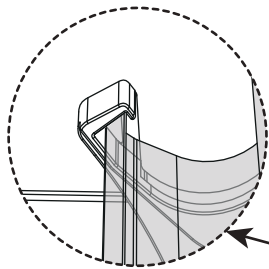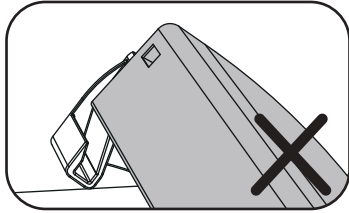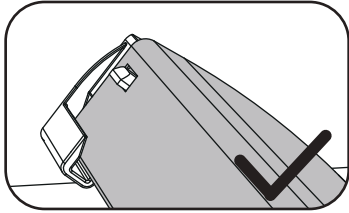




0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15cm

03480212-01

18




x20

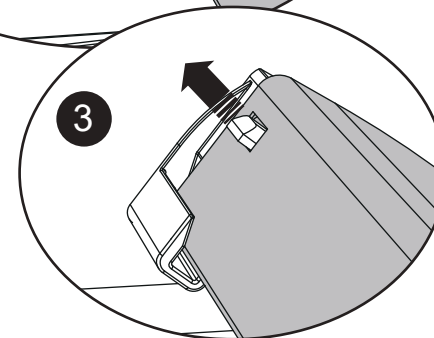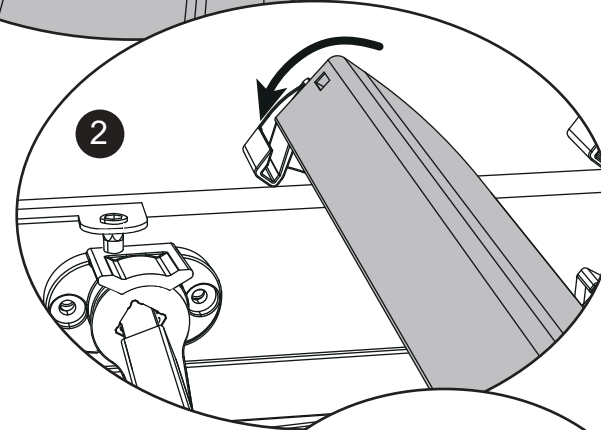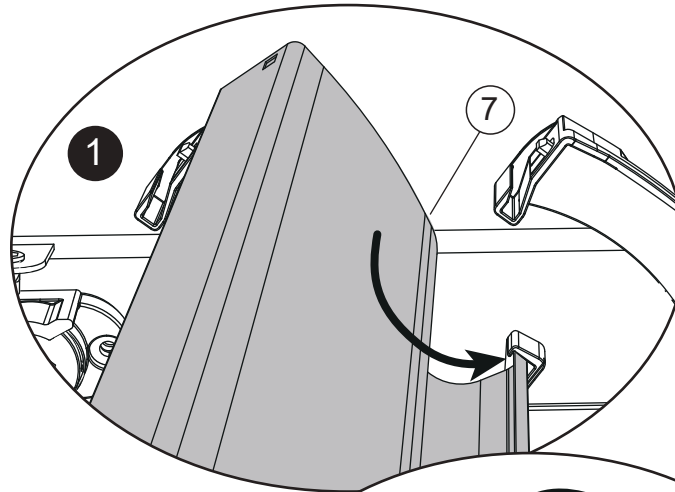

7 x20



03480212-01


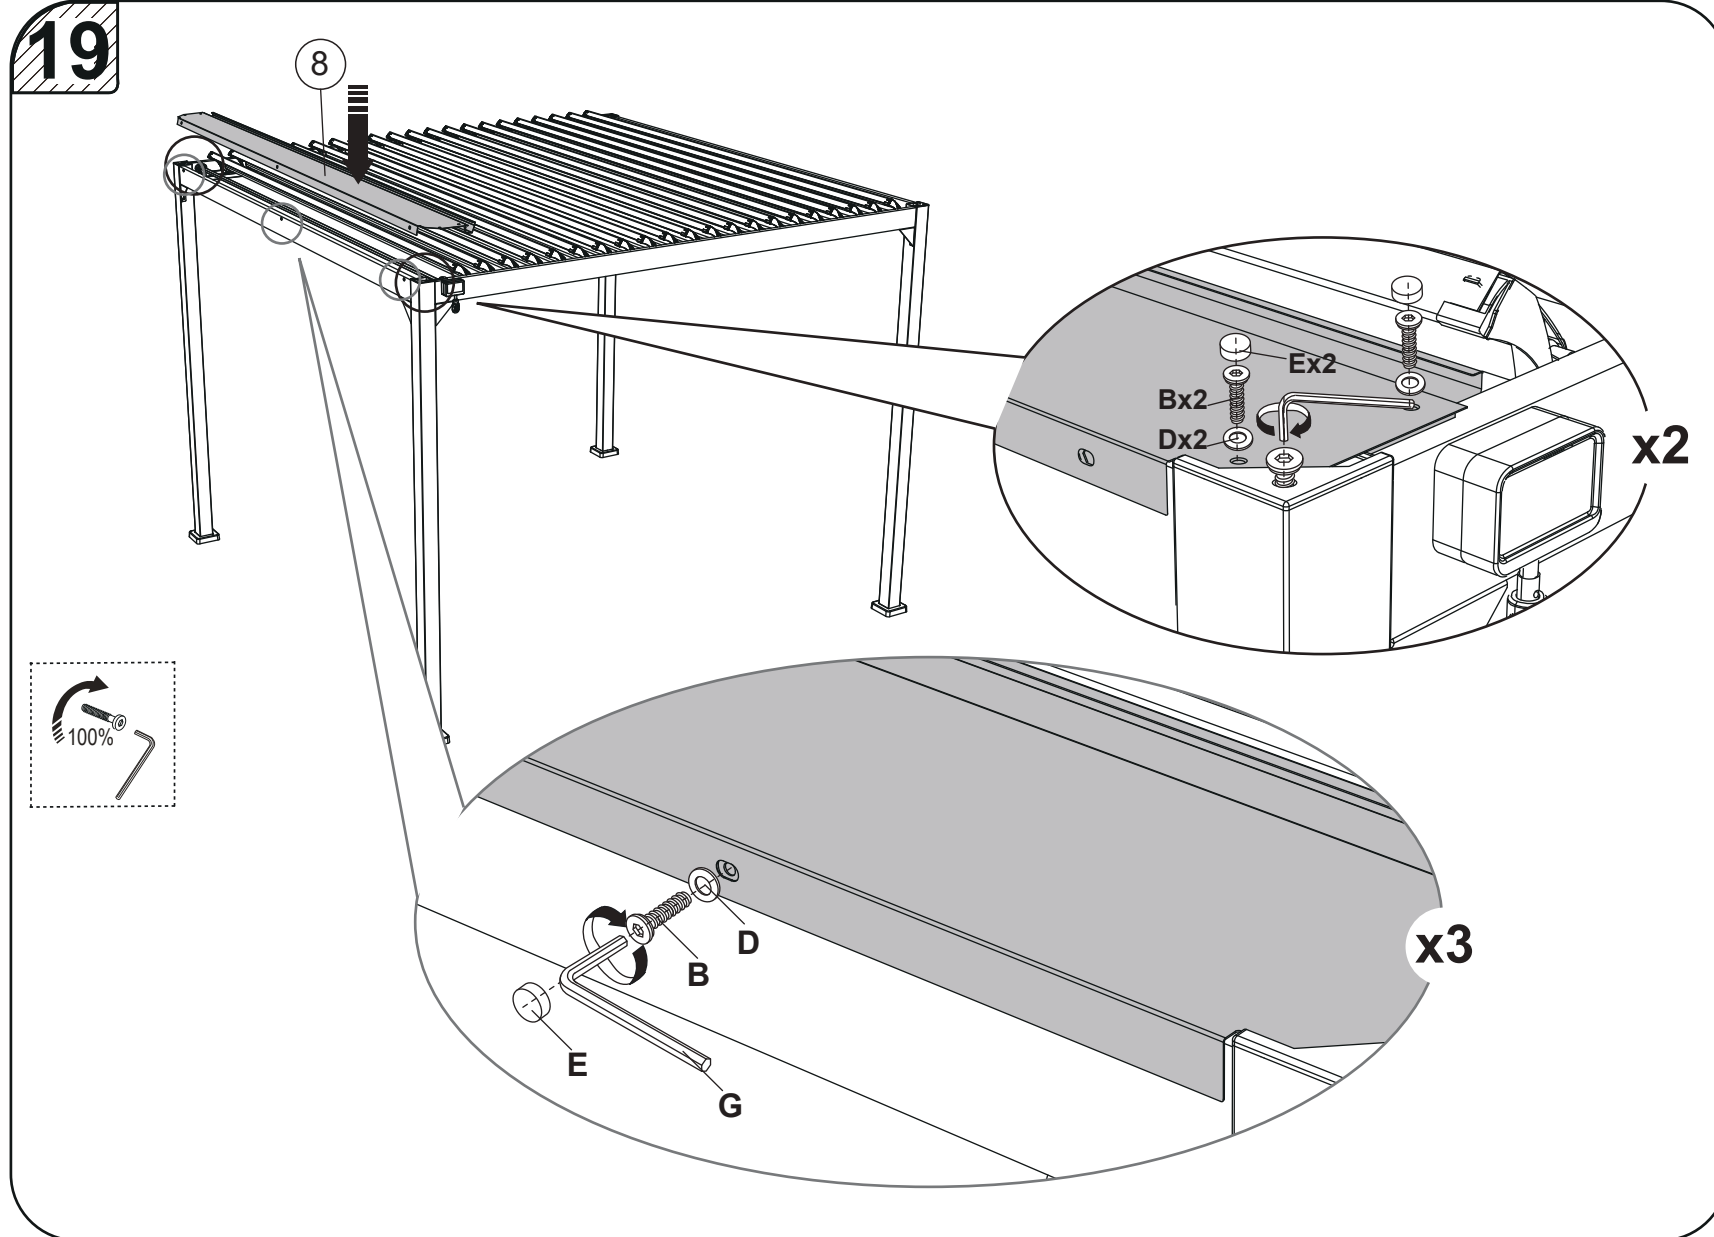


0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15cm

8 x1
Bx7
M6x15mm
Dx7
M6
Ex7
Gx1

03480212-01


20

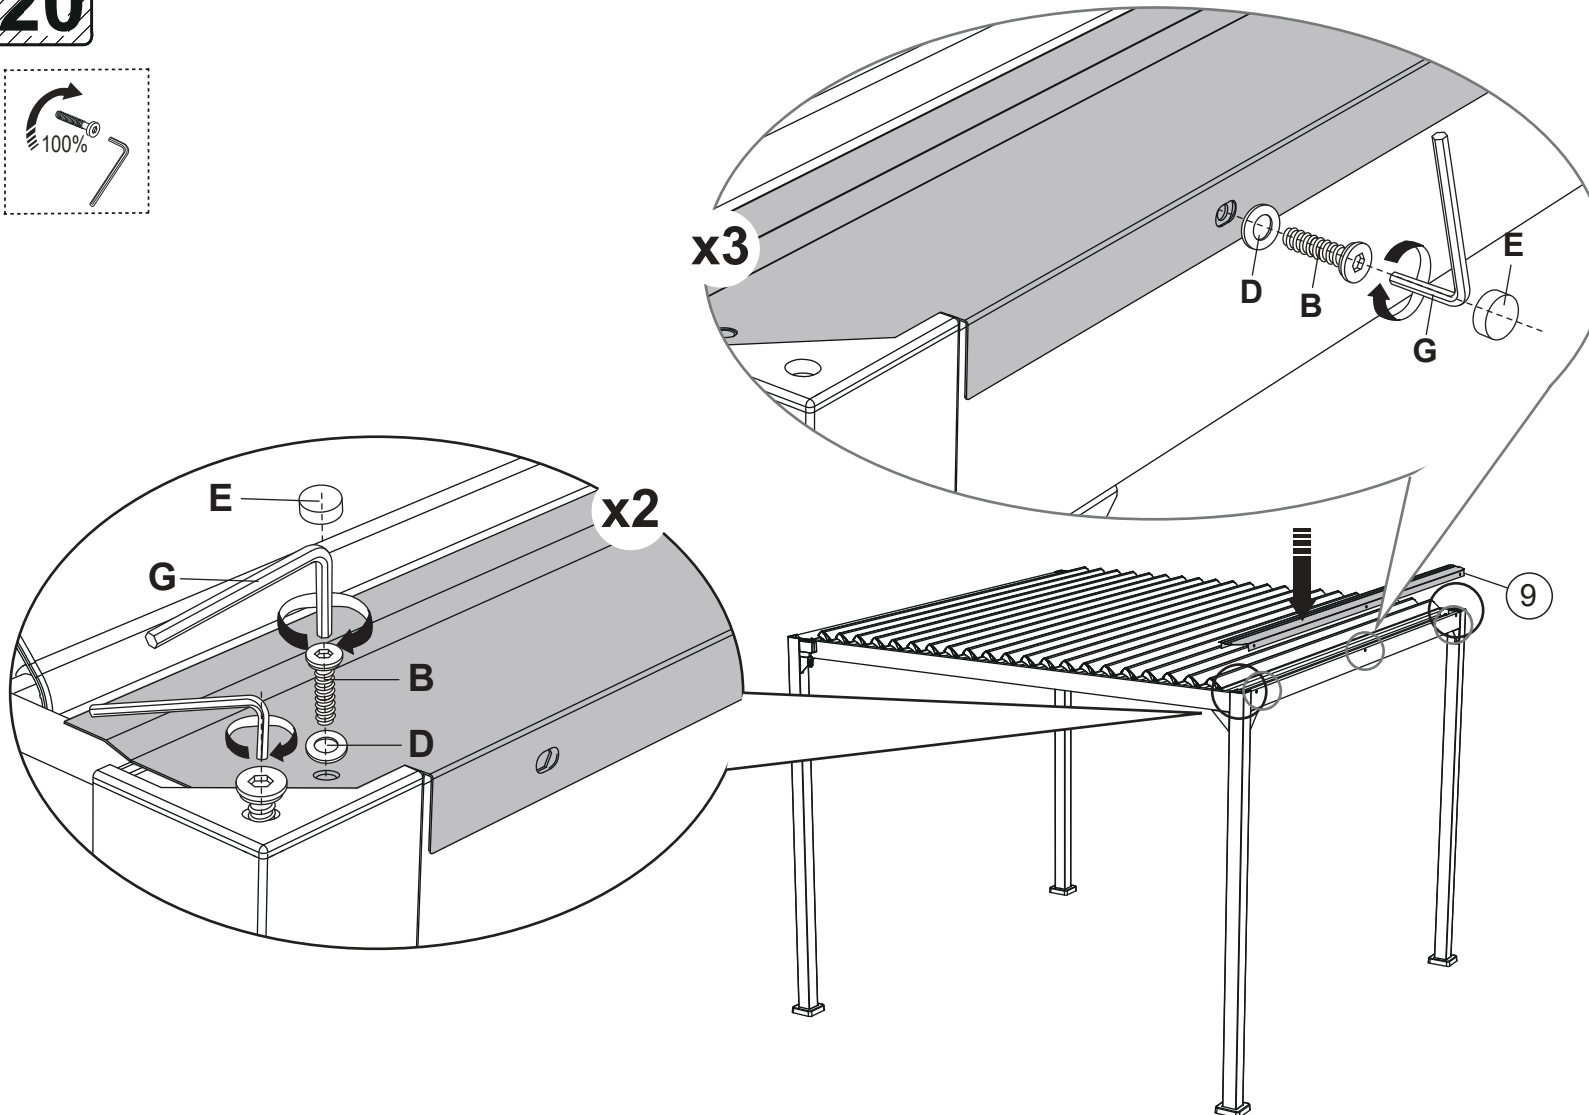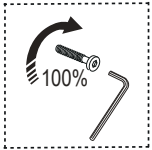

9 x1



Bx5



M6x15mm

Dx5



M6

Ex5




Gx1



0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15cm

03480212-01

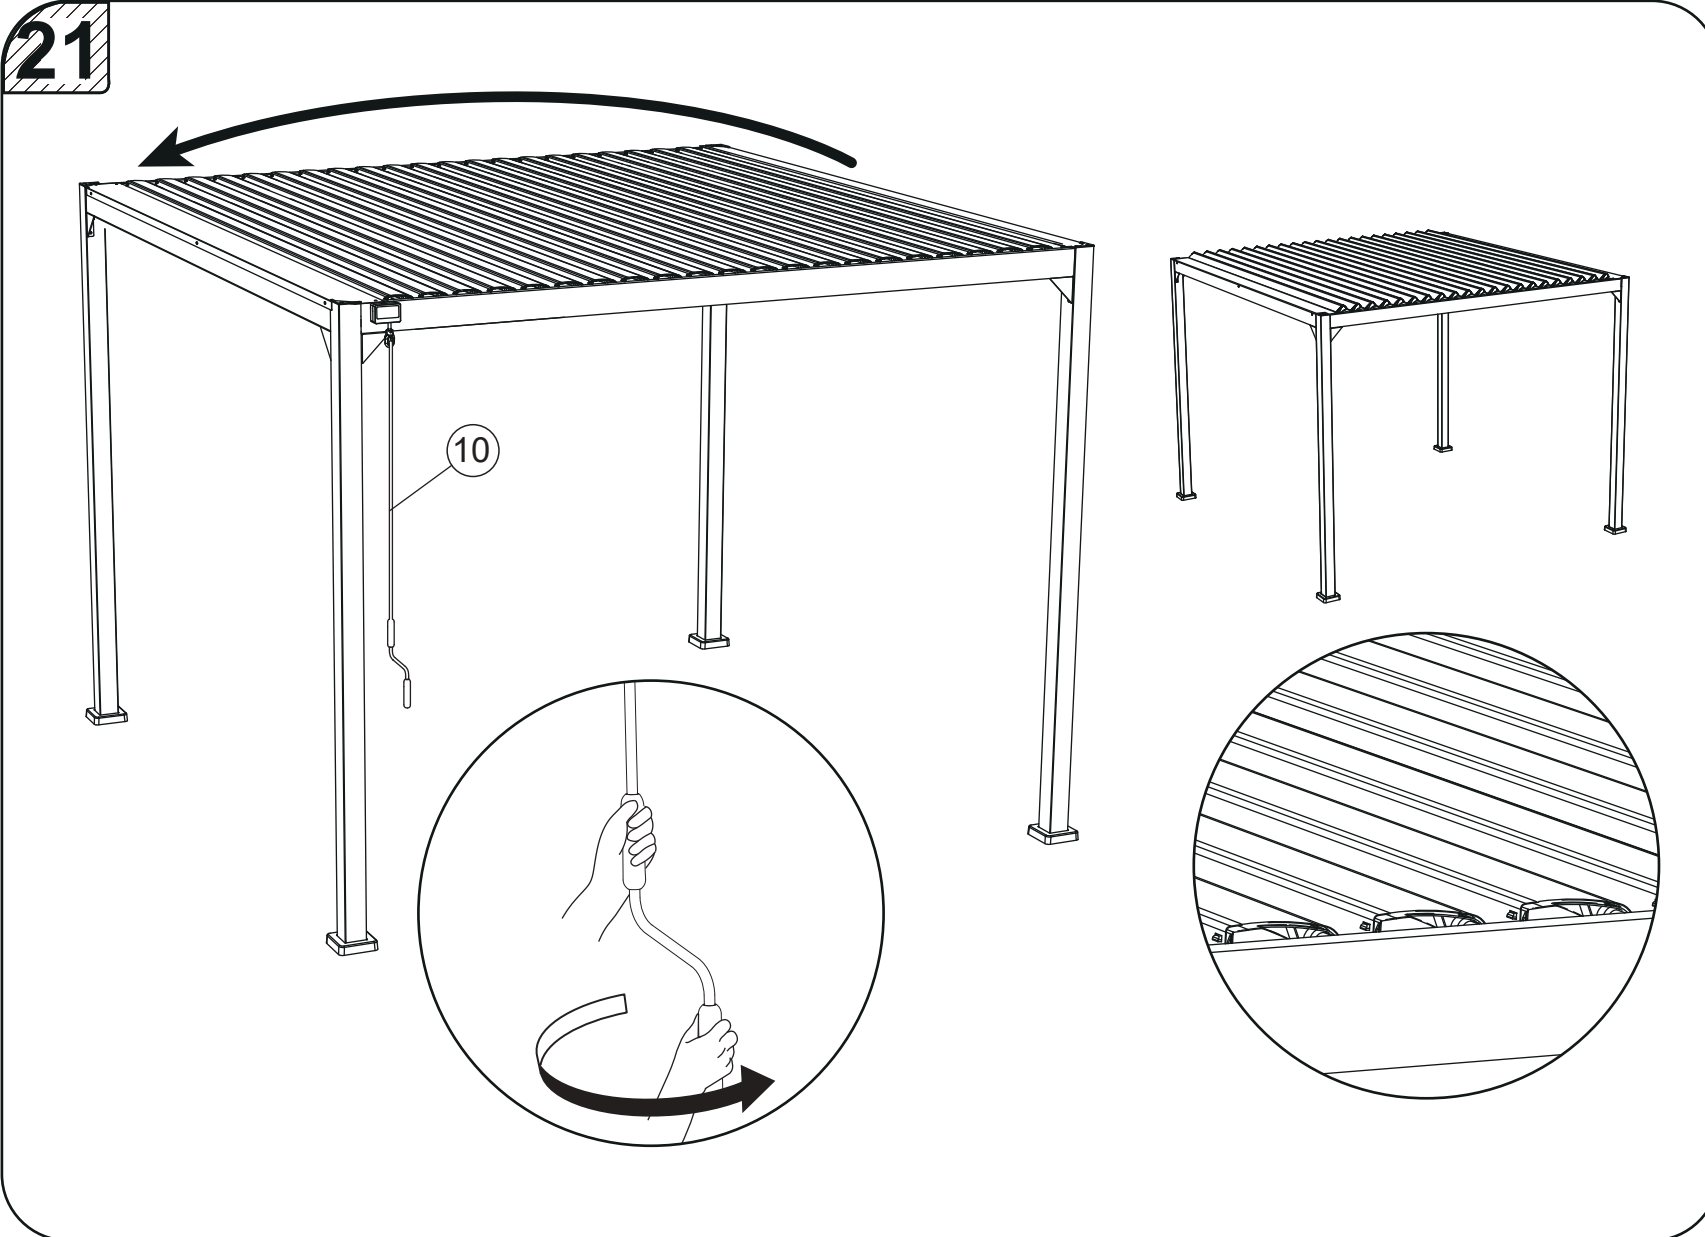

0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15cm

03480212-01

22

