




Assembly instructions
Aufbauanleitung / Návod / Instruktioner
08050001/01

4 Coll 1
Besläge → Coll 3/4

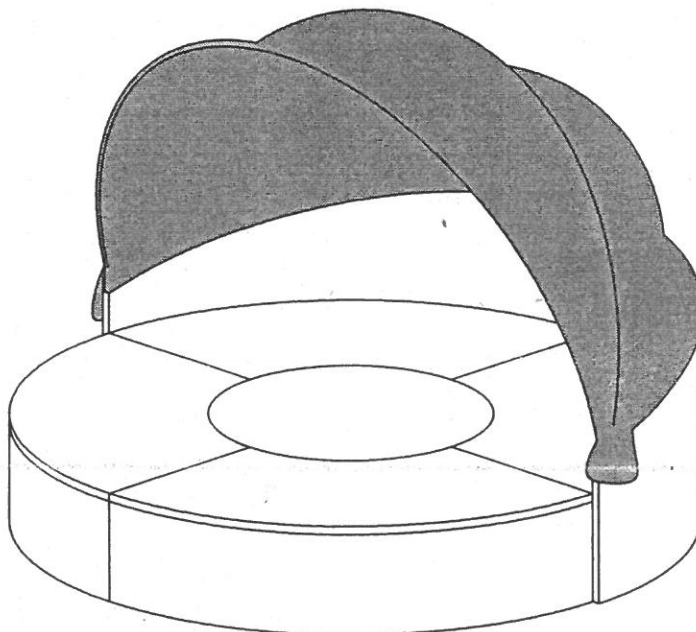


Execution time - 40 min

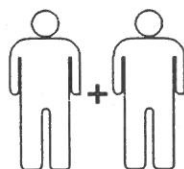

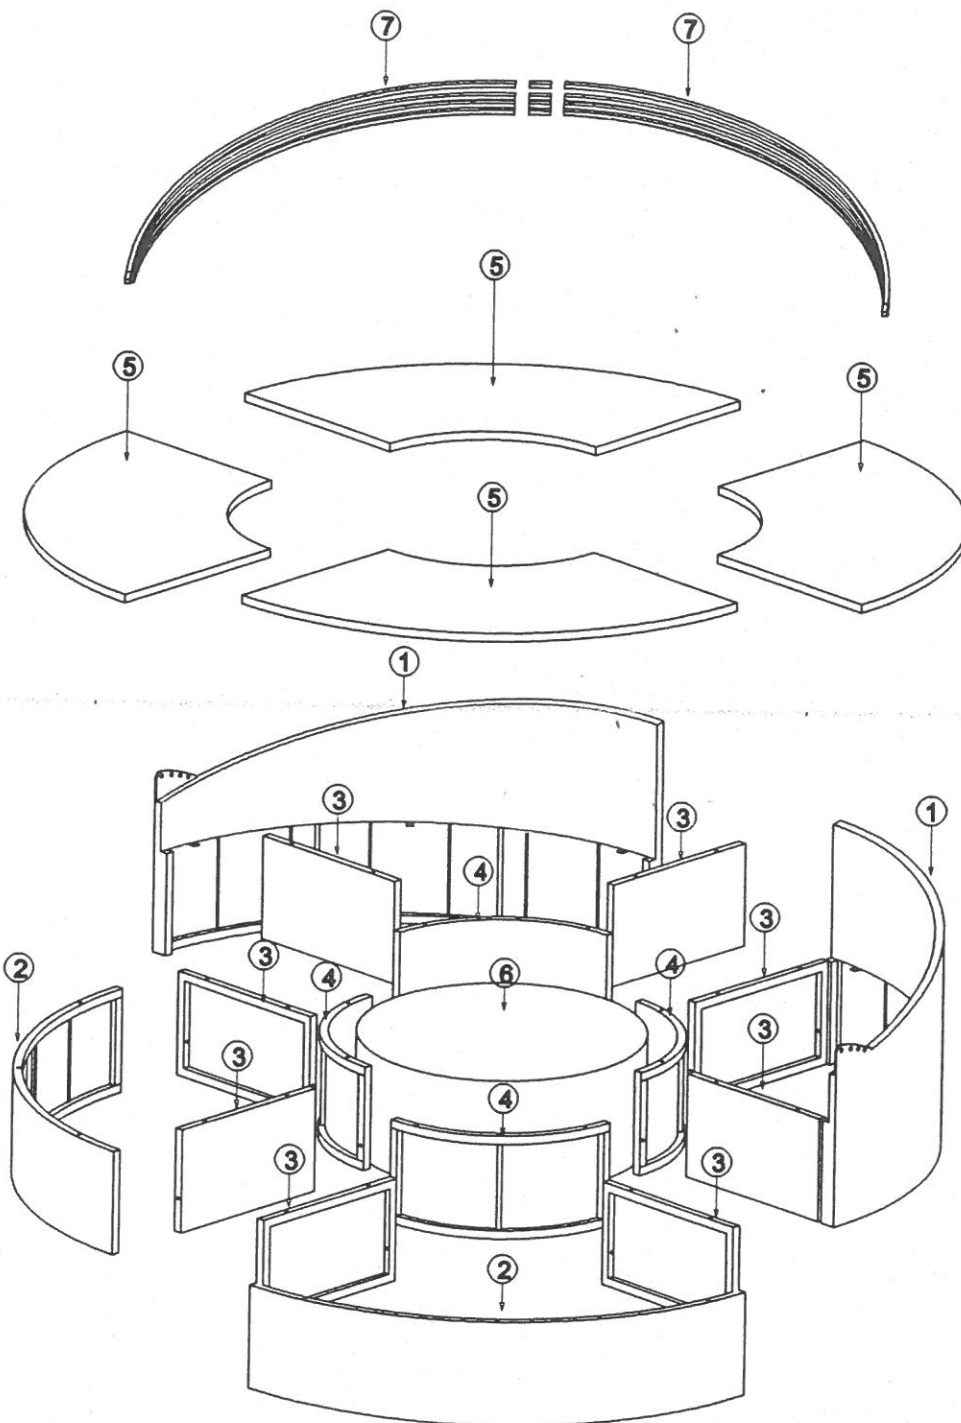


A x40	B x8	C x12	D x10	E x70	F x2	G x24	H x16	I x2	J x1	K x12	L x1
M6x35	M6x30	M6x25	M6x20	Ø6.5x16							100% cotton


Step 1

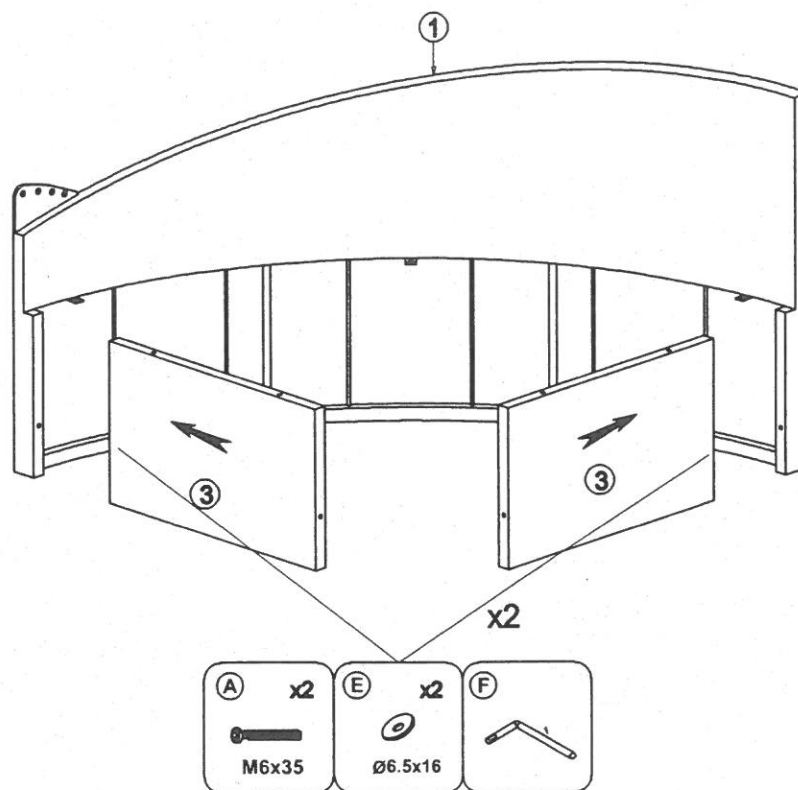


Step 2

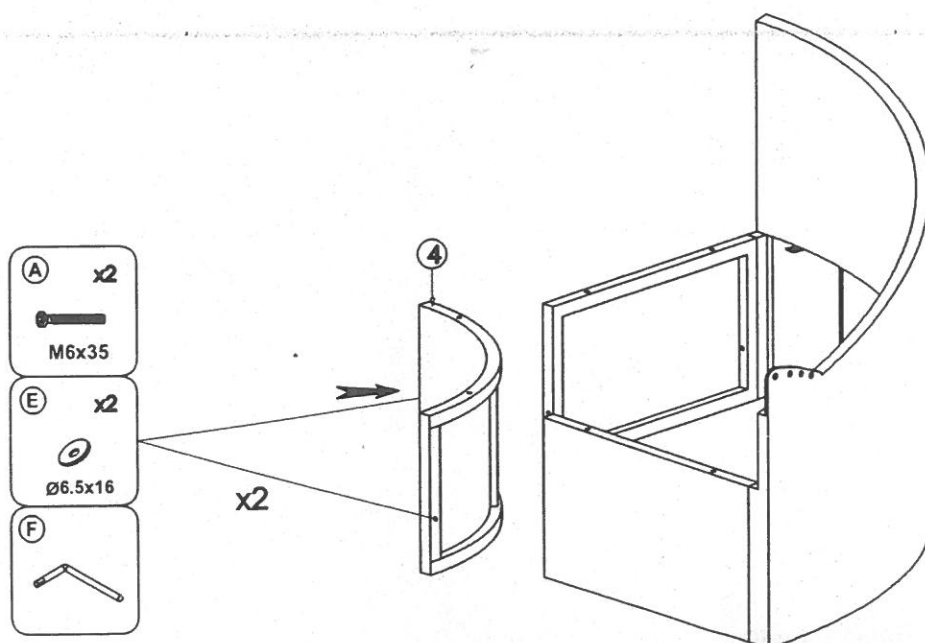


Step 3

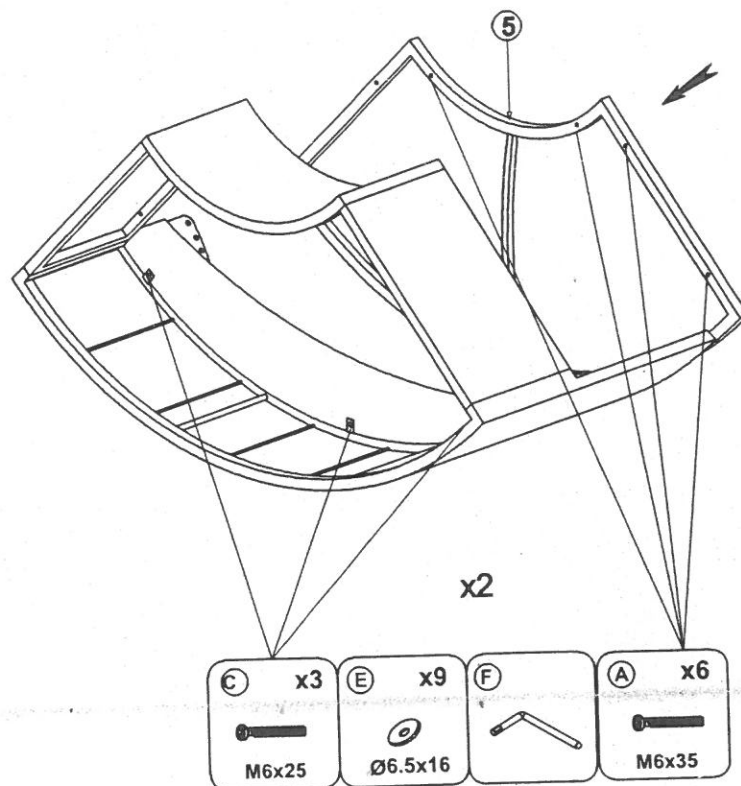


Step 4

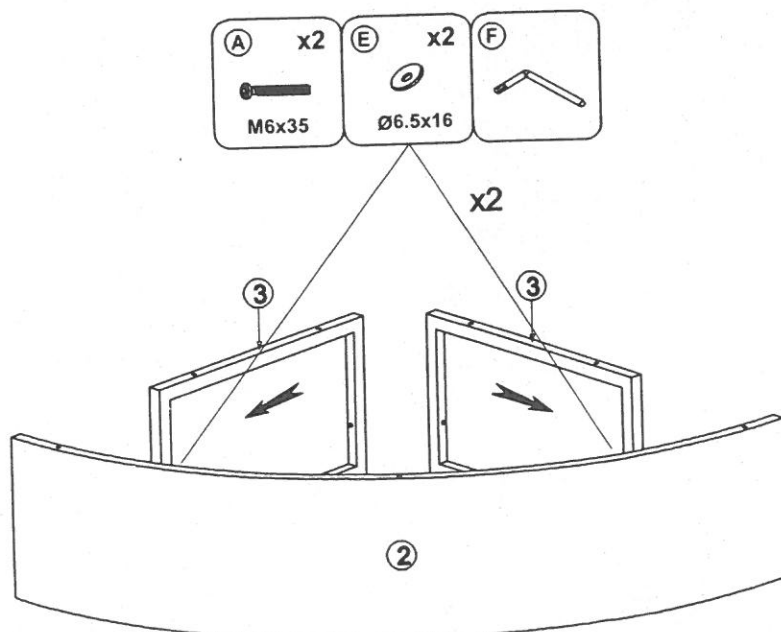



Step 5

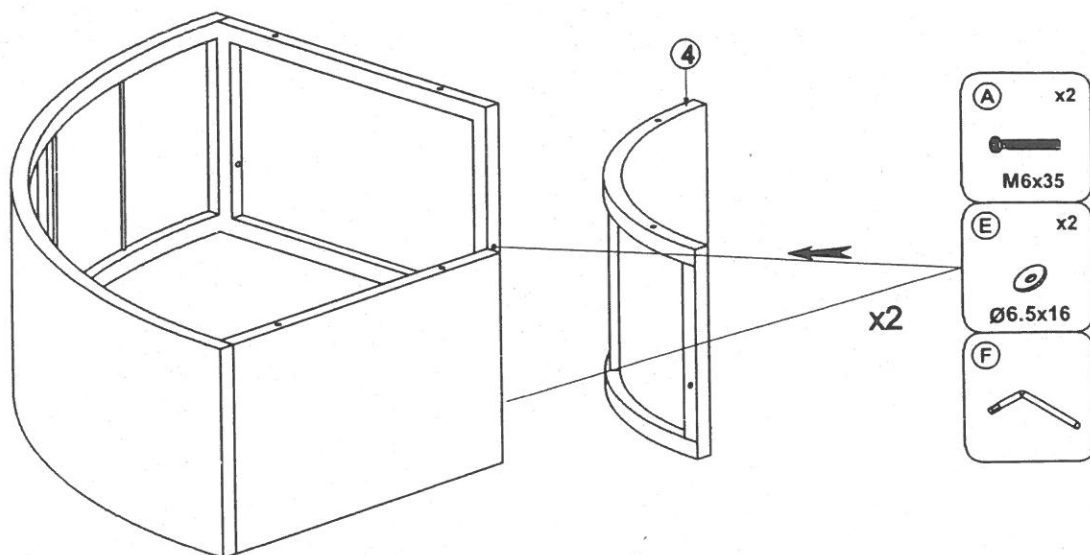




Step 6

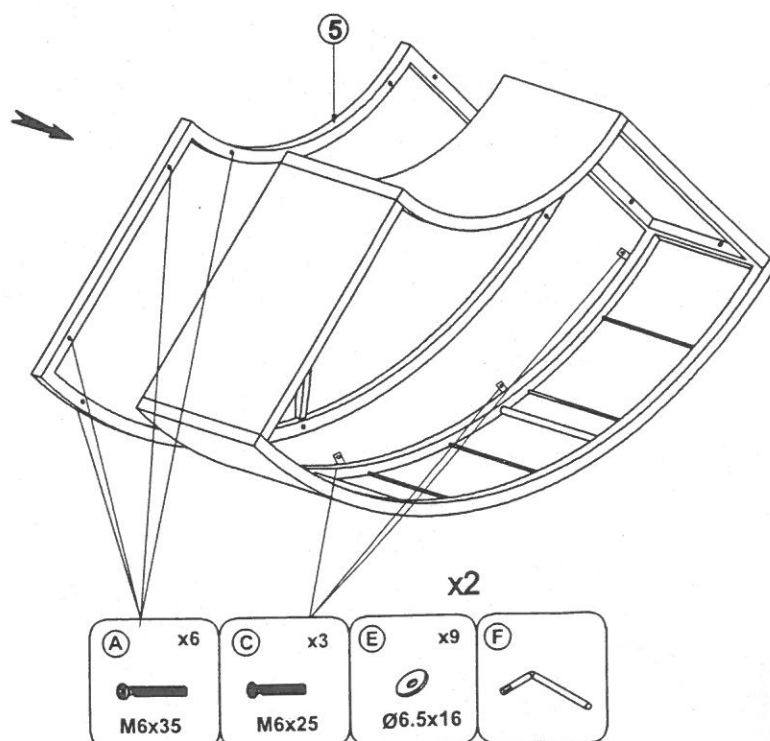


Step 7

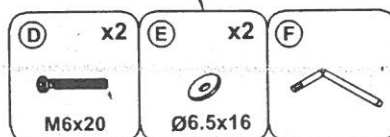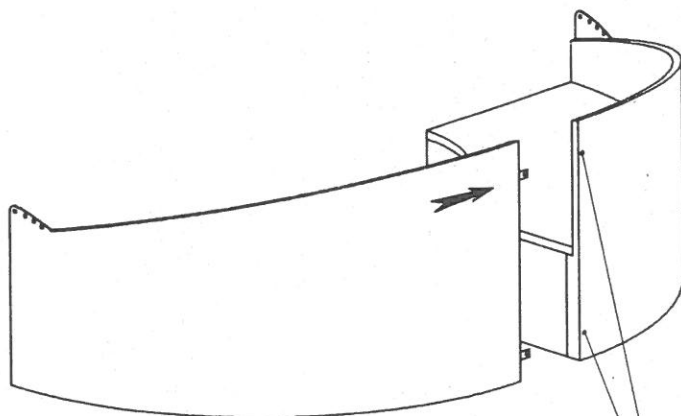


Step 8

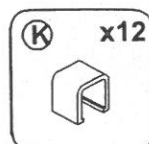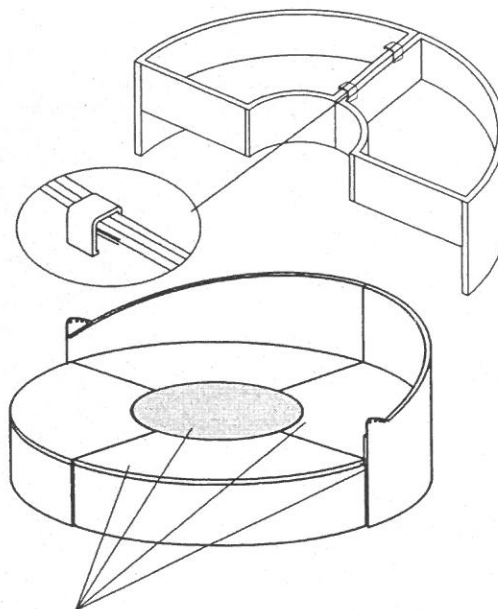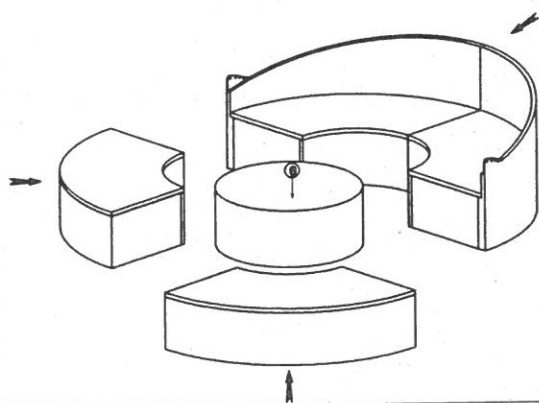

Step 9

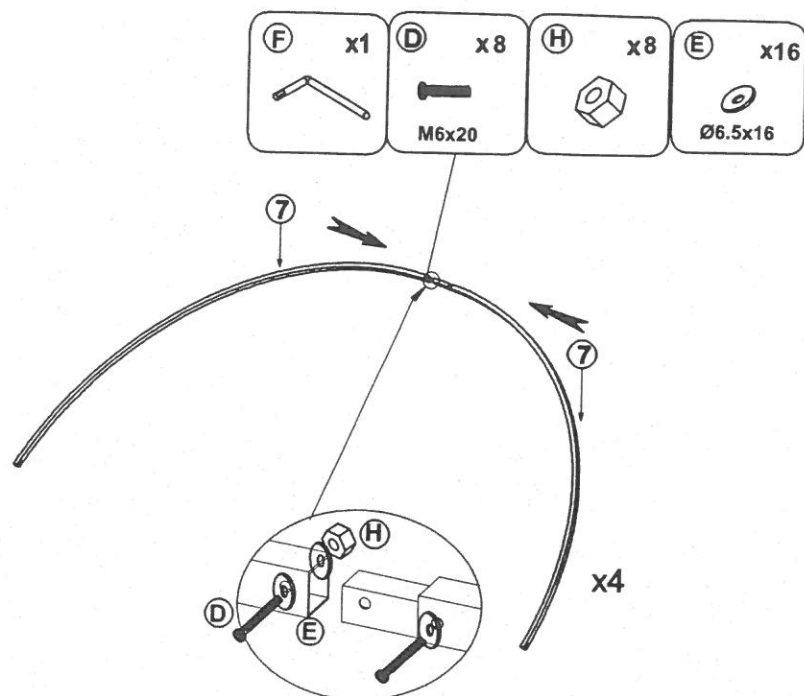

Step 10

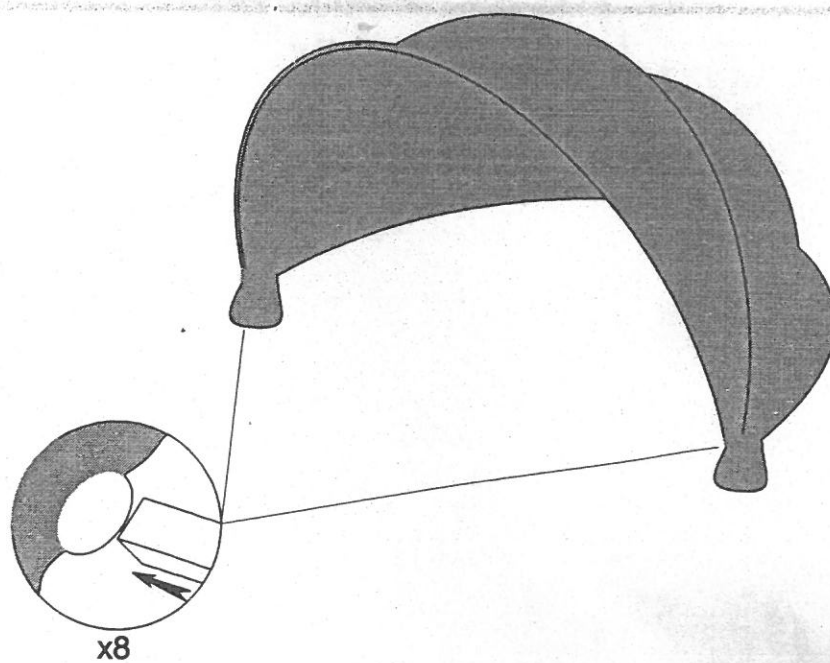

Step 11

