
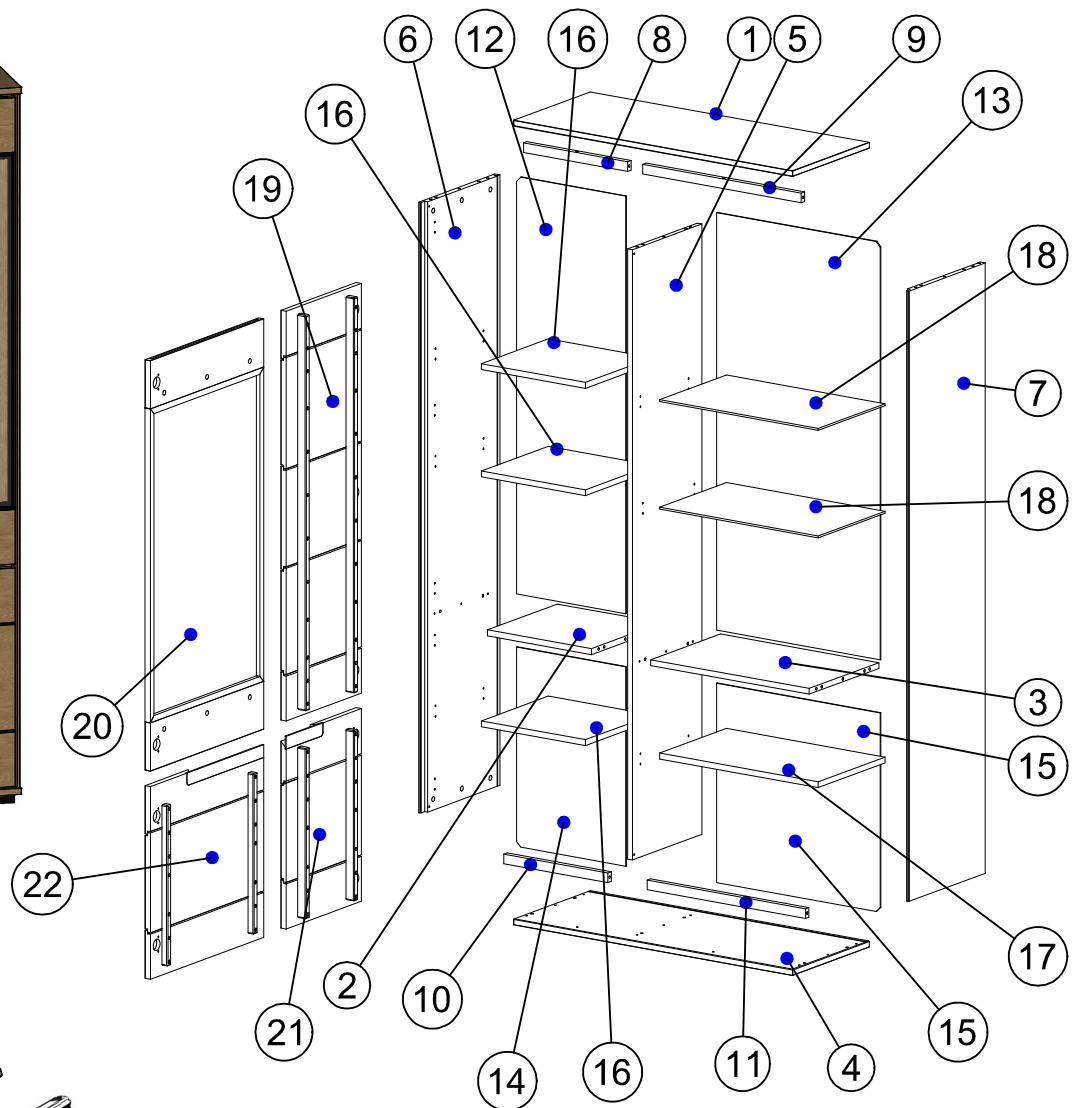


3993


Versionsnummer:

05.2023








Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.



x2 80 min

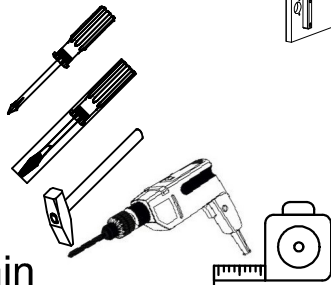

A Ø 8x30 16	A1 Ø 8x50 2	B 28	D 28	D1 10/10	D2 4/4	E 9	F Ø 6.3x13 9	G Ø 4x30 10
H 26	I1 16	I2 8	J Ø 5x13 18	P 26	V 5	U 1	Q 24	

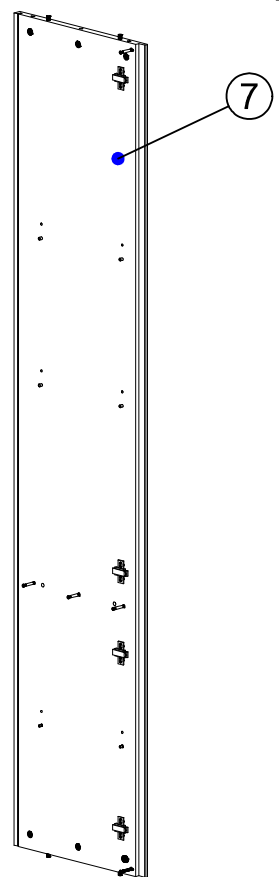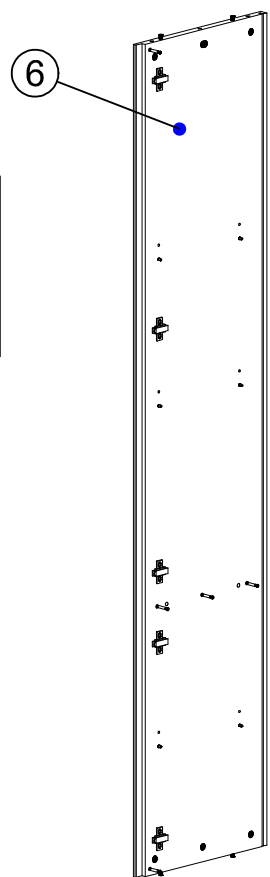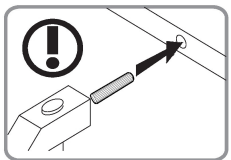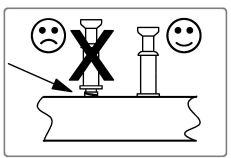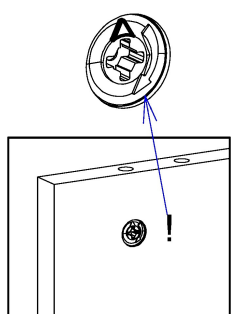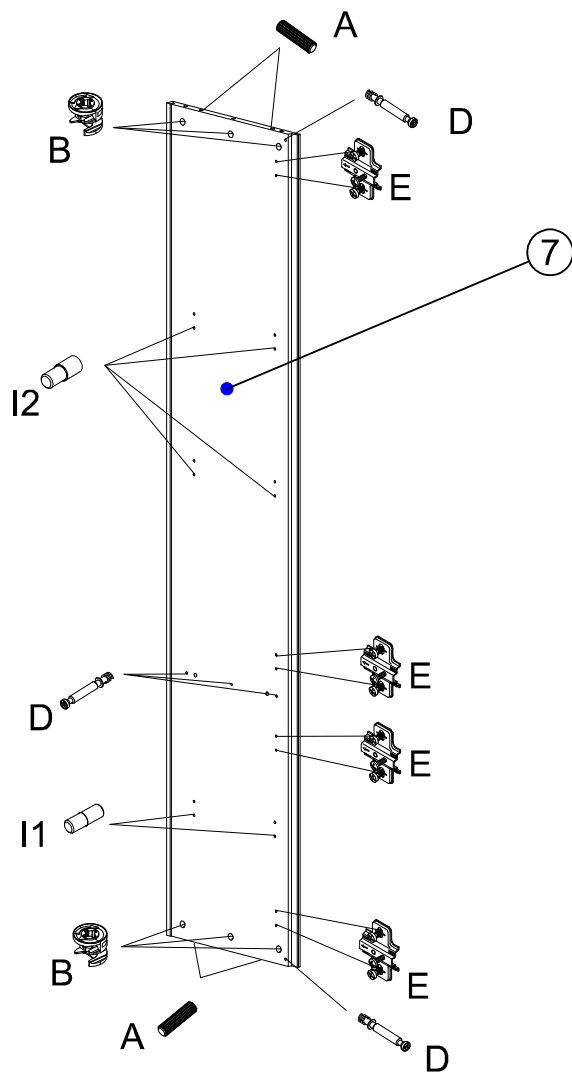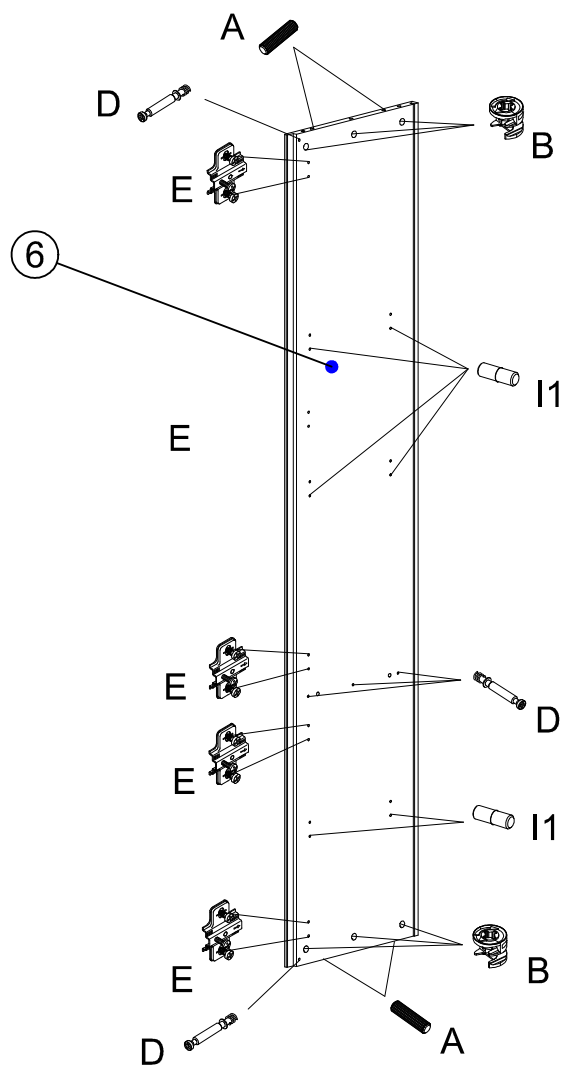

I

A

 Ø 8x30
 8

B

 12

D

 10

E


 Ø 6.3x13
 9

I1

 8



I2

 4

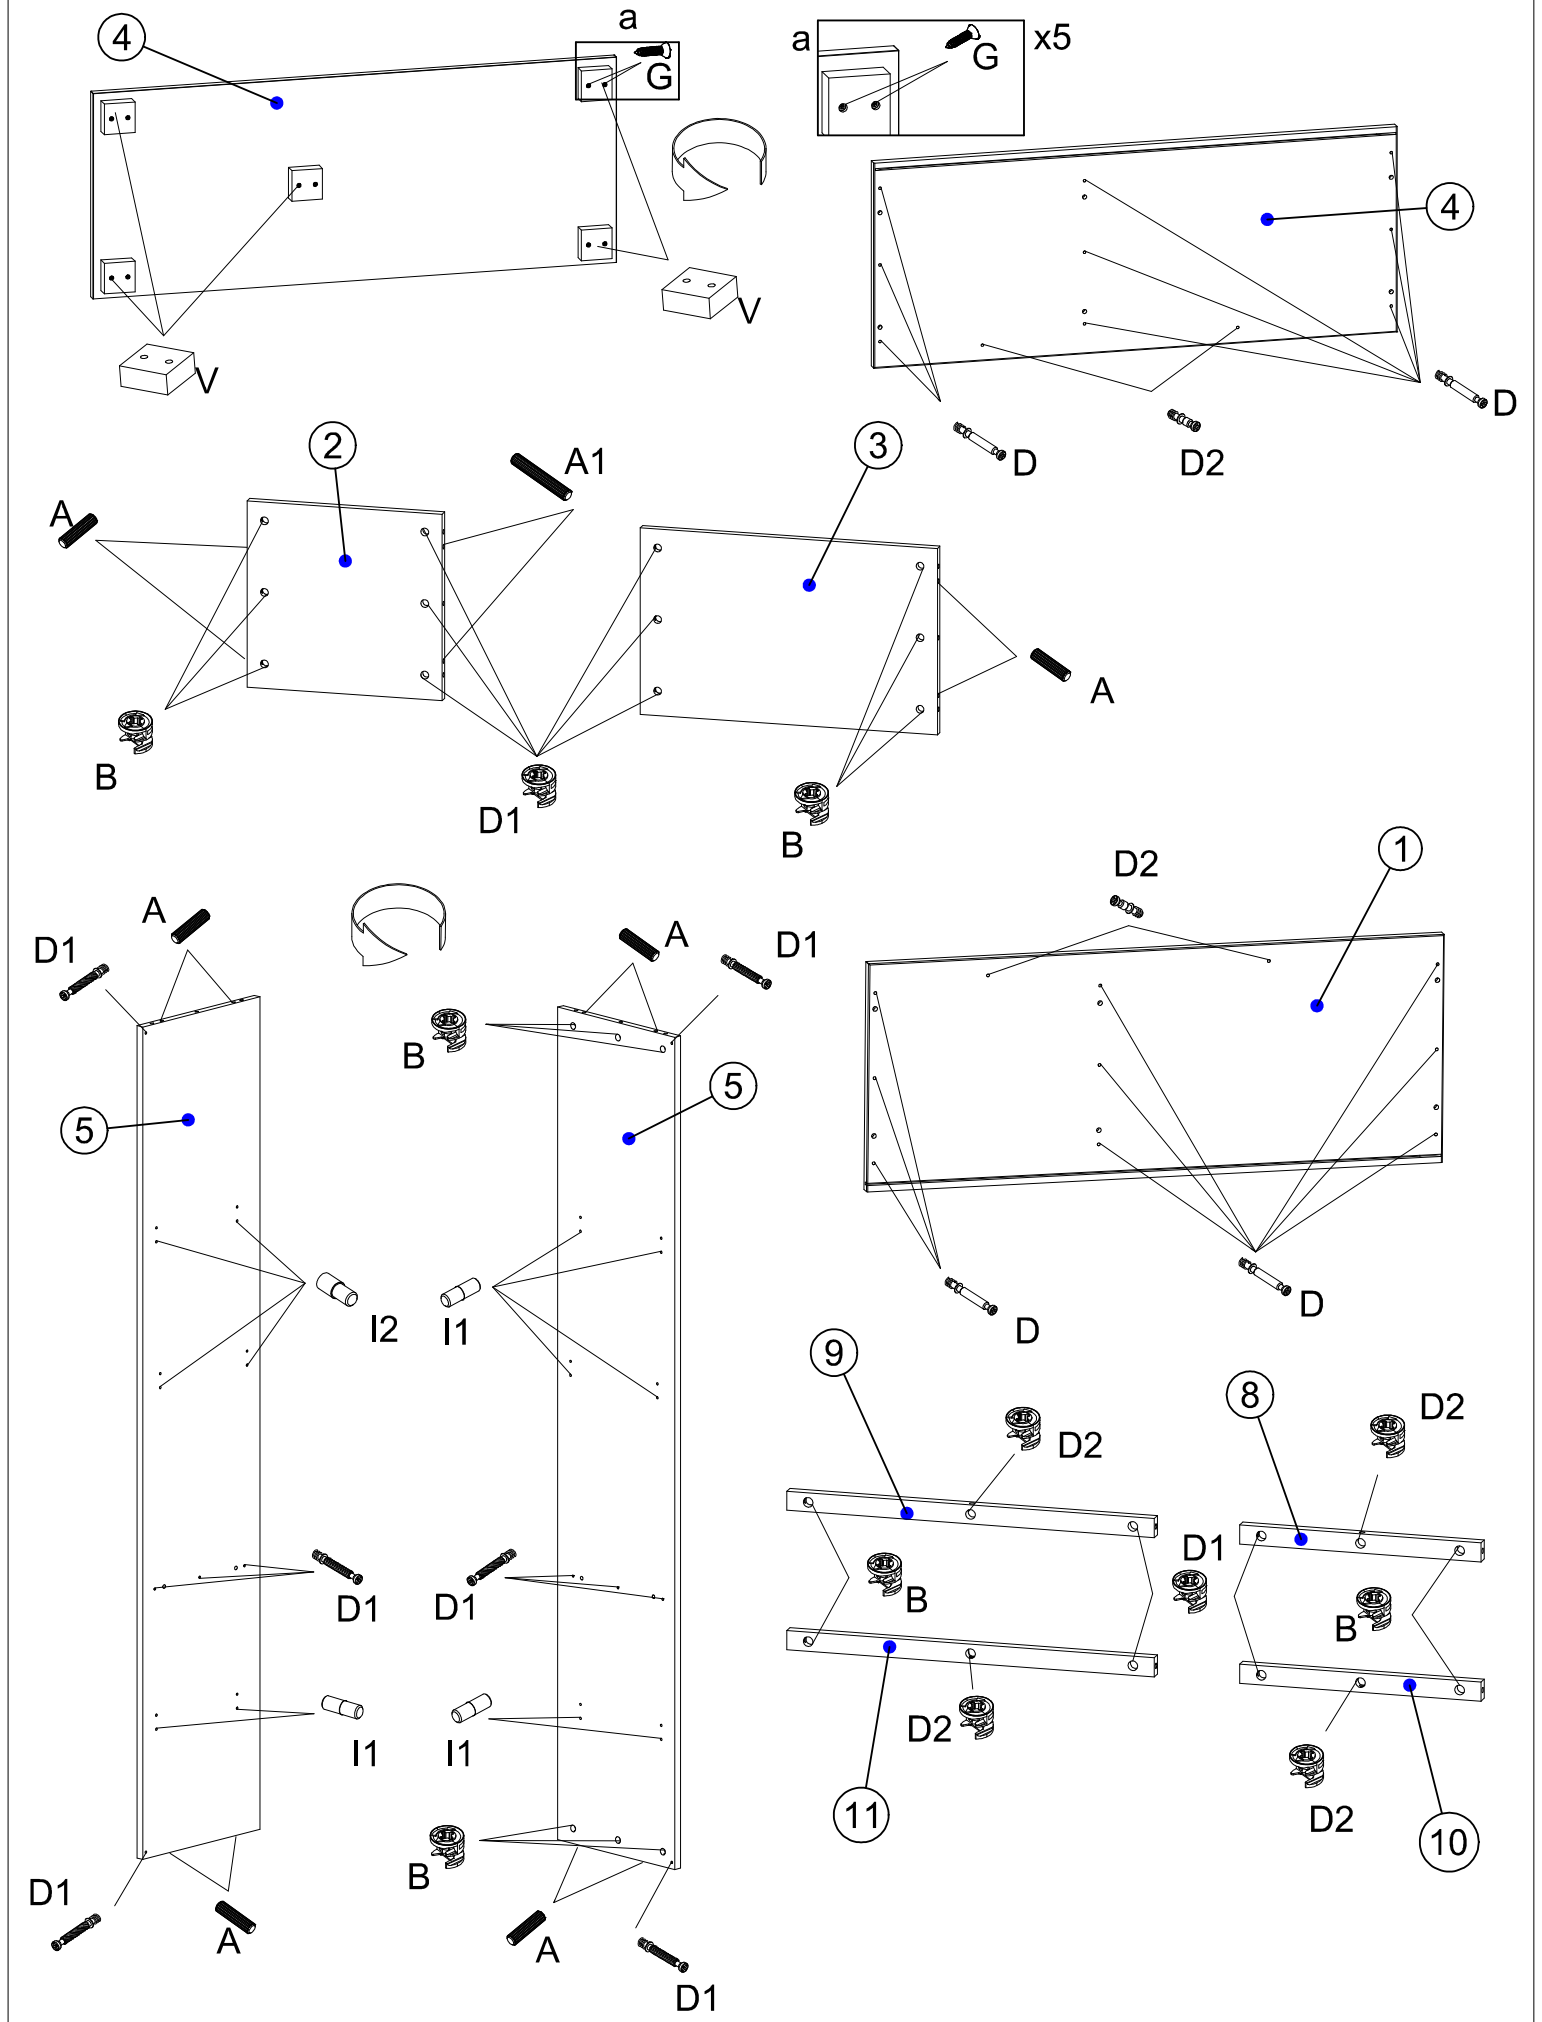


II	A Ø 8x30 8 A1 Ø 8x50 2	B 16	D 18	D1 10/10	D2 4/4	G Ø 4x30 10	I2 4 I1 8	V 5
----	--	---	---	---	---	--	--	--

1°

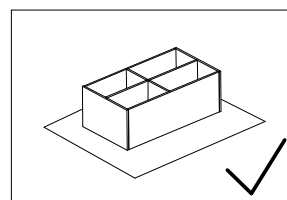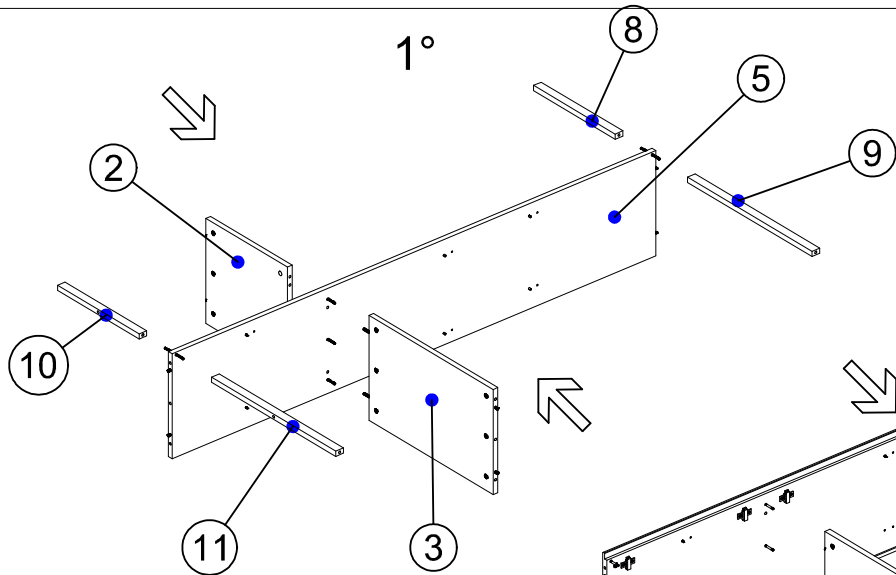


2°

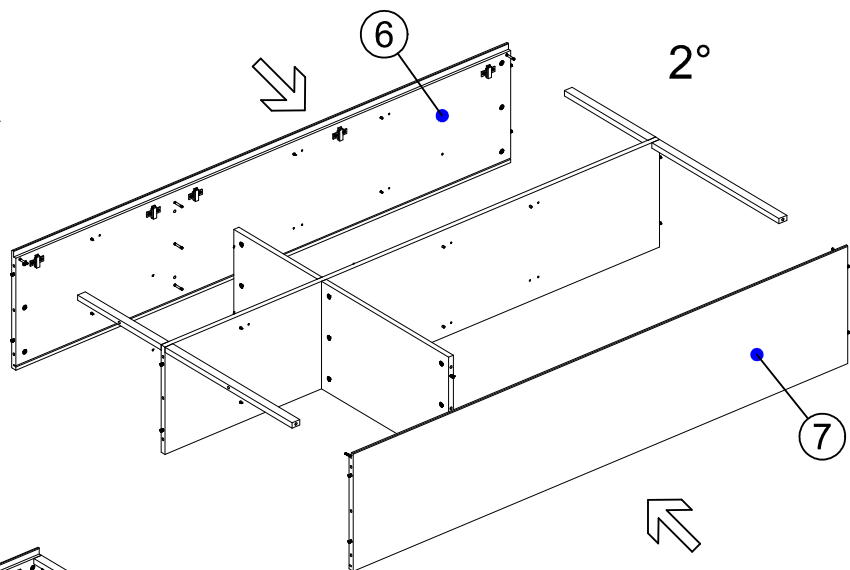


Heben Sie vor dem Zusammenbau des Elements 4 die Element 5 um 2 cm an.


3°

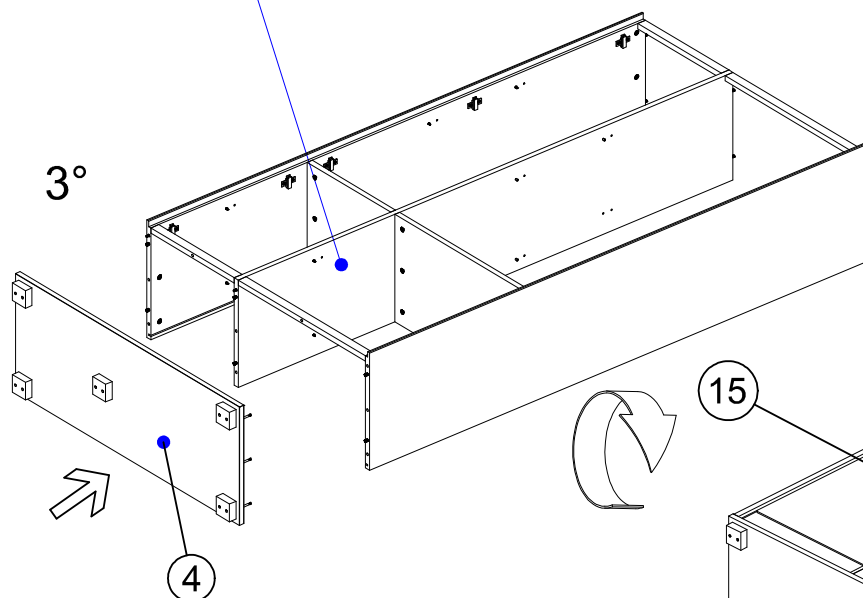


4°



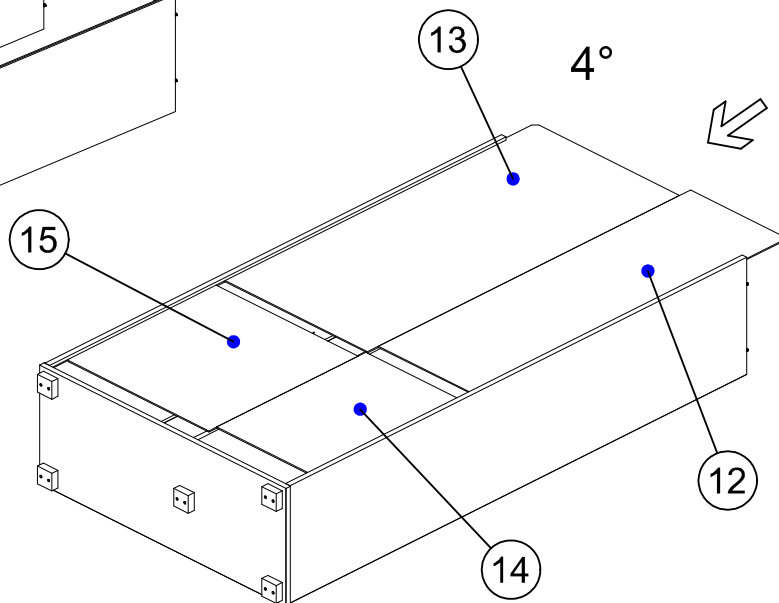


5°

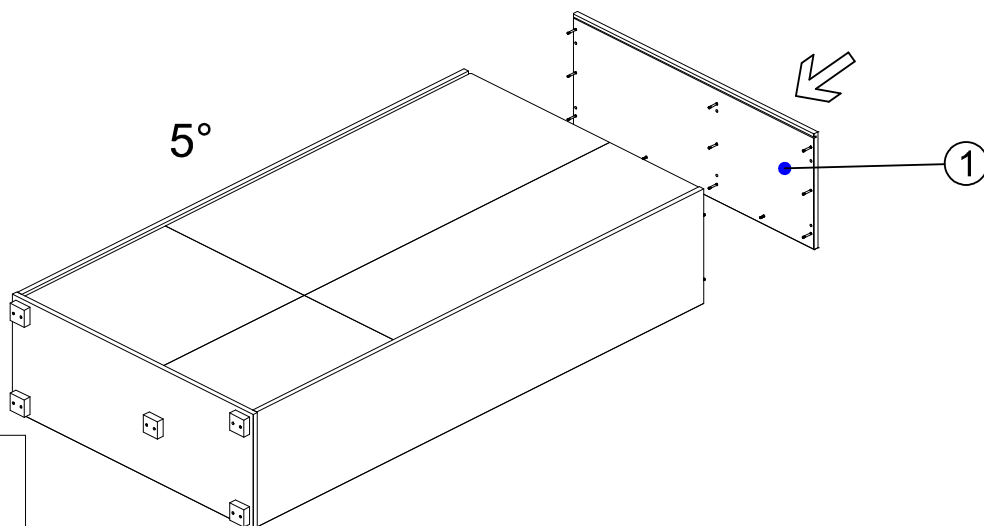



III



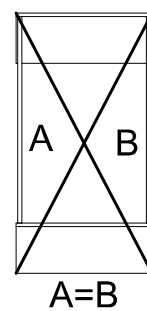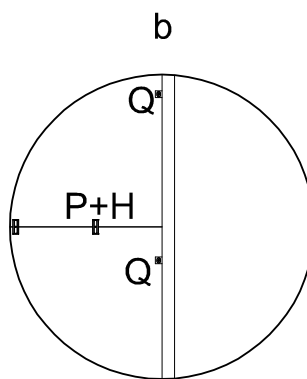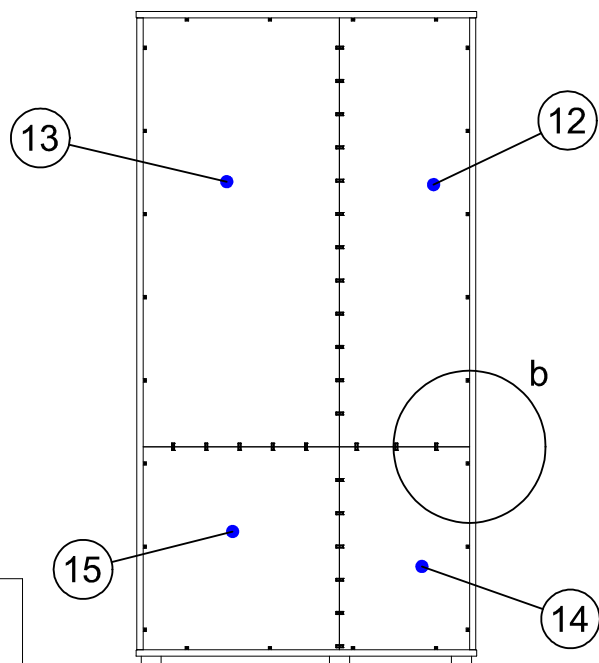

IV

H	P	Q
26	26	24

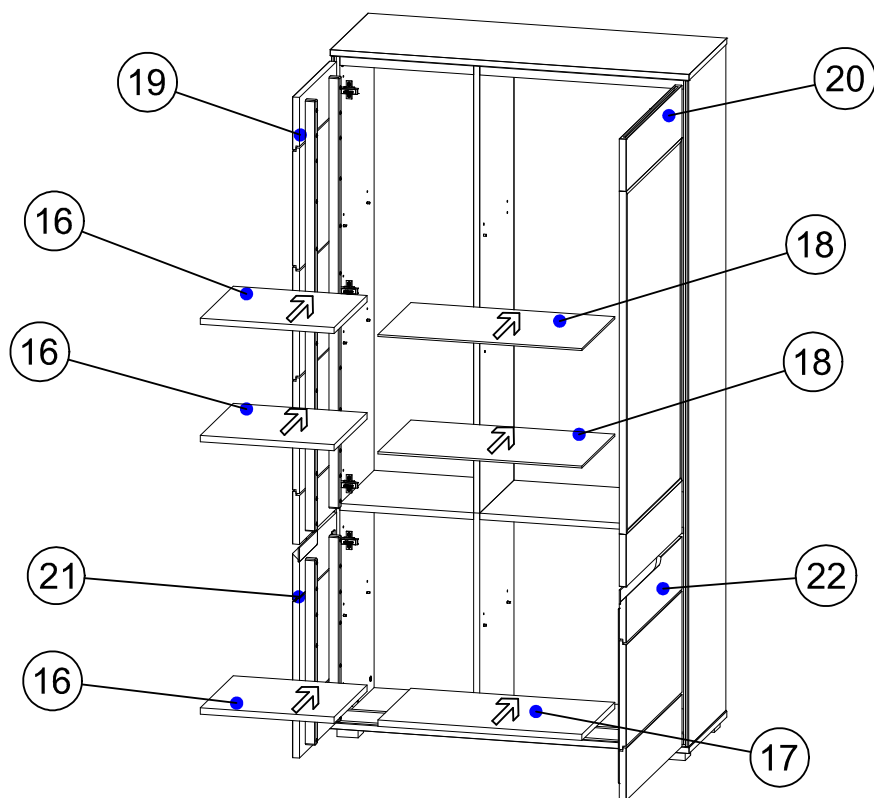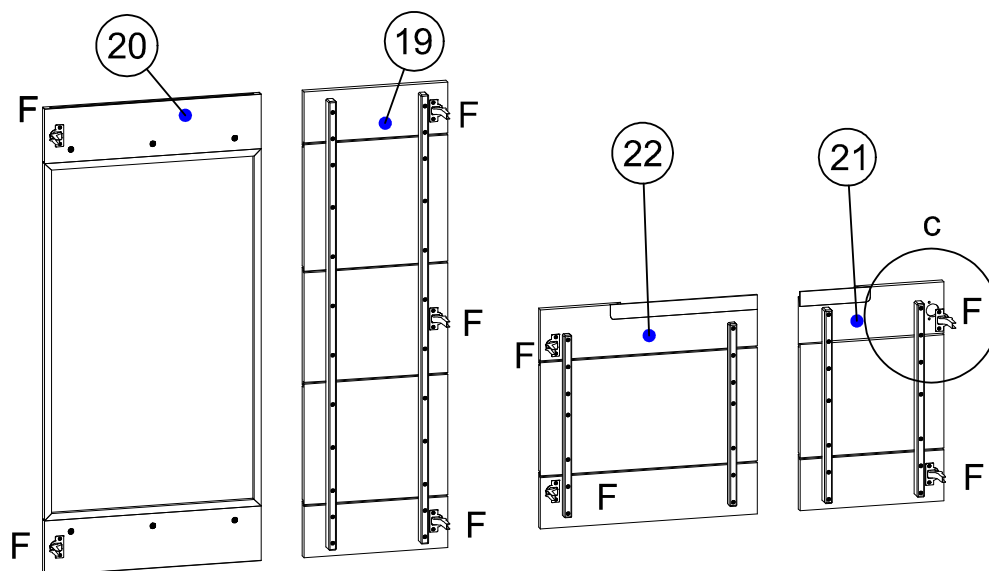

V

F	J
9	Ø 5x13 18

