
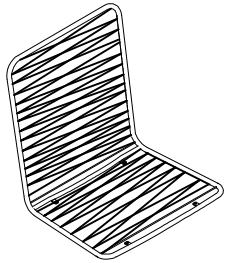


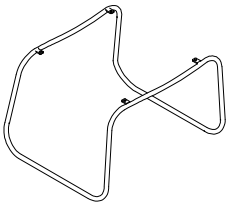


ASSEMBLY INSTRUCTIONS - 17020008


PART LIST

1		x 8
2		x 8

HARDWARE LIST

NO.	DESCRIPTION	SKETCH	Q.TY
A	Allen Bolt M6x25		32
B	Flat Washer M6		32
C	Allen Wrench M4		2

STEP 1

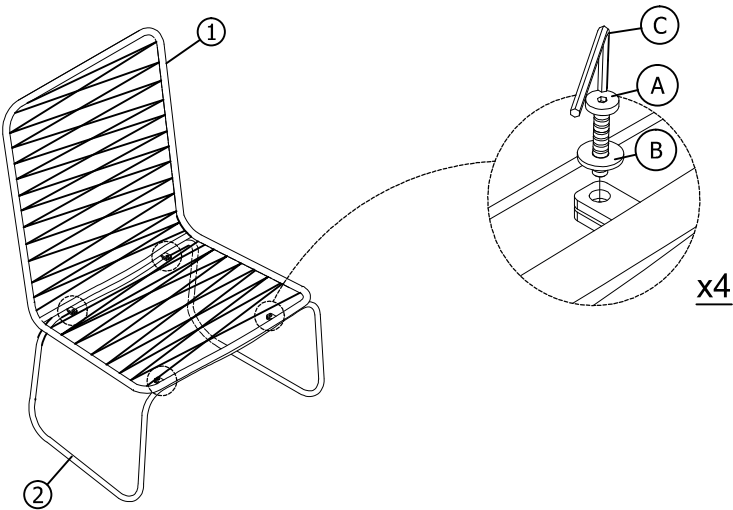

STEP 2



IMPORTANT NOTE:

Put the screws into the hole, then use the allen wrench make loose, not too tight-Then, all of the screws are all the correct holes, tight the screws. Do not make too tight the screws from hole by hole.

Thank you.