
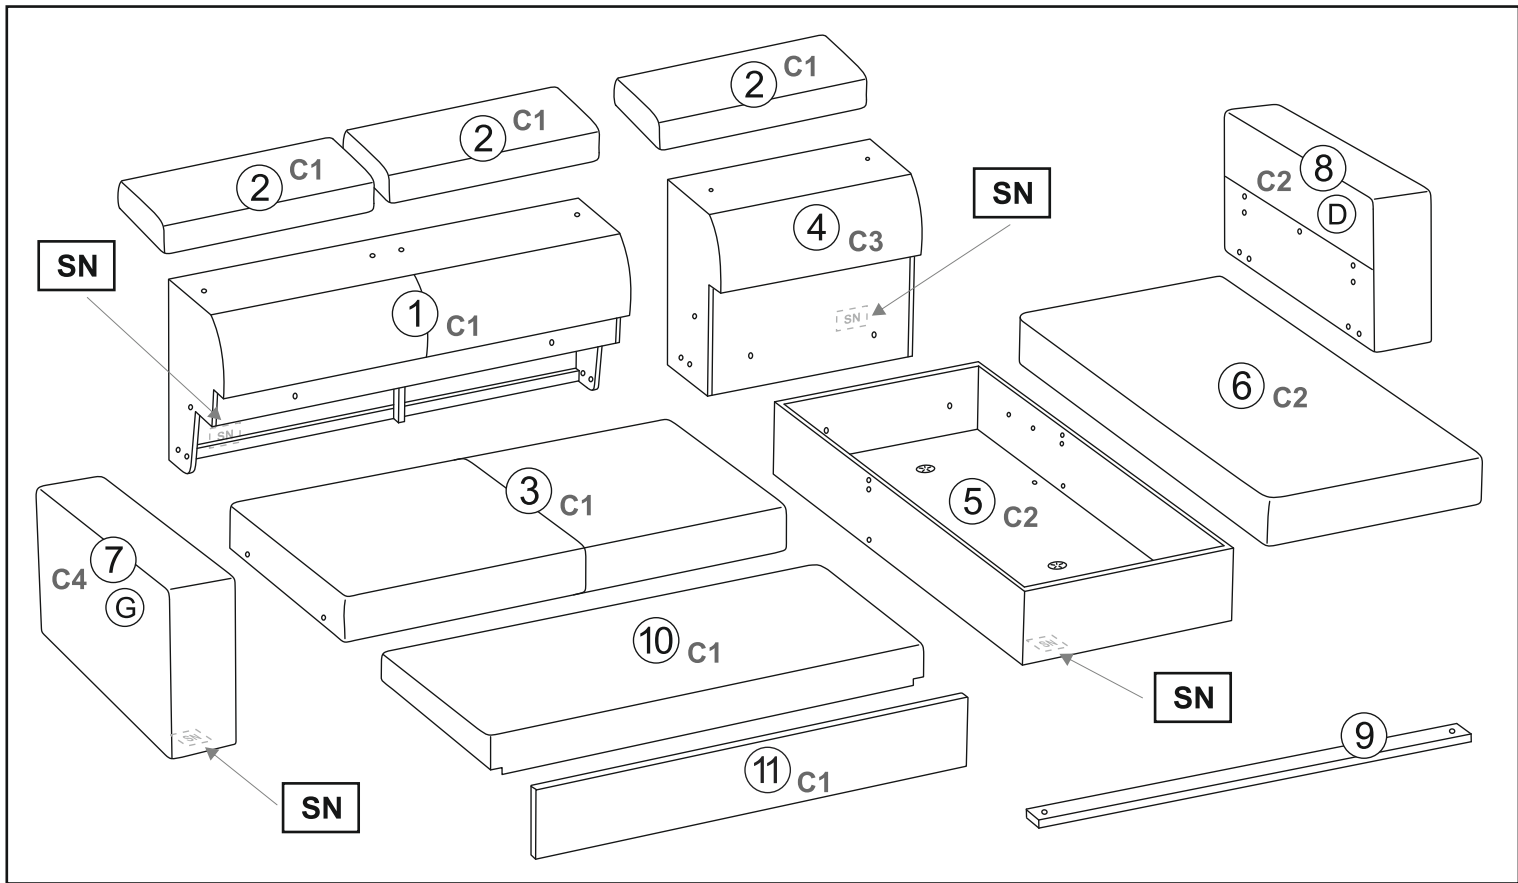
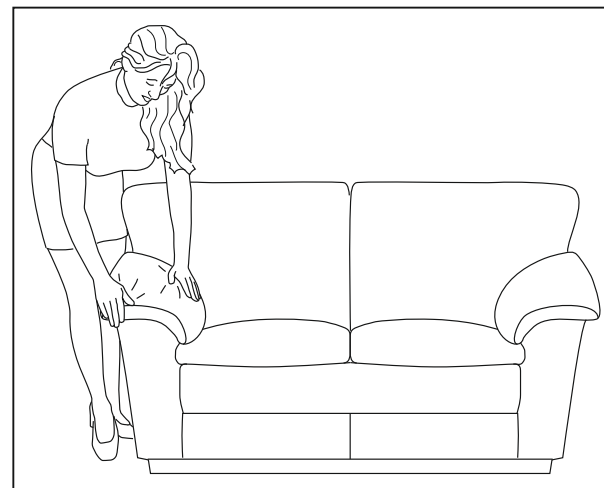
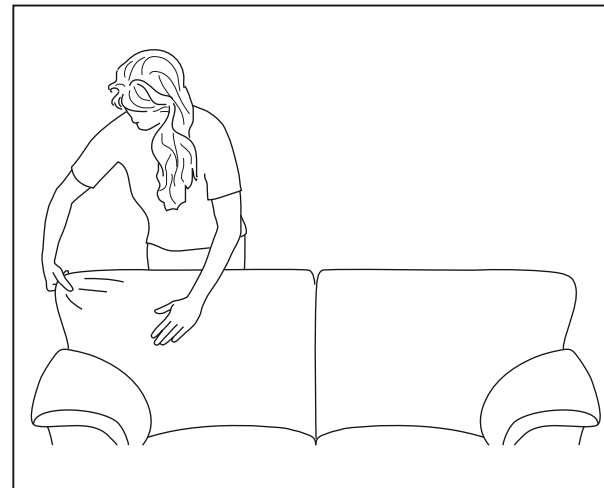
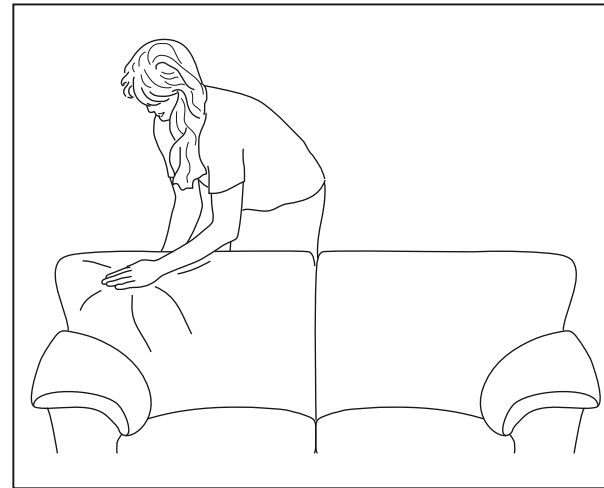
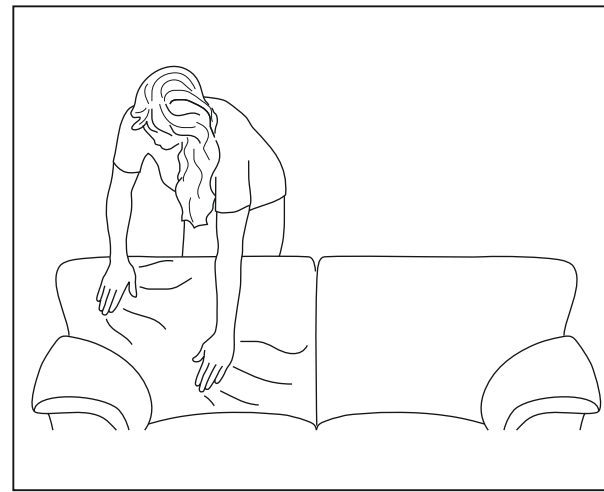


SN Le numéro de série des colis
The serial number of the parcels
die Serila-Nummer der Pakete

! TRÈS IMPORTANT!
IL EST IMPÉRATIF D'UTILISER TOUS LES ACCESSOIRES ET SUIVEZ SCRUPULEUSEMENT LES INSTRUCTIONS!

! VERY IMPORTANT!
IT IS COMPULSORY TO USE ALL THE ACCESSORIES AND TO STRICTLY FOLLOW THE INSTRUCTIONS!

! ACHTUNG!
ES IST ZWINGEND NOTWENDIG ALLE BESCHLÄGE ZU NUTZEN UND SICH EXAKT AN DIE ANLEITUNG ZU HALTEN!

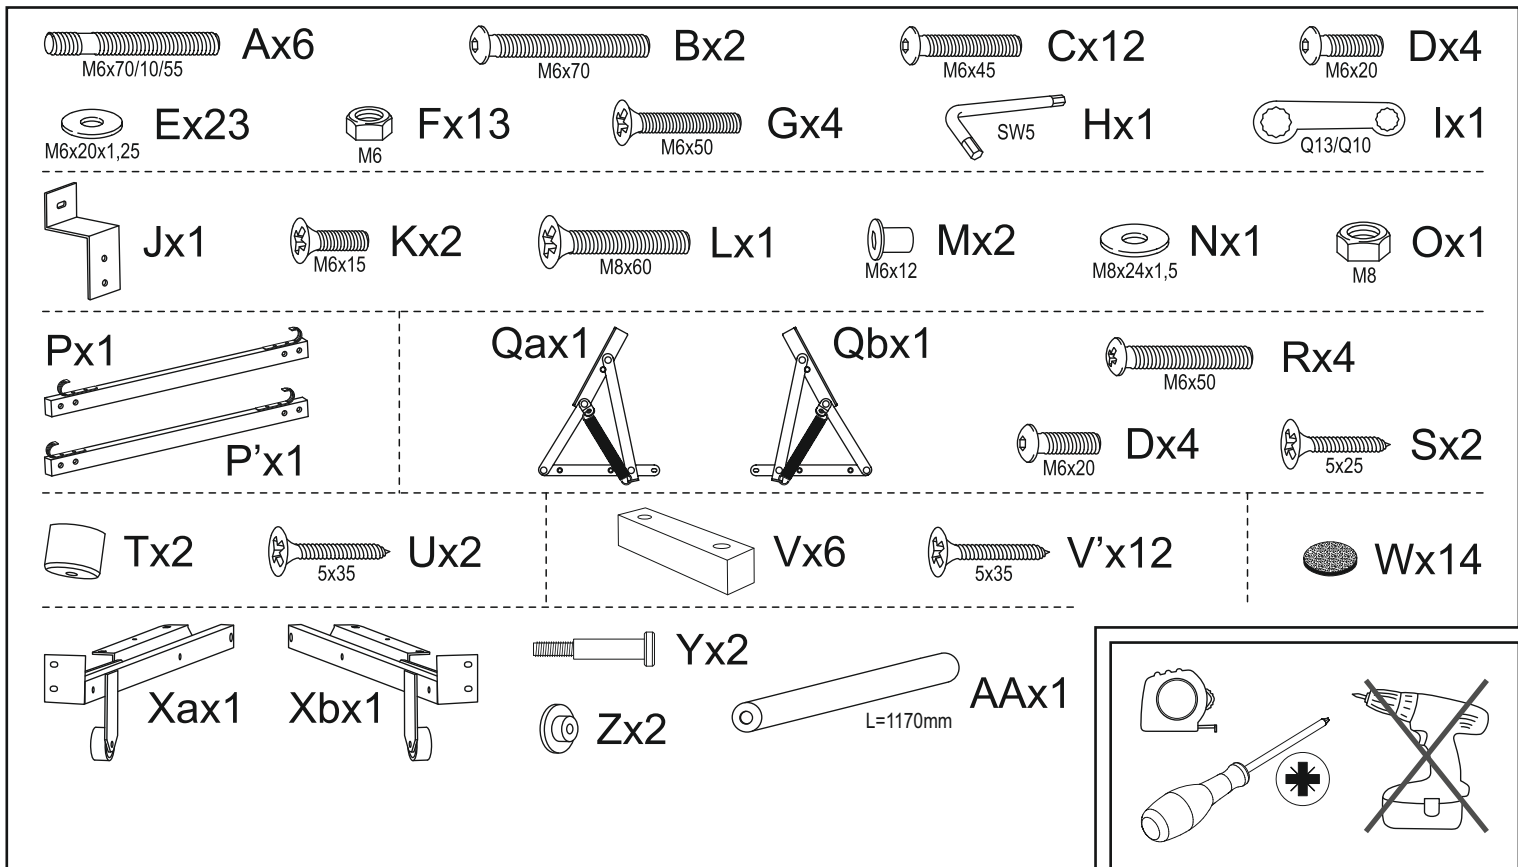

Cher client,
En raison du transport et de son emballage optimisé, votre nouveau canapé peut présenter quelques plis disgracieux. Afin d'y remédier, n'hésitez pas à lisser, tapoter et «masser» la housse, comme indiqué dans les illustrations. Cela redonnera au canapé son aspect originel et attrayant. Nous souhaitons que votre nouveau canapé vous offre entière satisfaction.

Votre équipe de création

Dear customers,
As a result of transport and use, your new sofa is somewhat "stressed" and this is noticed on her. Because of this:
*Smooth, knock and shake all the upholstery as appropriate, as shown in the illustrations.
*This leaves the sofa looking beautiful, prim and attractive.
We want your new sofa to offer you full satisfaction.

Your creative department team

Stimați clienți,
În urma transportului solicitant și a utilizării de zi cu zi, noua dvs. canapea este puțin "stresată" și acest lucru se observă la ea. De aceea:
Neteziți, bătați și scuțați puțin toate tapițeriile în mod corespunzător, după cum se indică în ilustrații. Acest lucru conferă canapelei frumusețe, eleganță și atractivitate. Vă dorim ca noua dvs. canapea să vă ofere satisfacții depline.
Departamentul dvs. de creație produse




⚠ À usage domestique / For domestic use


Les meubles contenant des panneaux à base de bois peuvent émettre des substances polluantes dans l'air intérieur. Il est donc recommandé, après l'installation du meuble, d'aérer fréquemment la pièce pendant au moins quatre semaines.

Furniture containing wood-based panels can emit pollutants into the indoor air. It is therefore recommended, after the installation of the furniture, to ventilate the room frequently for at least four weeks.

⚠ Riscue de pincement lors de la fermeture du coffre
Risk of pinching when closing the trunk

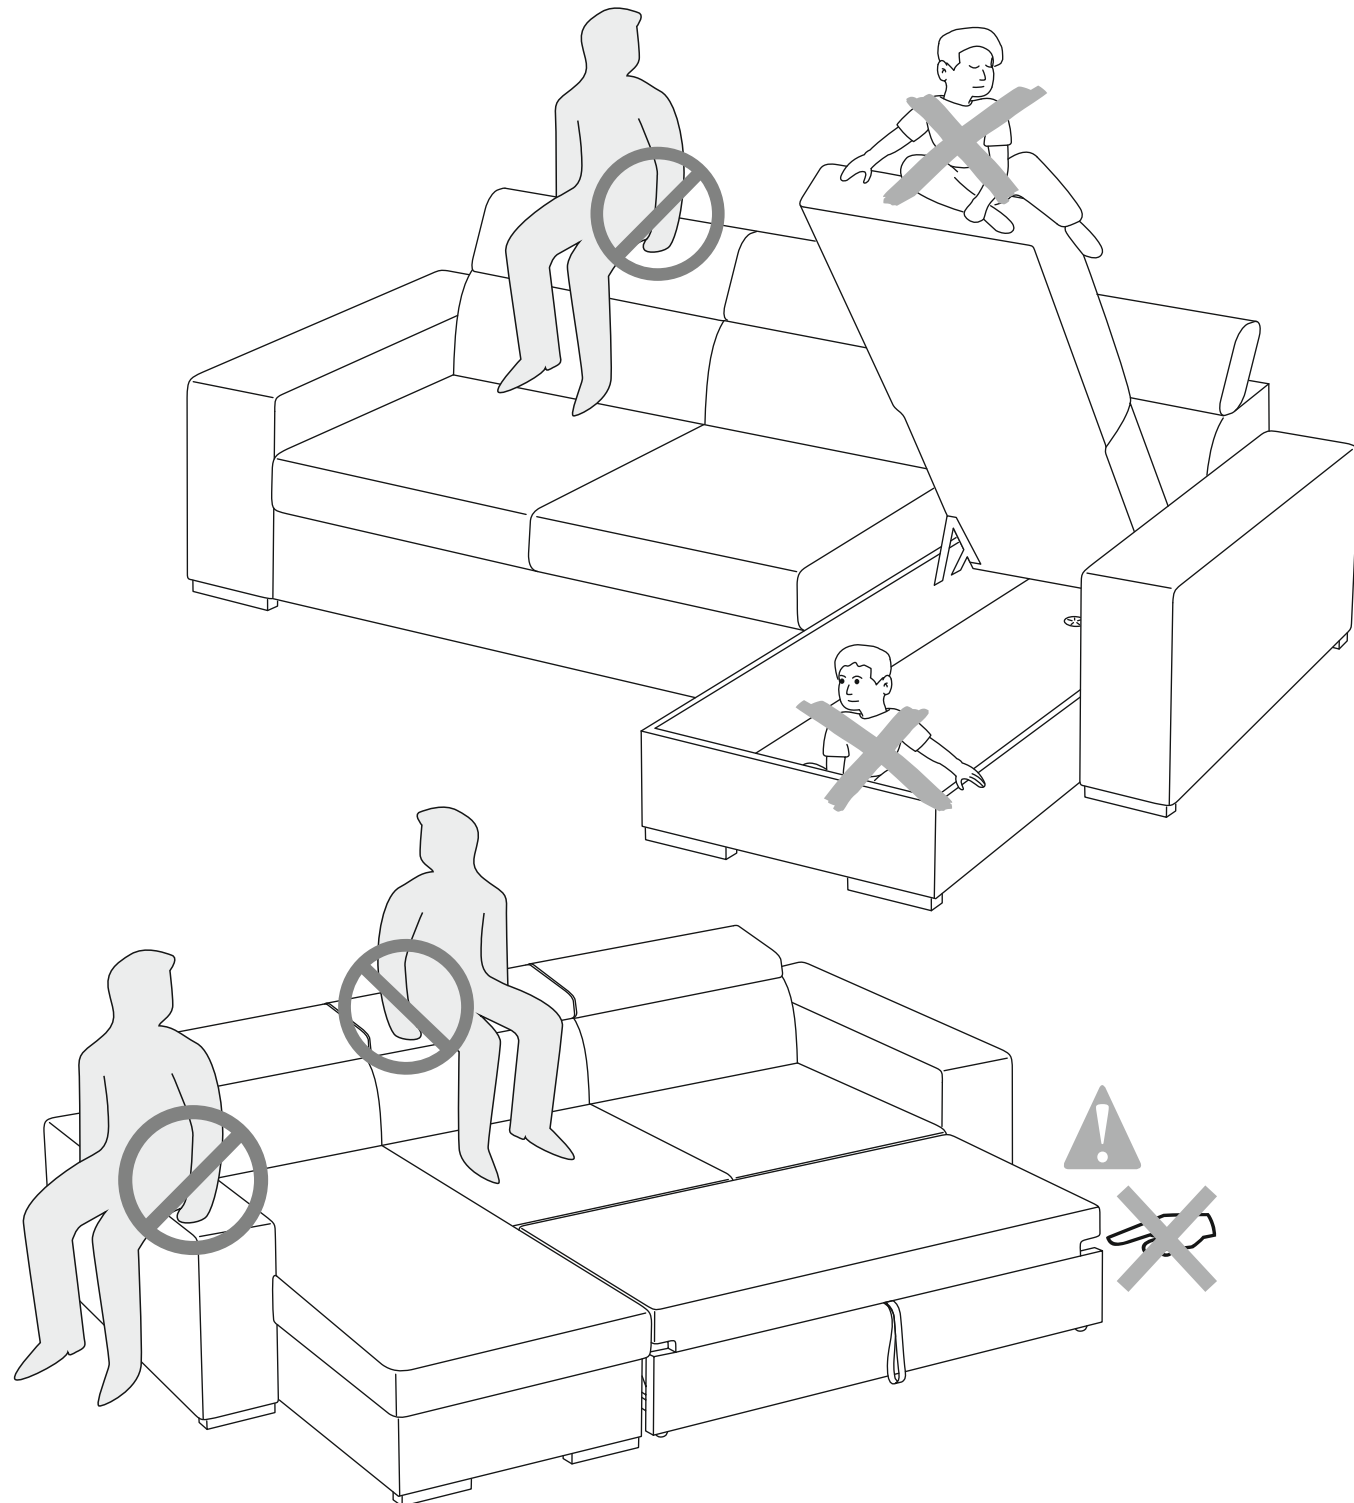


P4 - P18

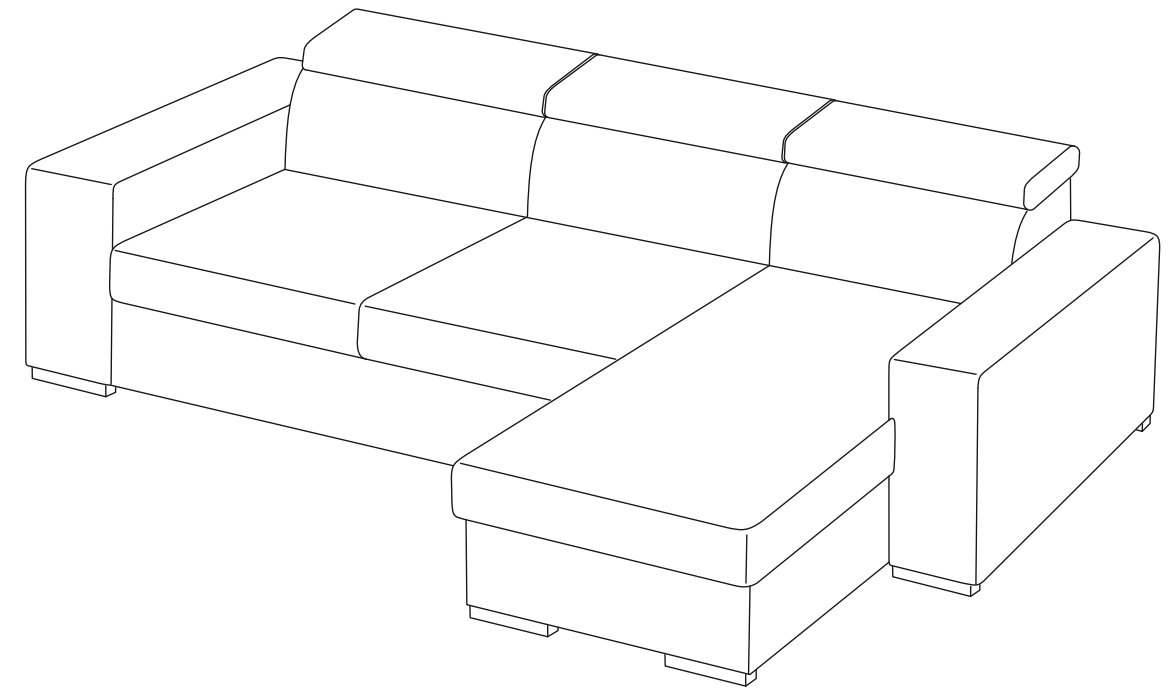


⚠ P34 →


P19 - P33

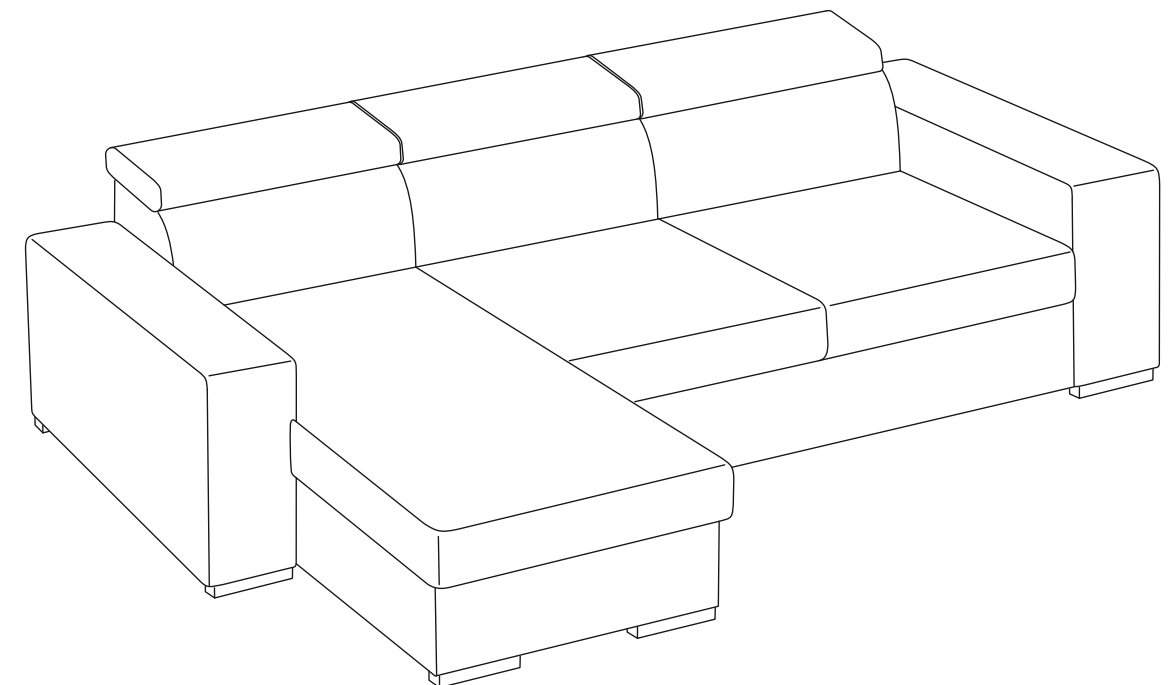


1

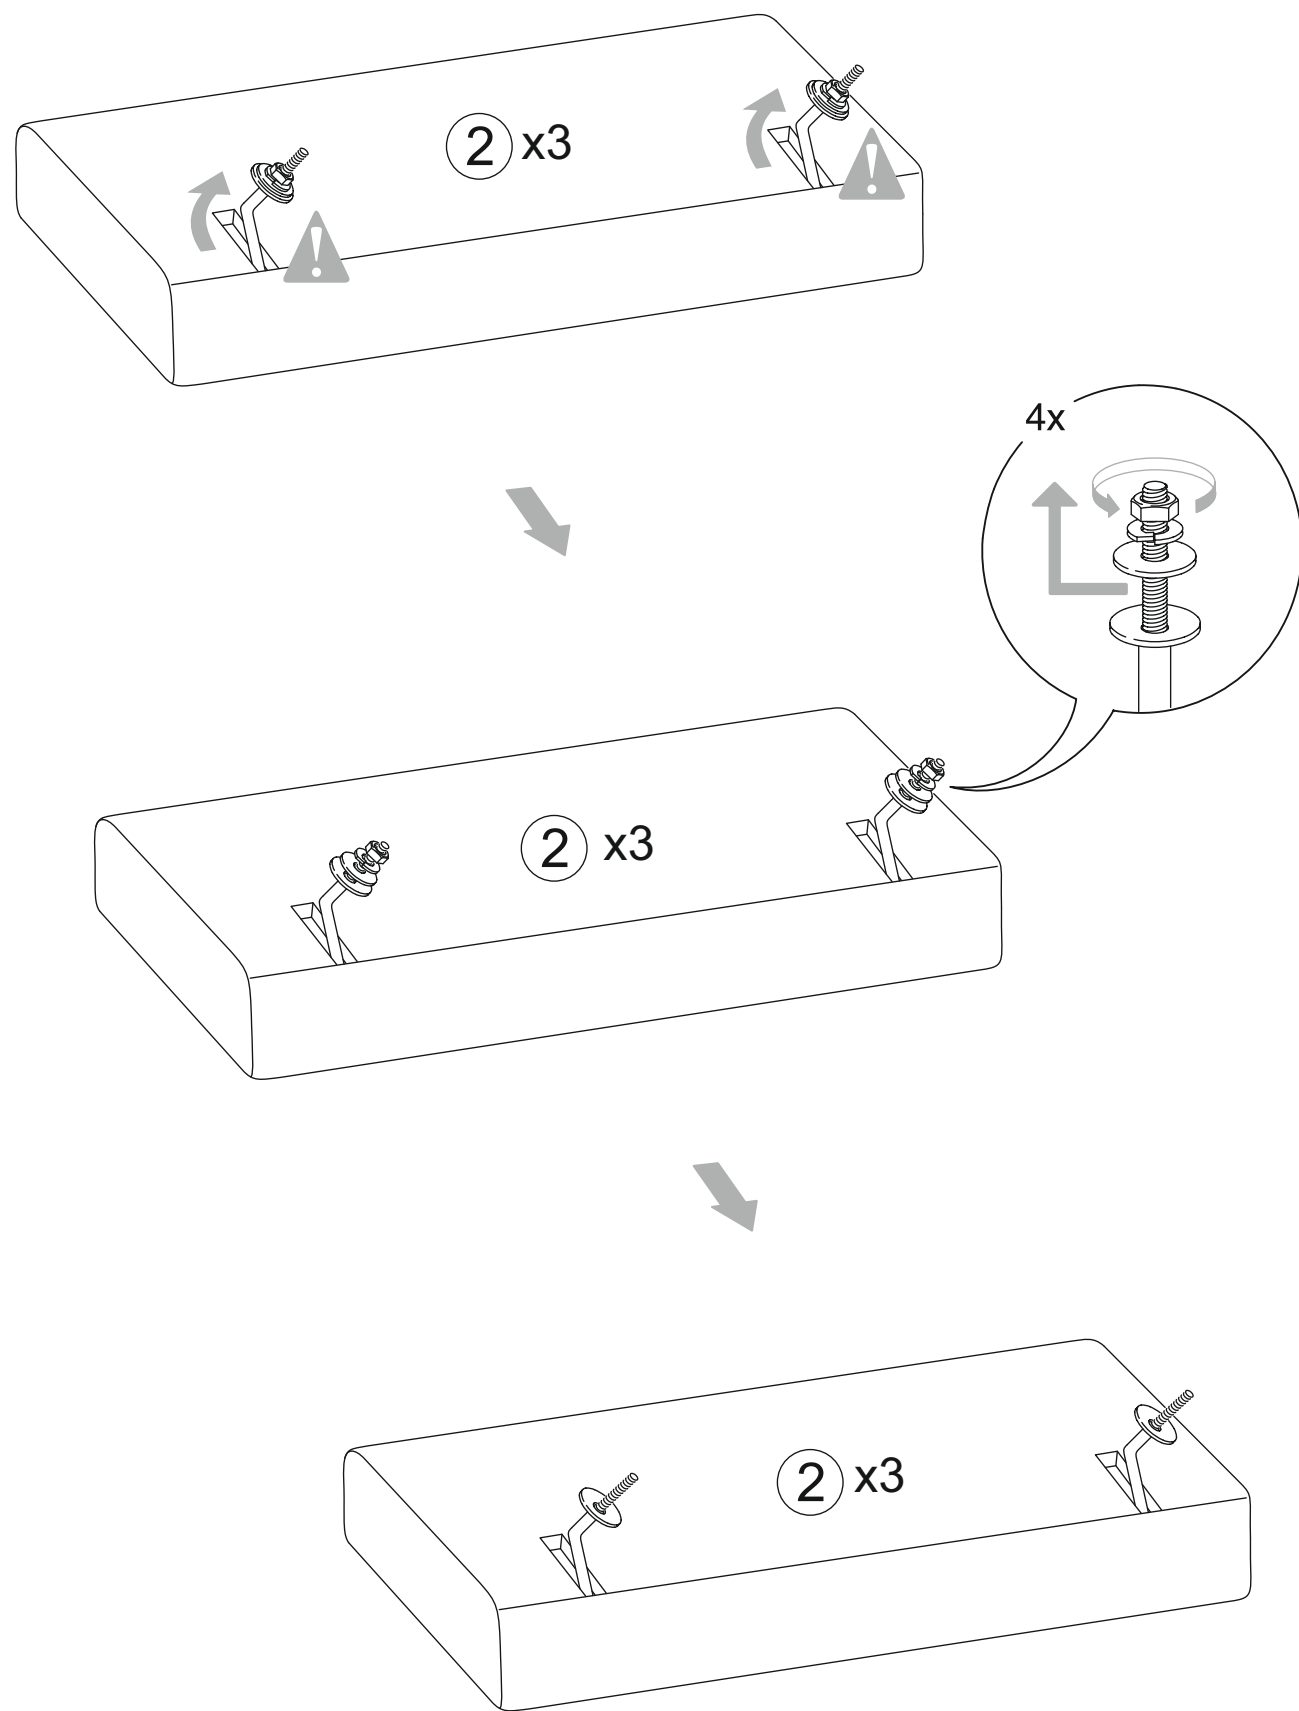



27'

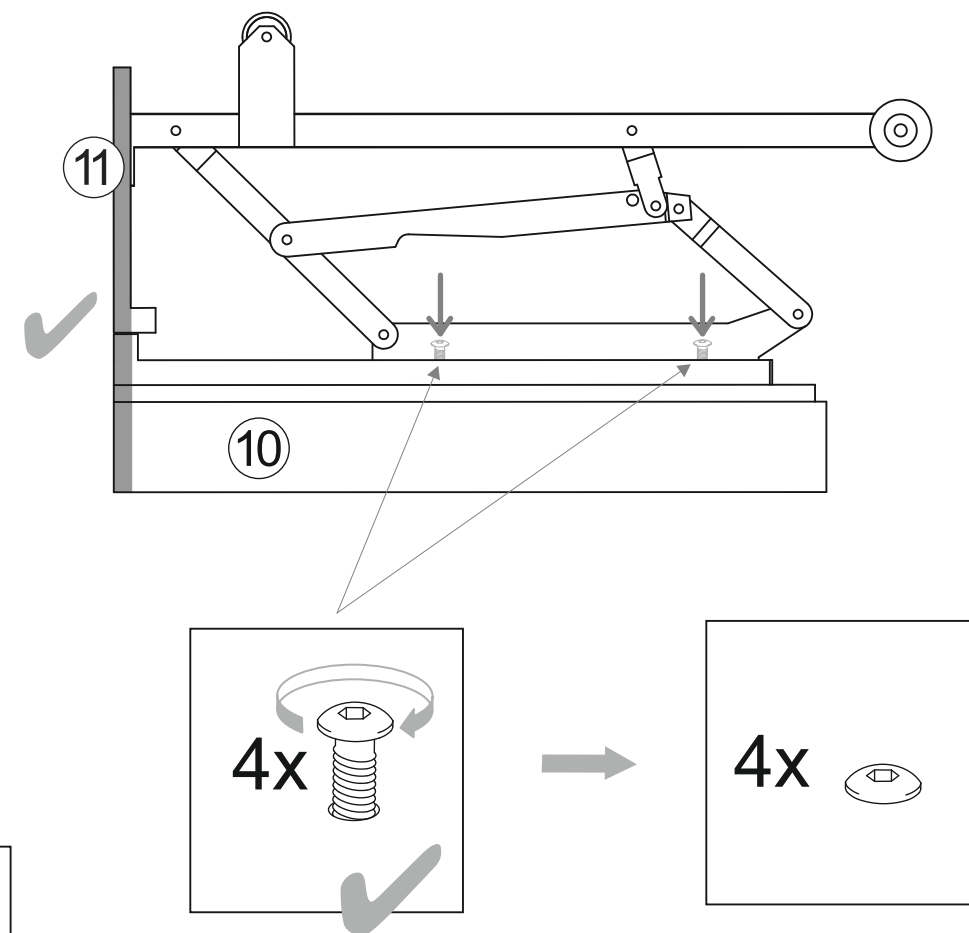

28'

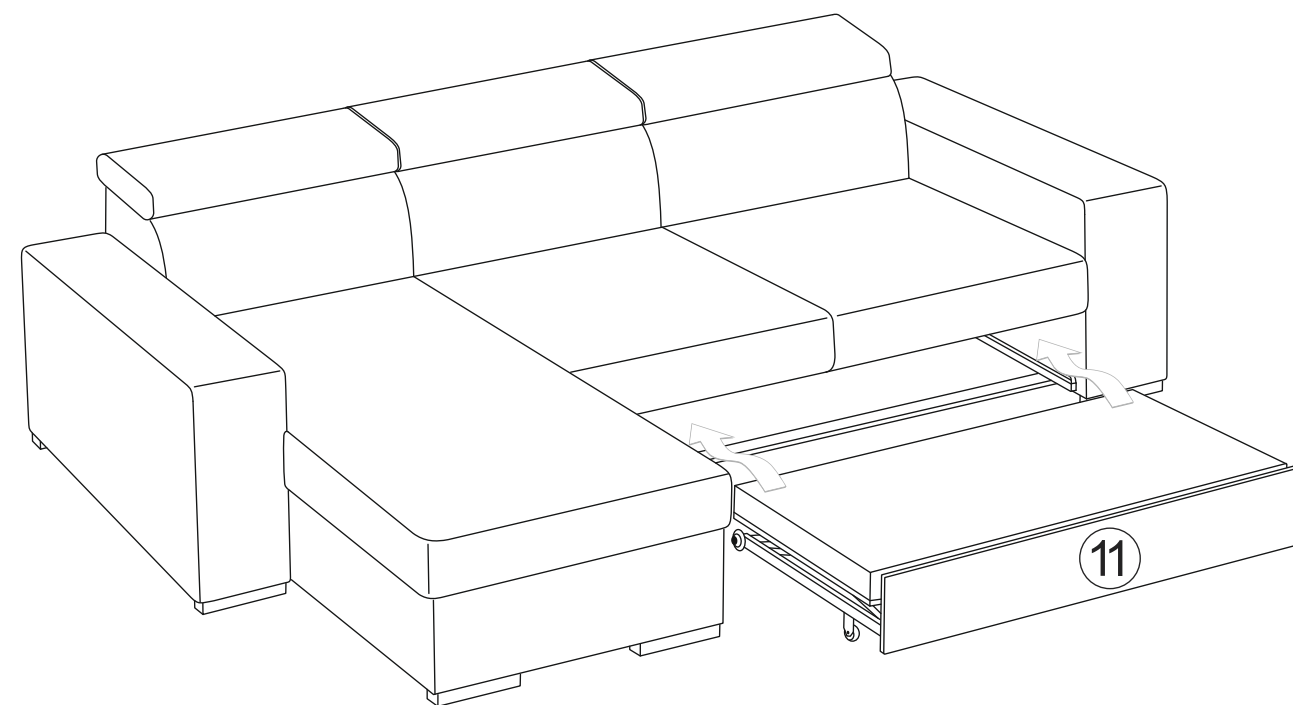

25'

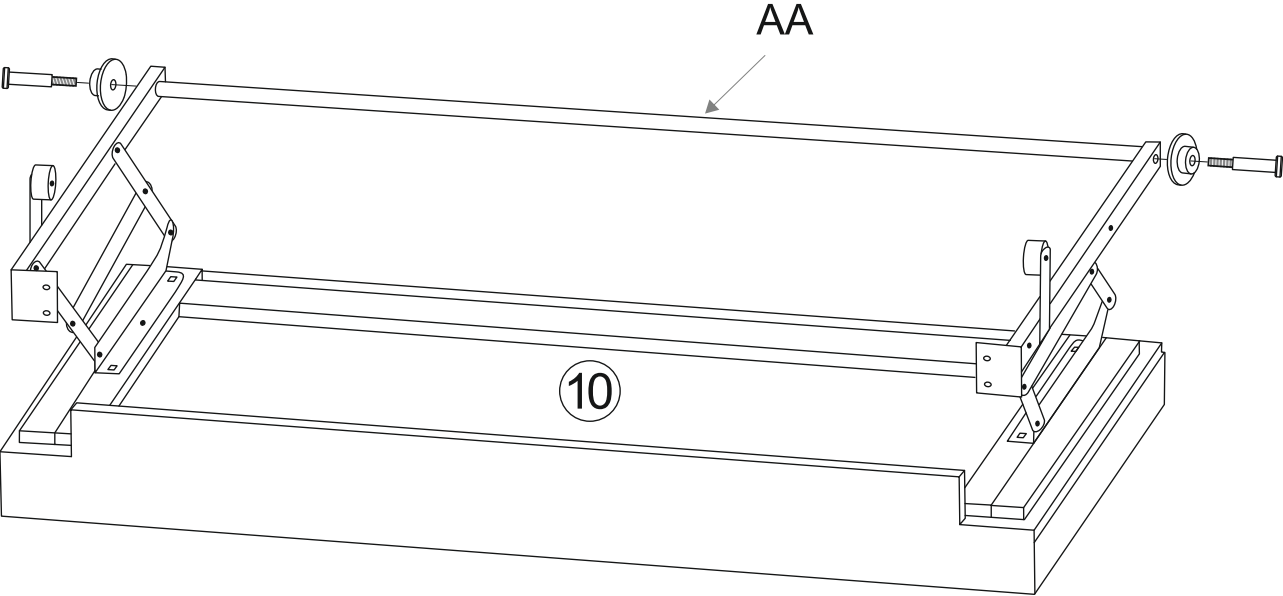

Yx2



Zx2




L=1170mm

AAx1



26'

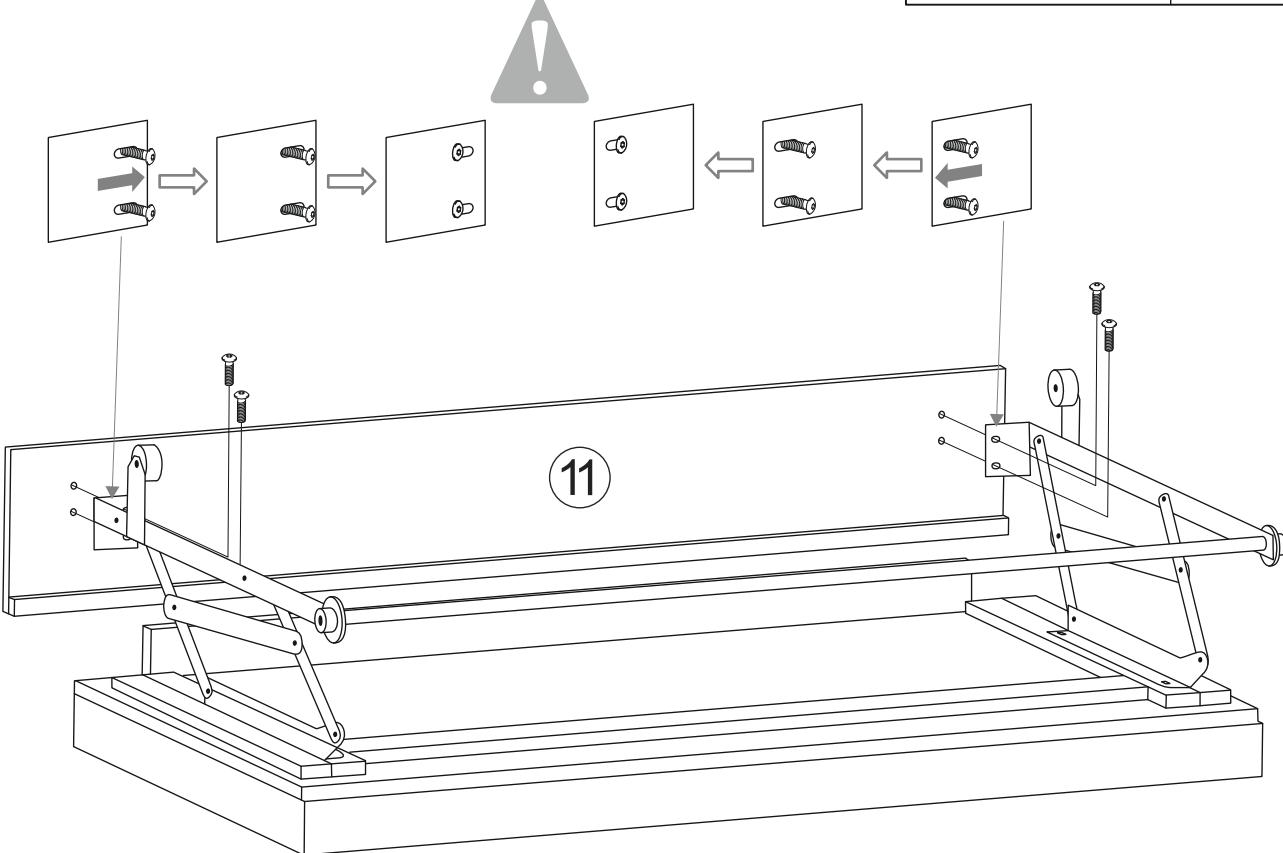


Dx4




SW5

H

2

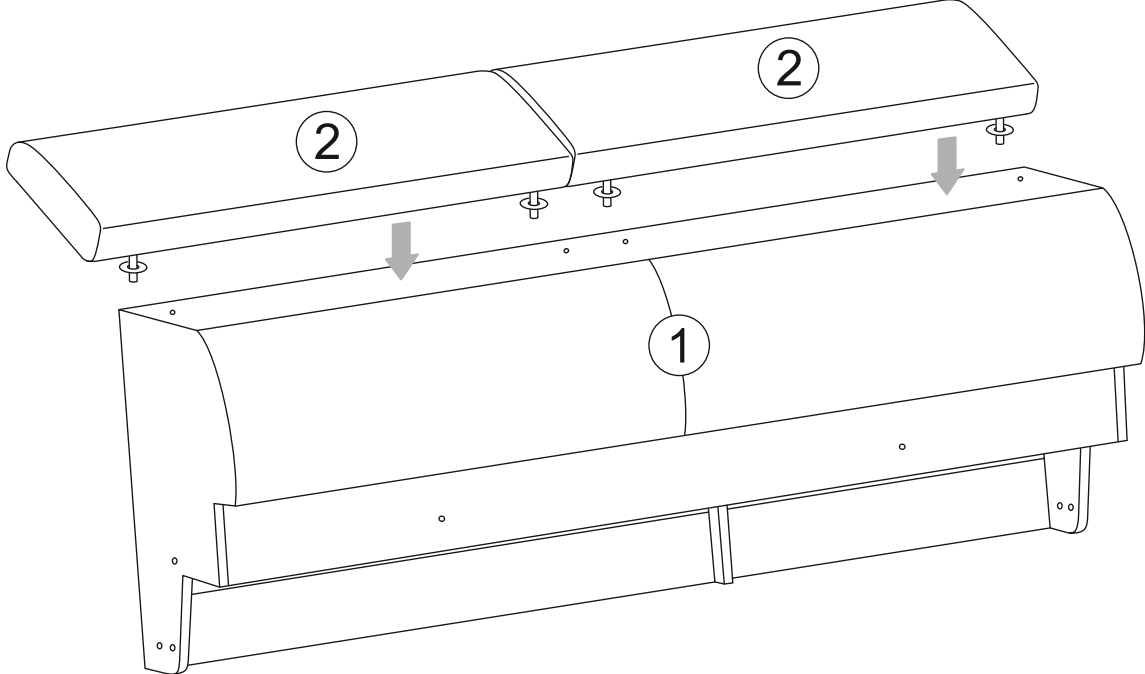

3

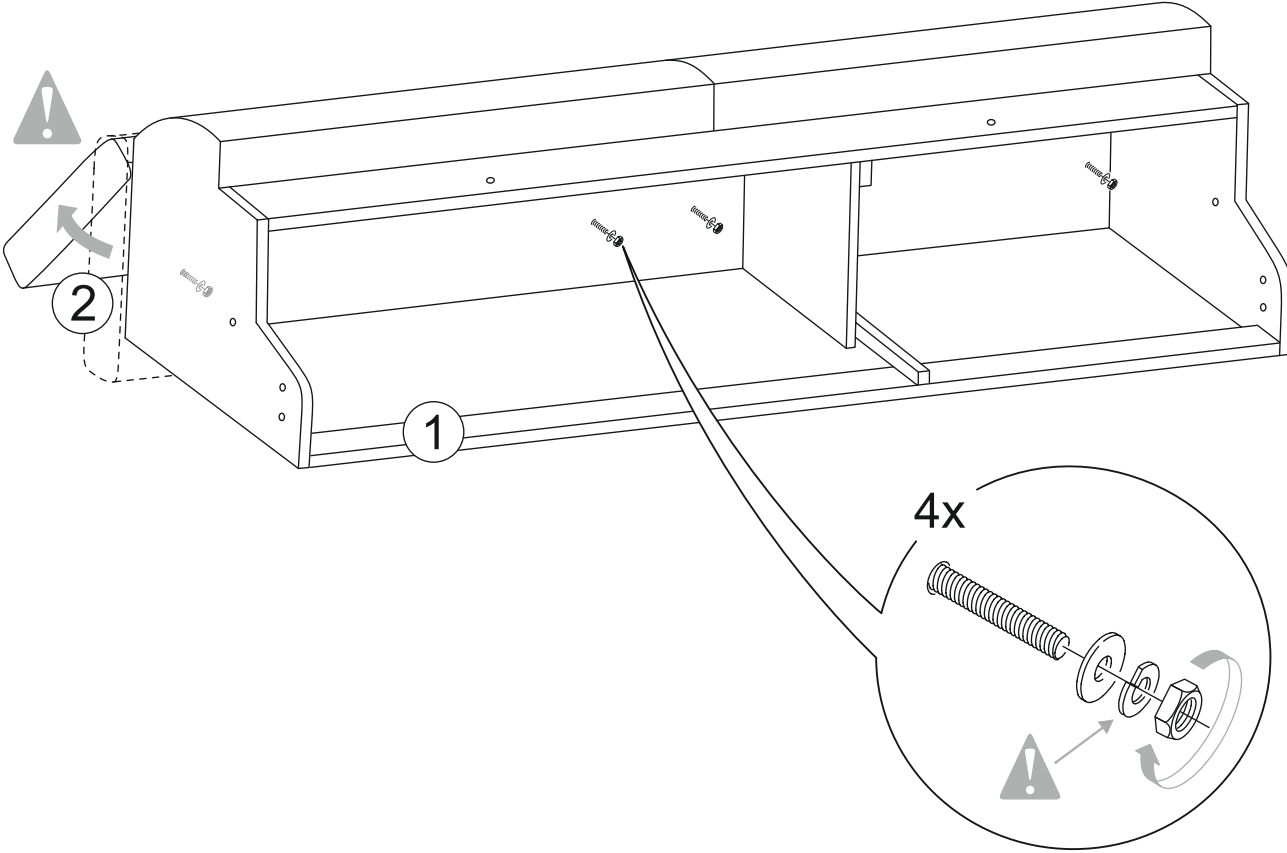

B'x4



C'x4




D'x4



Q13/Q10

4

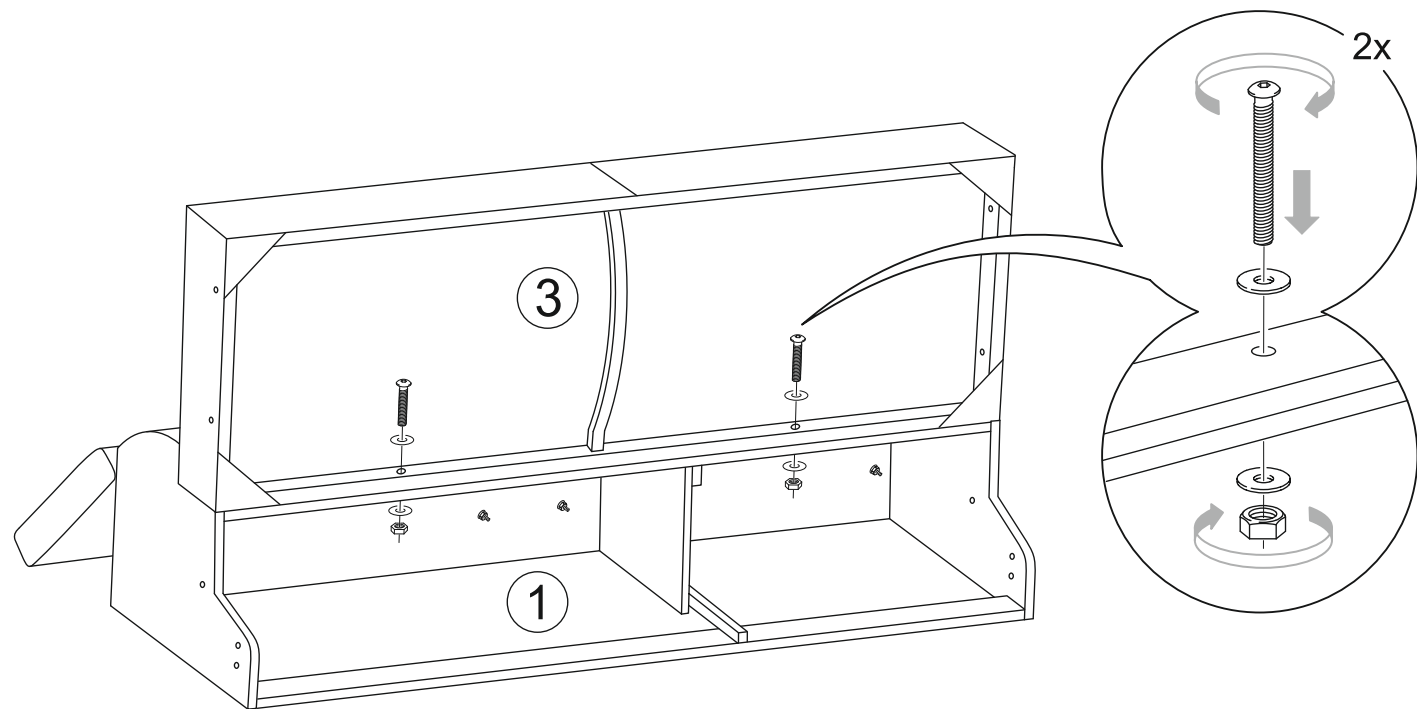


Bx2




Ex4



Fx2




H





I

5

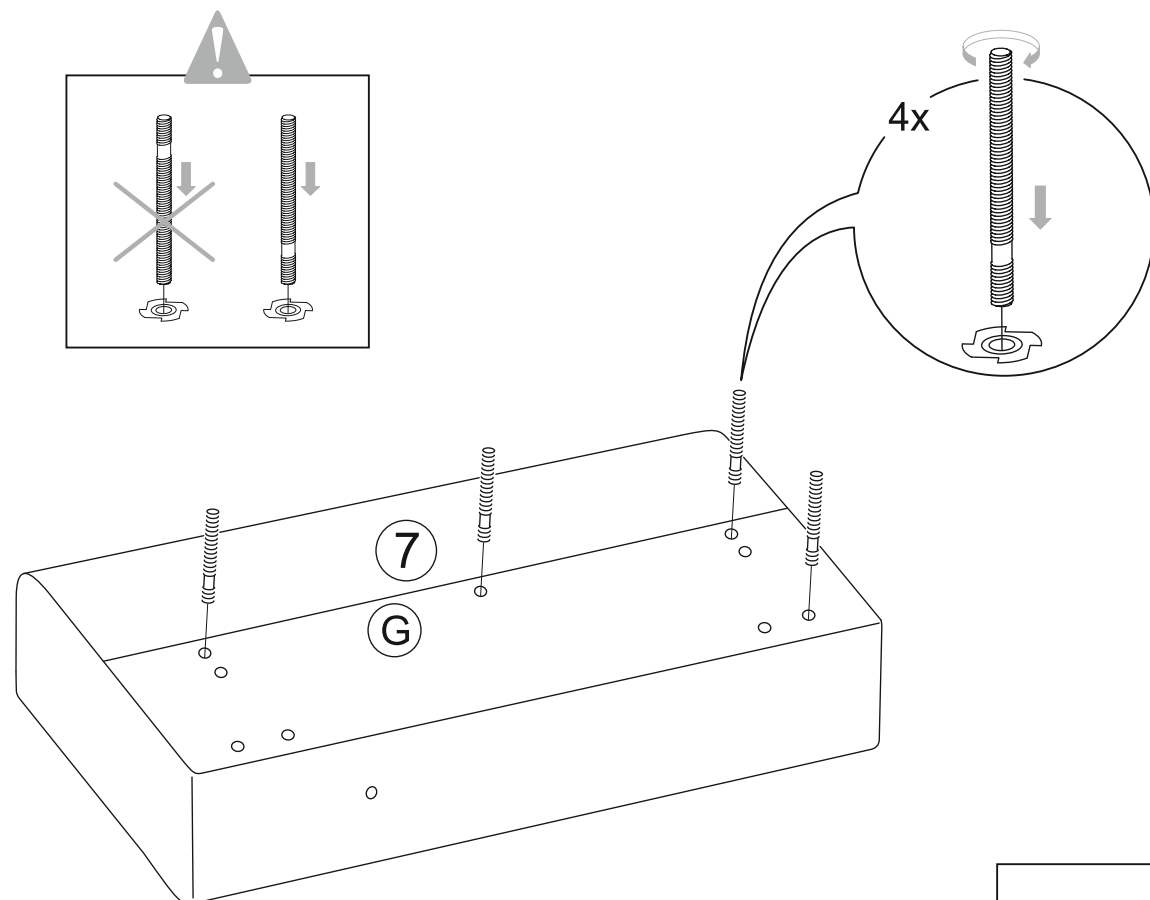


Ax4



23'

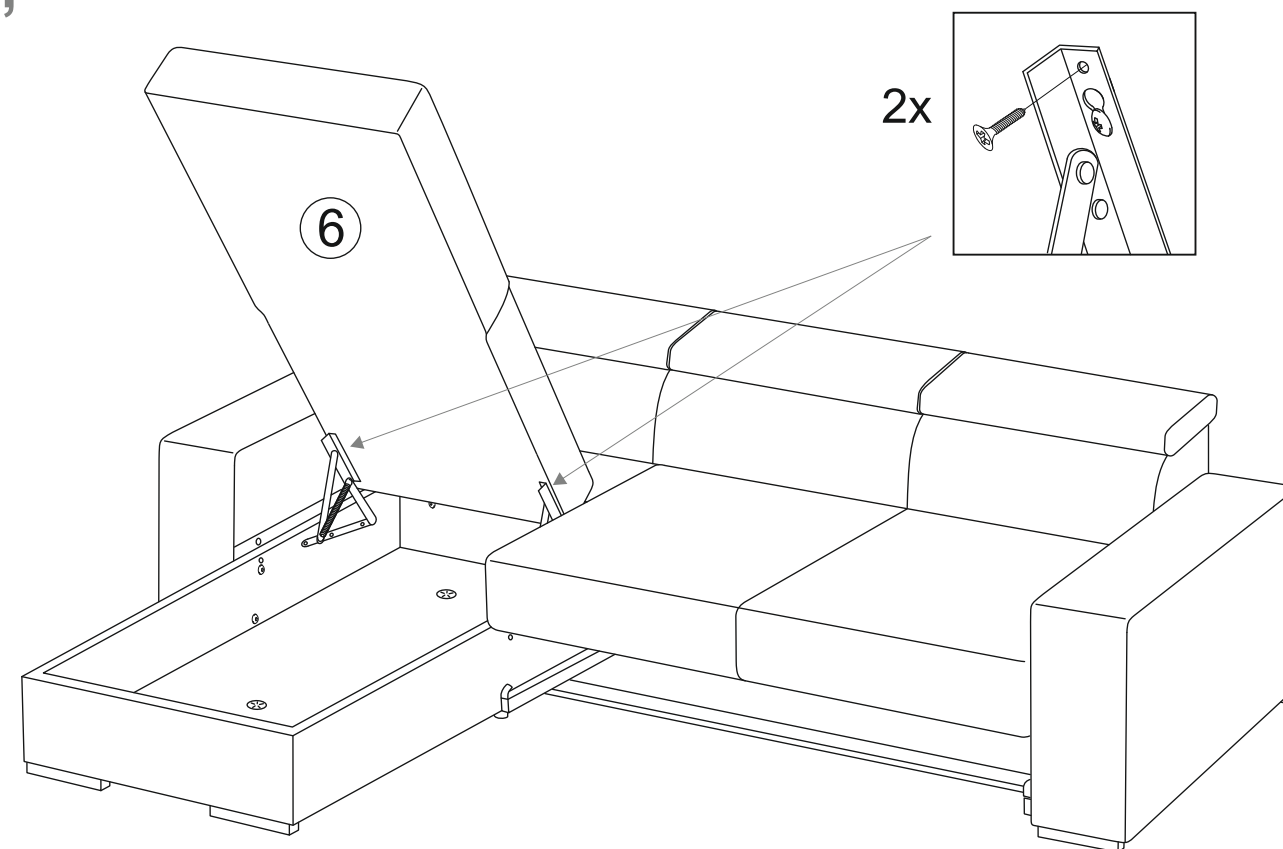

Sx2

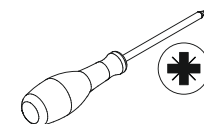

24'

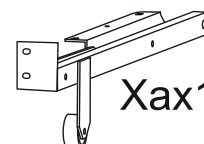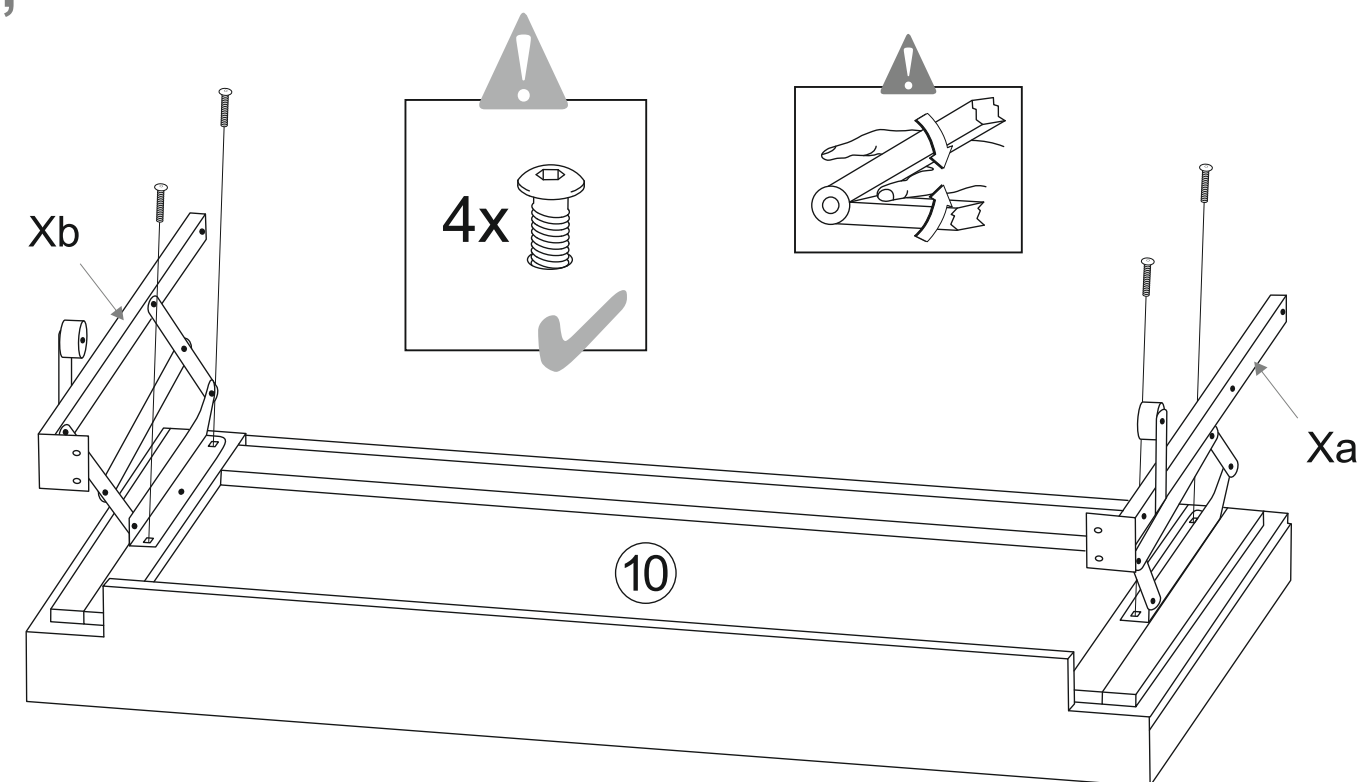

Xax1



Xbx1




Cx4




H


21'

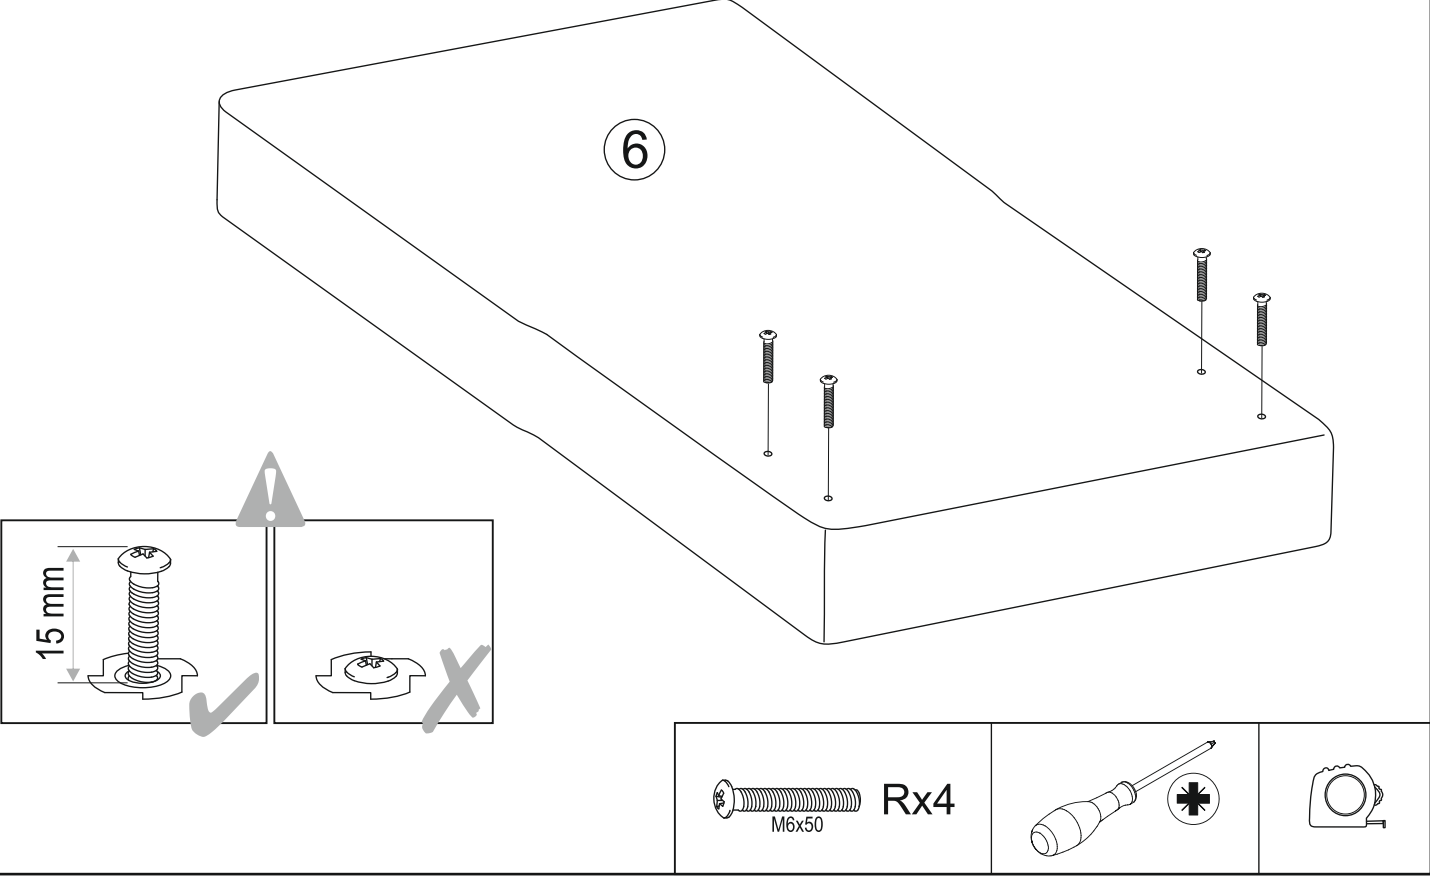


22'




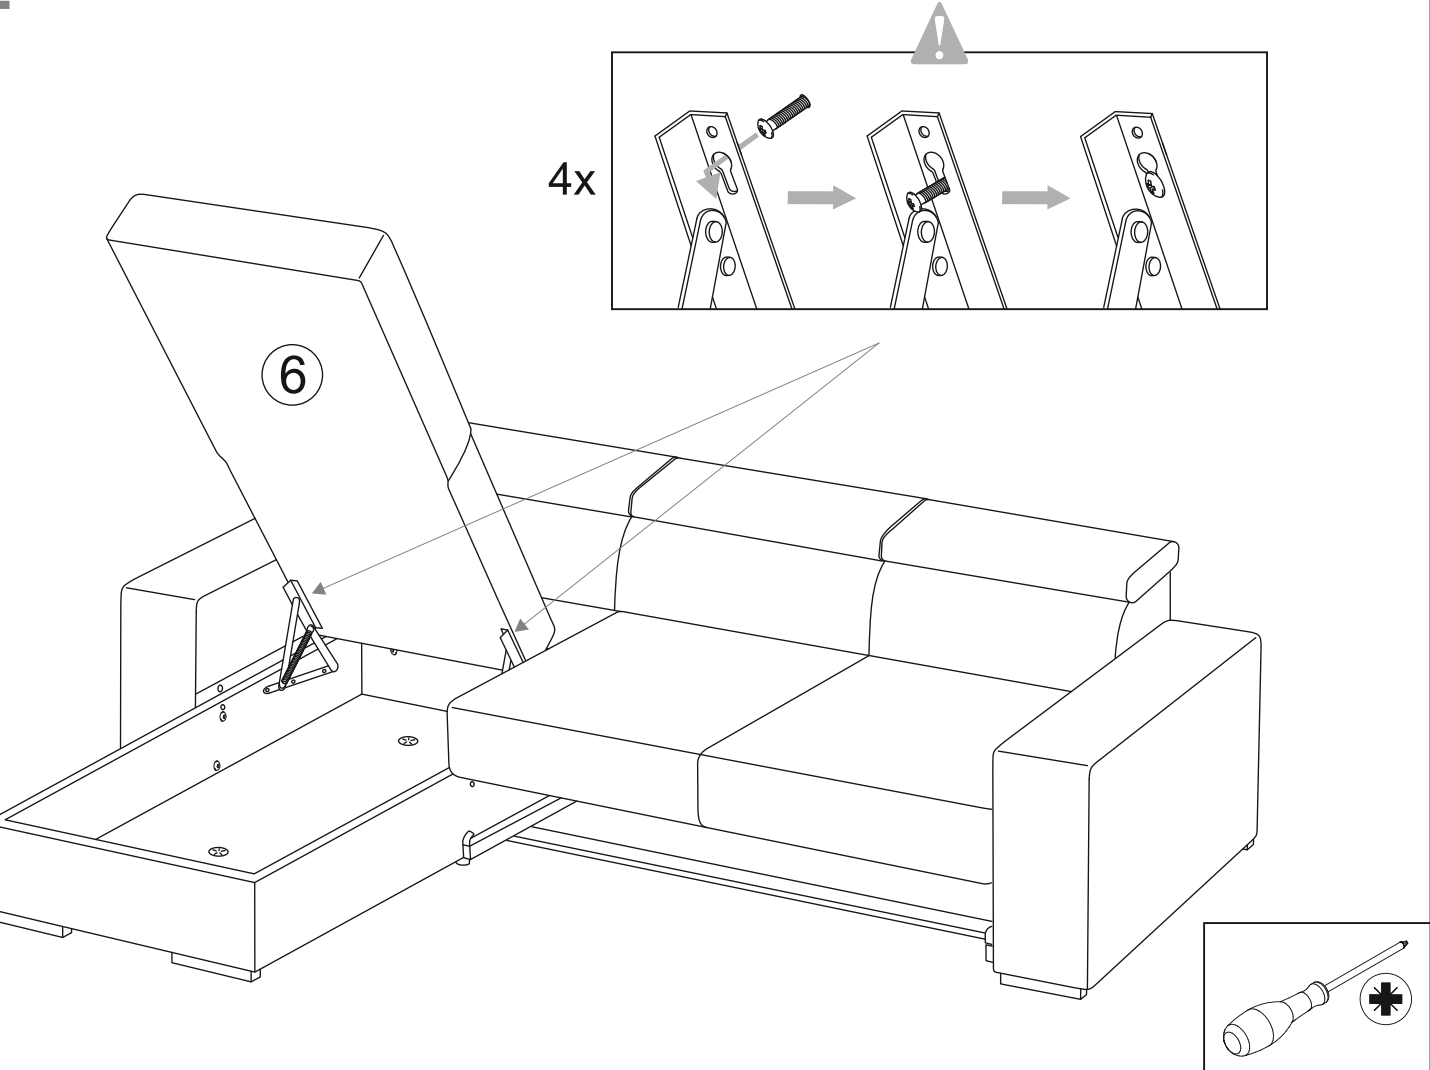






6

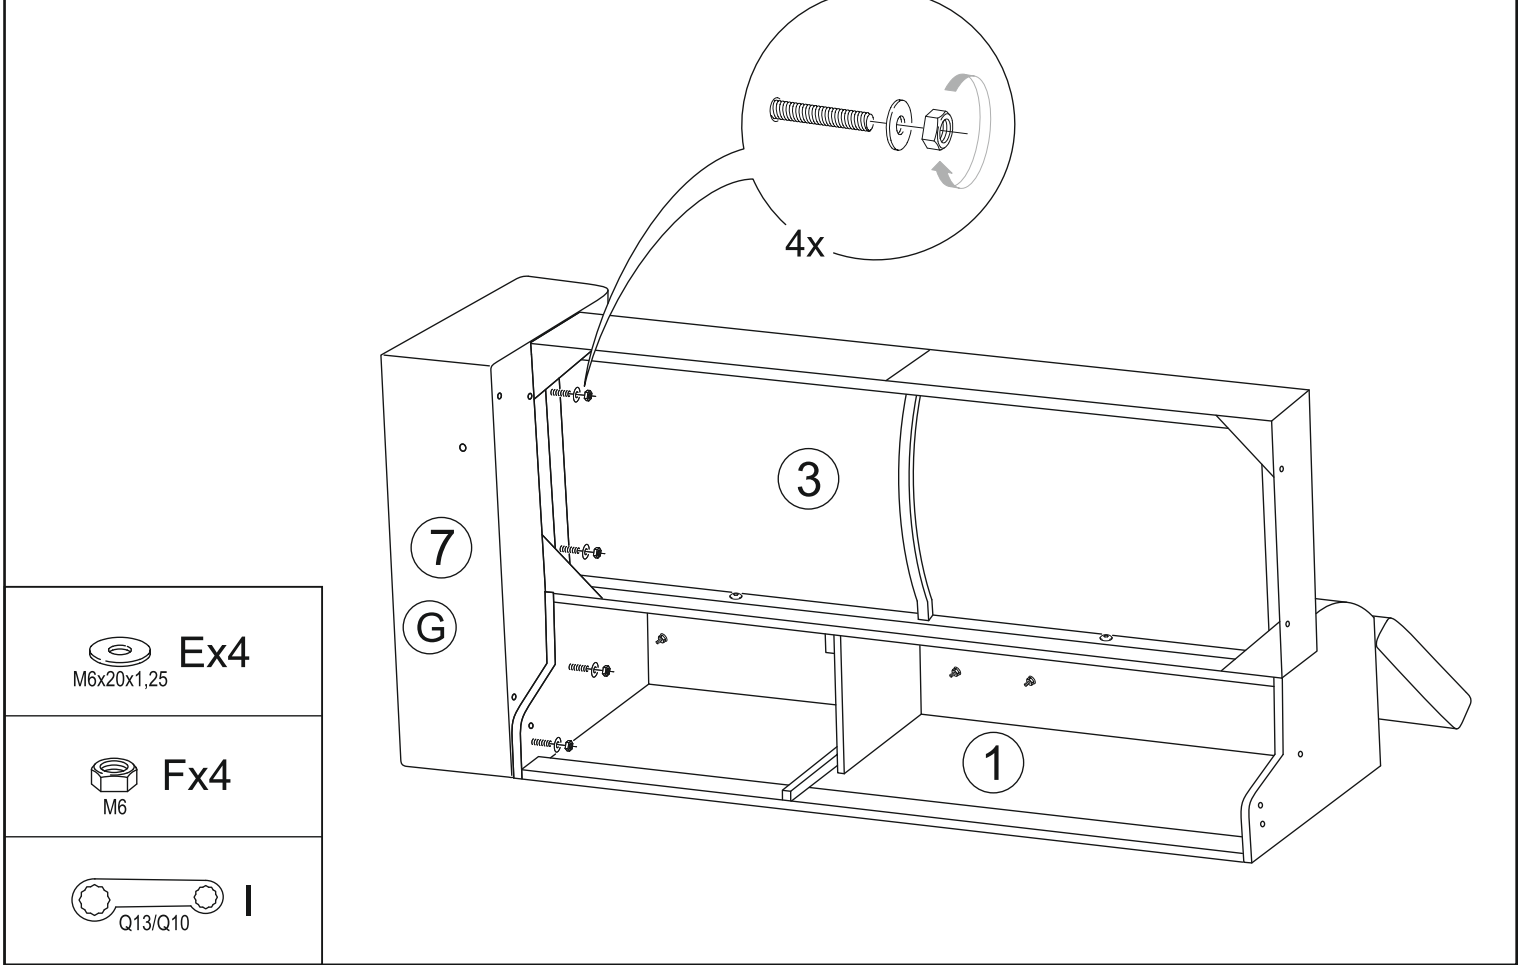

7

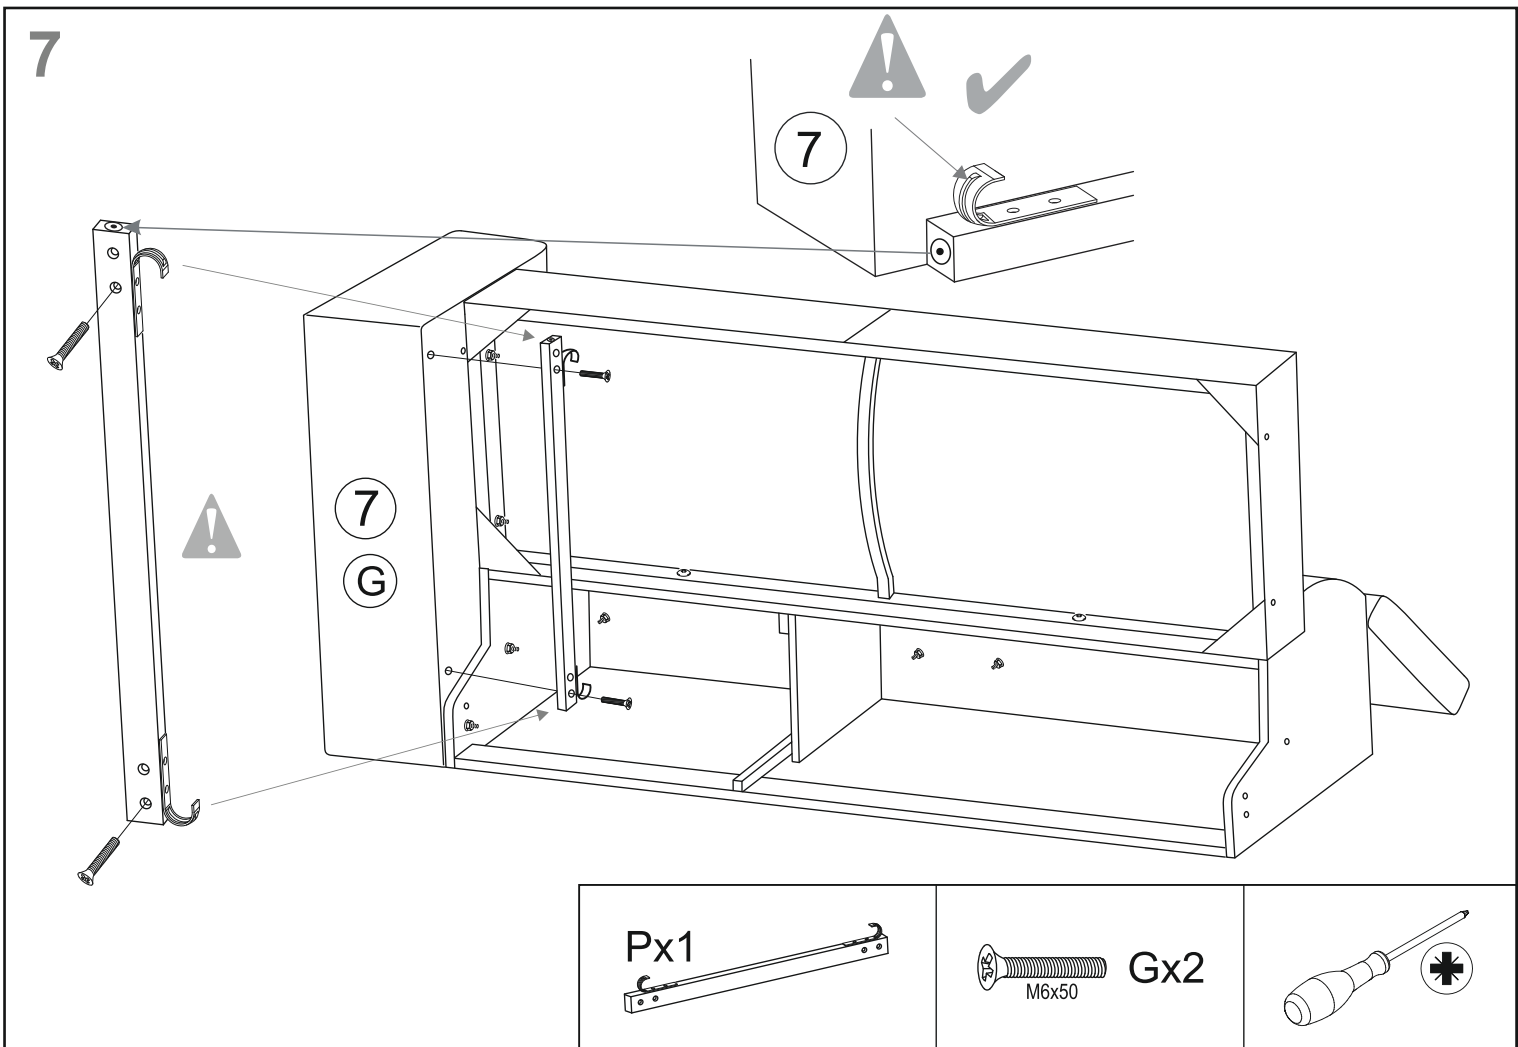

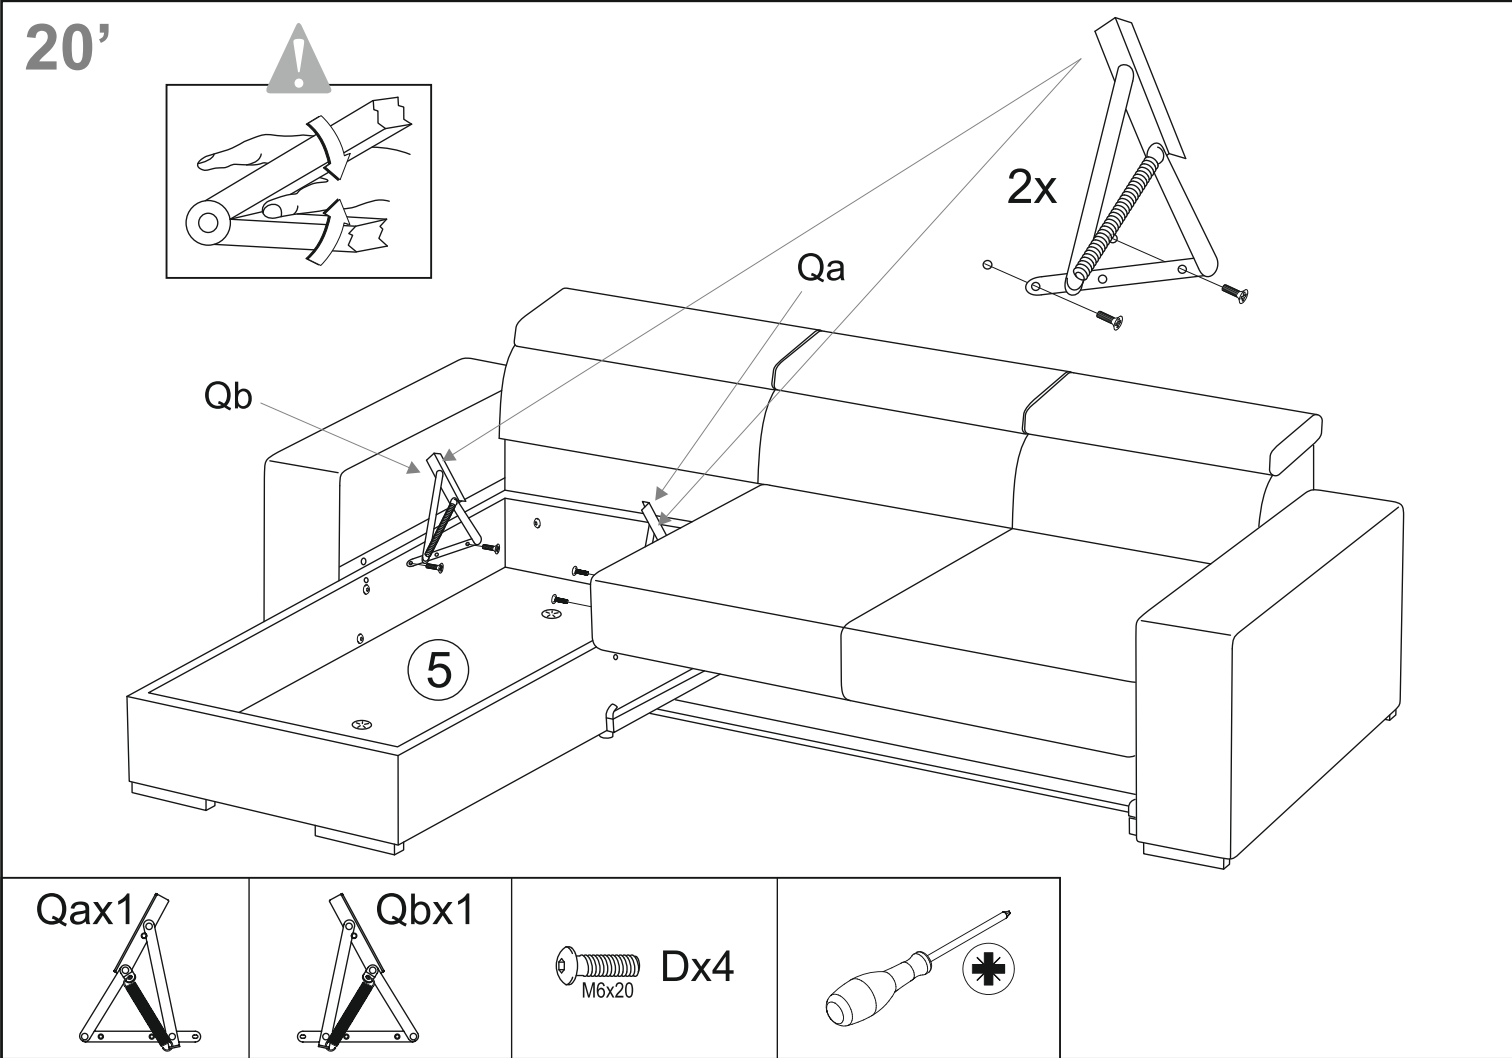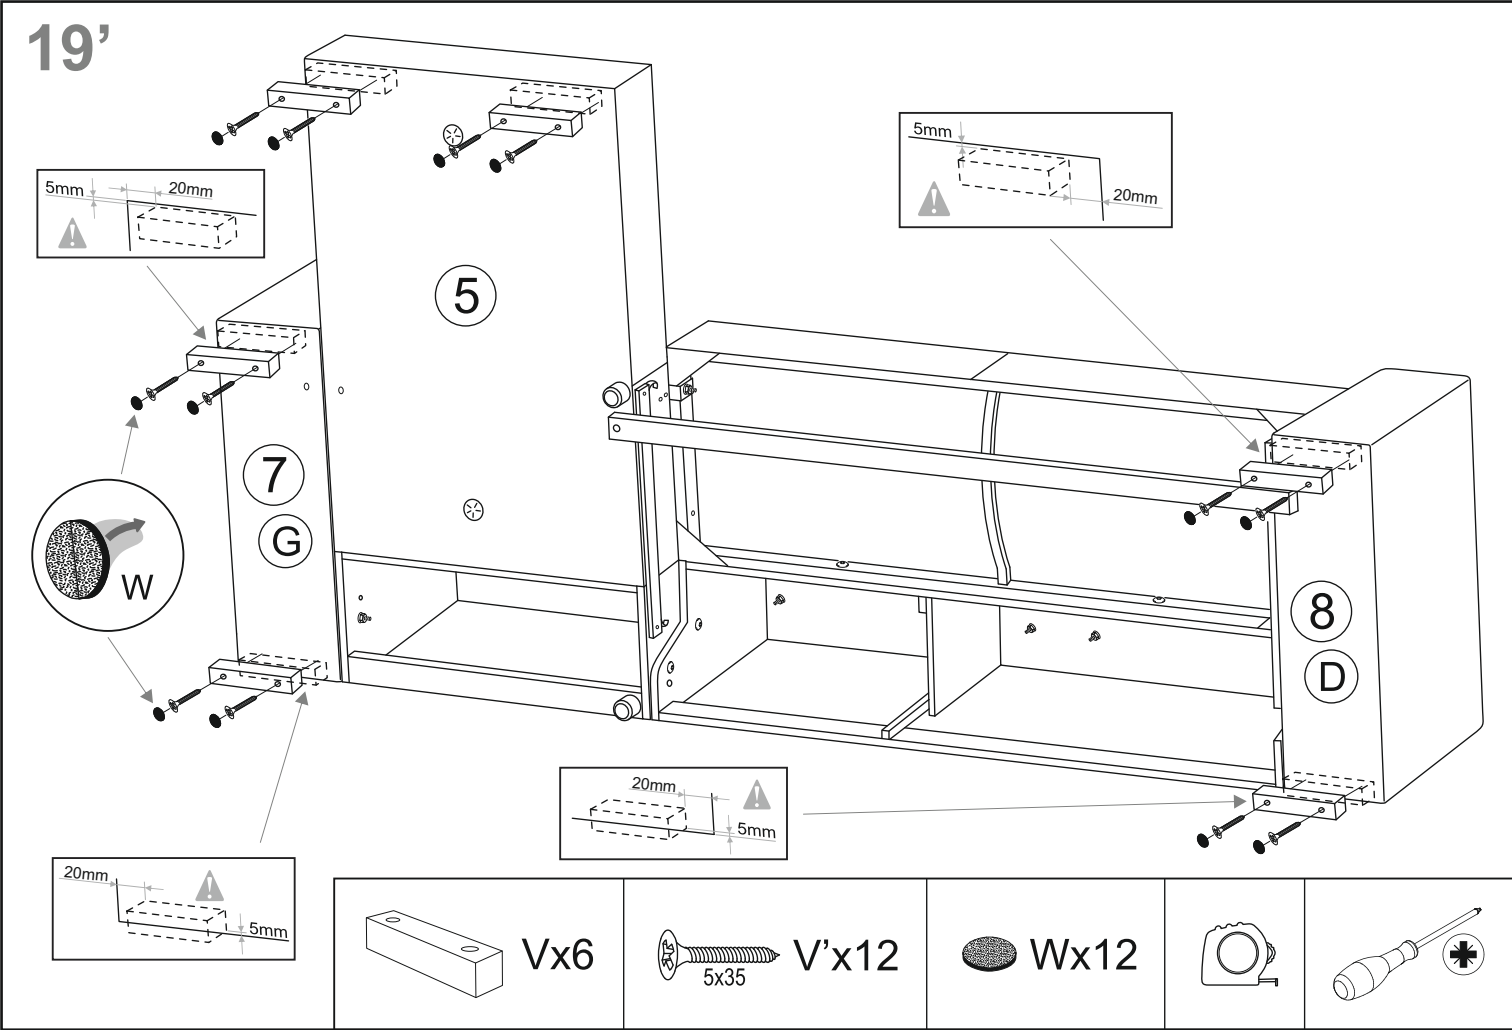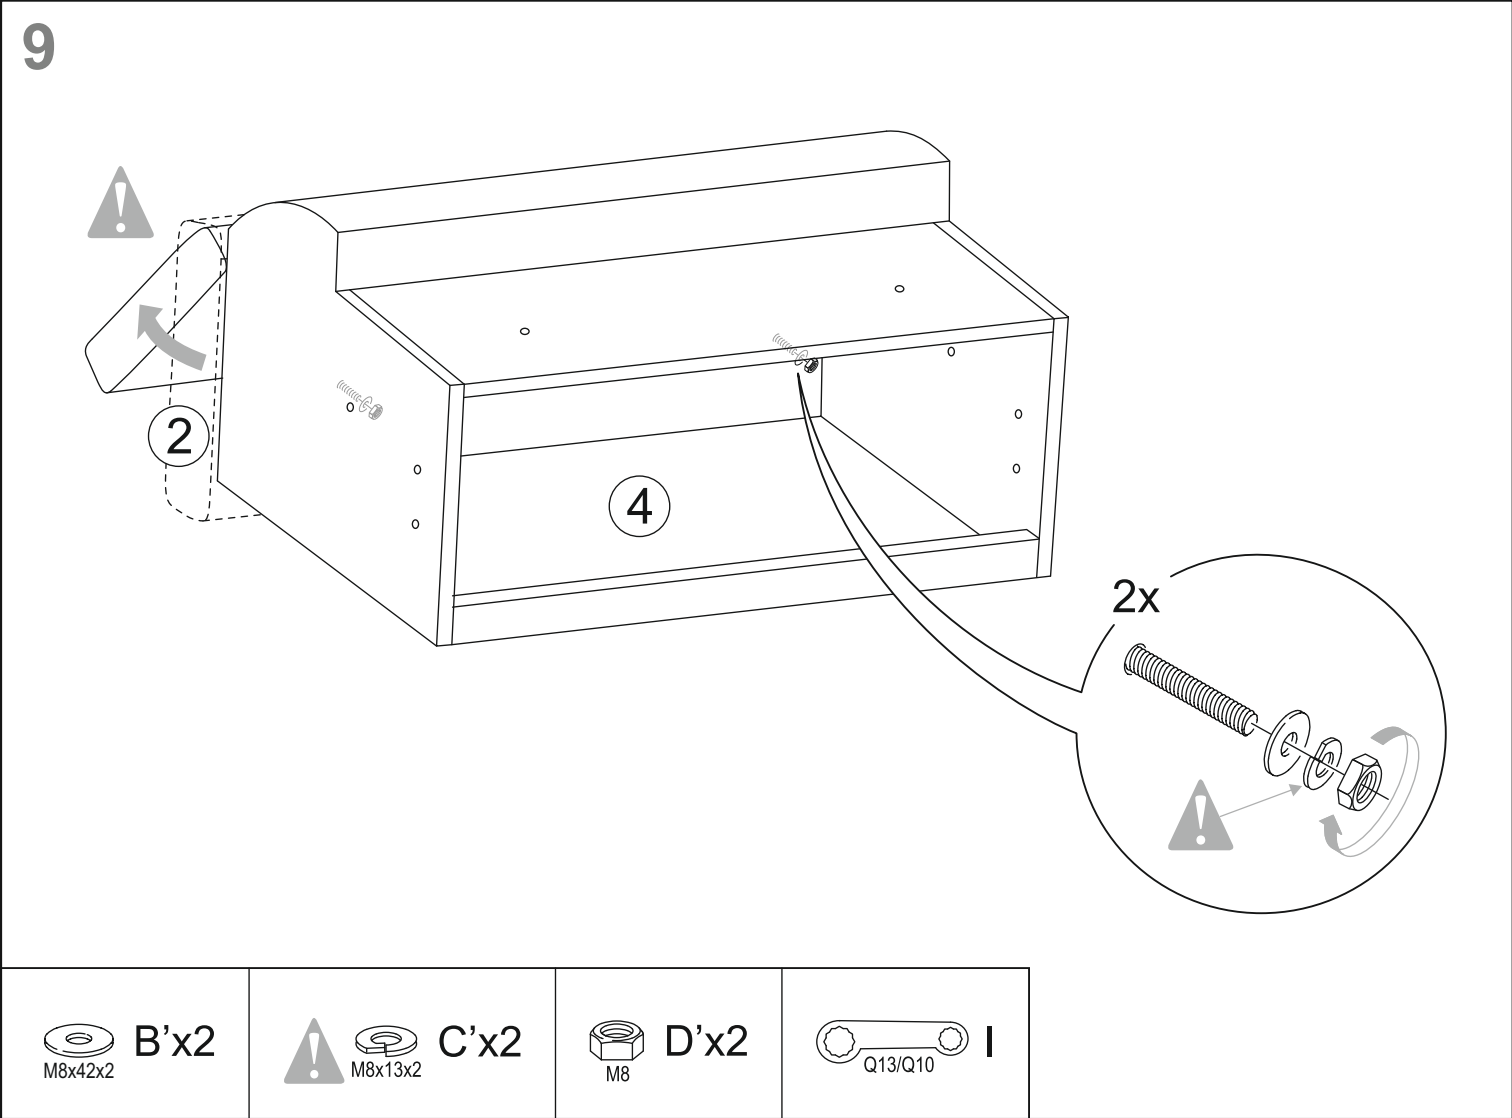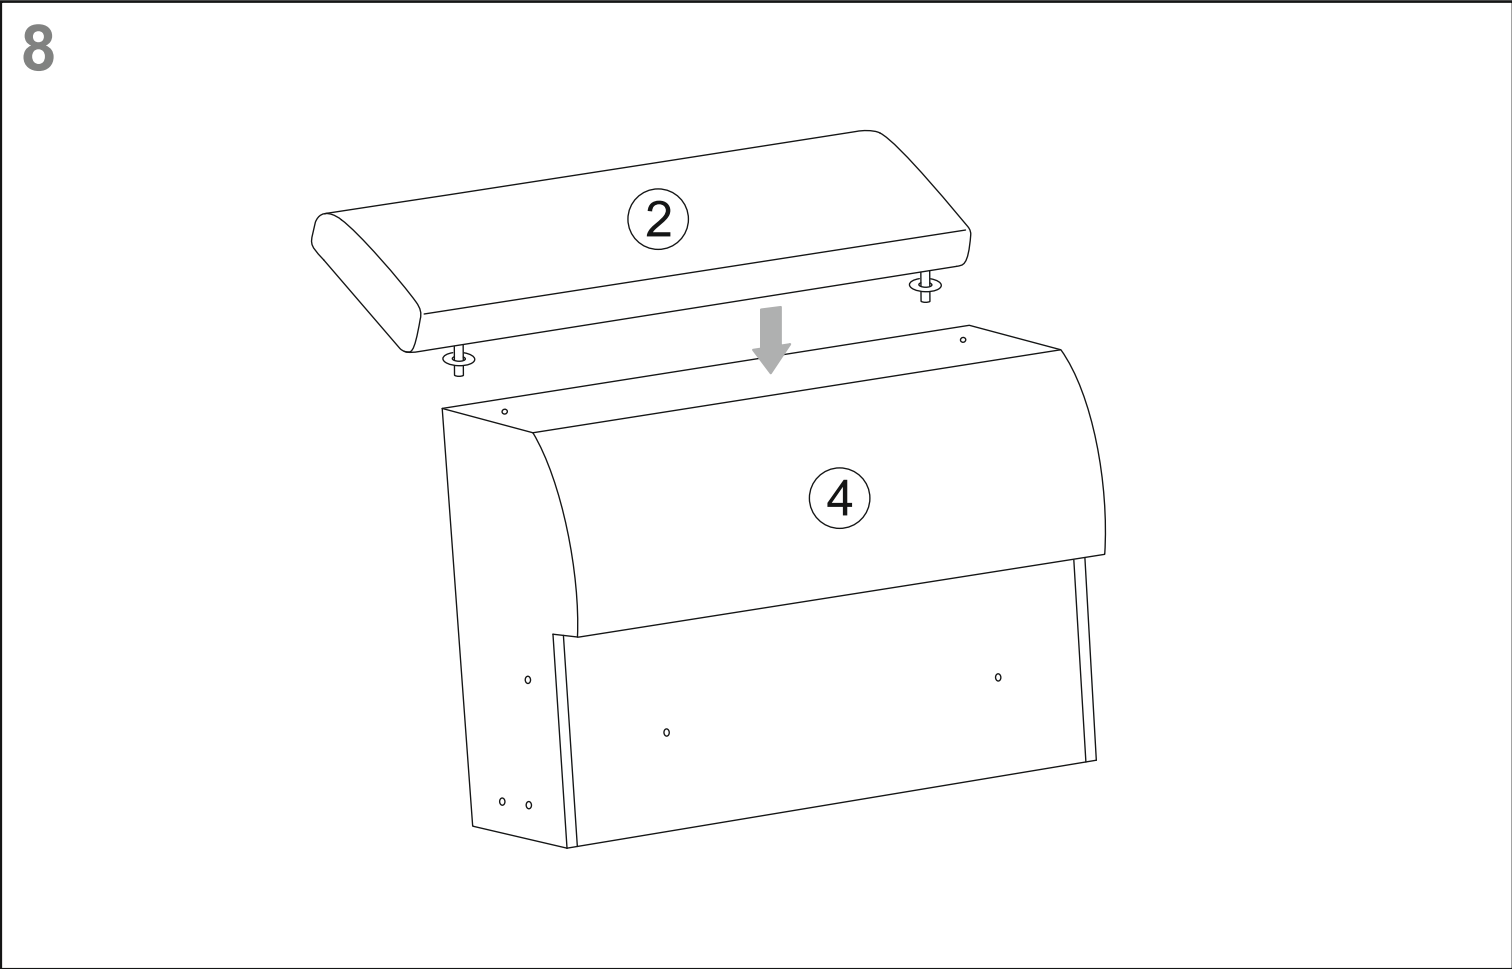

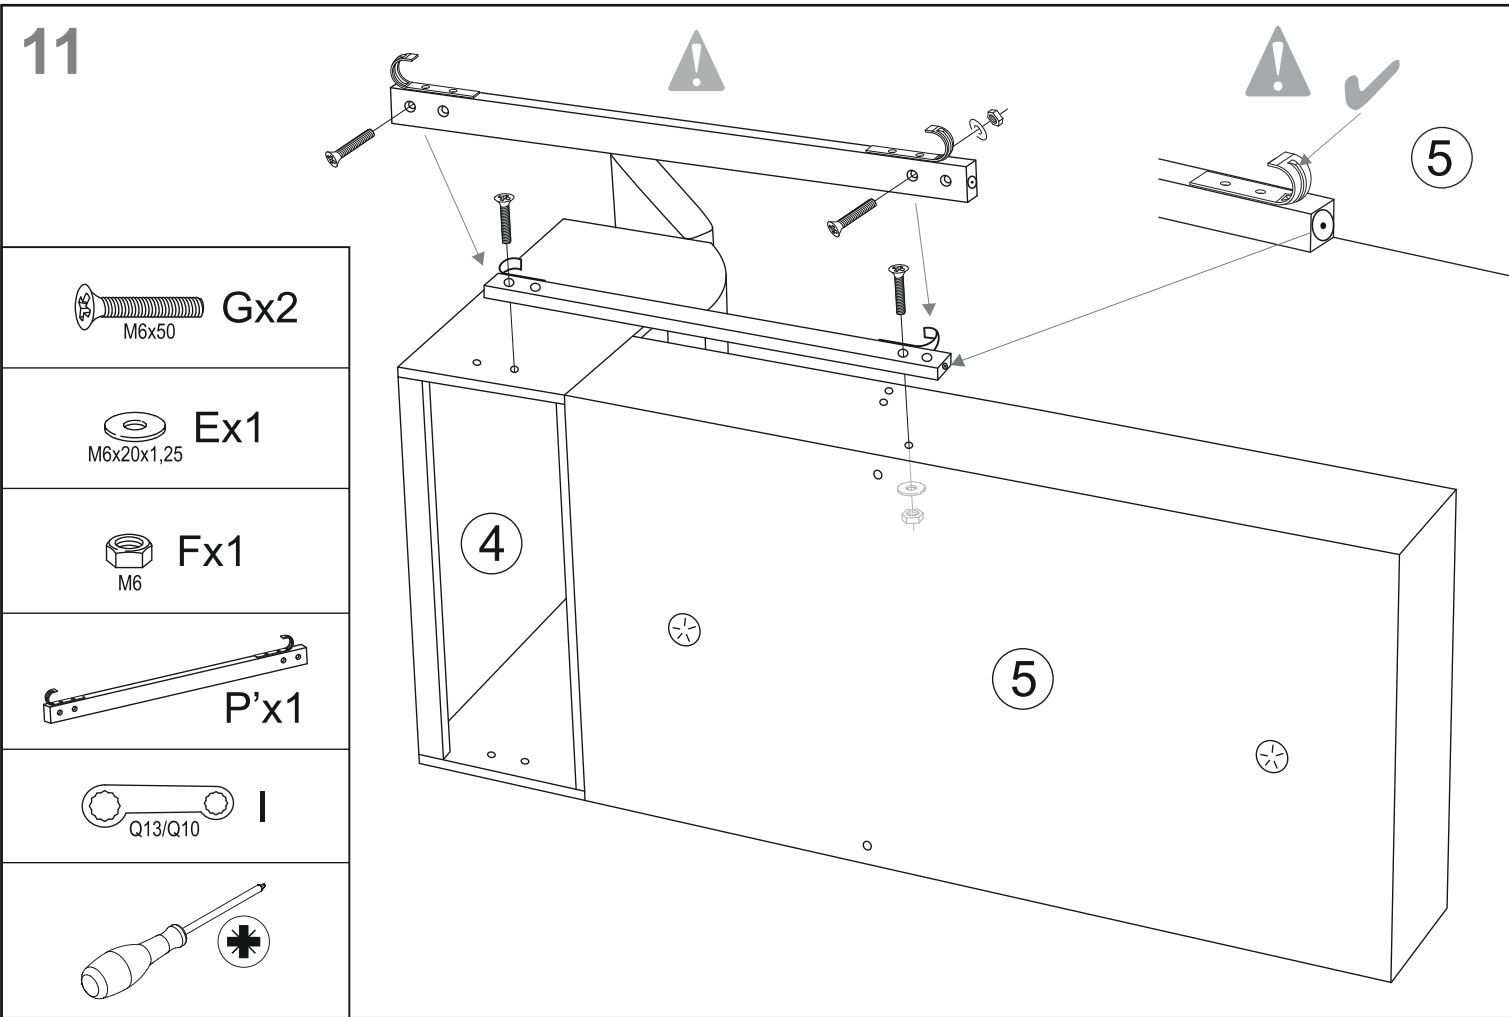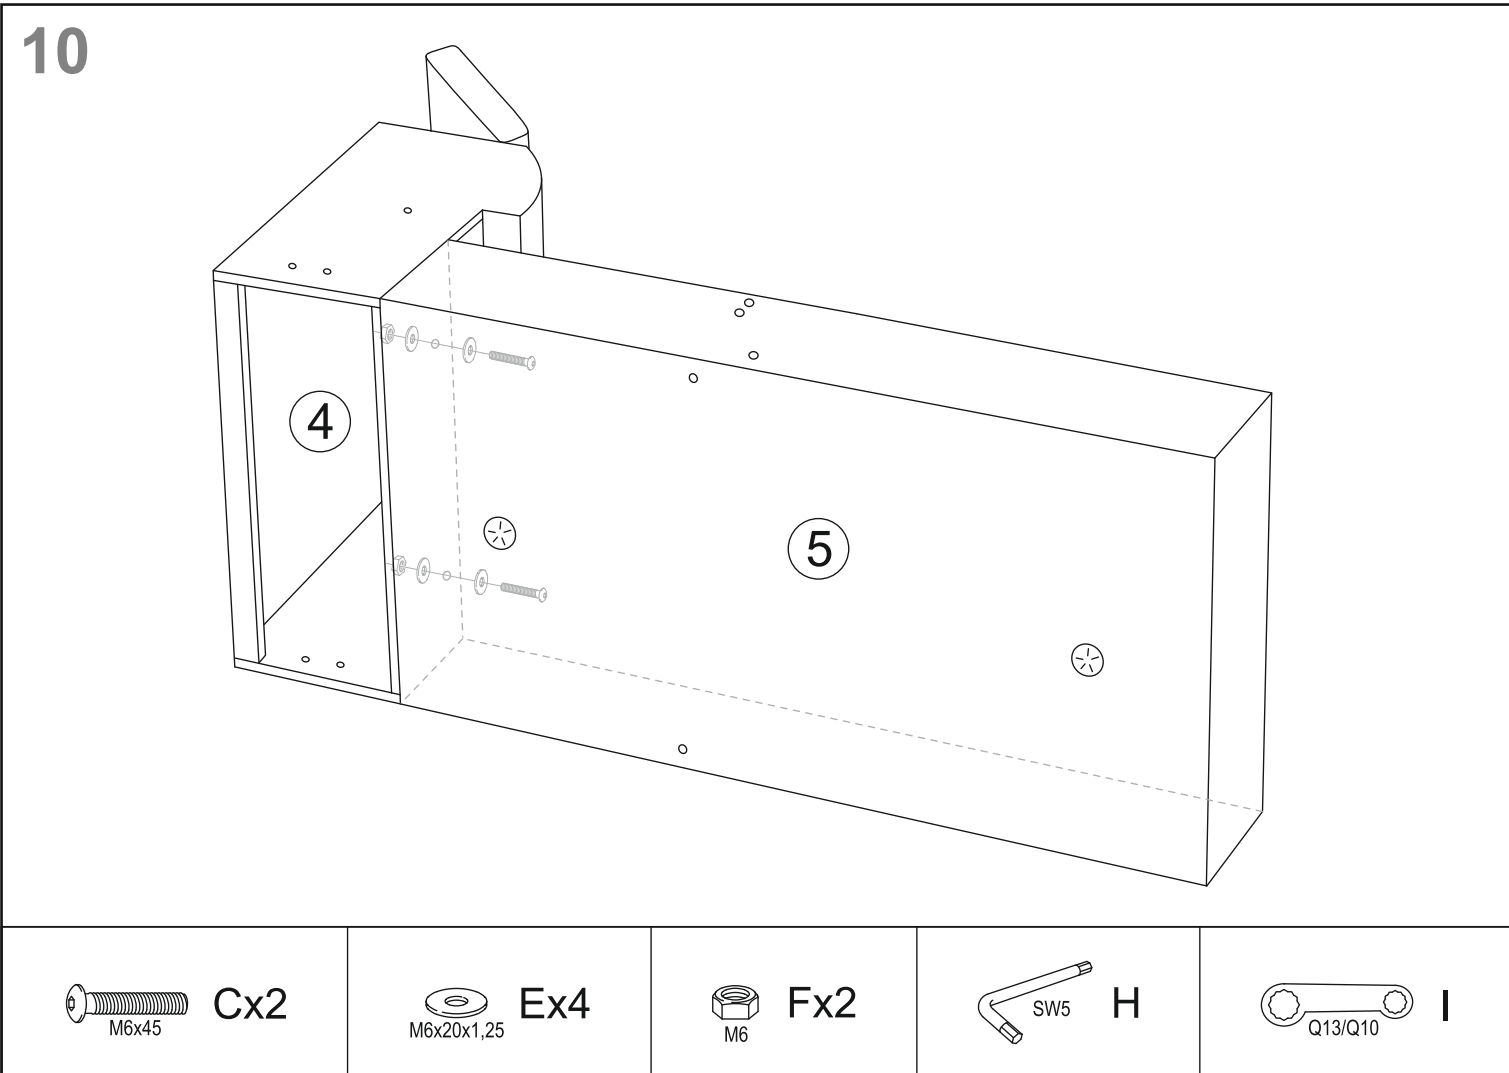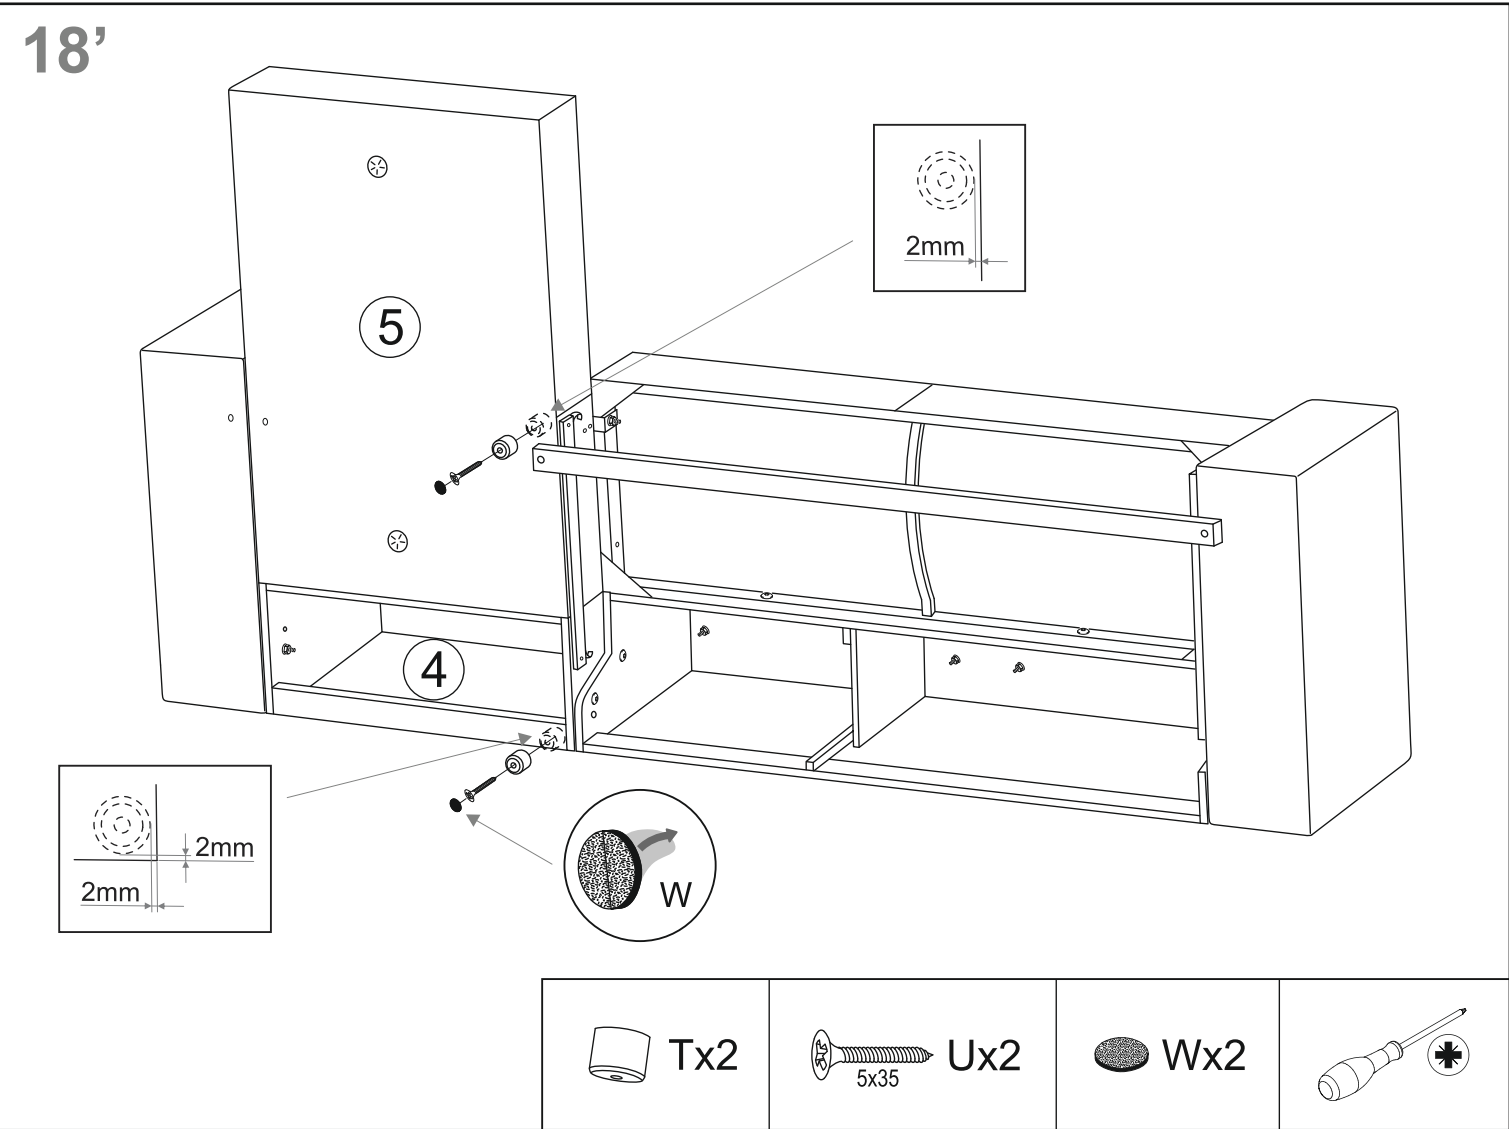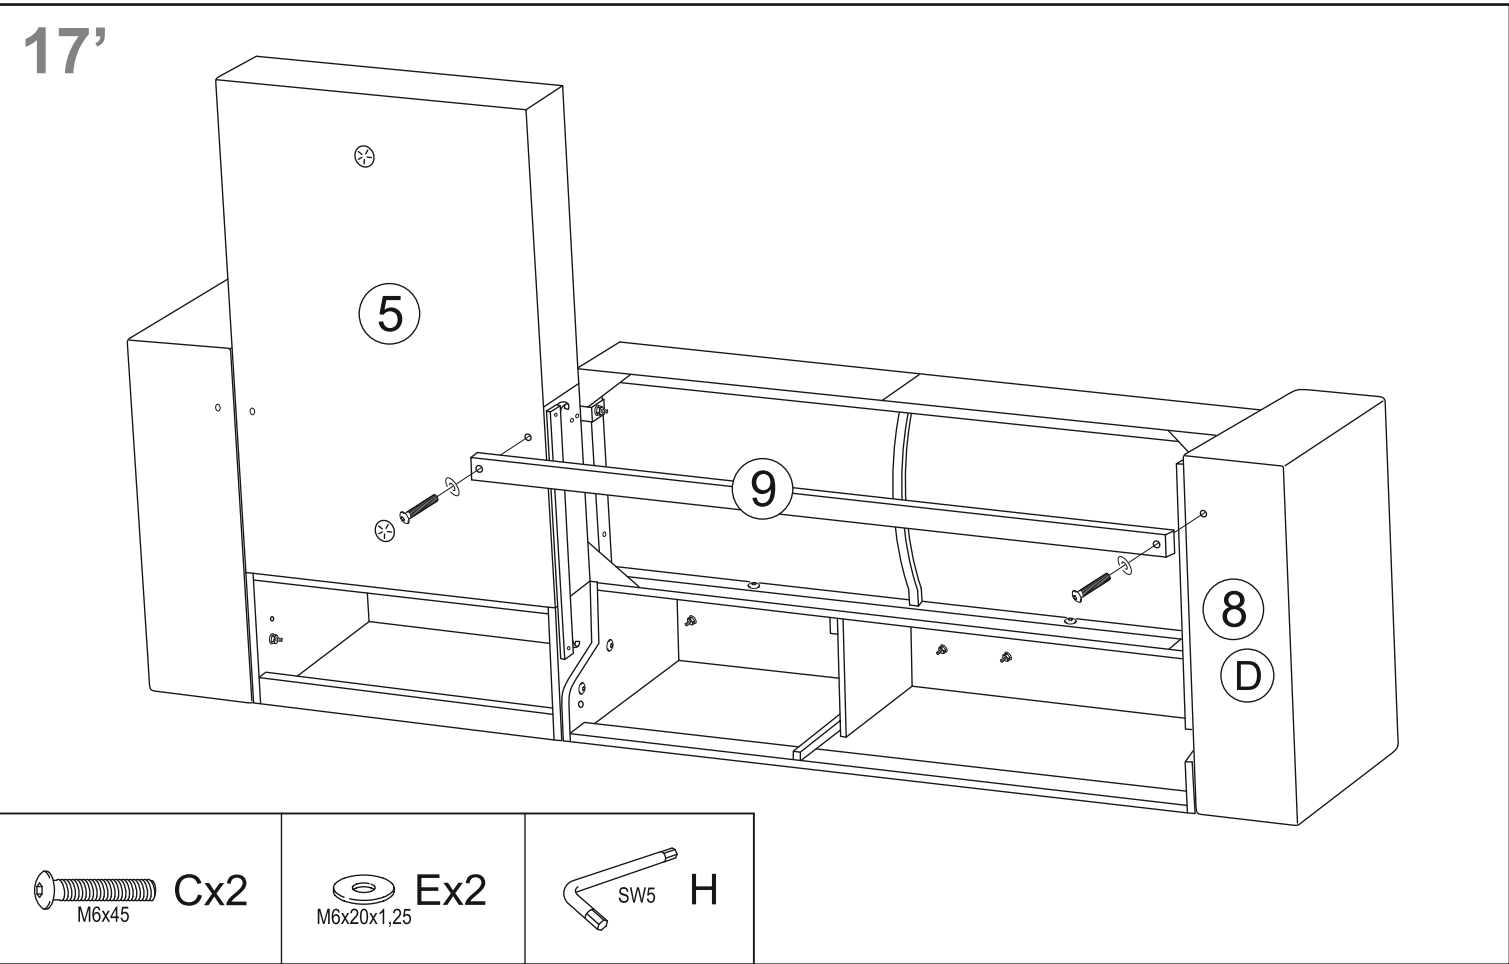

12

Jx1

Kx2
M6x15

Mx2
M6x12

H
SW5

13

Ax2
M6x70/10/55

16'

Cx2
M6x45

Ex4
M6x20x1,25

Fx2
M6





H
SW5


Lx1
M8x60



Nx1
M8x24x1,5


Ox1
M8



I
Q13/Q10

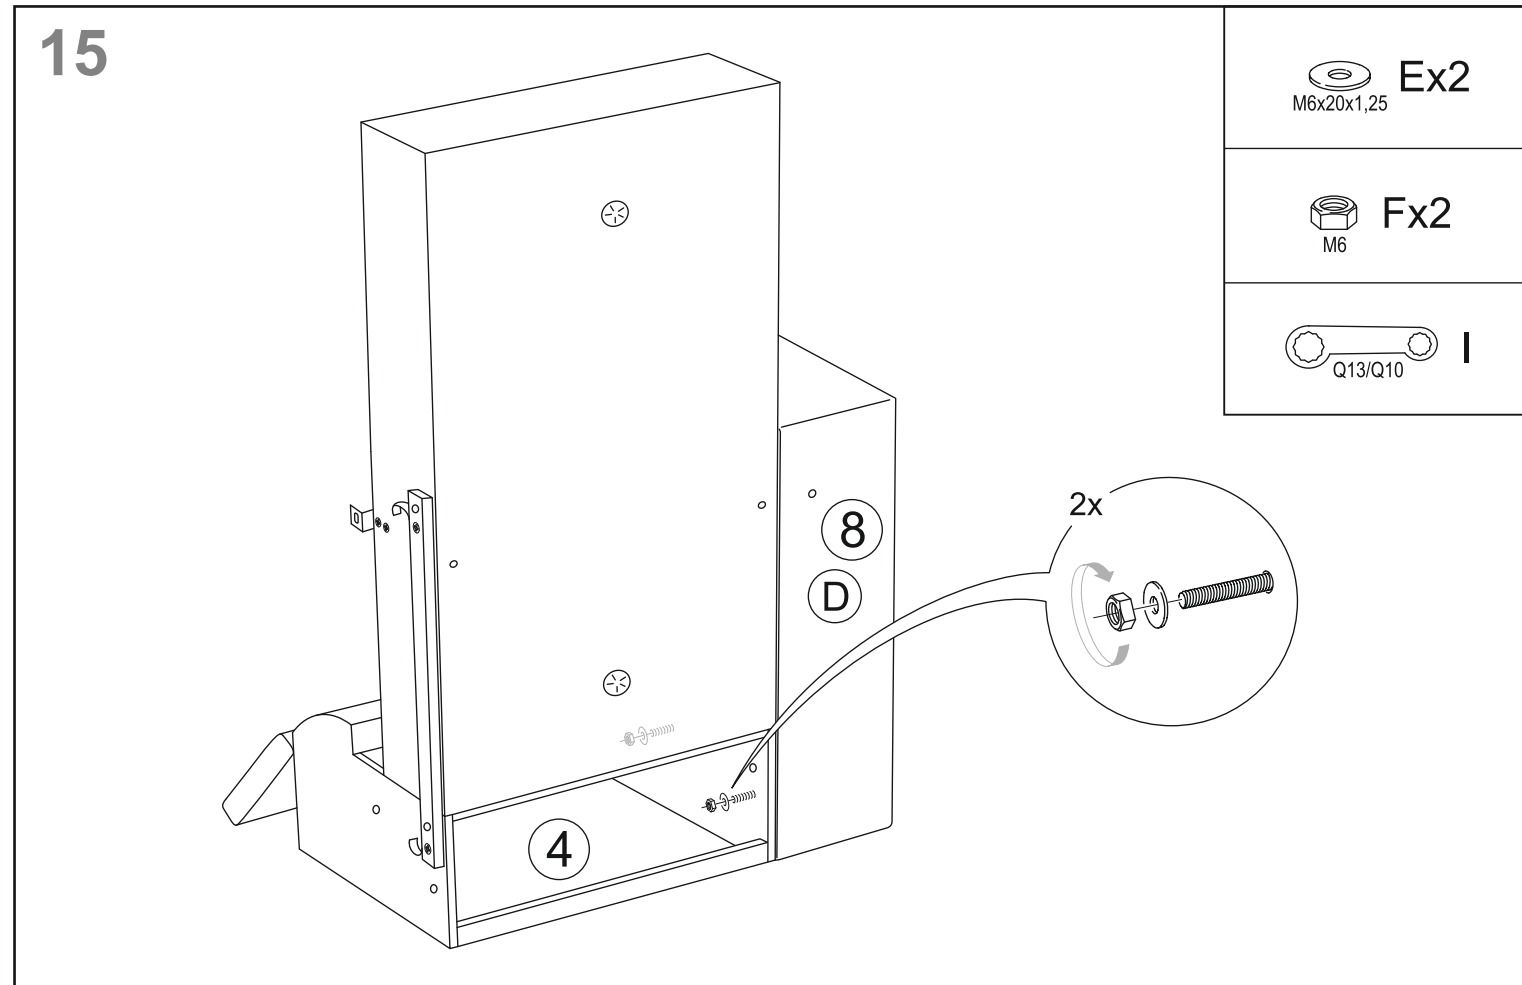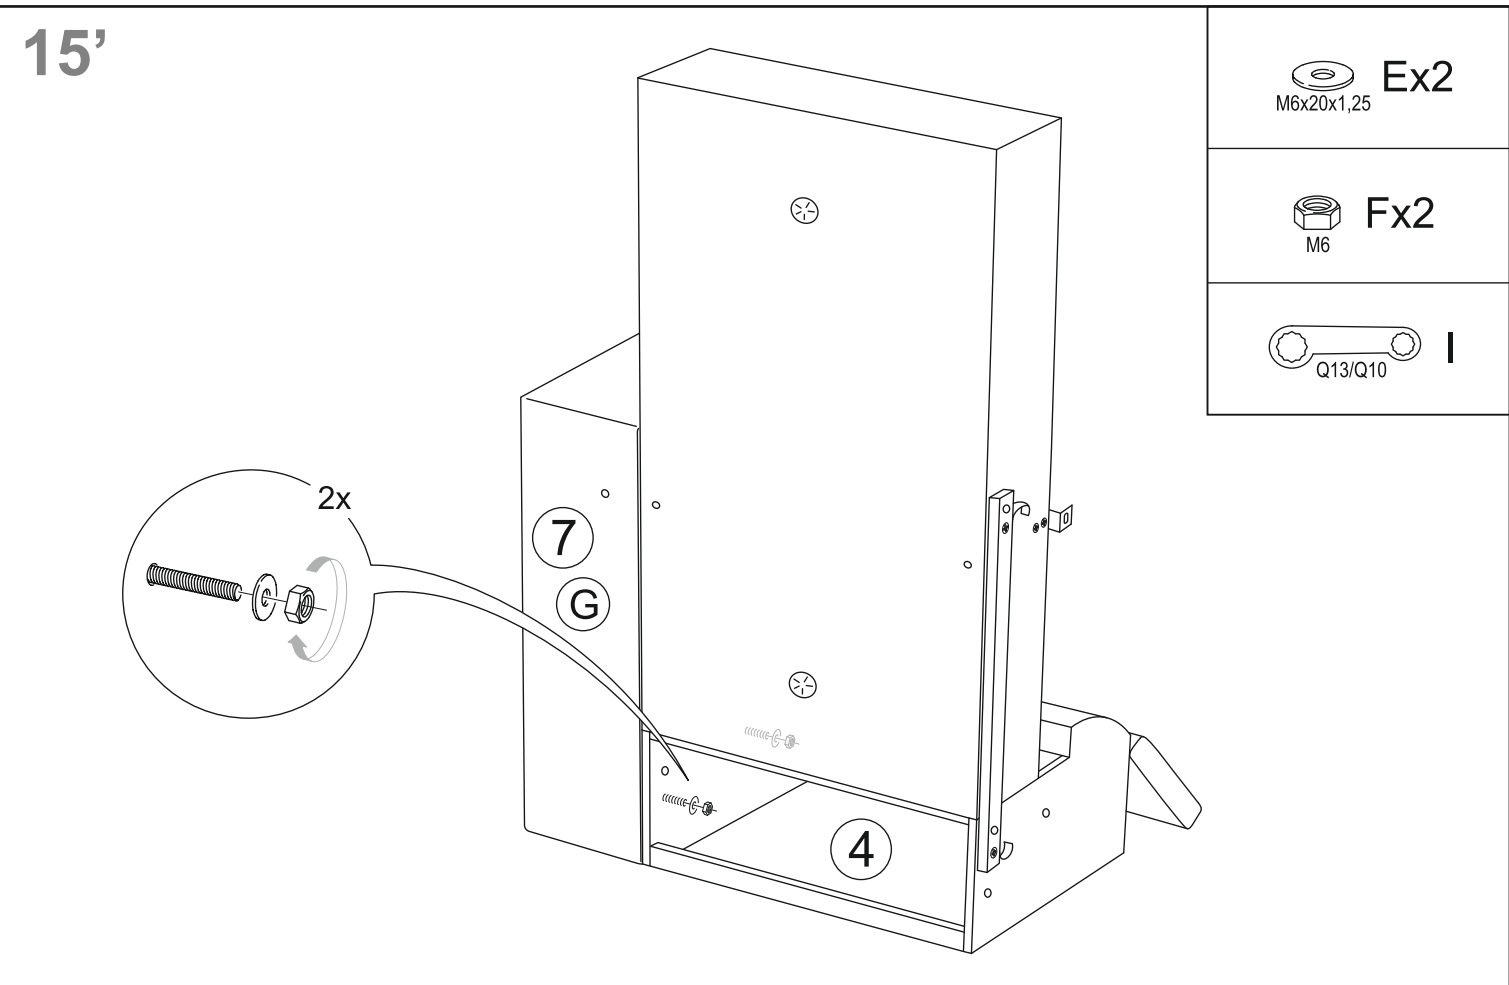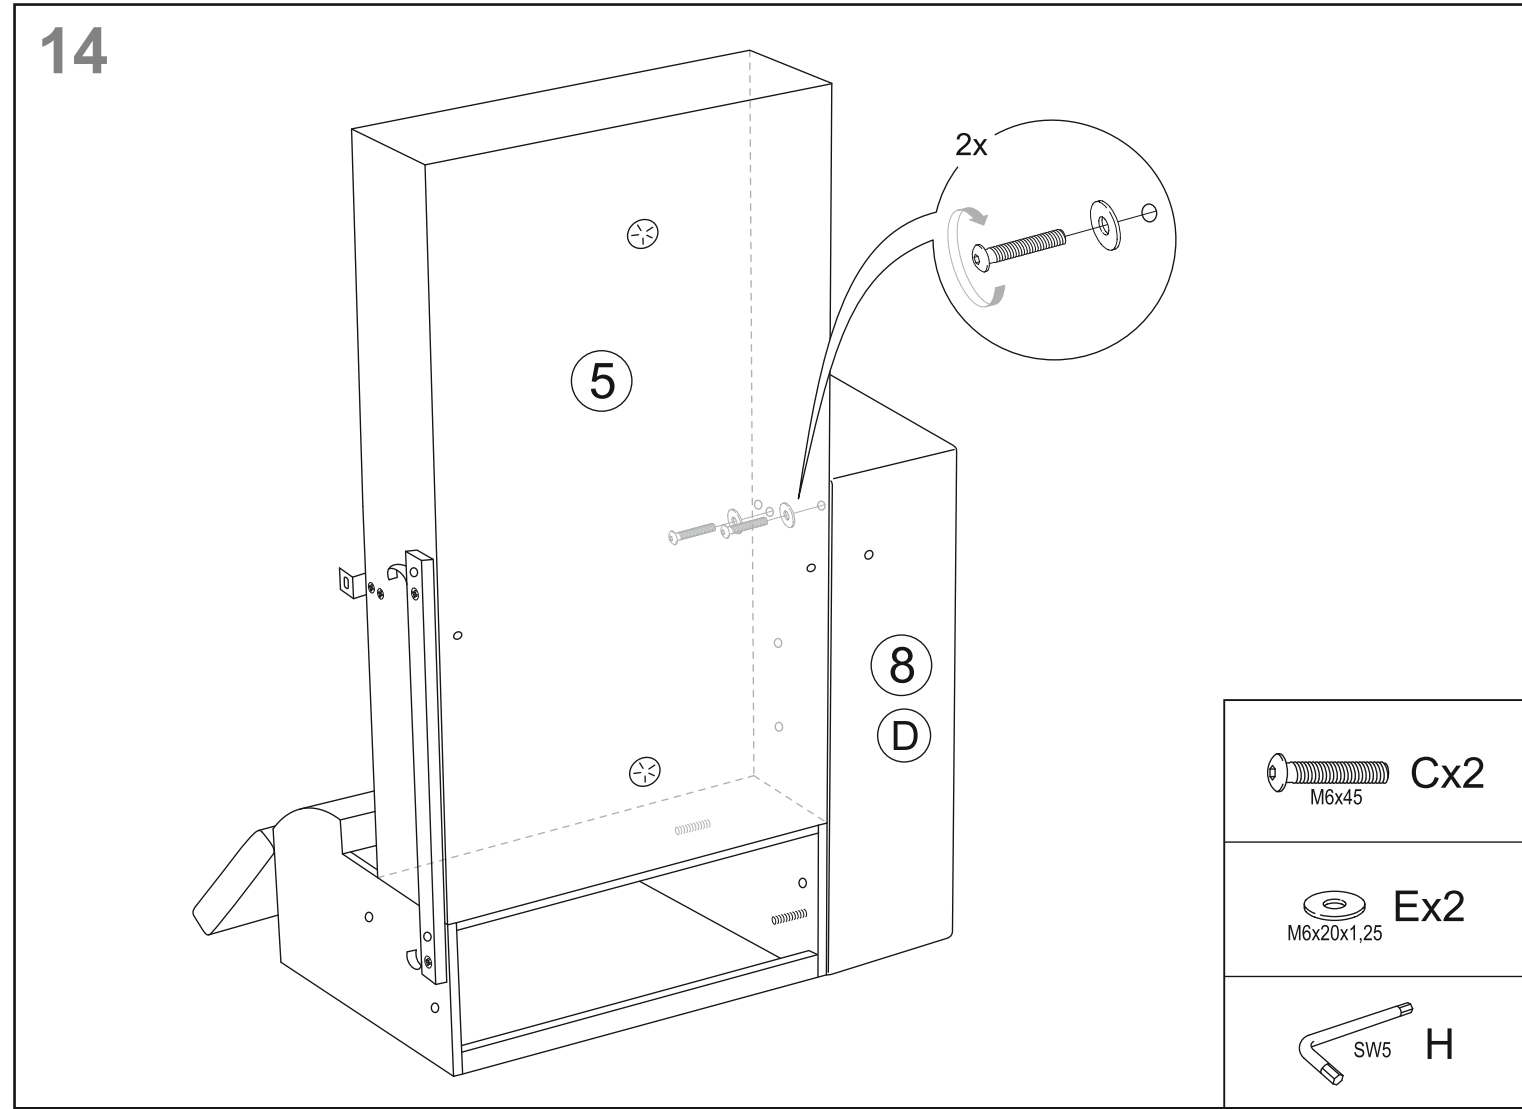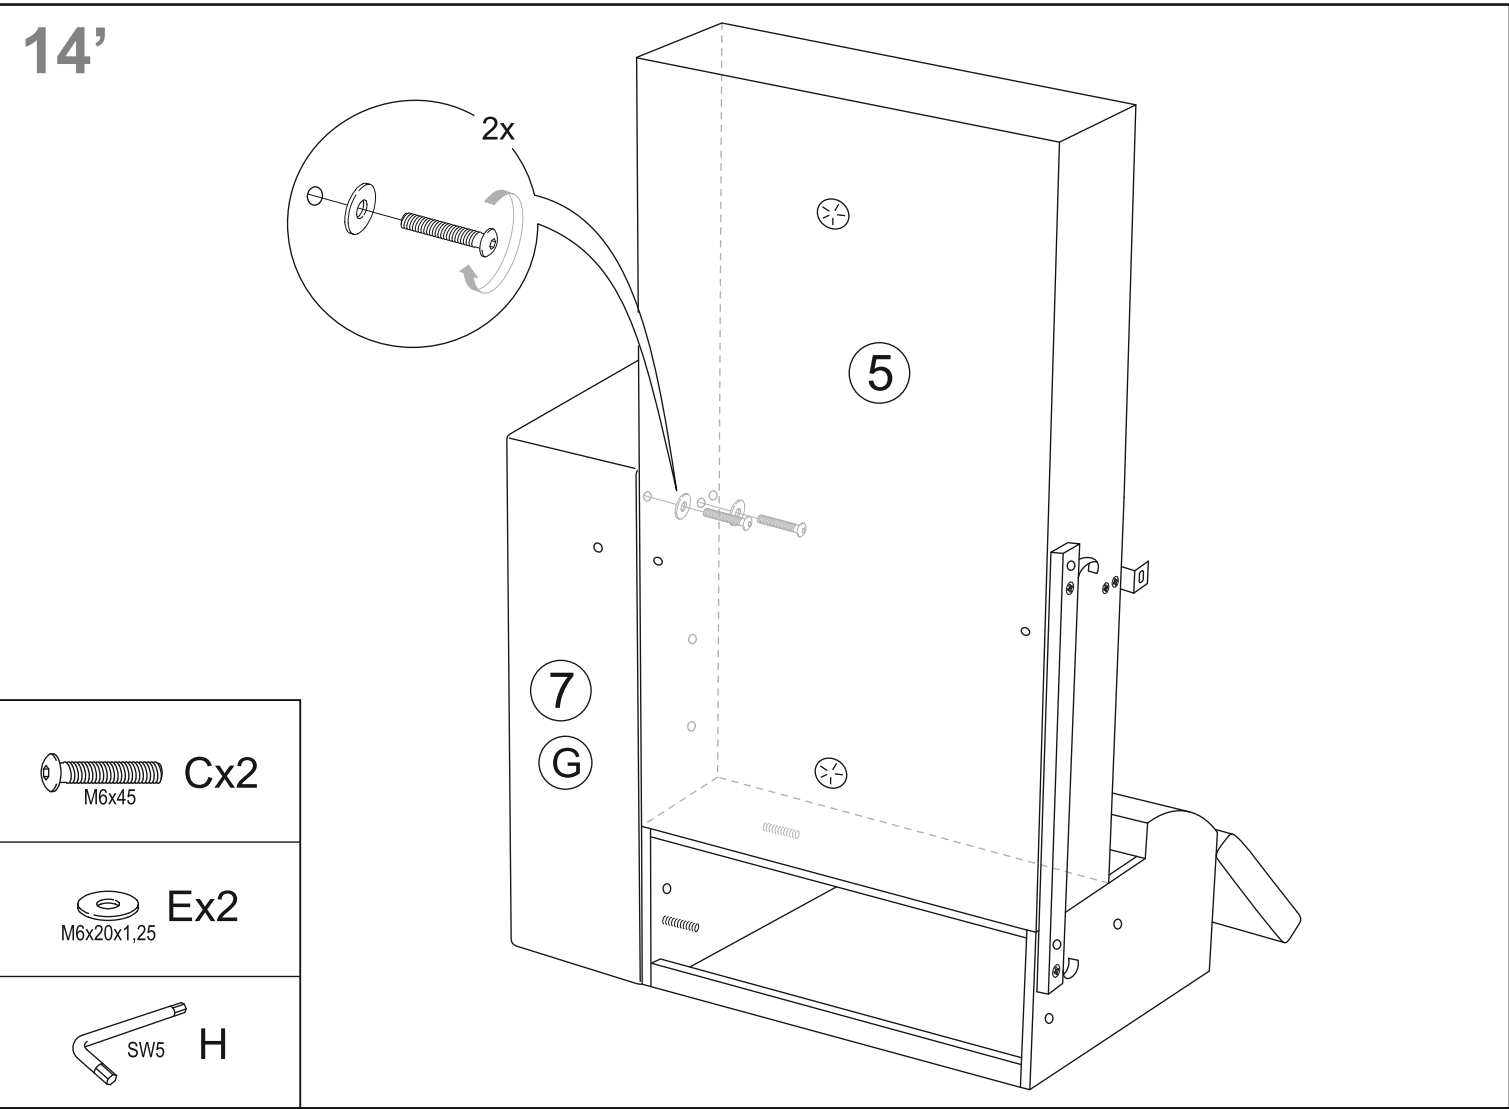


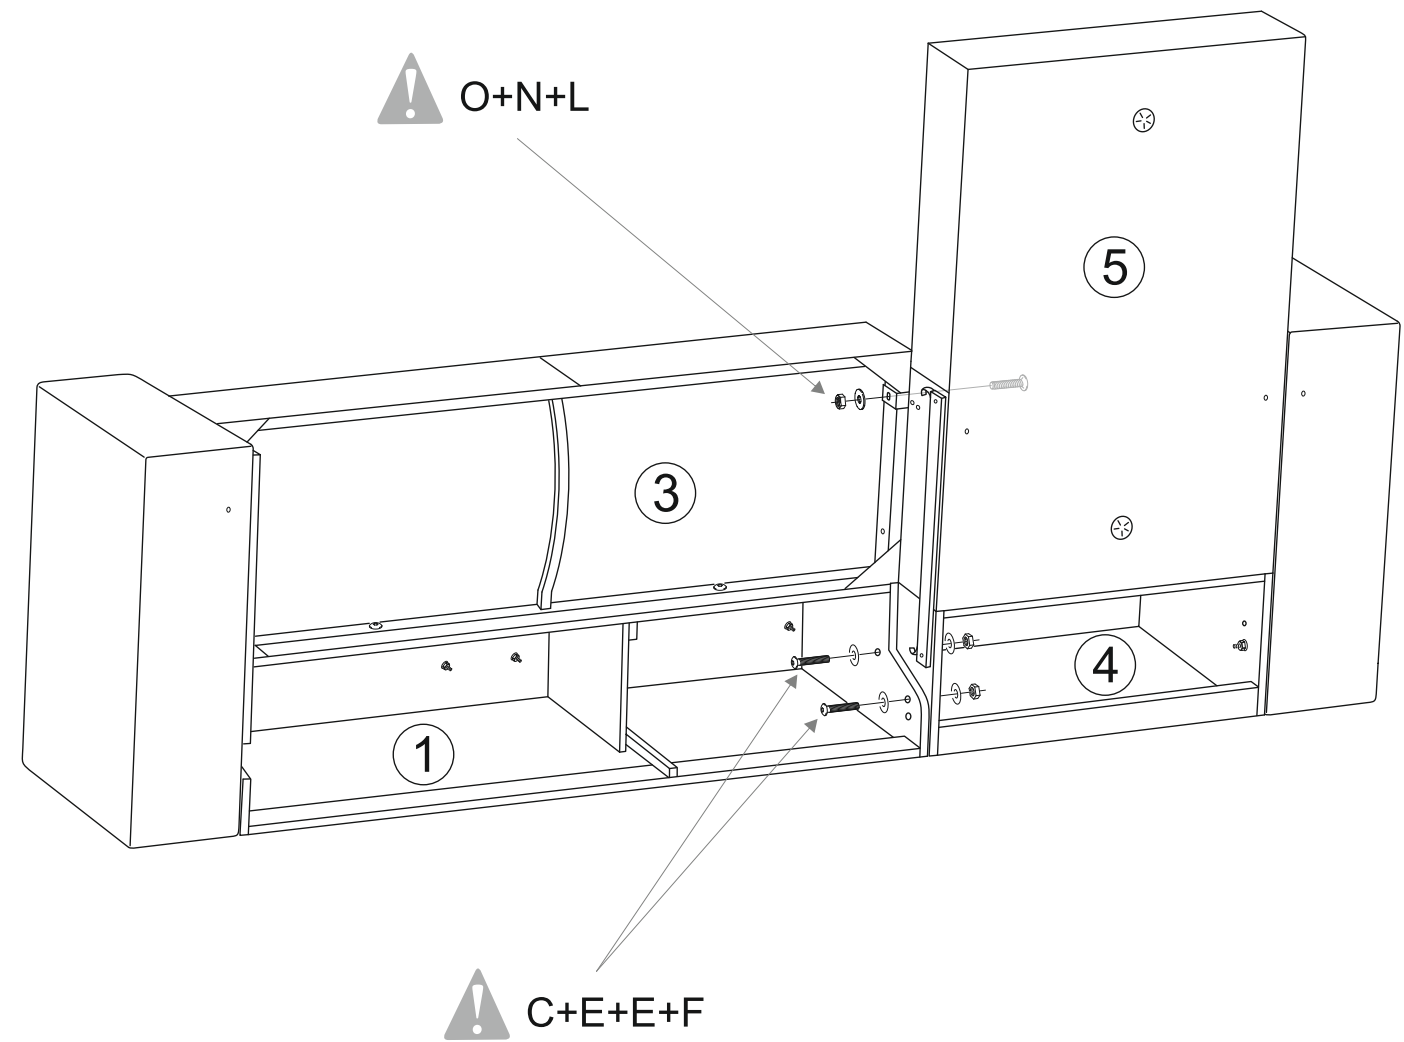

 Cx2 M6x45	 Ex4 M6x20x1,25	 Fx2 M6	 H SW5	
 Lx1 M8x60	 Nx1 M8x24x1,5	 Ox1 M8	 I Q13/Q10	

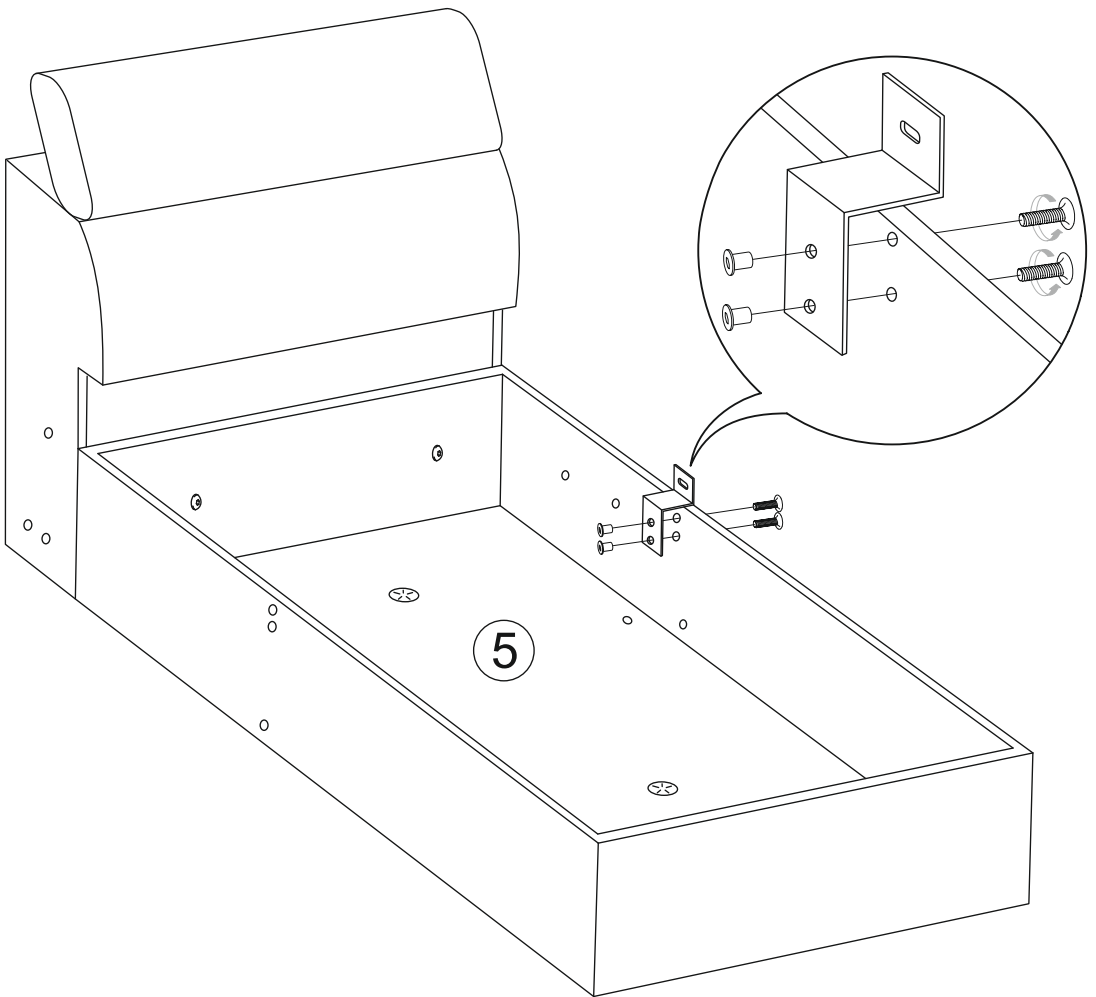

 Jx1
 Kx2 M6x15
 Mx2 M6x12
 H SW5

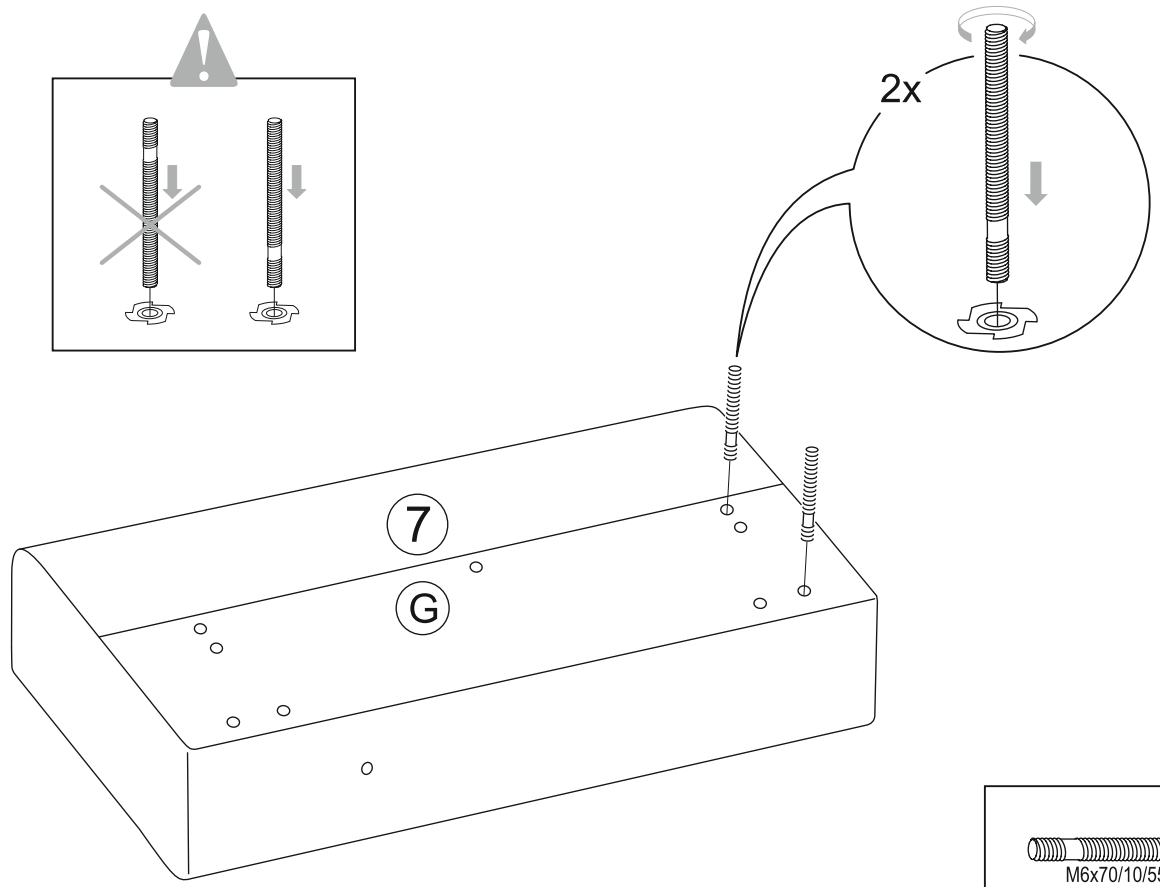


 Ax2 M6x70/10/55
--

10'

Cx2 M6x45	Ex4 M6x20x1,25	Fx2 M6	H SW5	I Q13/Q10
--------------	-------------------	-----------	----------	--------------

11'





Gx2 M6x50	Ex1 M6x20x1,25	Fx1 M6	Px1	I Q13/Q10
--------------	-------------------	-----------	-----	--------------

17


Cx2 M6x45	Ex2 M6x20x1,25	H SW5
--------------	-------------------	----------

18

Tx2	Ux2 5x35	Wx2		
-----	-------------	-----	--	--

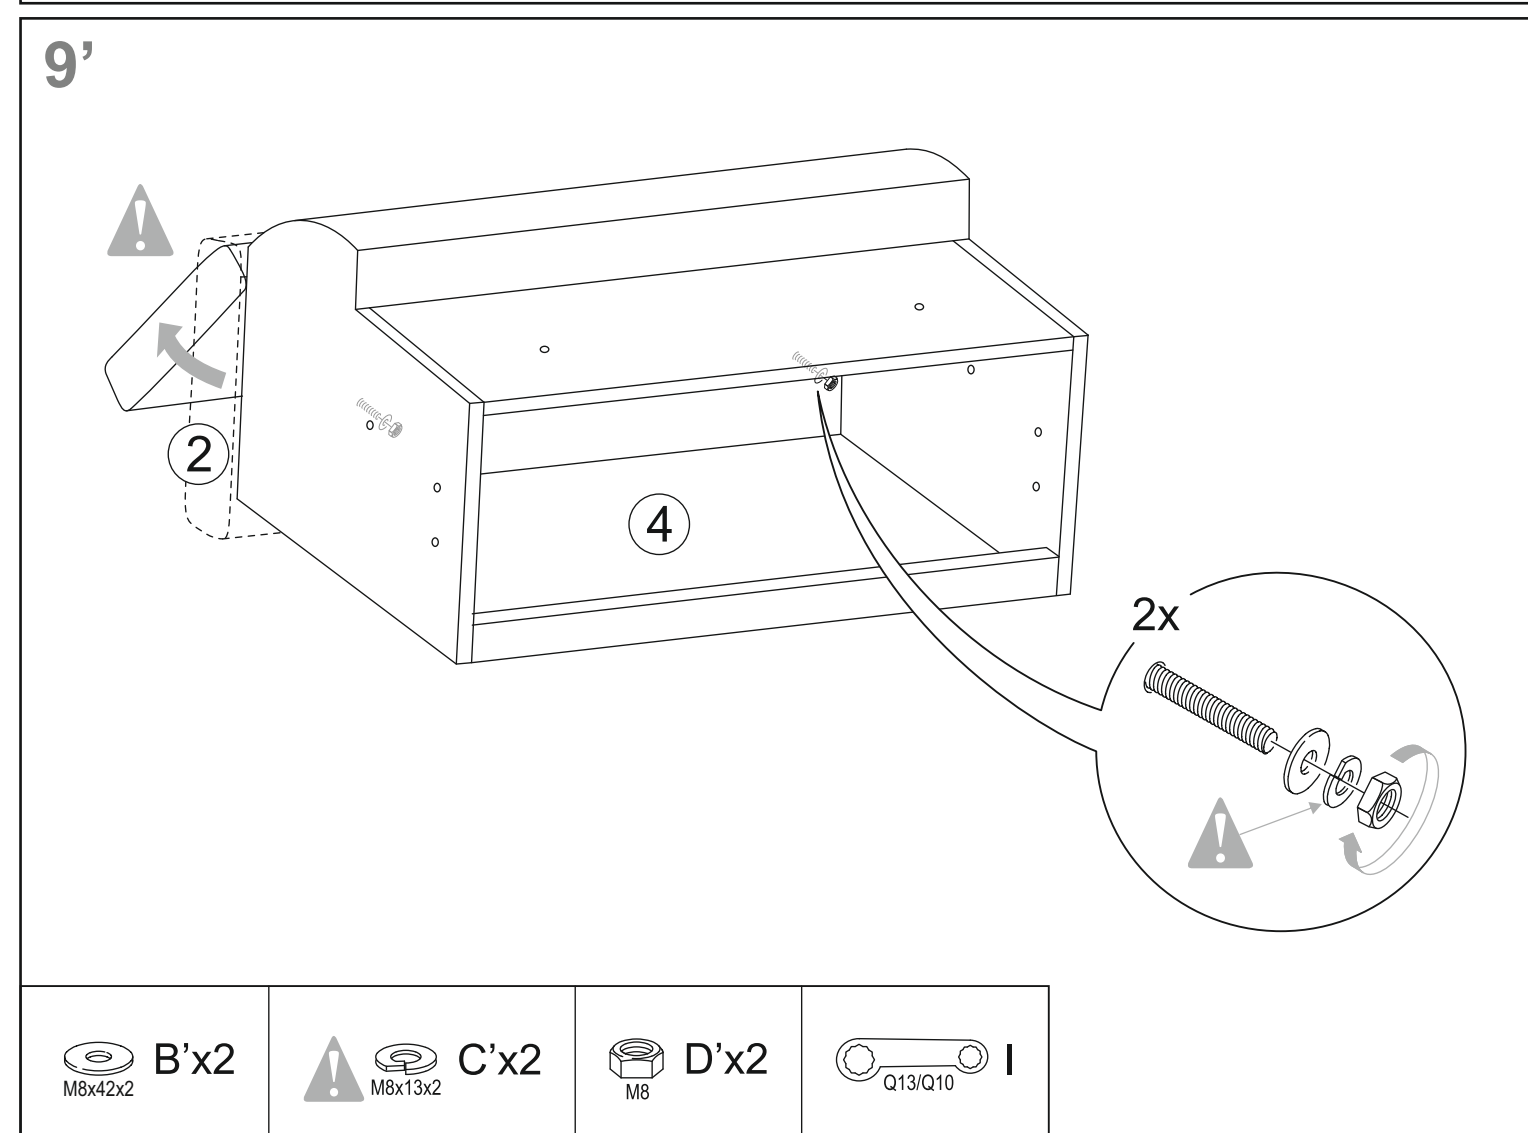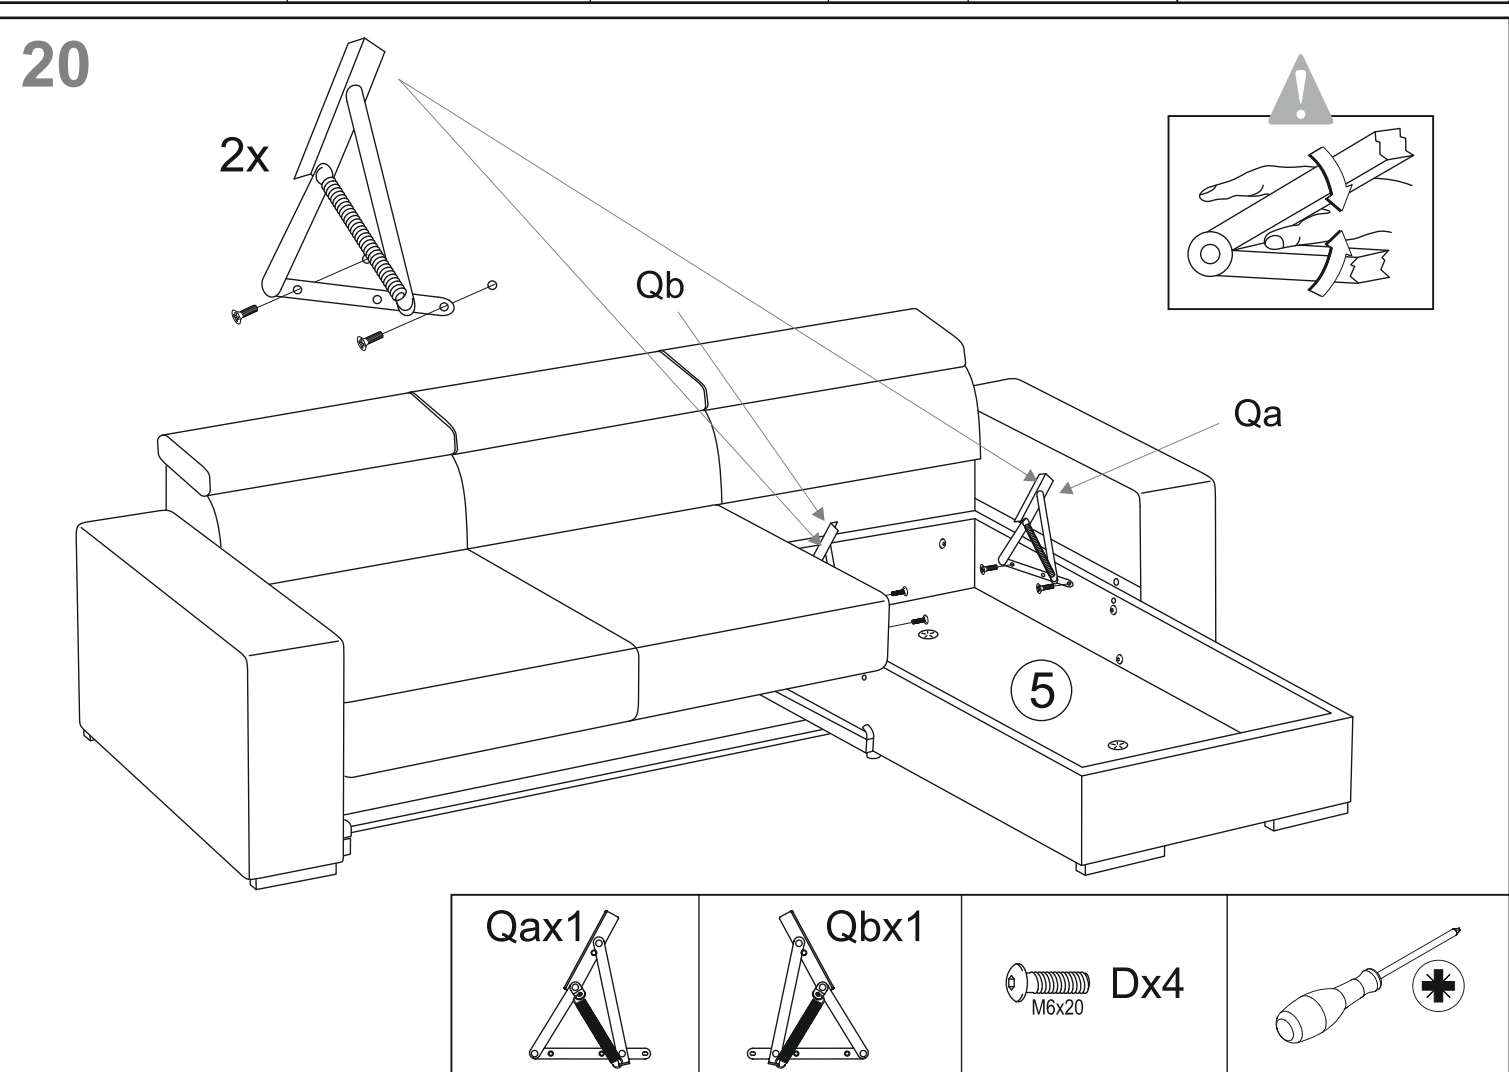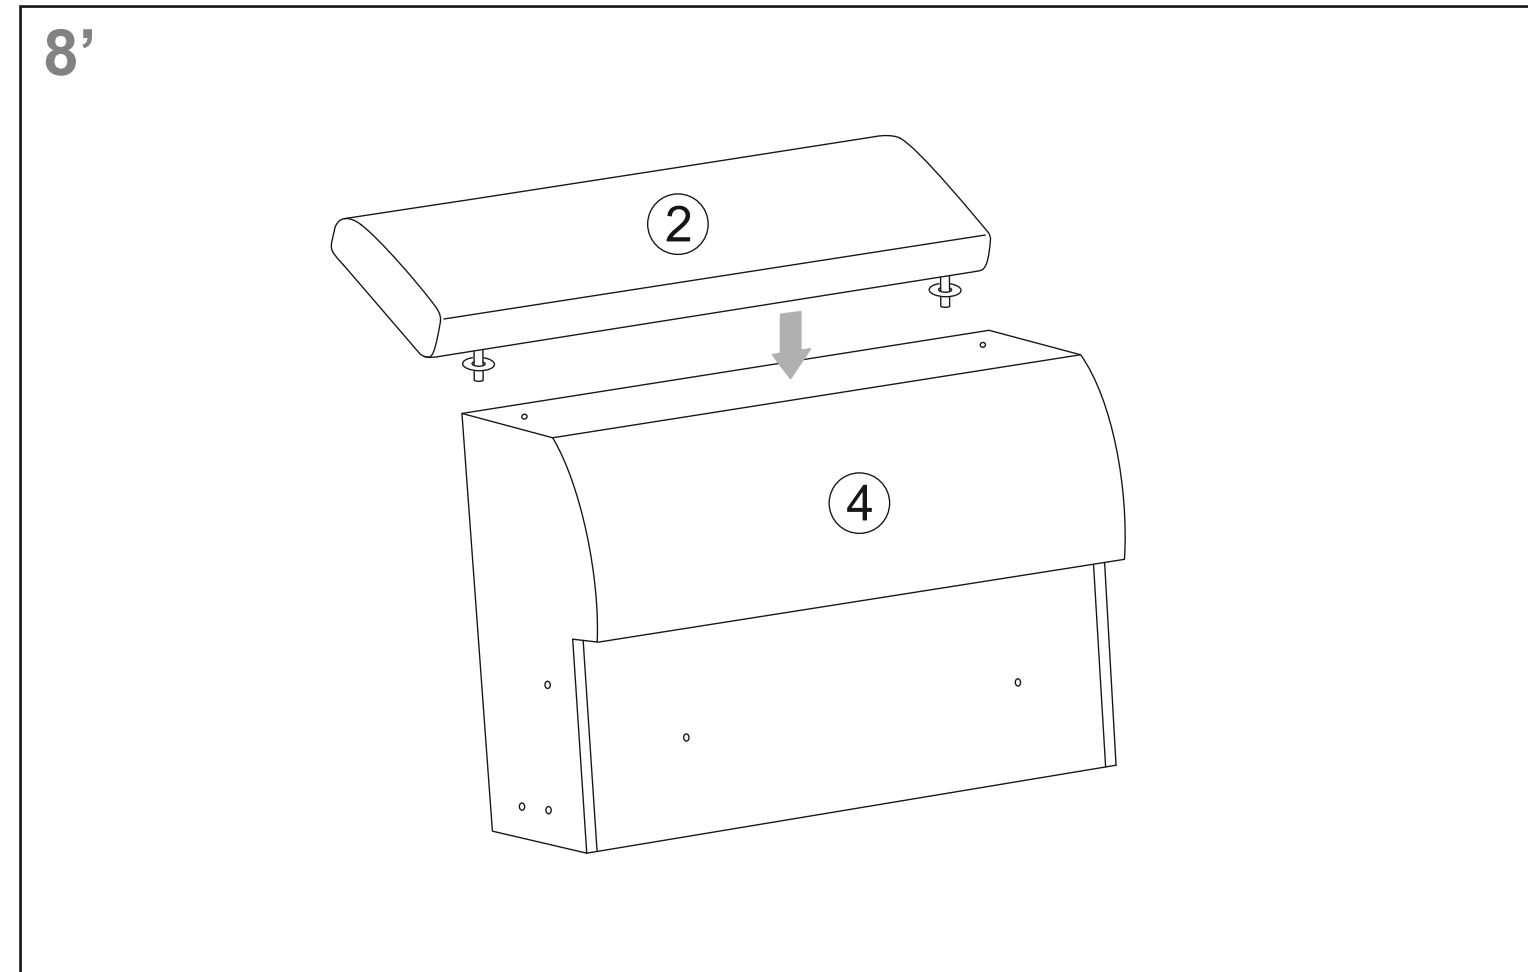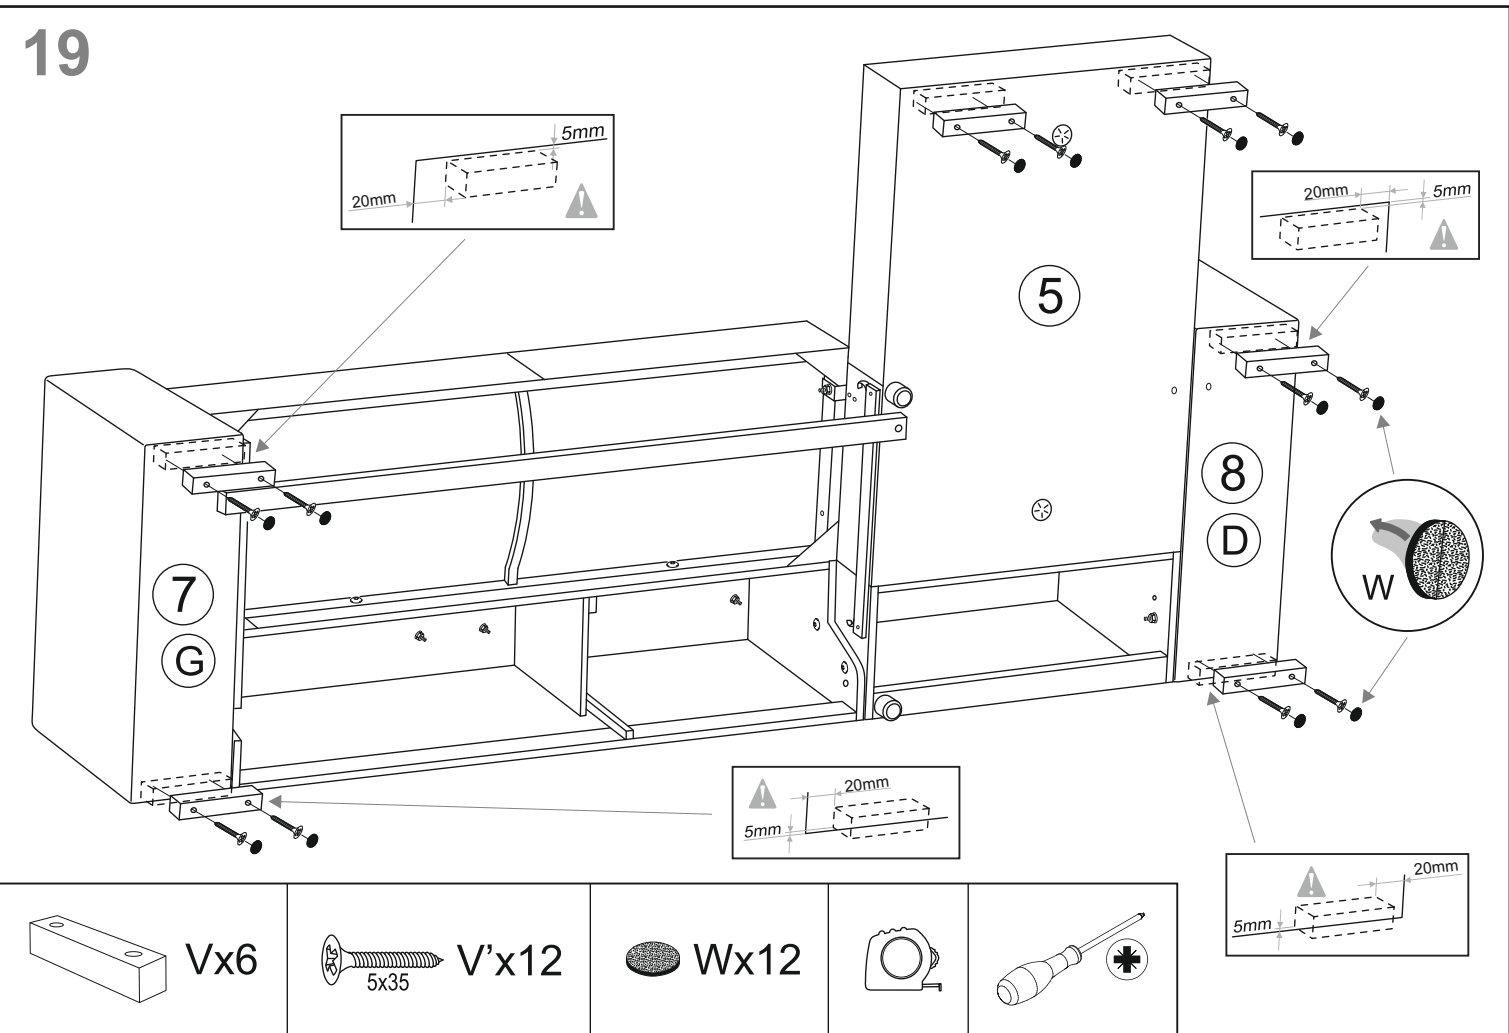

6'

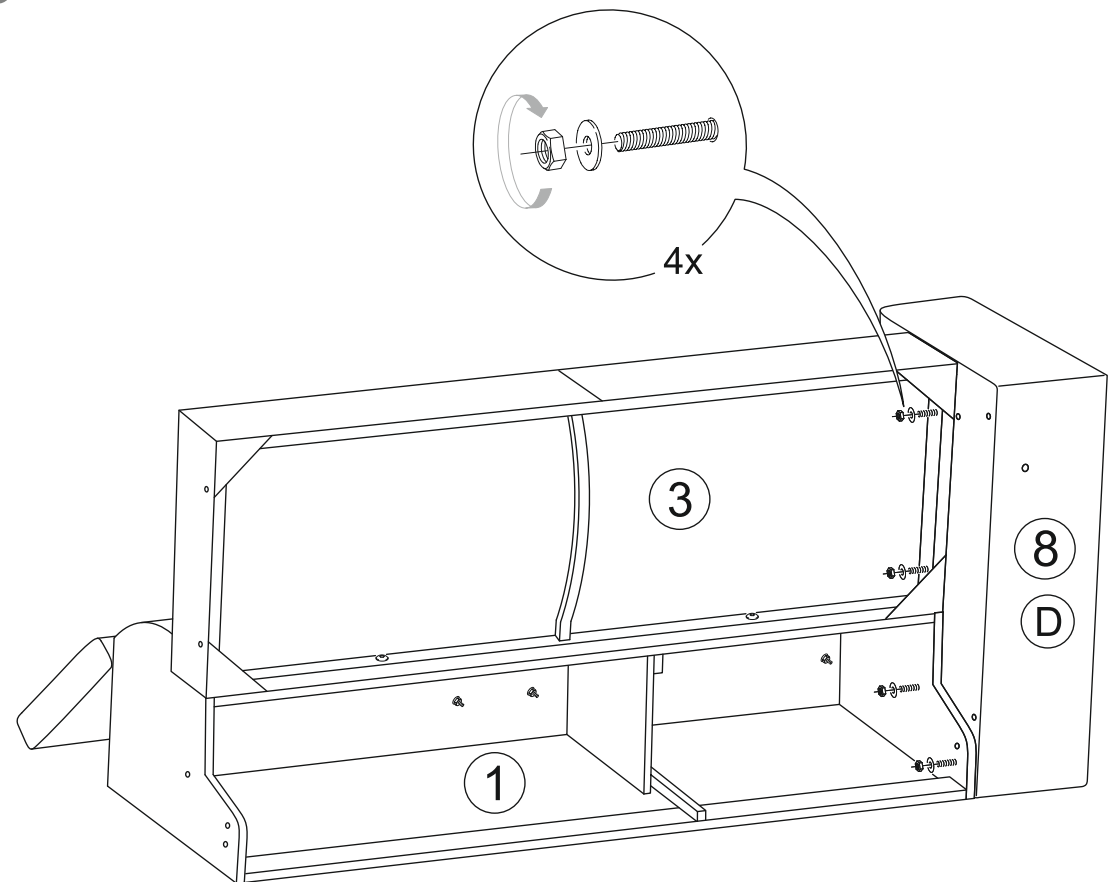


Ex4
M6x20x1,25

Fx4
M6


Q13/Q10 I

7'

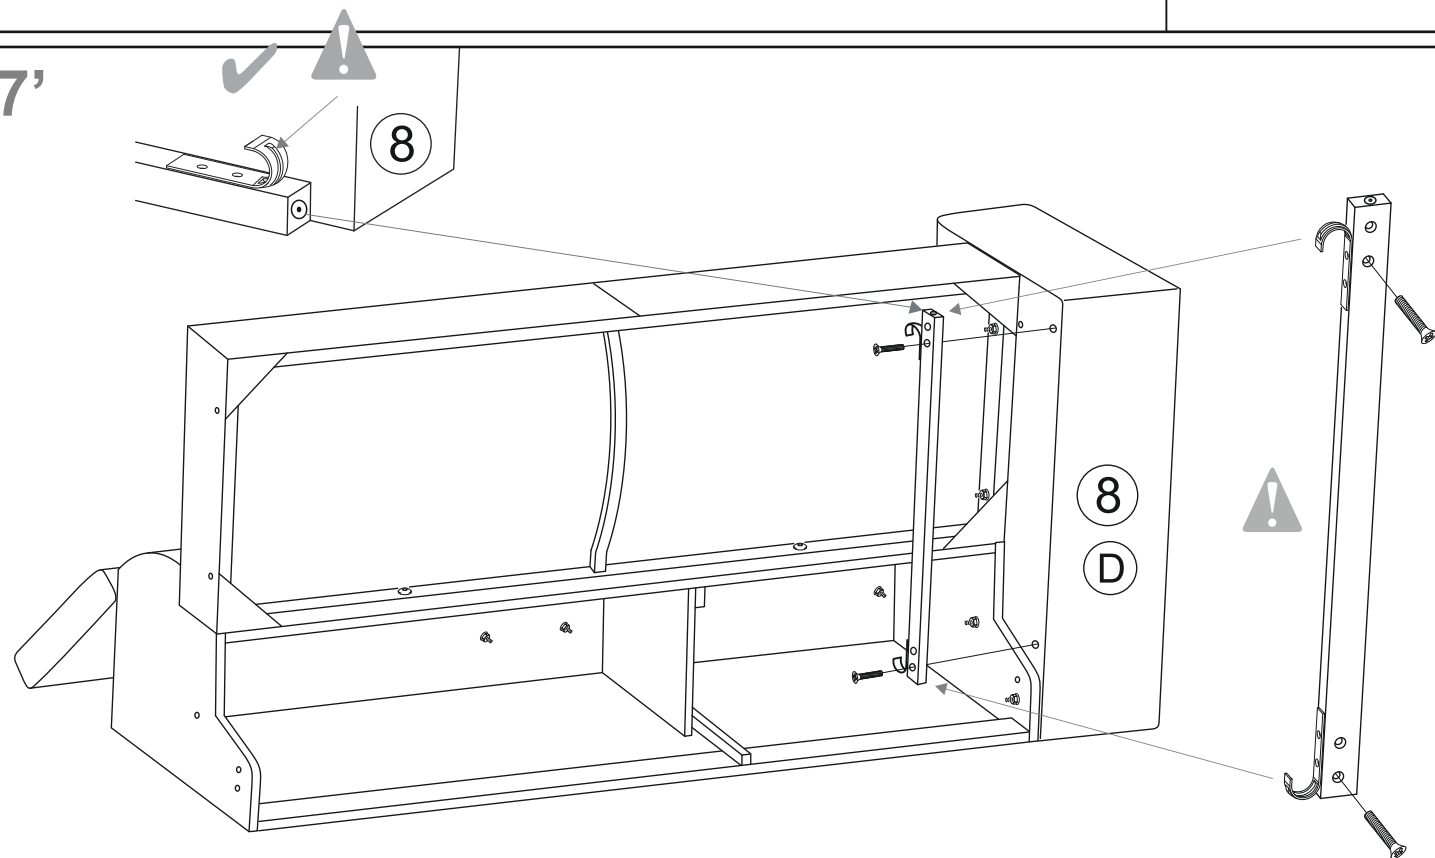


P'x1

Gx2
M6x50

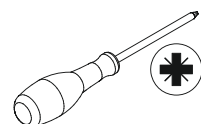


21

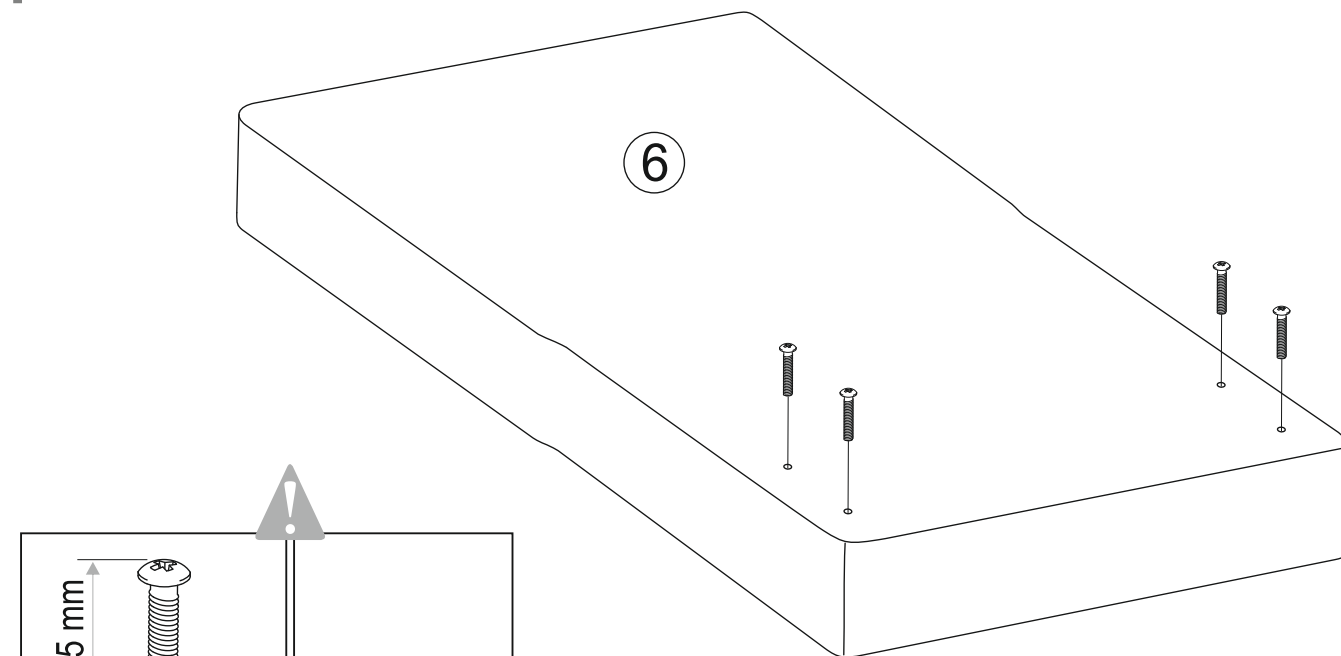


15 mm

Rx4
M6x50

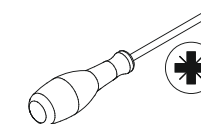


22


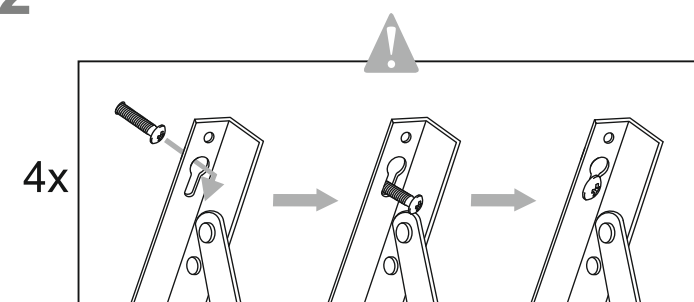


4x


6

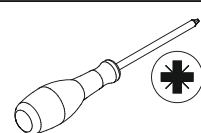


23

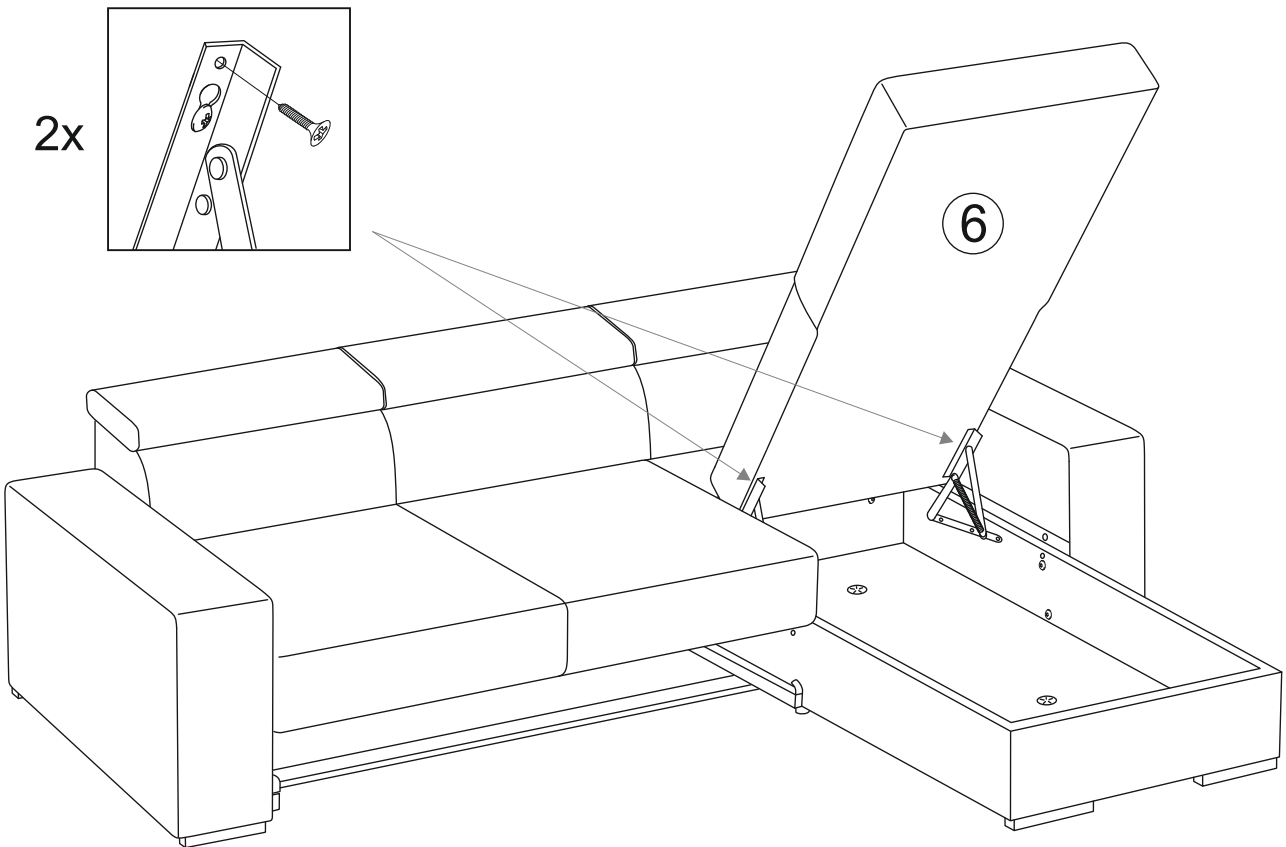

Sx2

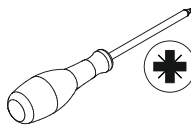

4'

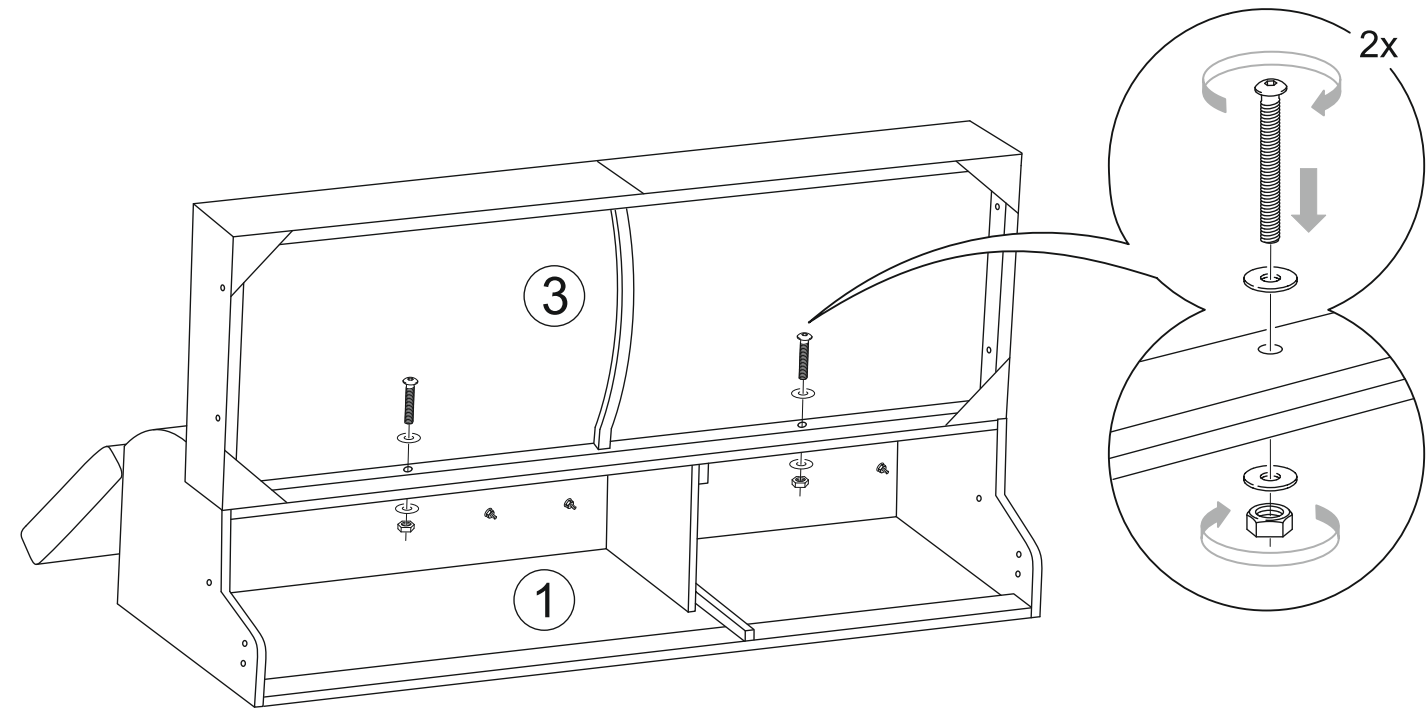



Bx2





Ex4




Fx2




24

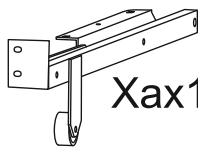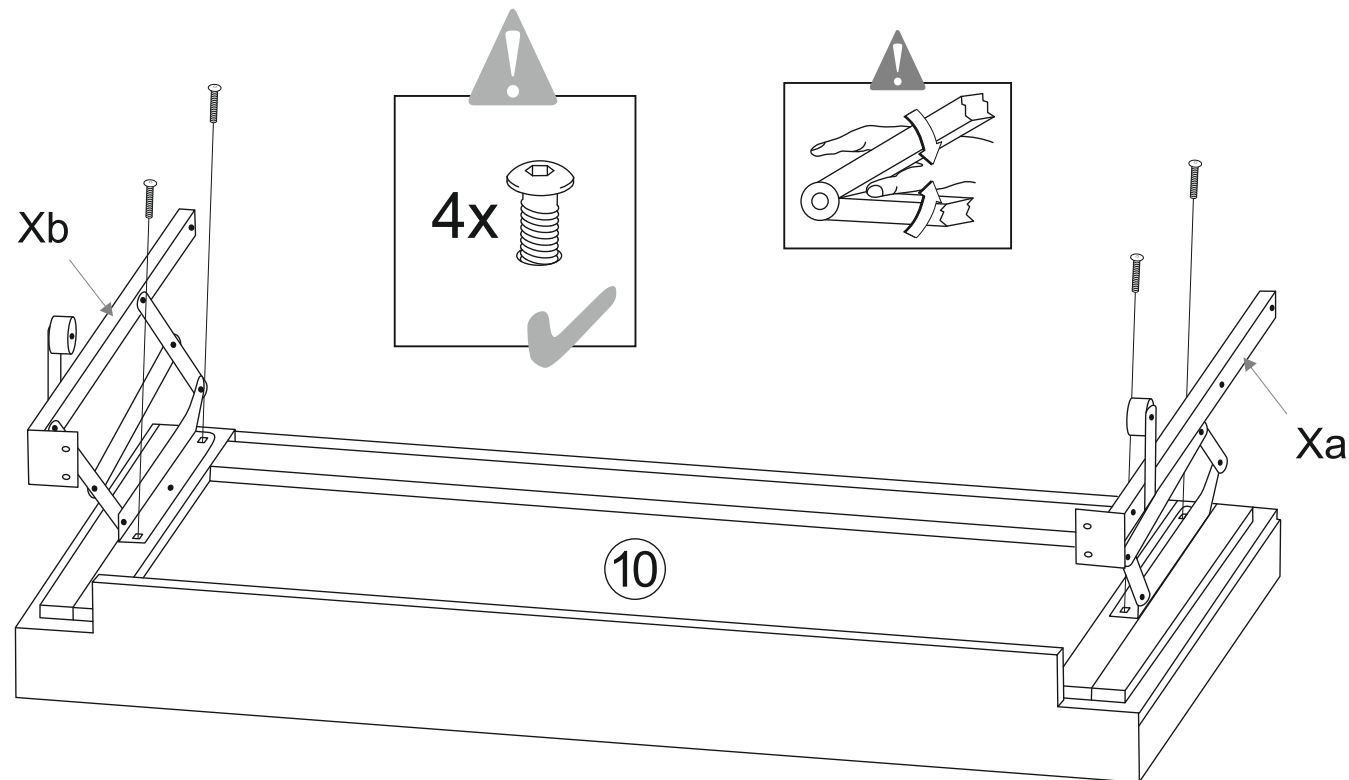


Xax1

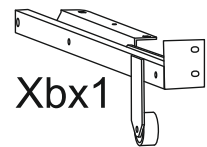



Xbx1







Cx4







5'

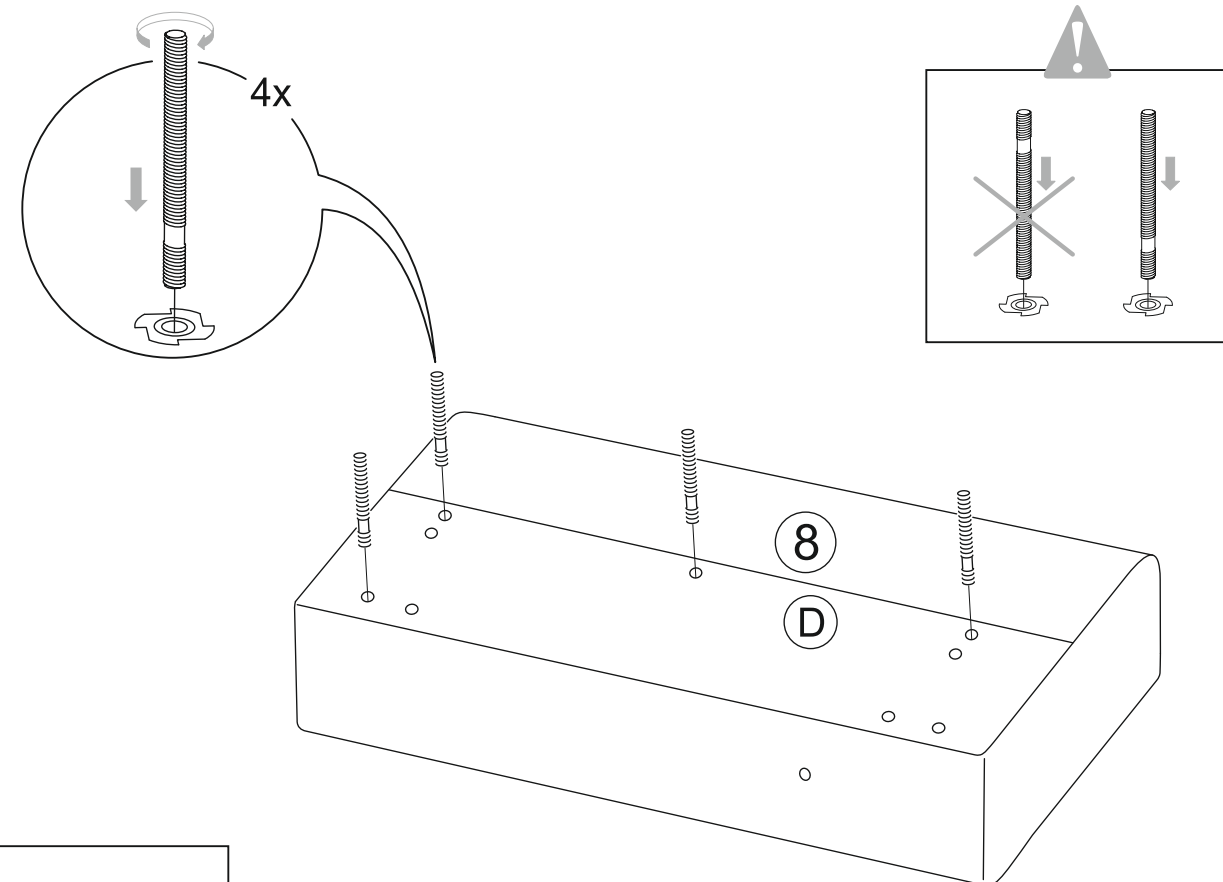


Ax4

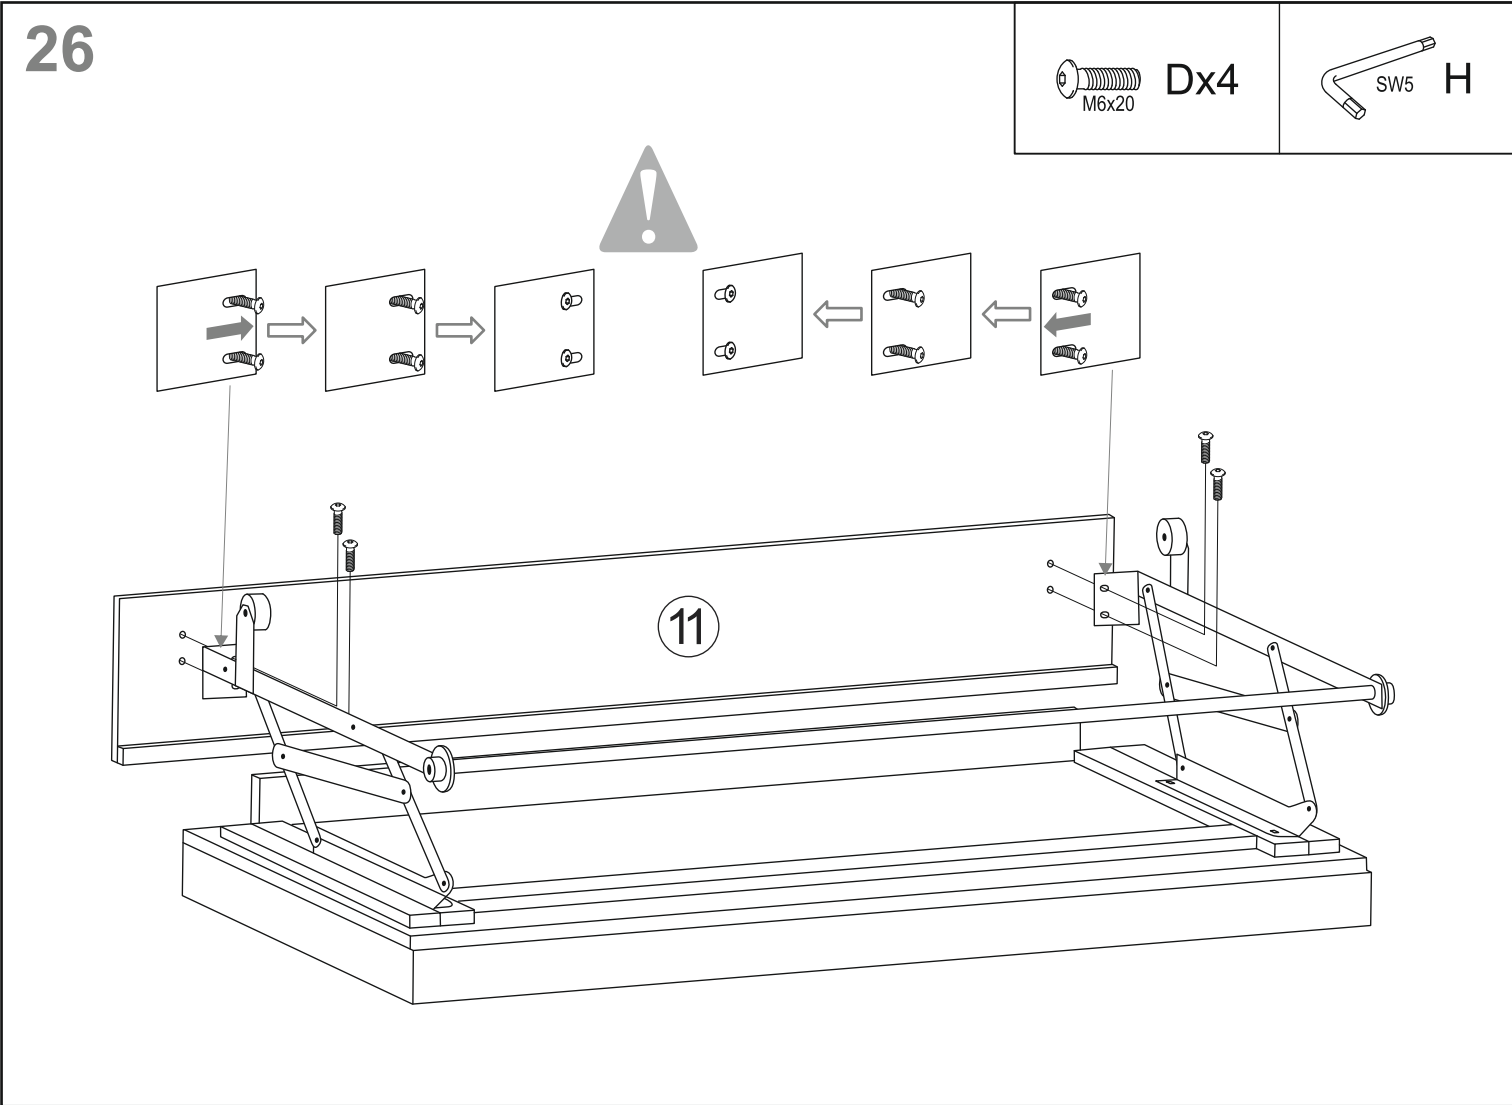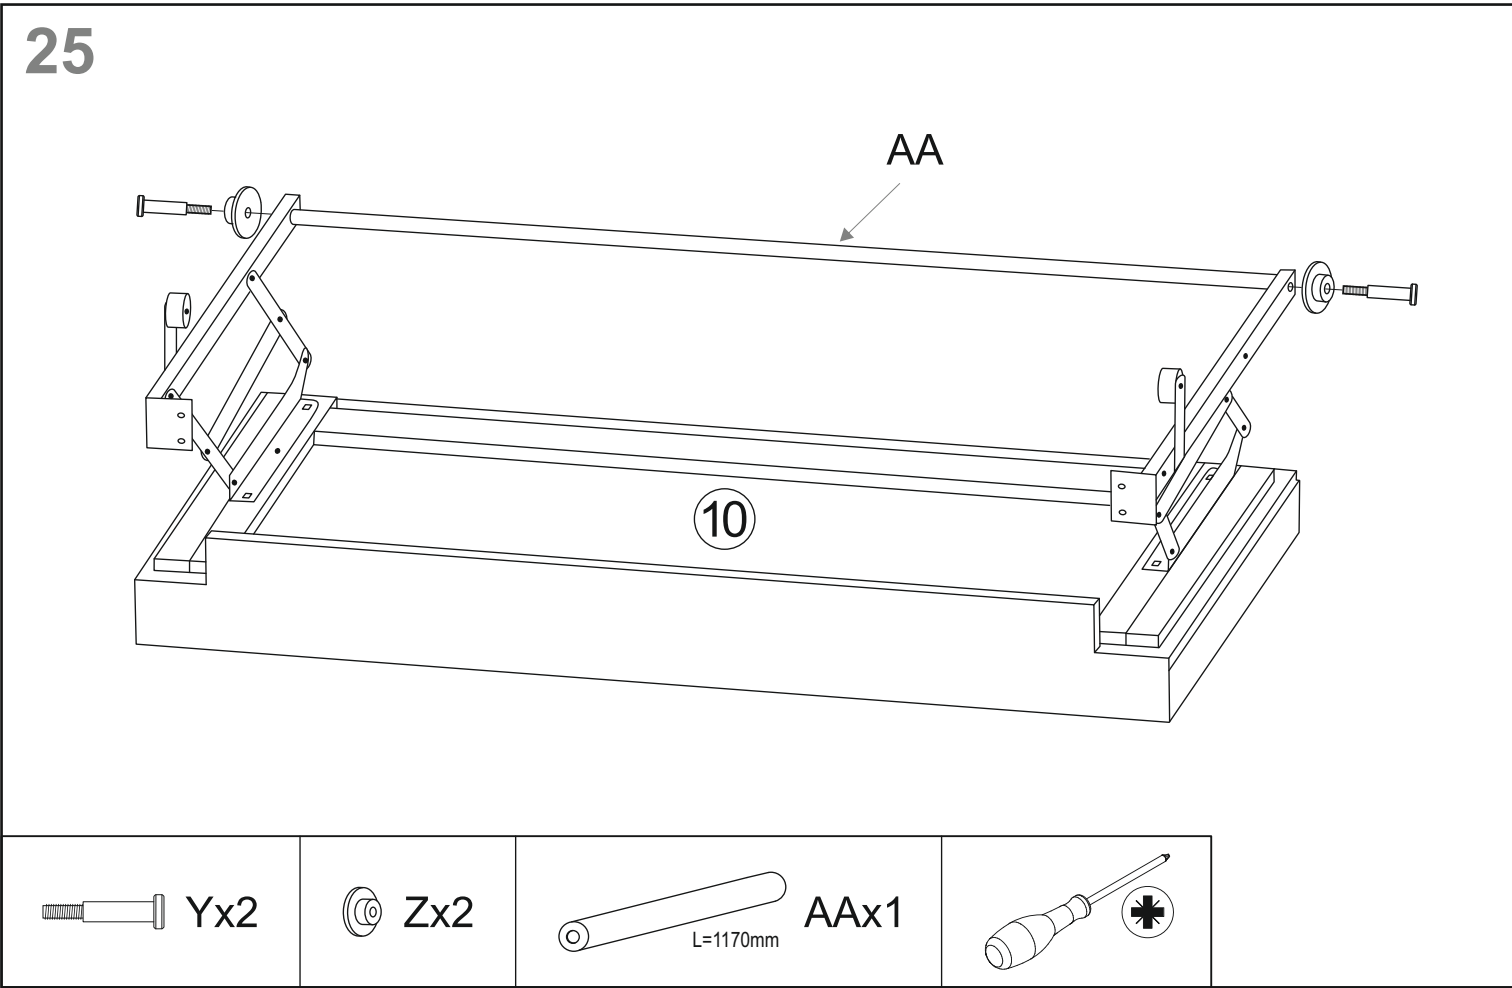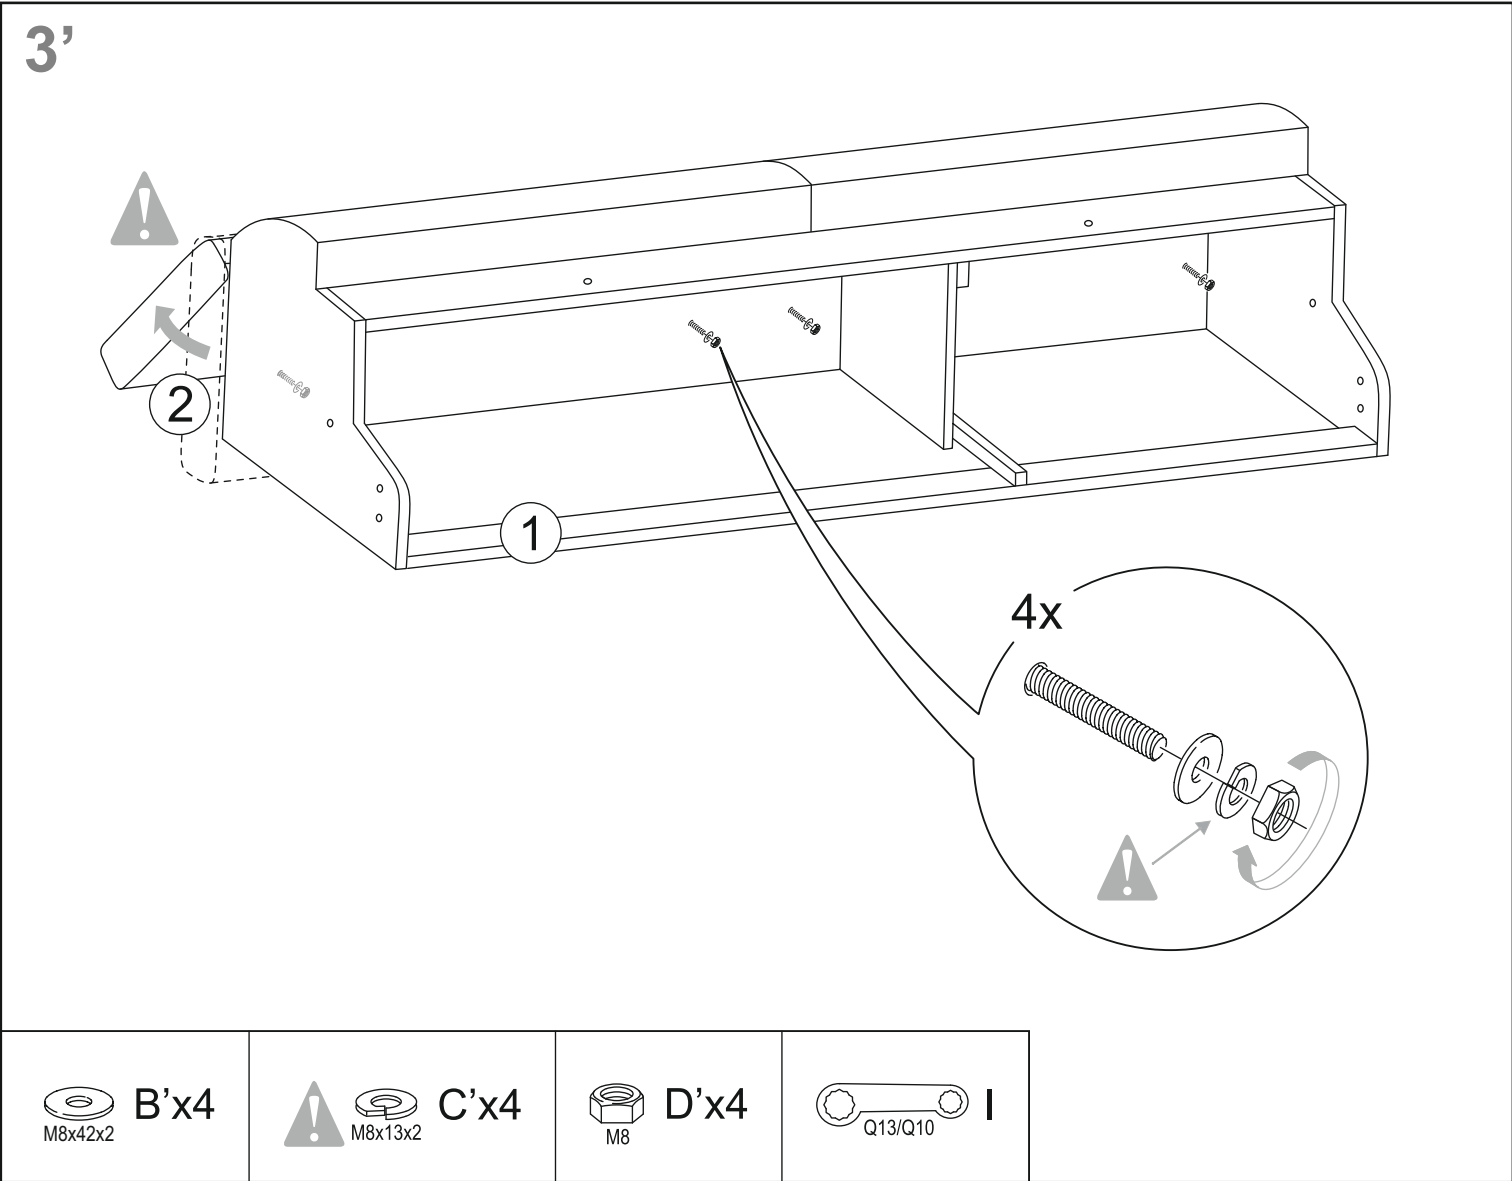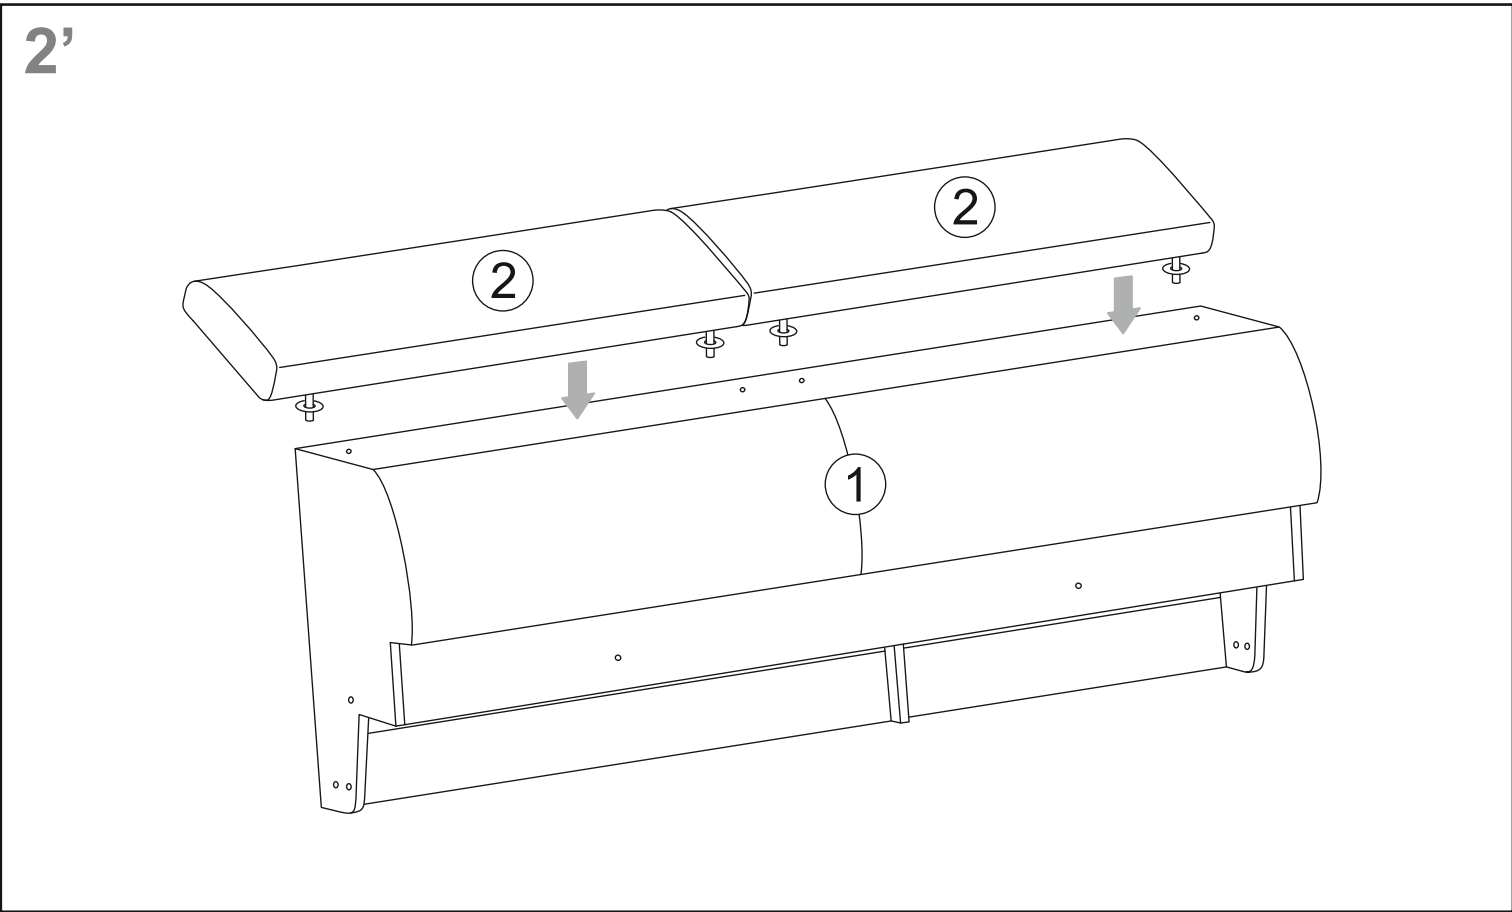

27

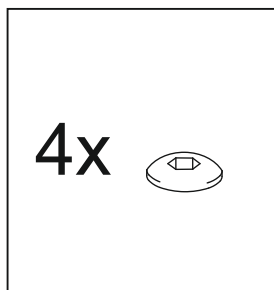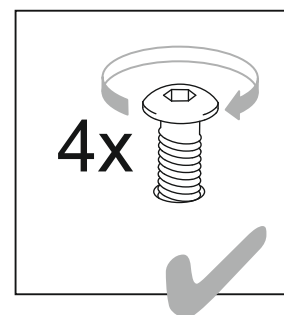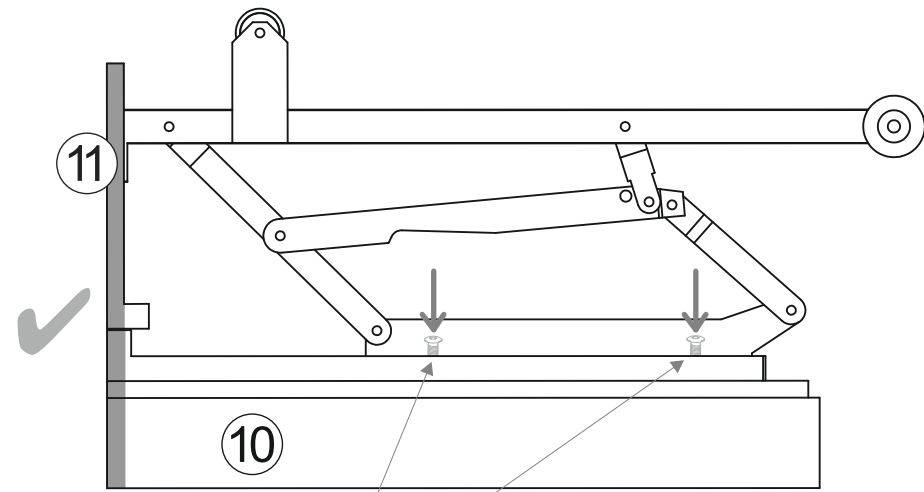

28

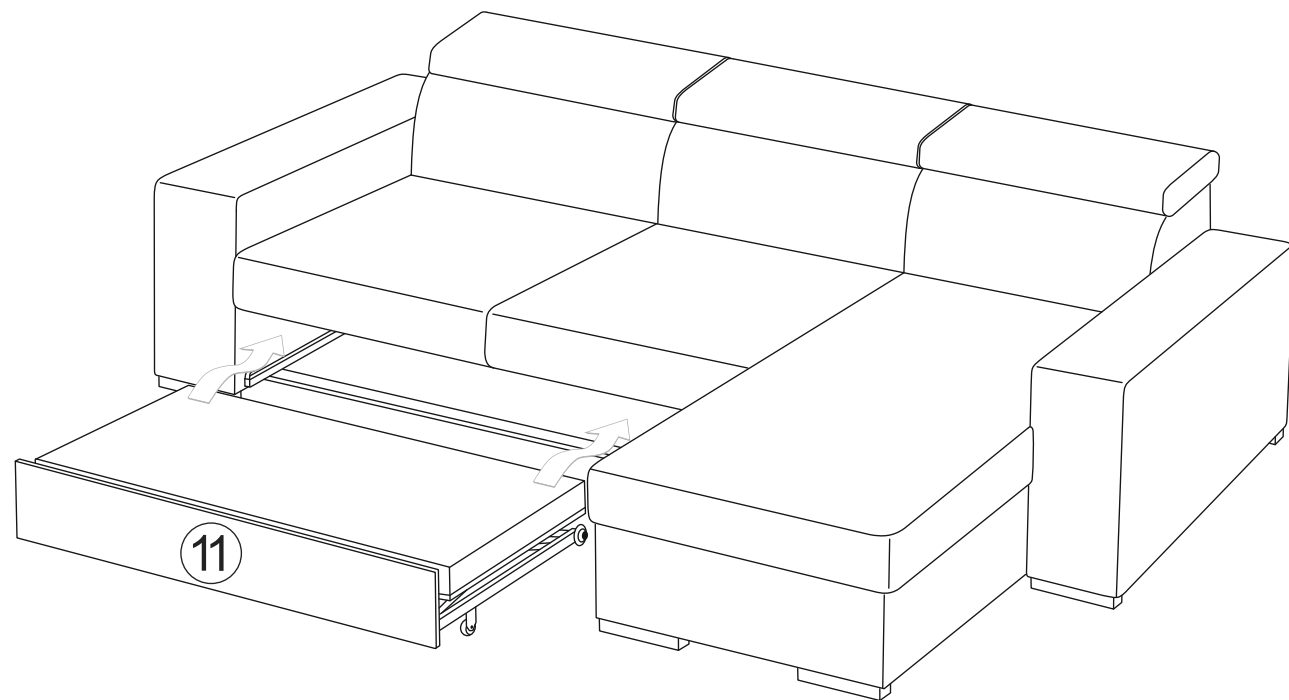

1'

