




ASSEMBLY INSTRUCTION: 12540016/01

möma 


BDSK Handels GmbH & Co. KG
Mergentheimer Straße 59
DE-97084 Würzburg, Germany

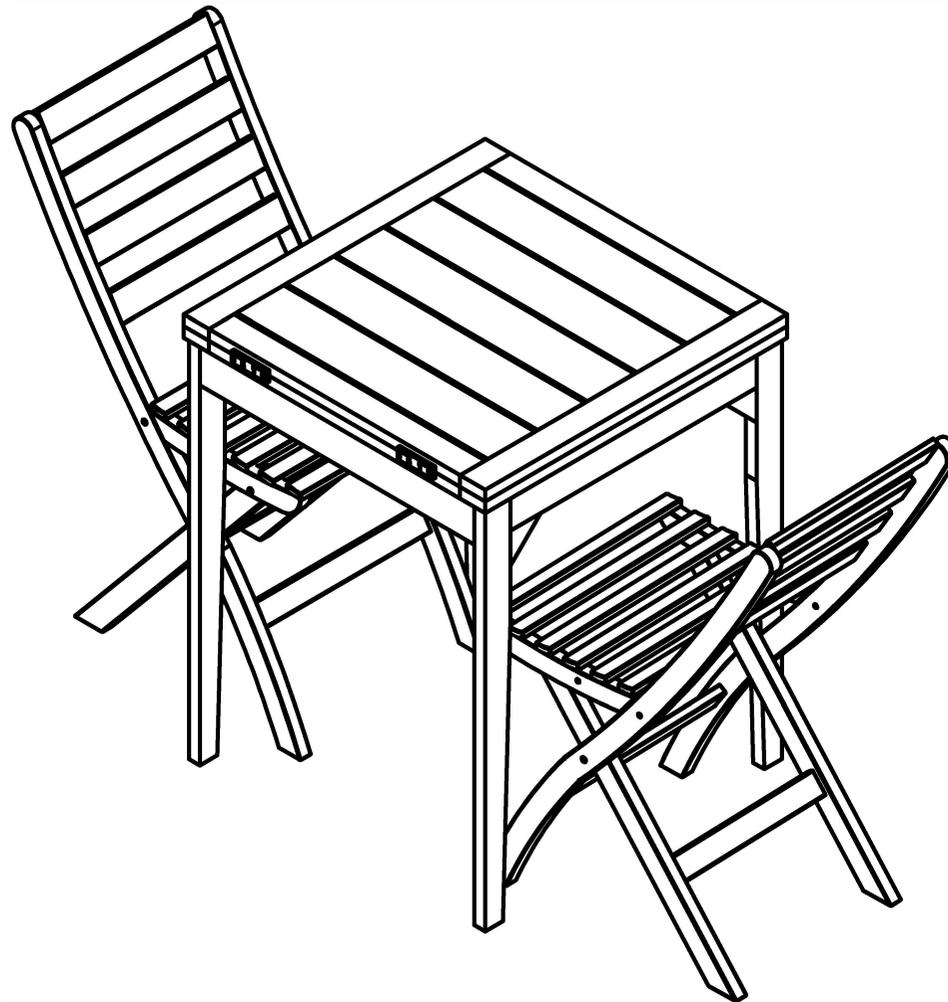


ASSEMBLY INSTRUCTION: 12540016/01

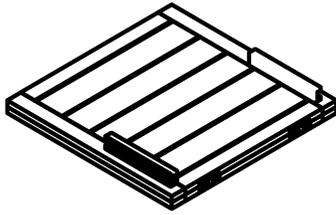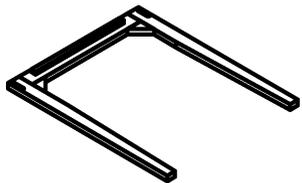No	Name of Hardware	Fig	Qty	A	B	C
1	Screw M6x60		8			
2	Allen Key		1	x1	x2	x2

Step 1:

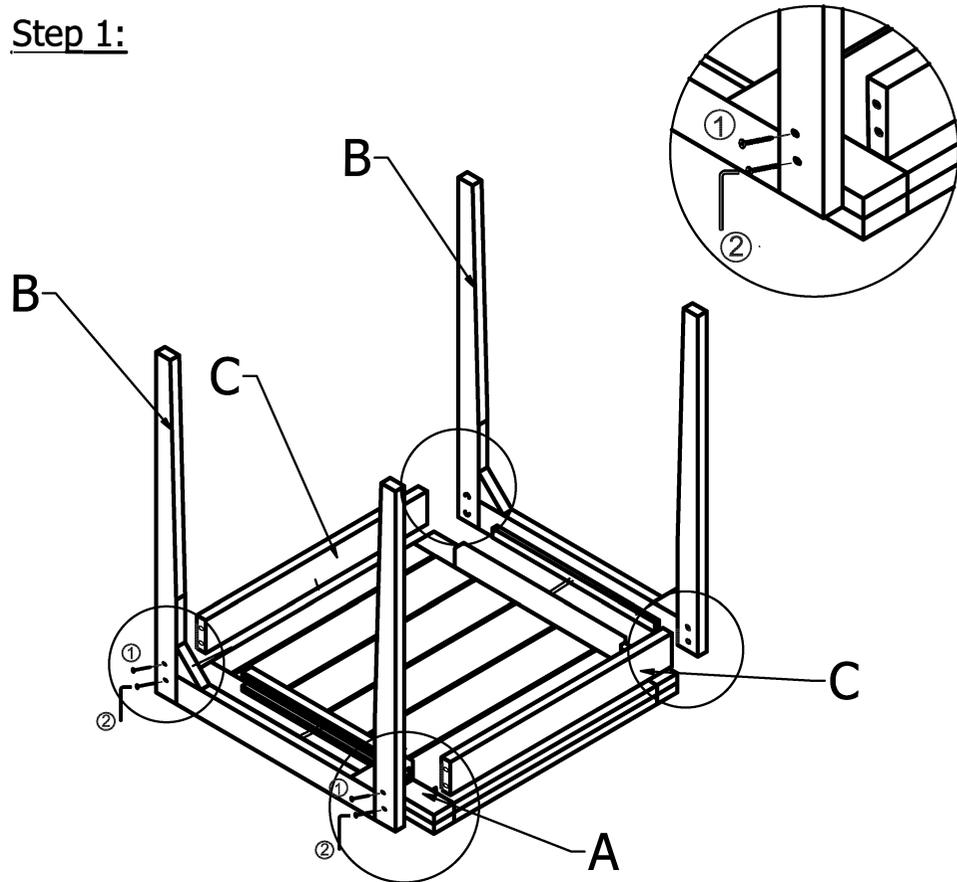


Step 2:

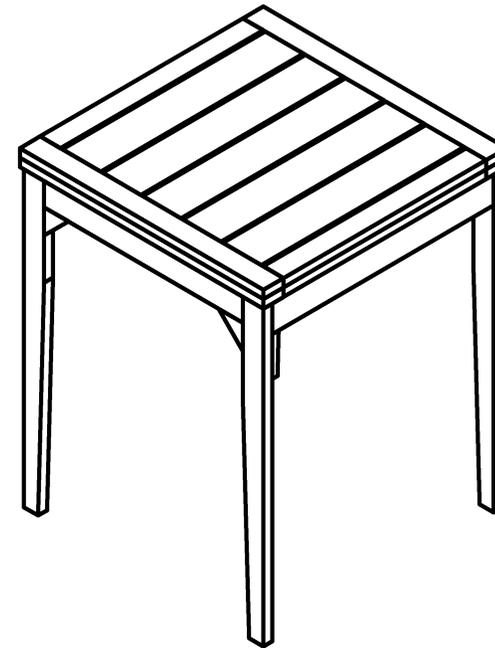


ASSEMBLY INSTRUCTION: 12540016/01


Step 3:

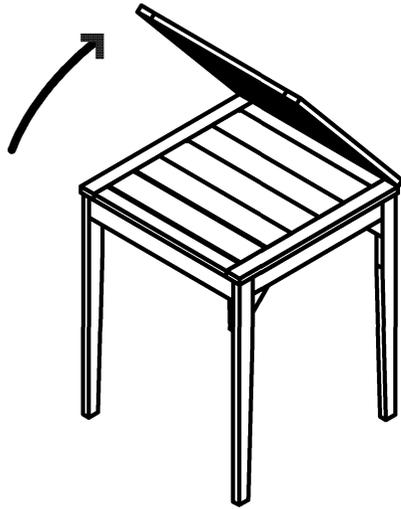

Step 4:

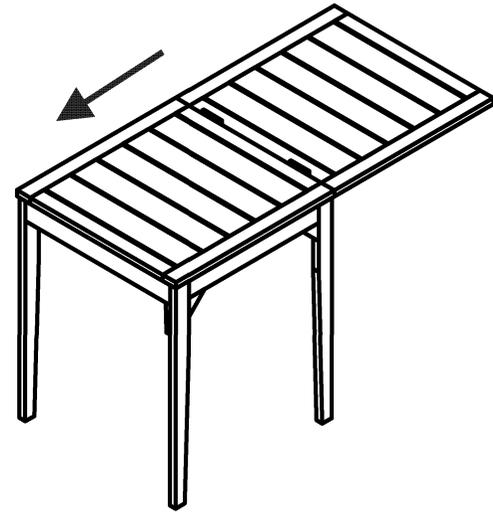


Step 5:

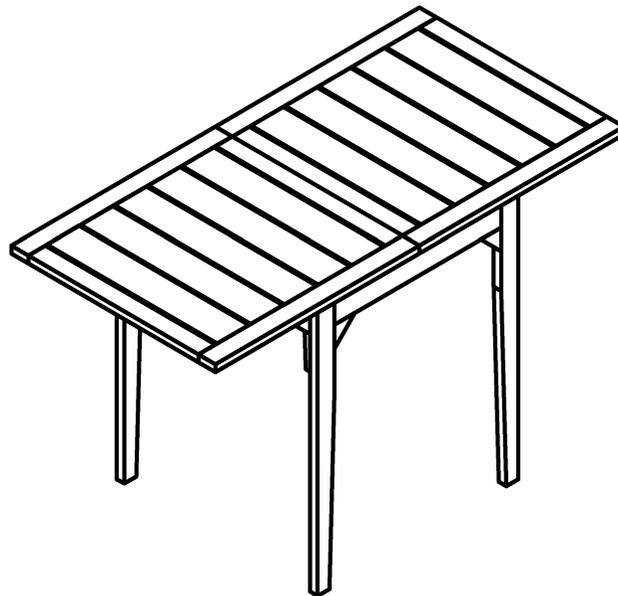


ASSEMBLY INSTRUCTION: 12540016/01

Step 1:

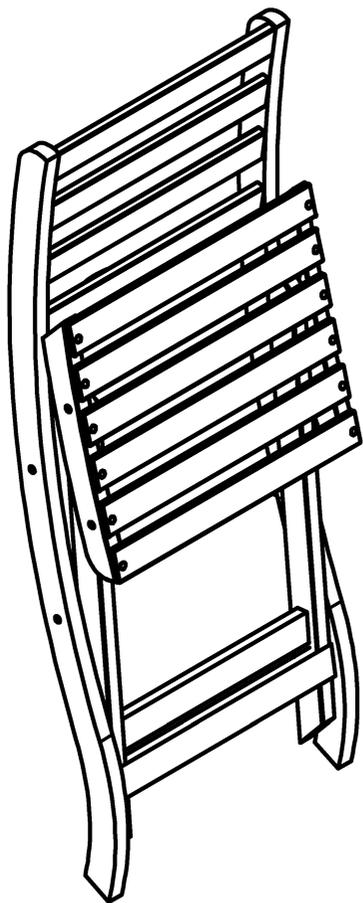

Step 2:

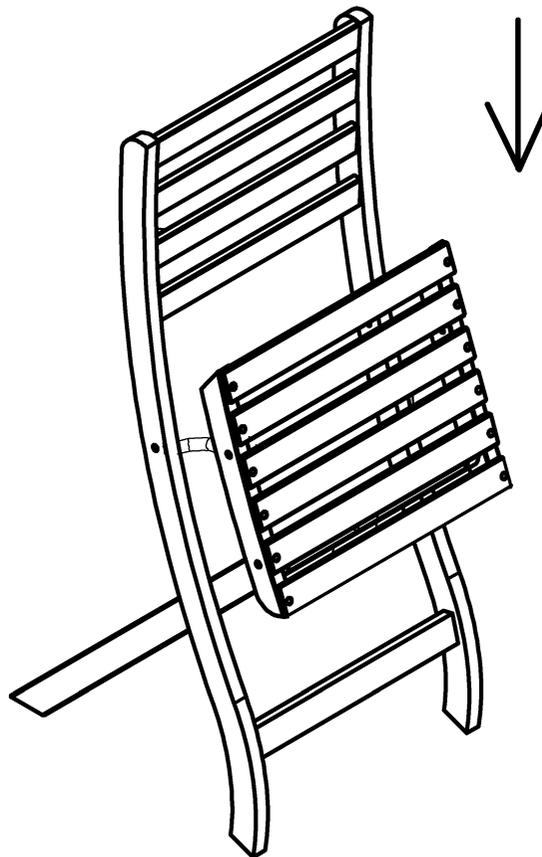

Step 3:

