





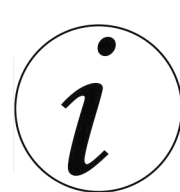


Sofa Berna / Berna Sofa

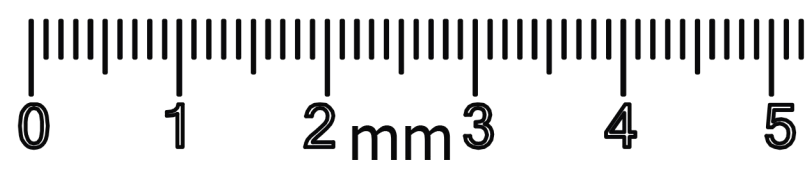

8

13

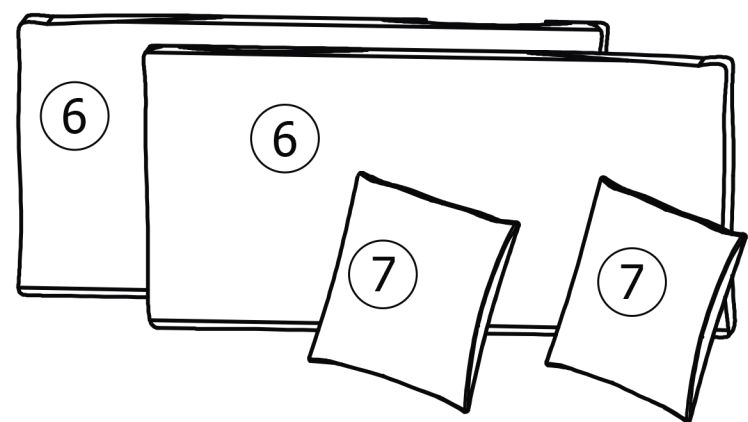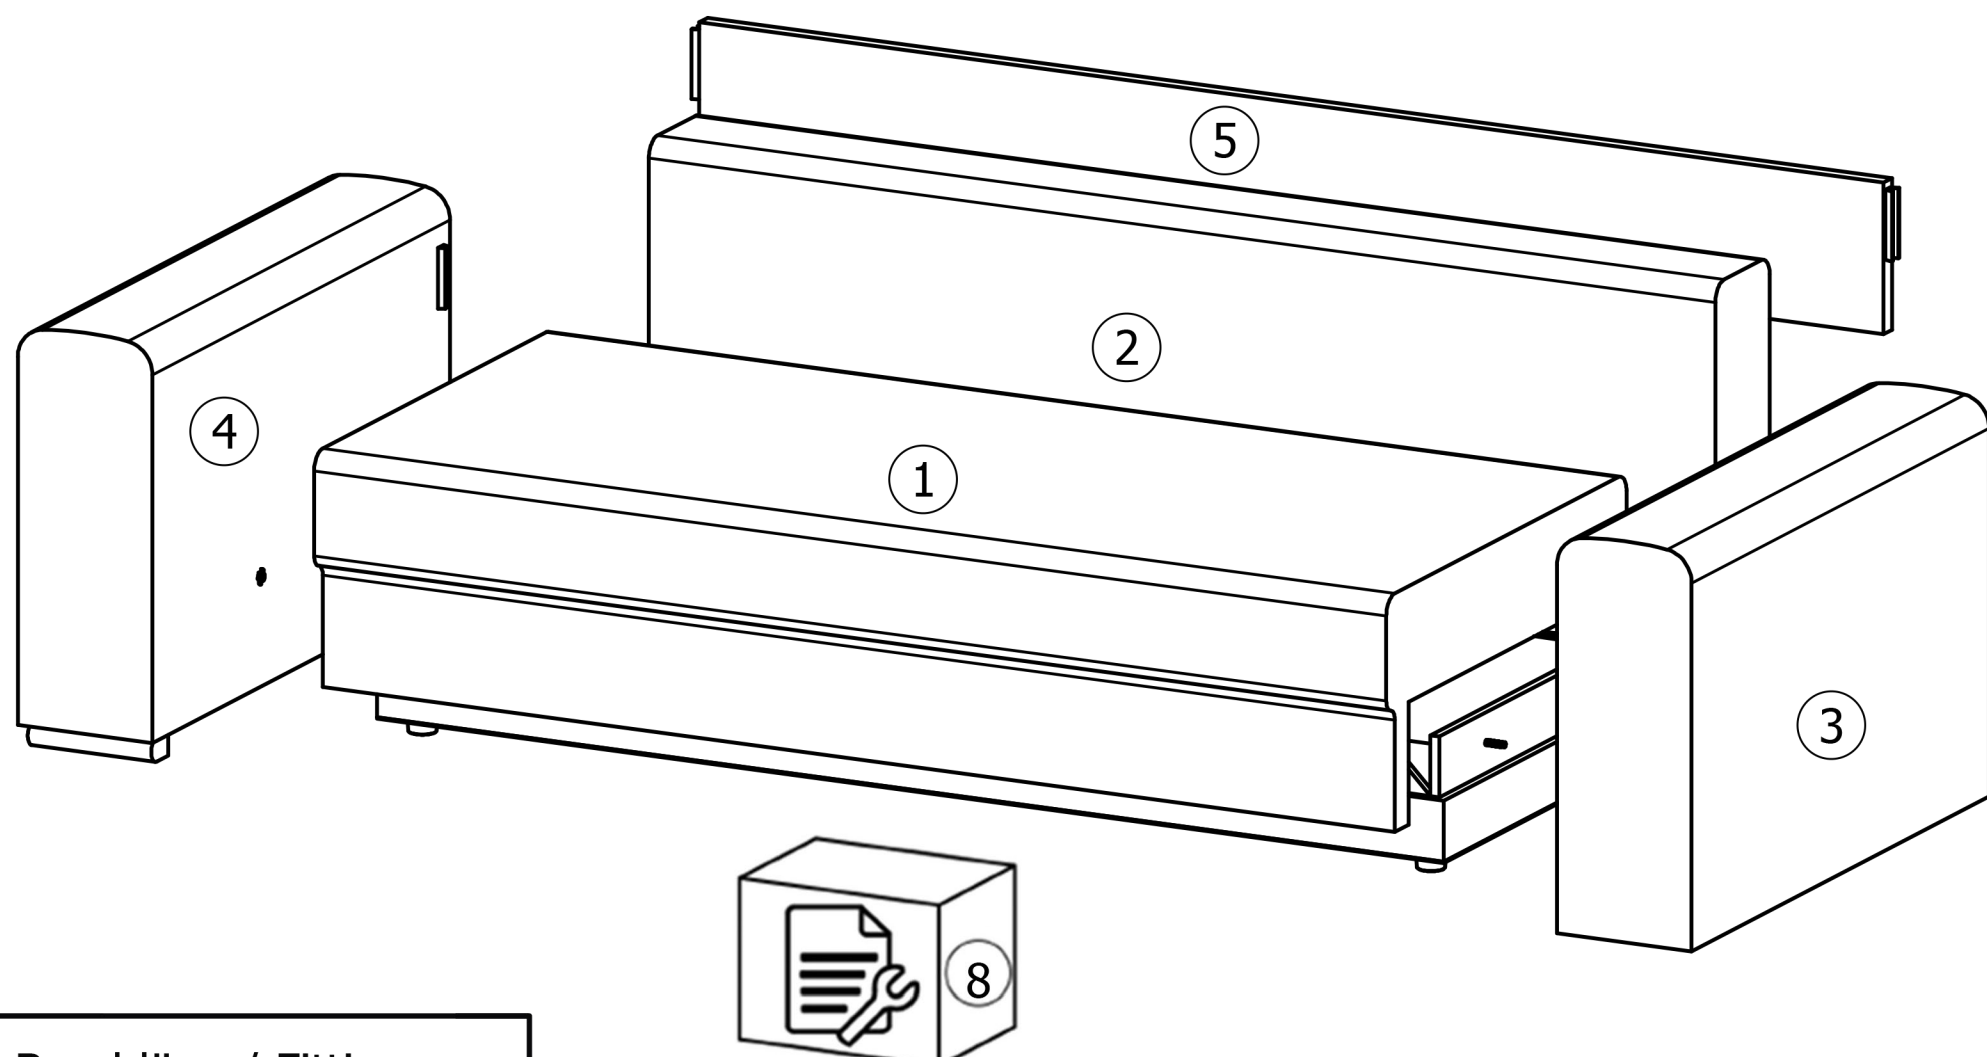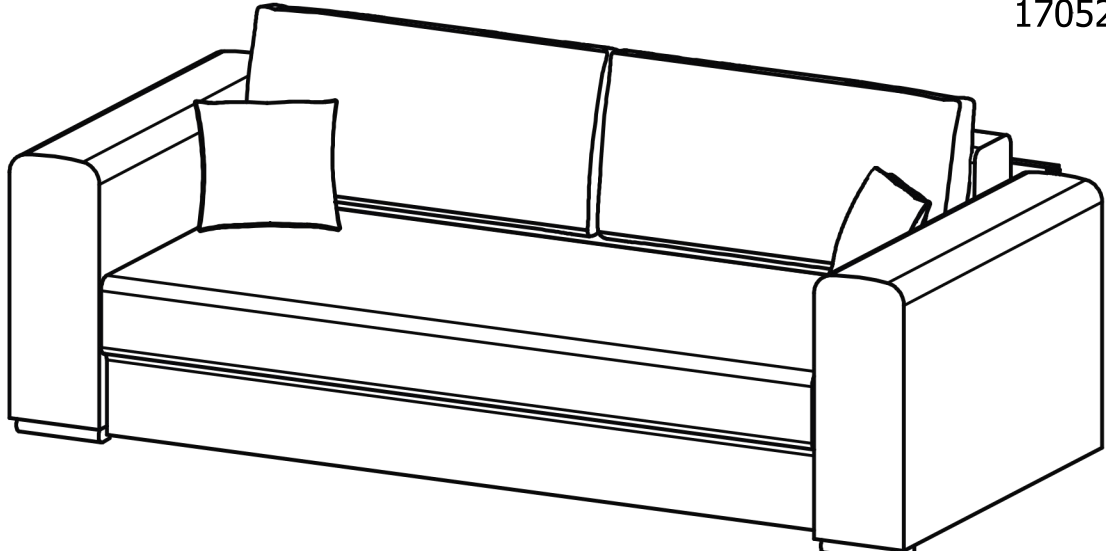

				PCS	
①	190	43	84.5	×1	1/2
②	190	22	71	×1	1/2
③	103	24	54	×1	2/2
④	103	24	54	×1	2/2
⑤	210	4.5	22.5	×1	1/2
⑥	95	53	10	×2	1/2
⑦	40	40	10	×2	1/2
⑧	21.5	20	10	×1	1/2


Beschläge / Fittings

PC H 40




× 8

PU H40

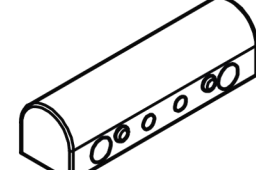


× 2

H1 3,5×35

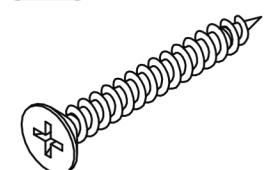

× 4

P M8×50

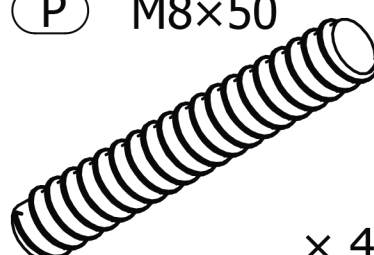

× 4

Pi M8




× 4

Sa M8



× 4

S1 M6×45

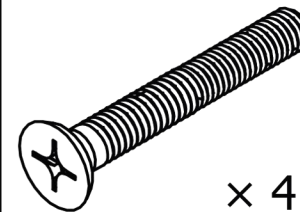

× 4

1

PC


PC

PC


PC

PC


PC

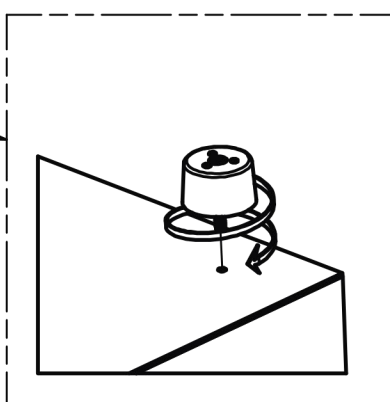

=>

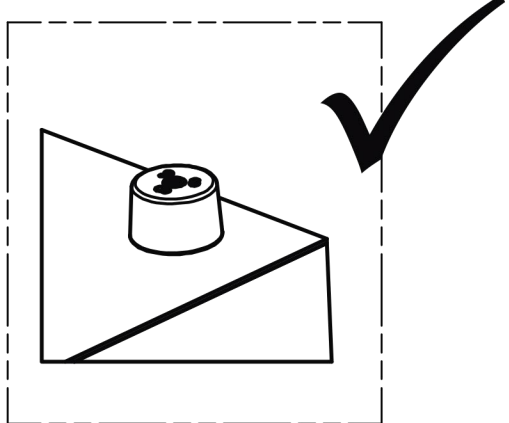

PC H 40

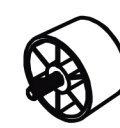


× 6


2








1

2



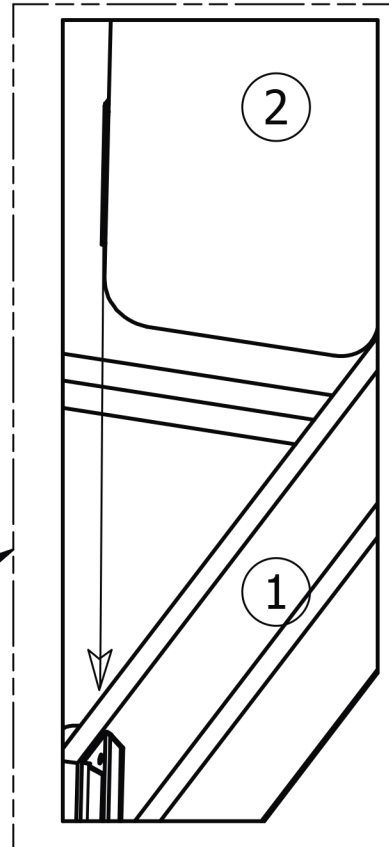


=>

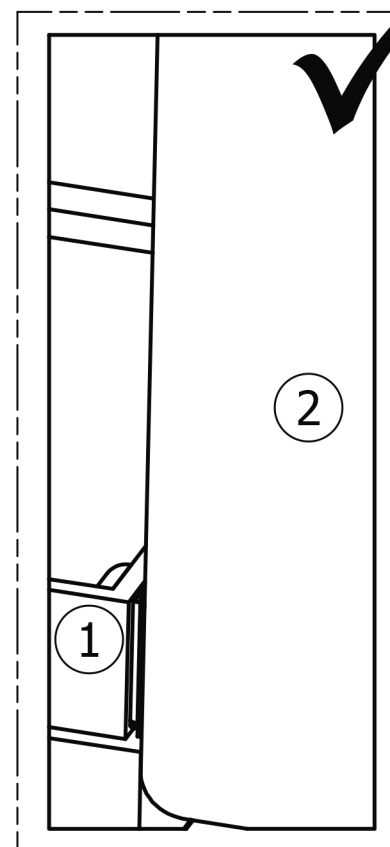


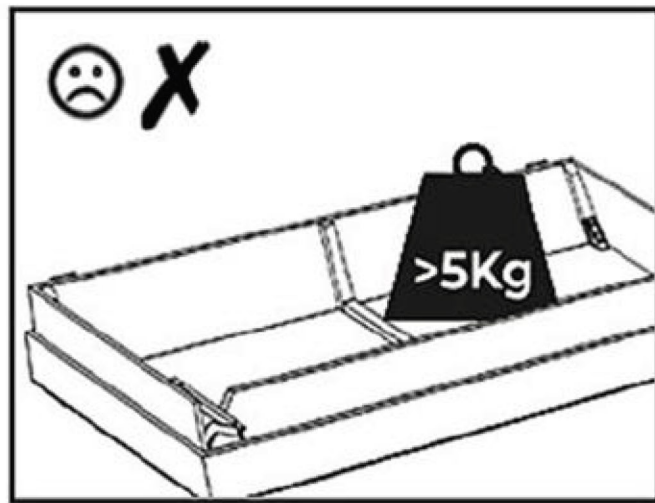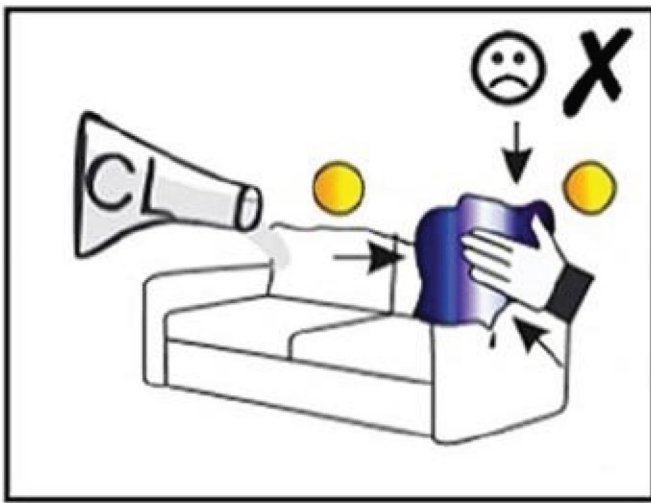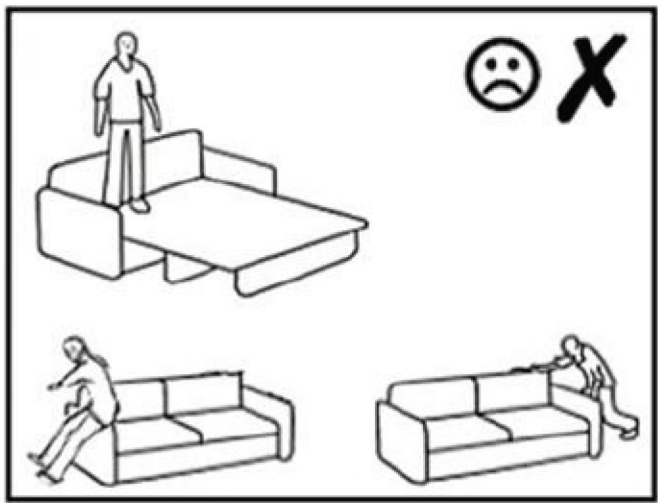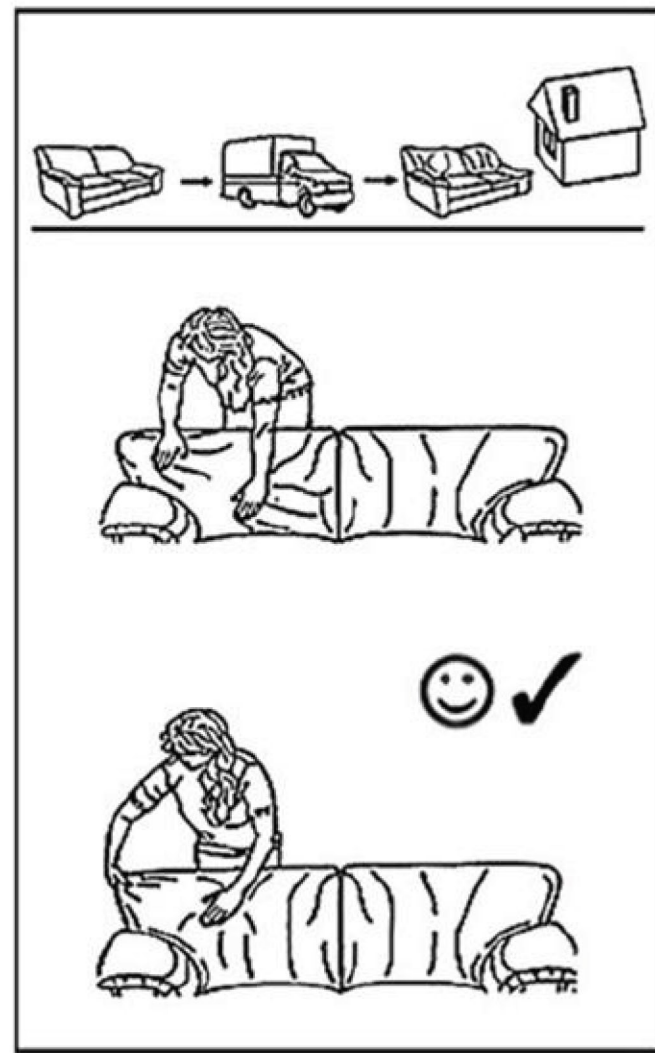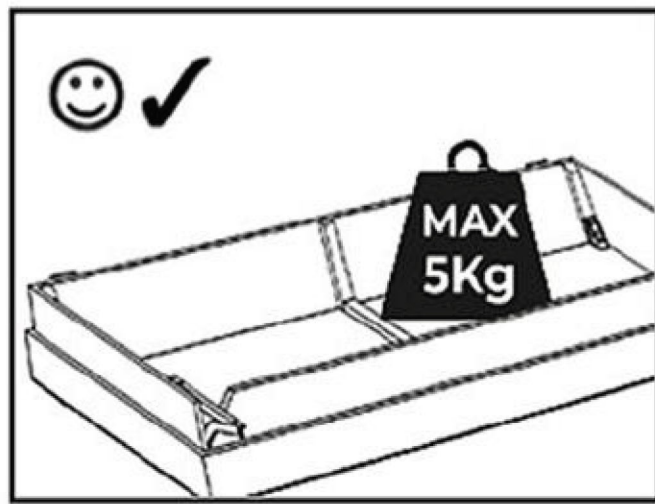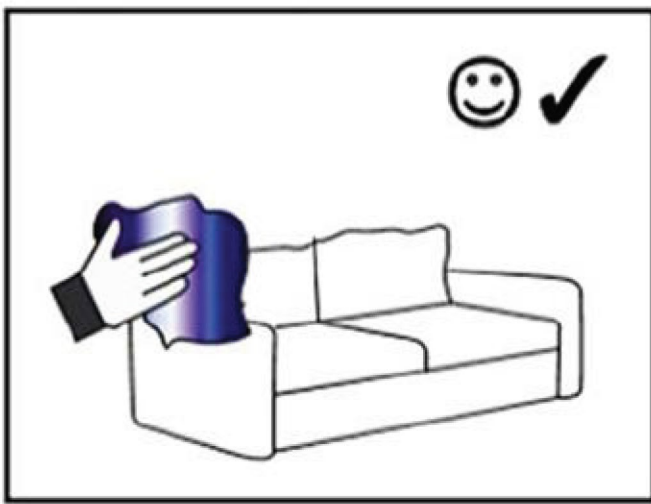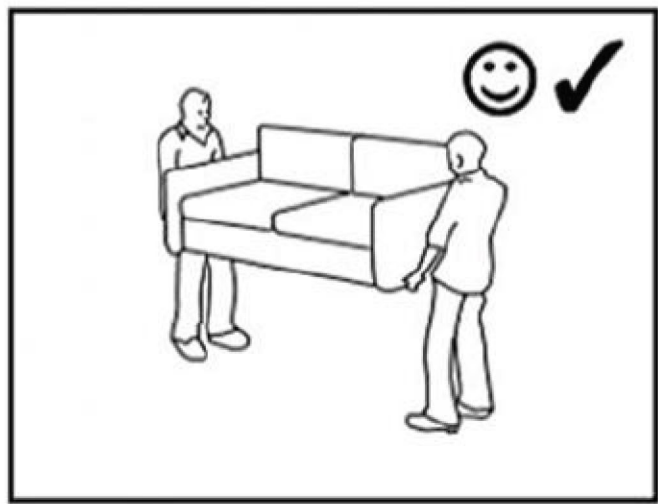




Stoffprobe im Reparaturfall
Fabric sample in case of repair

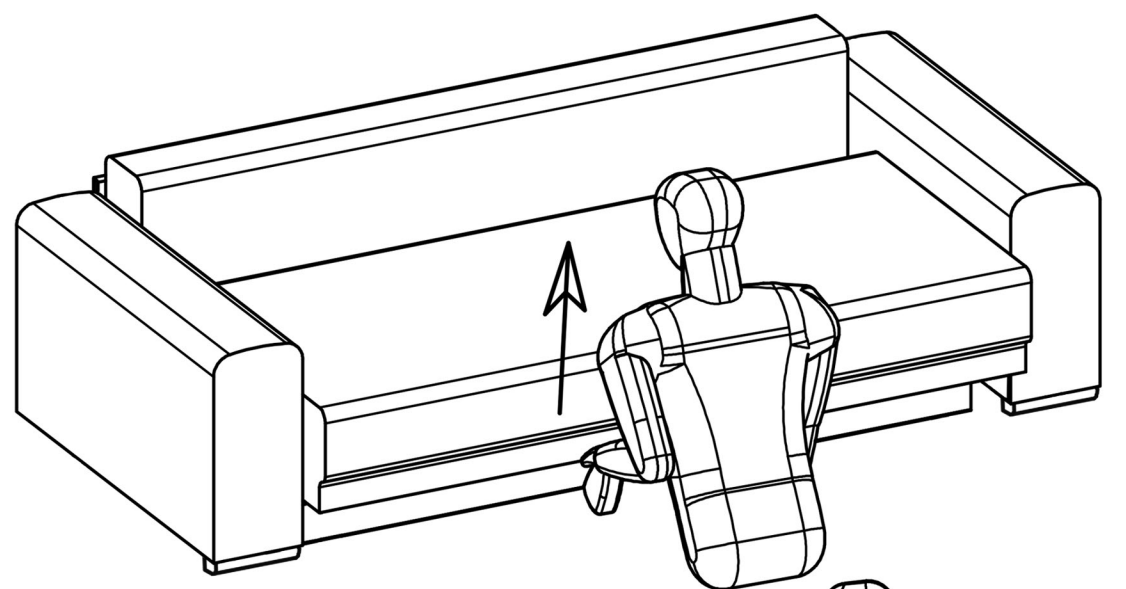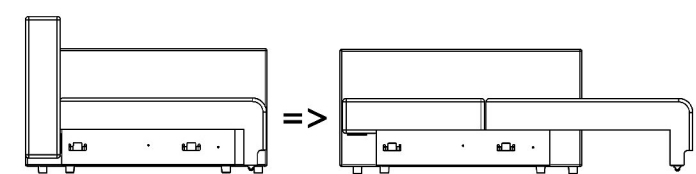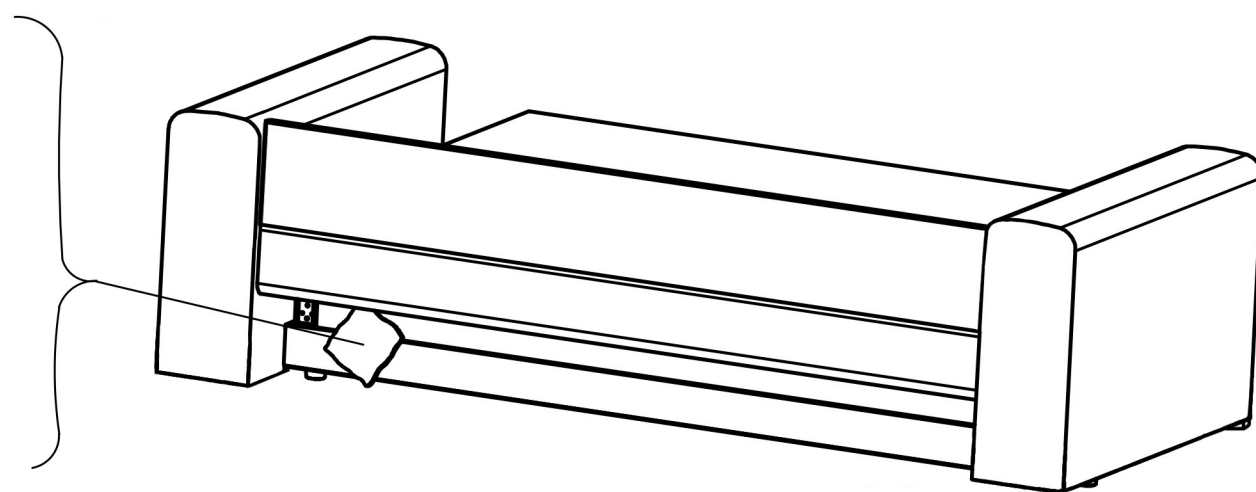


1

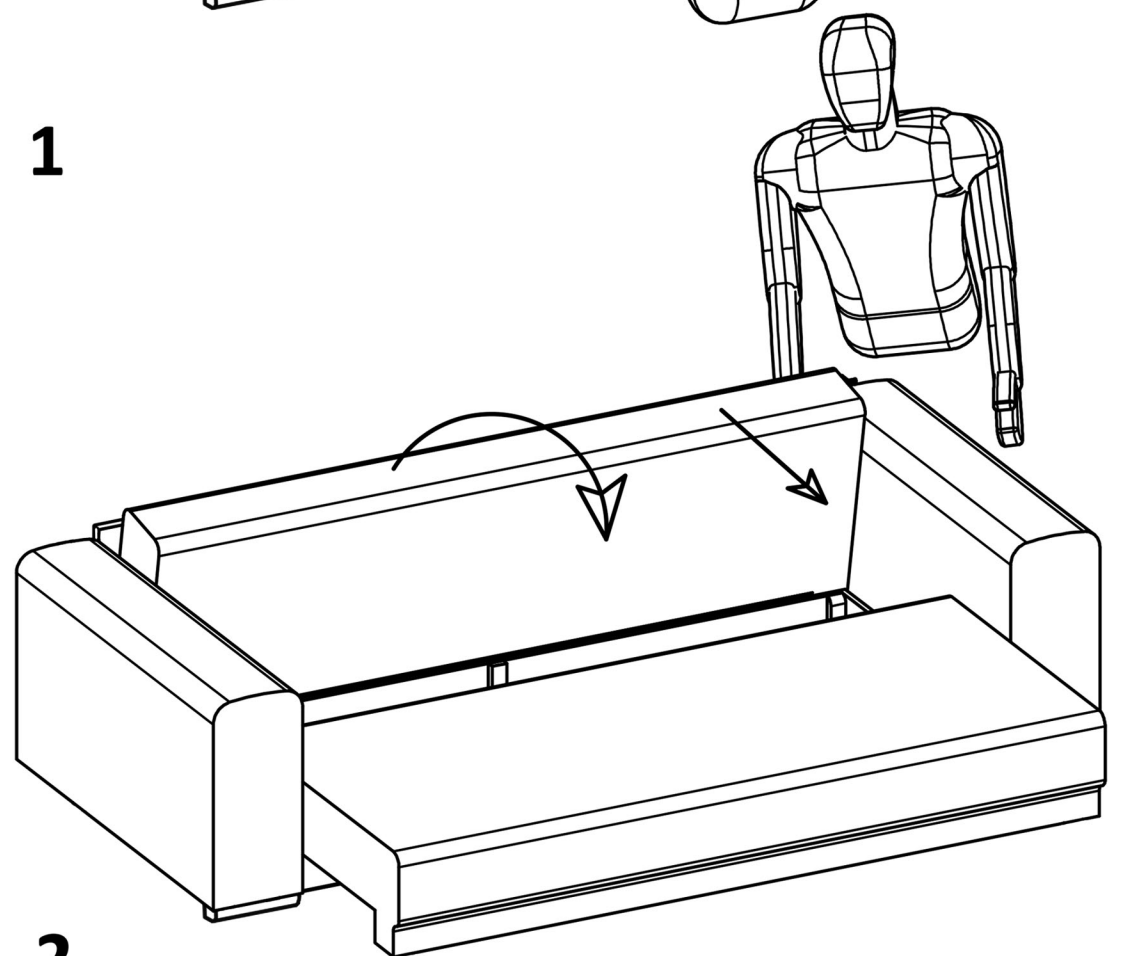

2

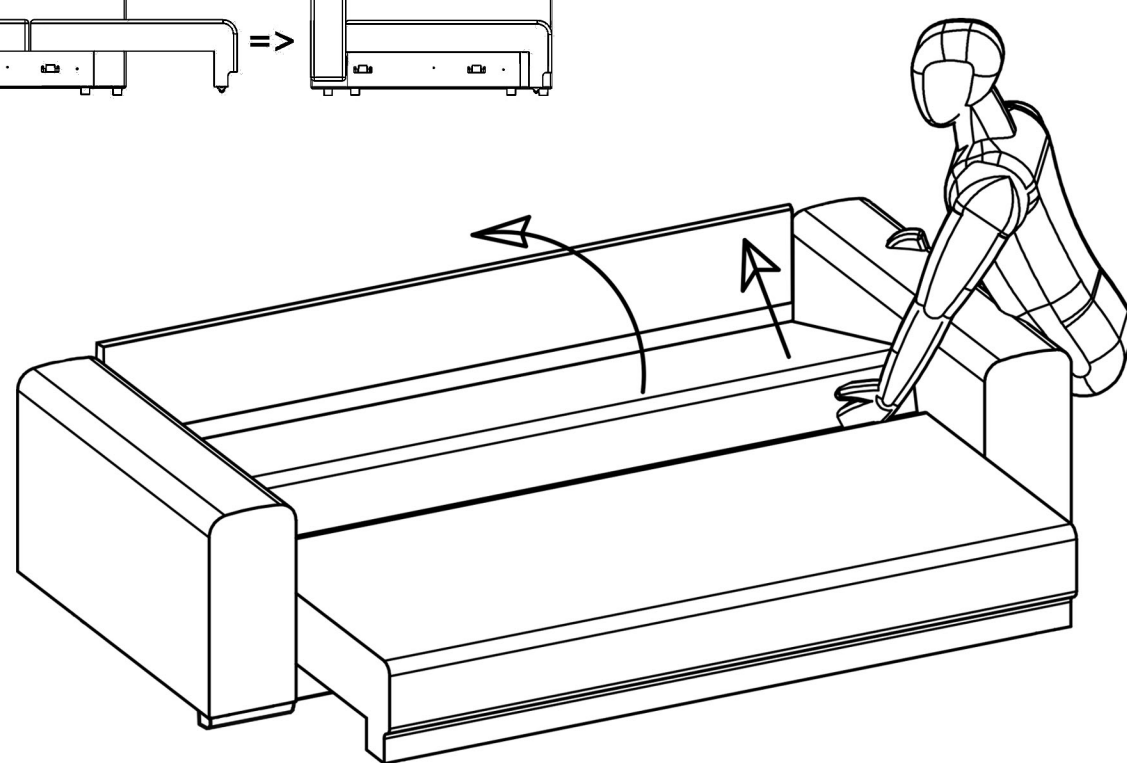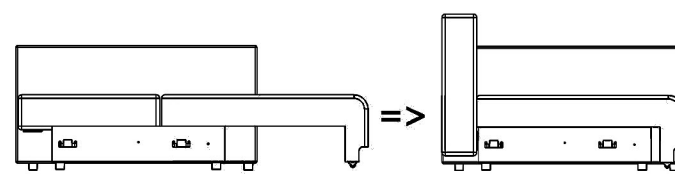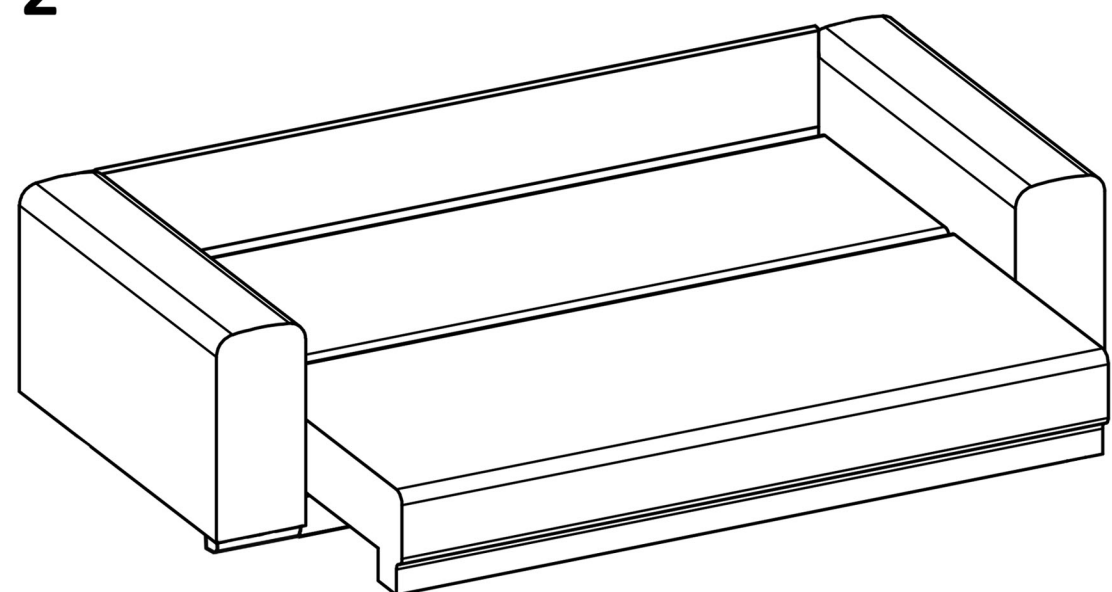

1

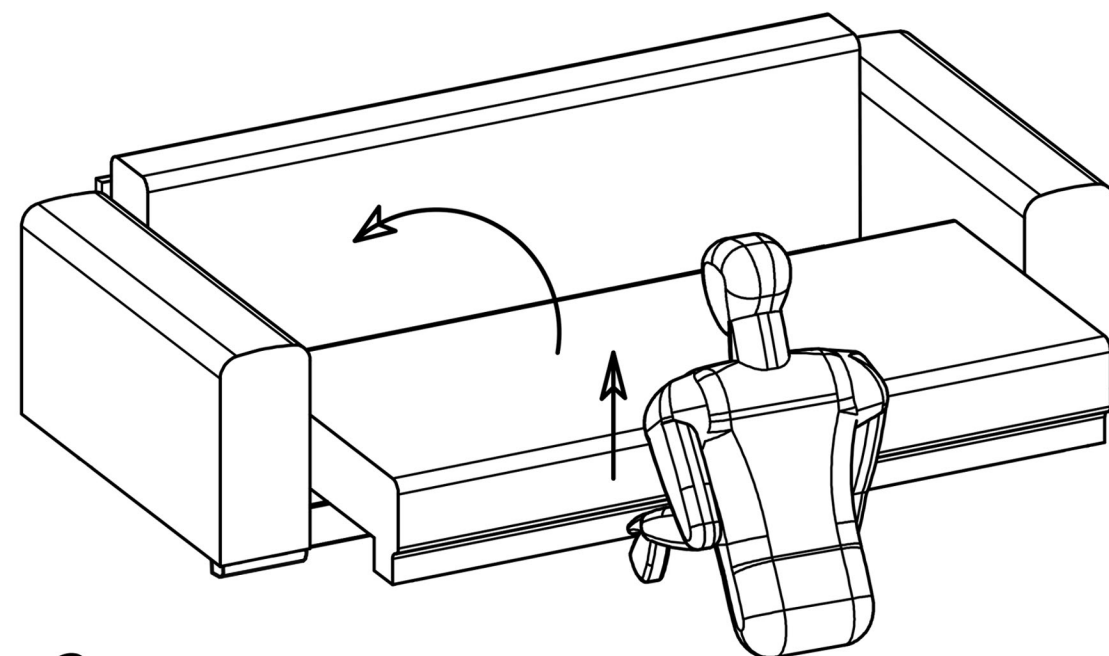

2

