


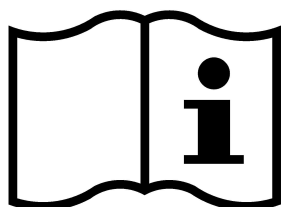


Montageanleitung von sessel

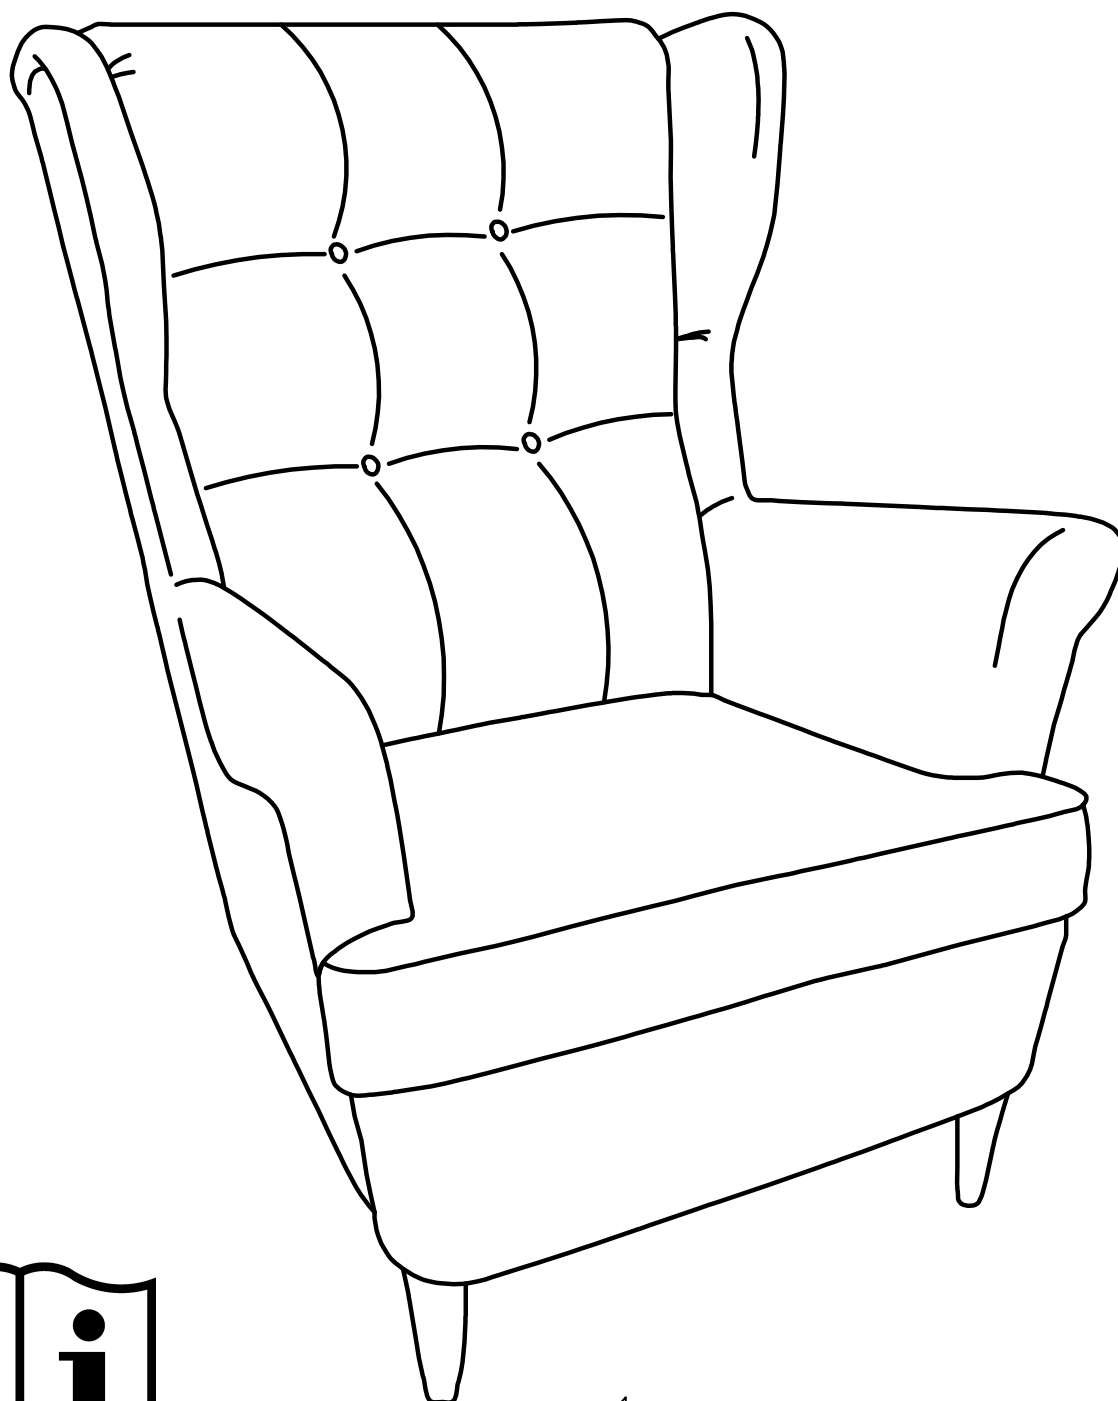





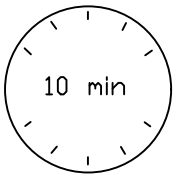


Schraubenschlüssel 13

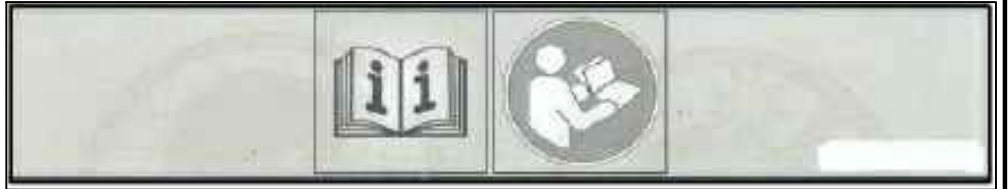


Elemente in einem Satz

A	B	C	D	E	K
L=135 x 2	L=120 x 2	x 4	x 4	M8X65 x 6	M8x 6

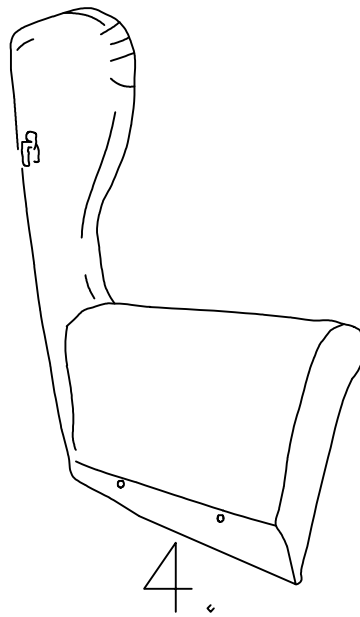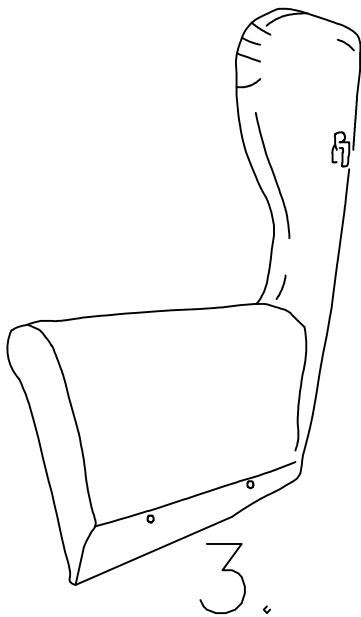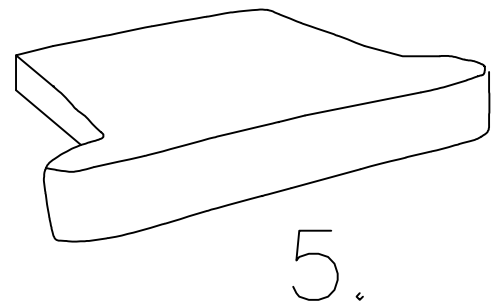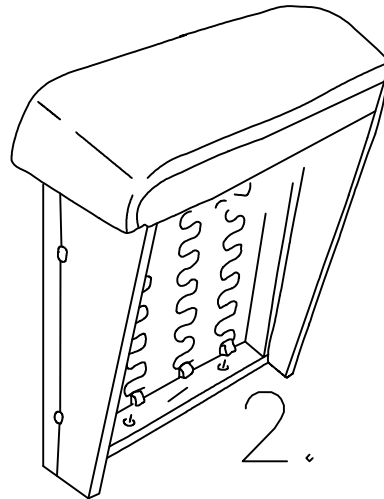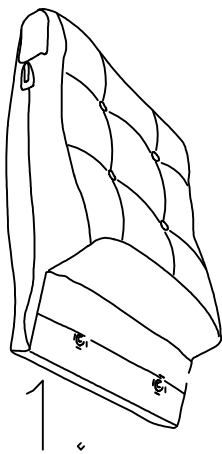


1.

E

M8X 65
x 2



K

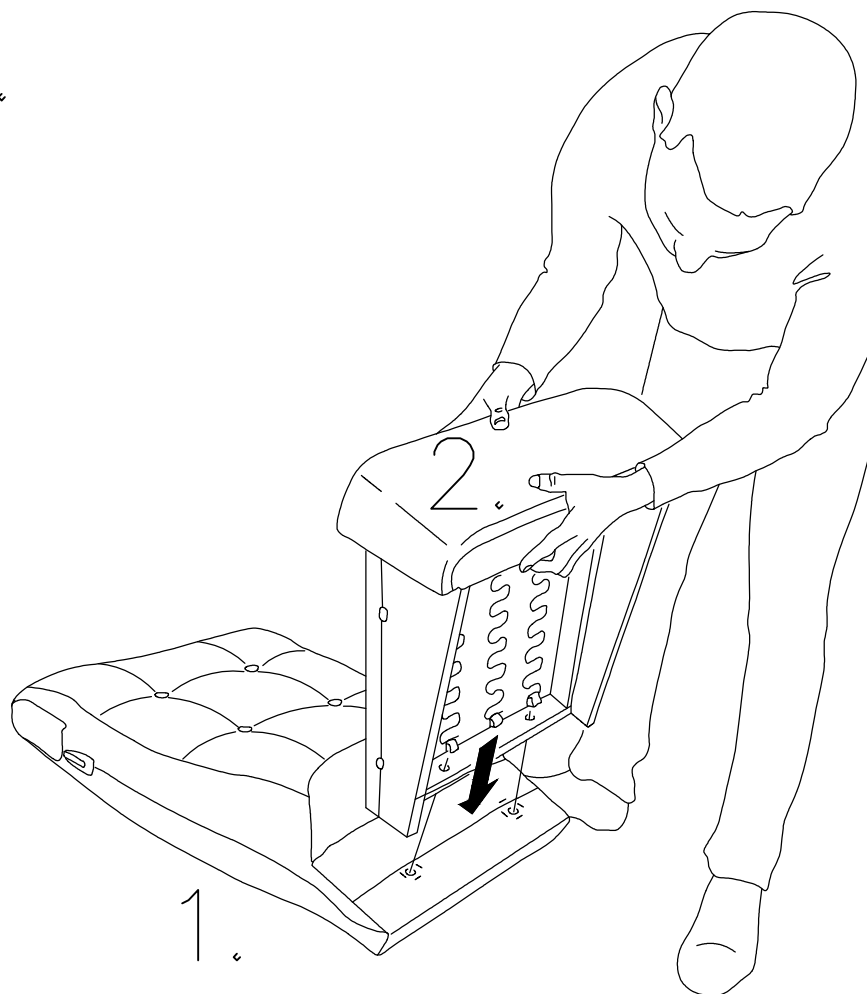M8x 2





2.

1.

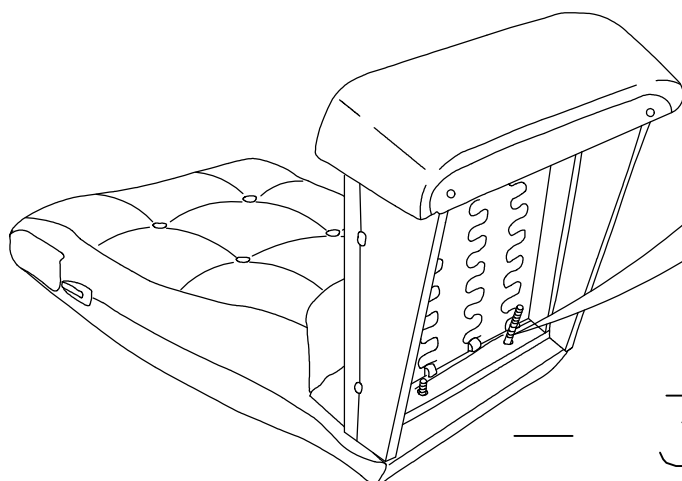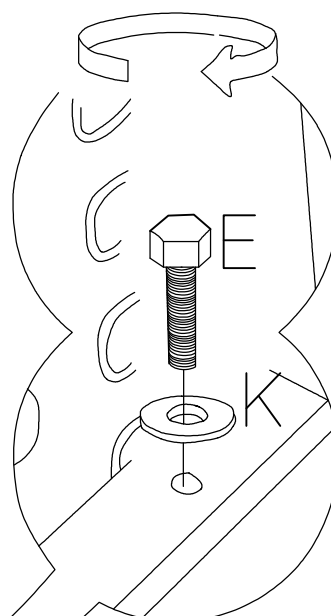


— 3 —

3.

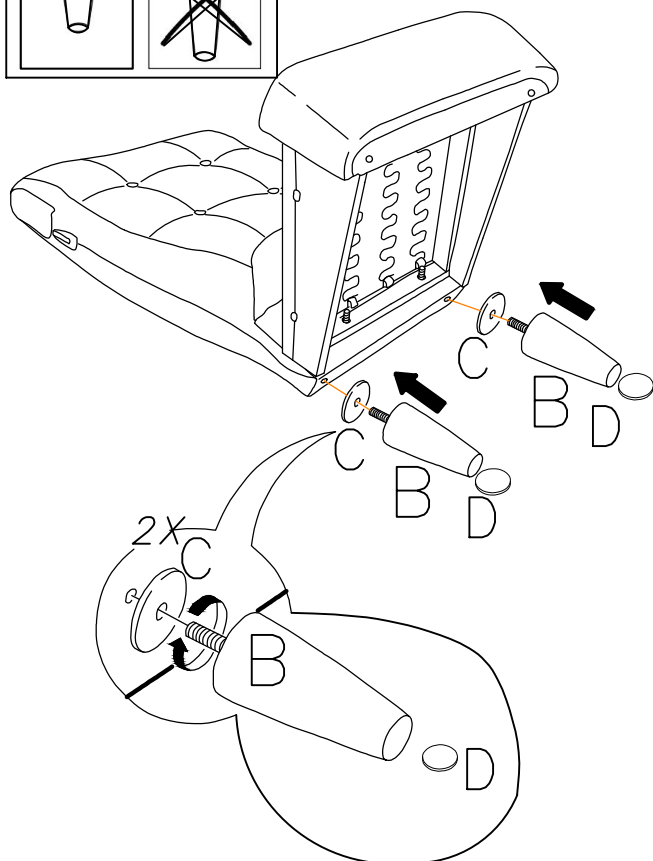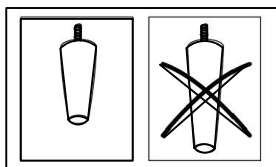

B



L=120
x 2

C




x 2

D



x 2

4.

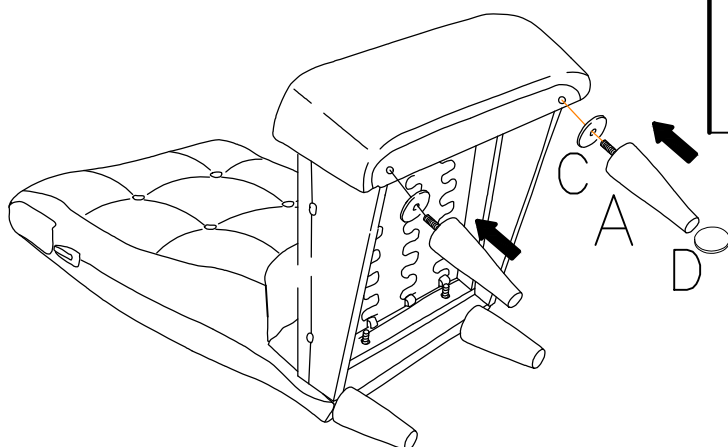

A



L=135
x 2

C




x 2


D




x 2

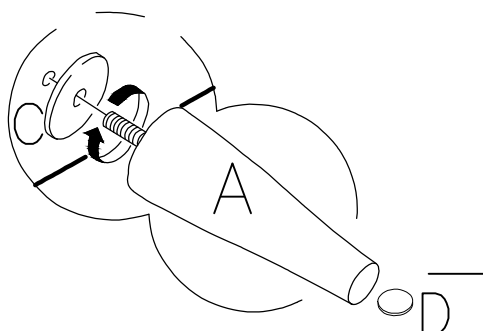


4

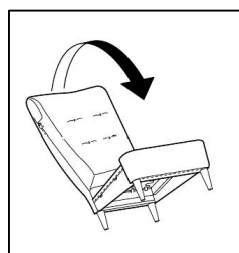

5.

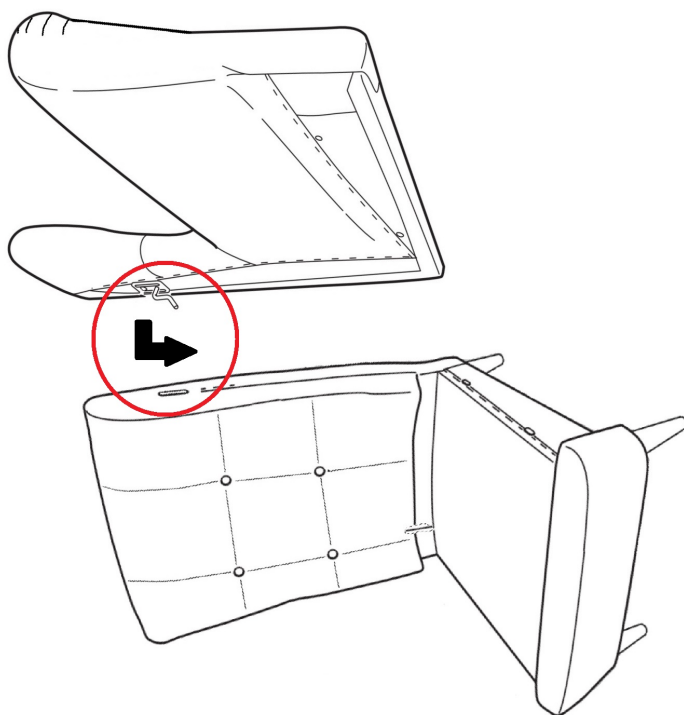




Nr 1

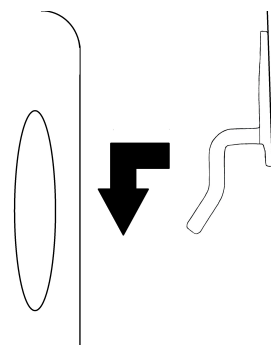

Nr 2





6.

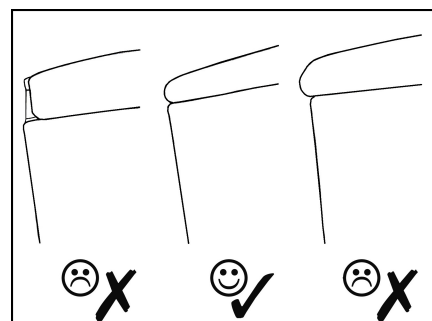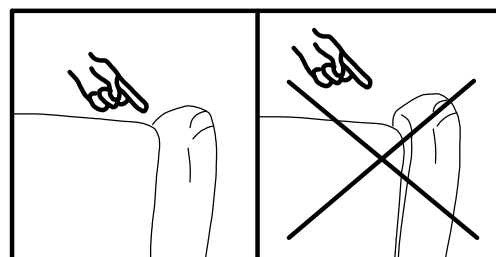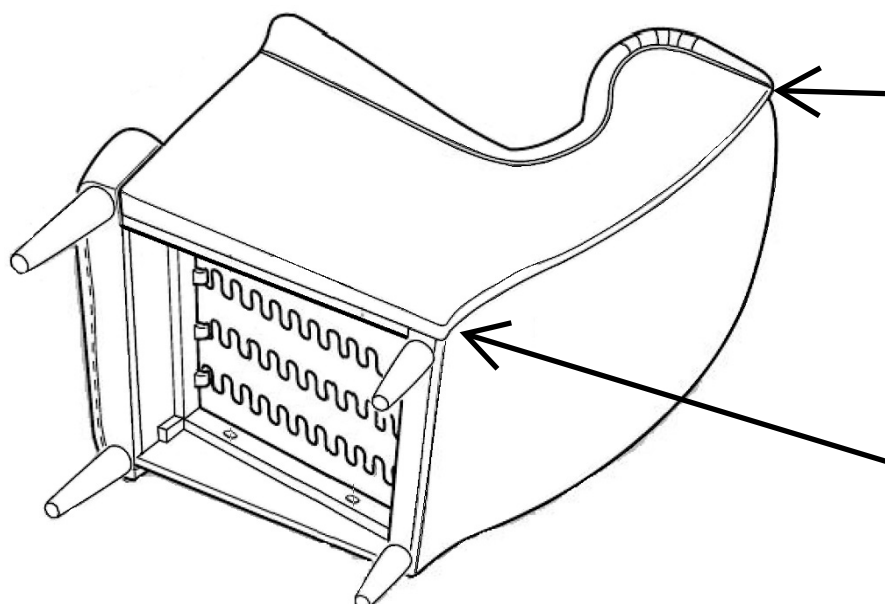



7.



i

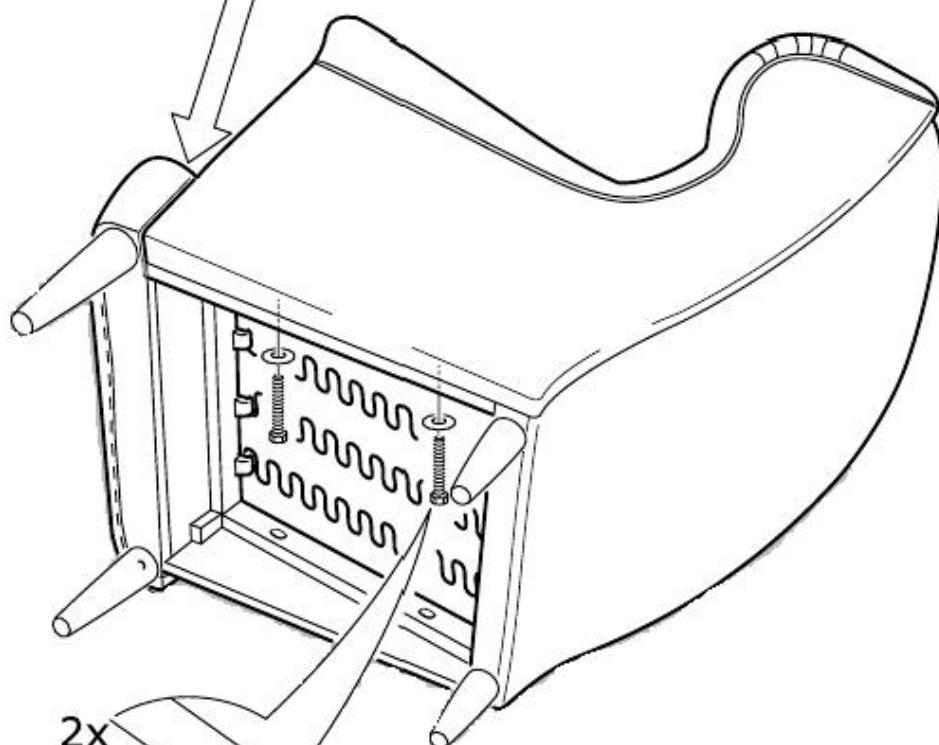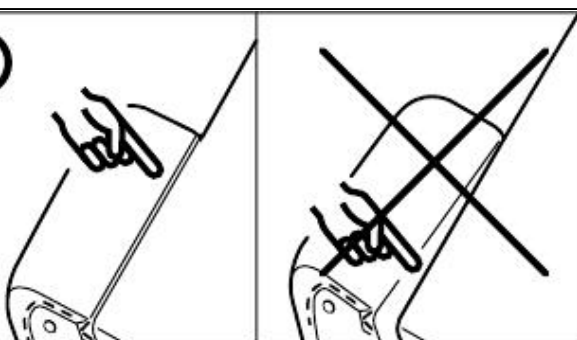

2x

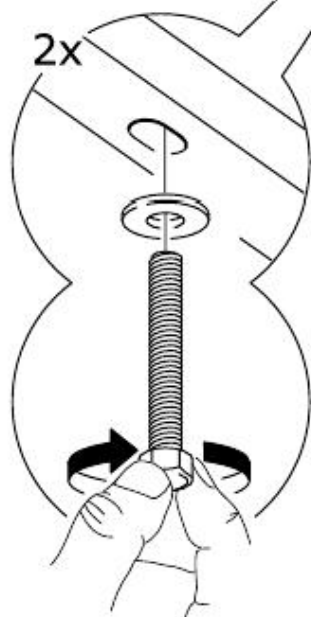

M8X65
x 2

K




M8x 2

8.




M8X65
x 2

K



M8x 2

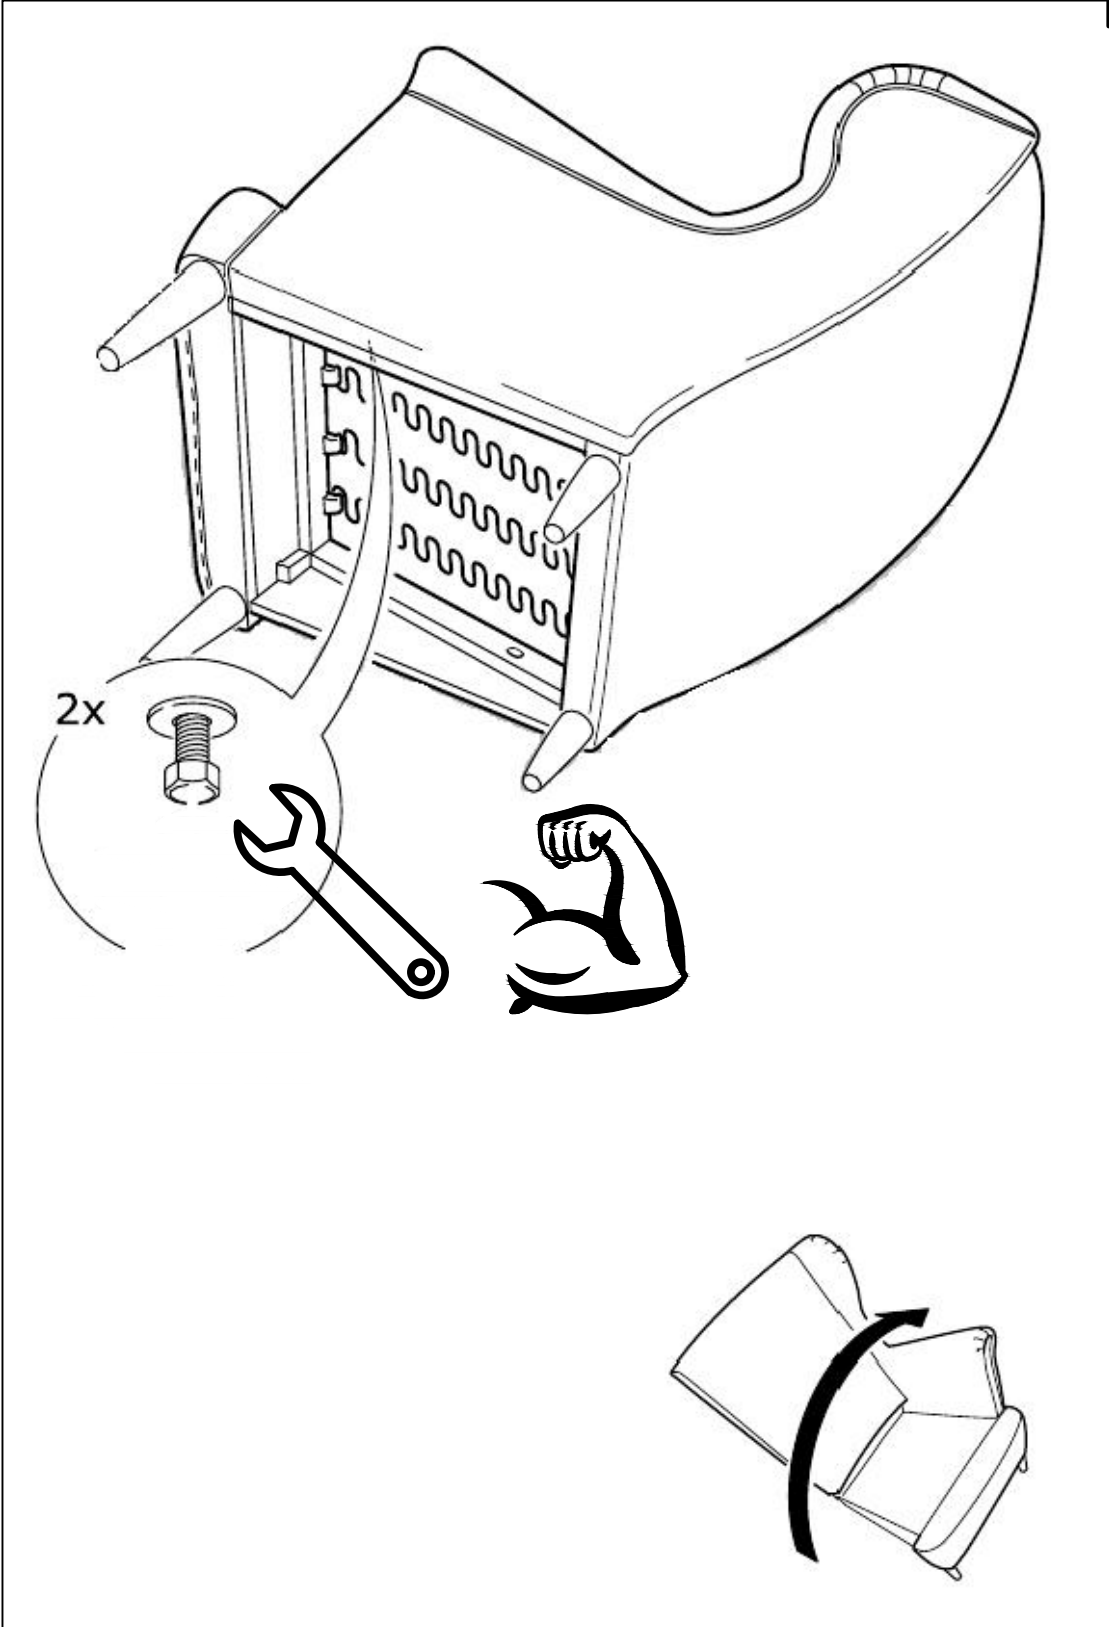

9. Die zweite Seitenwand ist Analog zu den Punkten 6–9 zu montieren.

10.

