

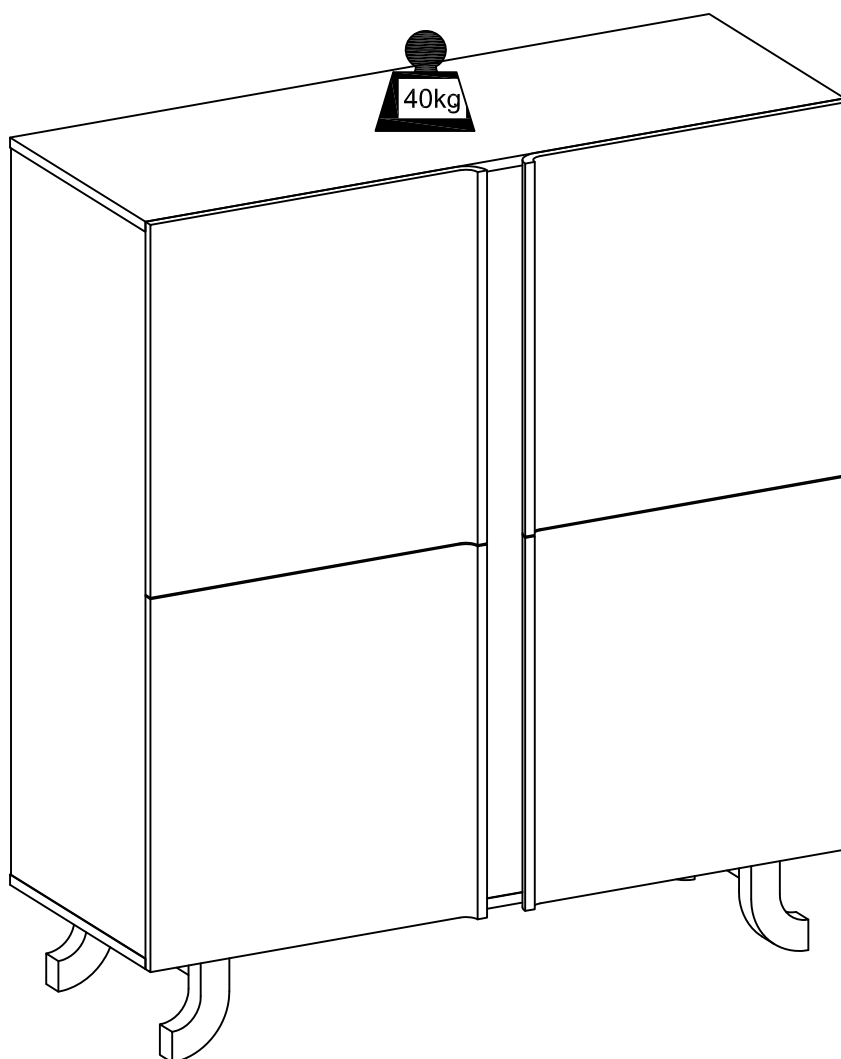







Assemble instruction

VIRA


27980066-01

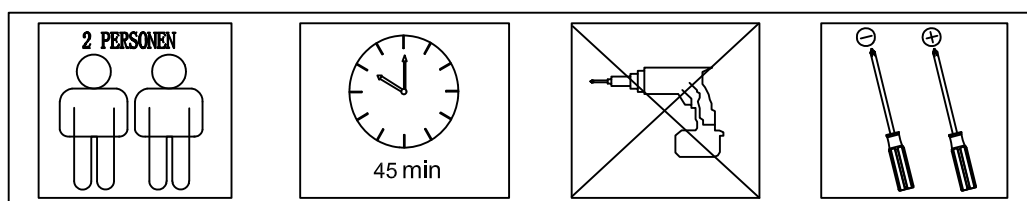


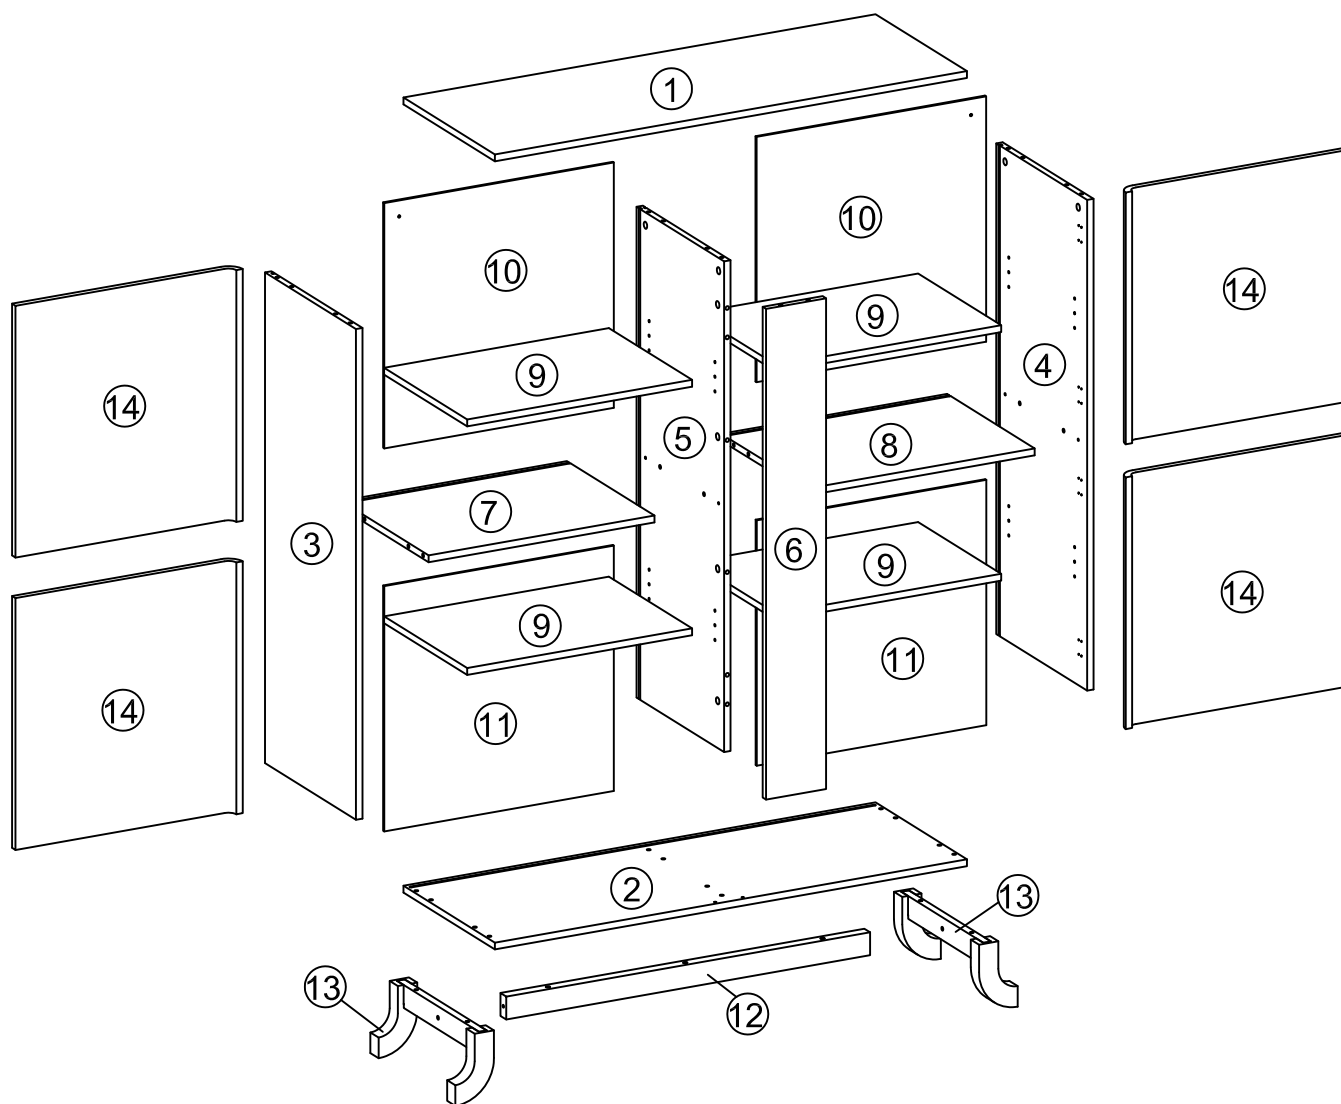


A	x22	B	x22	C	x6	D	x3	E	x2	F	x4	G	x8	H	x22
															
M6*35mm		φ15mm		M7*50mm		M6*60mm		M6*35mm		M6*50mm				φ8*30mm	
I	x64	J	x4	K	x10	L	x1	M	x16	N	x16	O	x2	P	x2
															
φ3*14mm															
Q	x2														
															
M4*45mm															


1

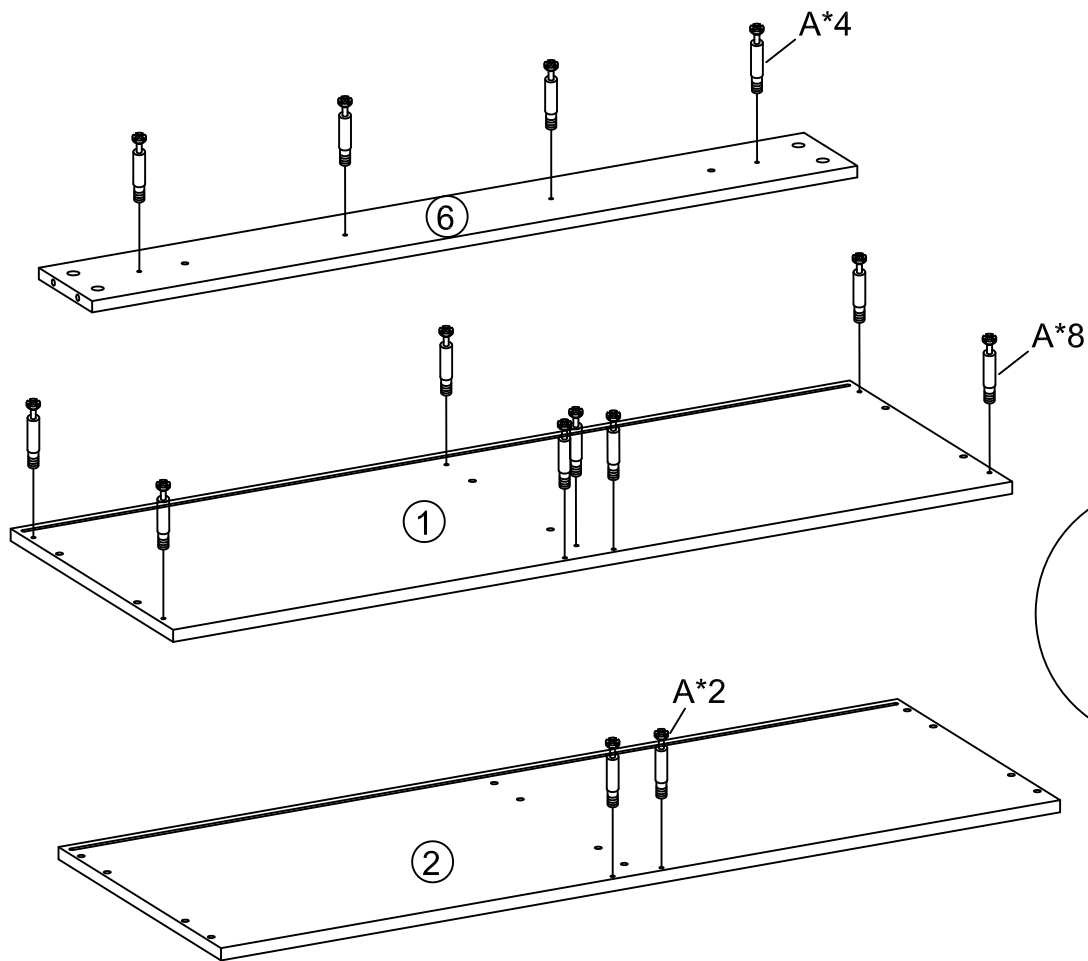


A	×14
	
M6*35mm	


2

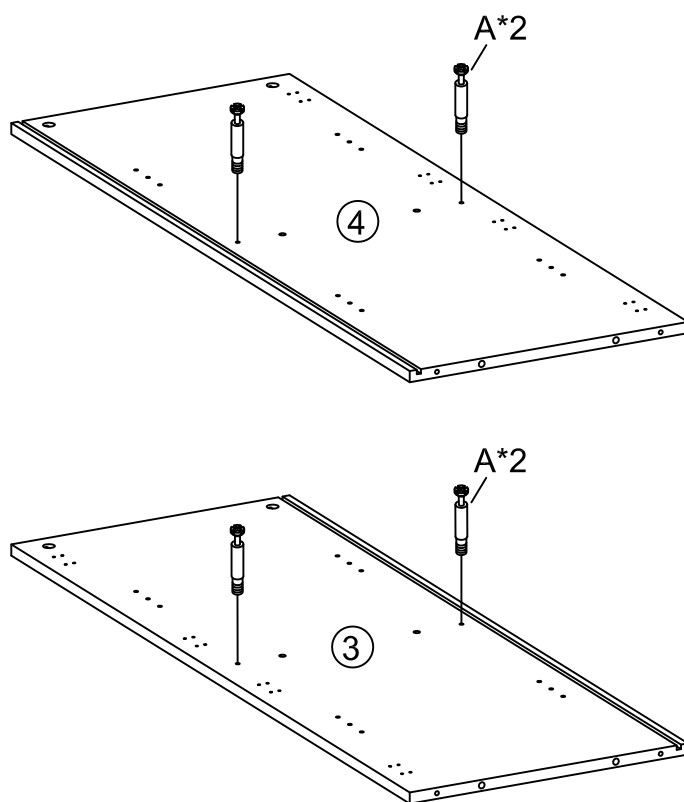


A	×4
	
M6*35mm	


3

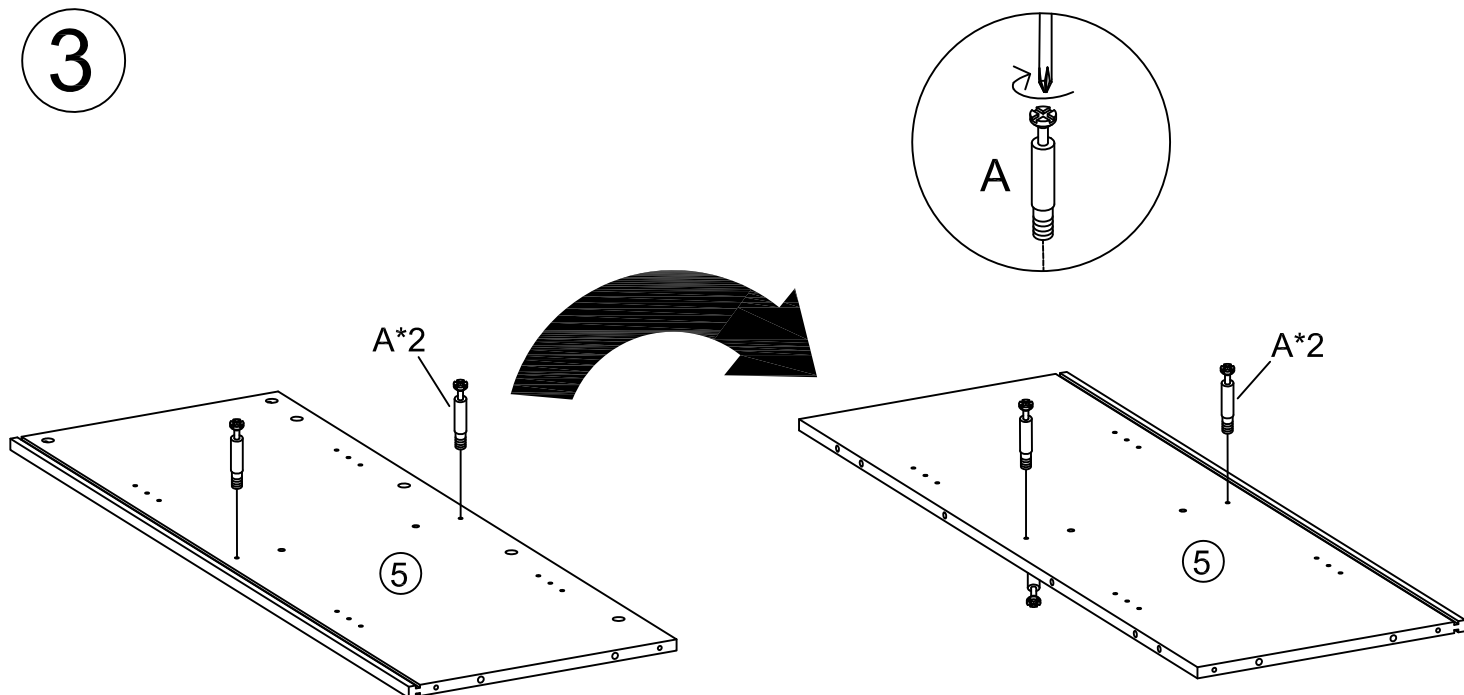


A	×4
	
M6*35mm	


4

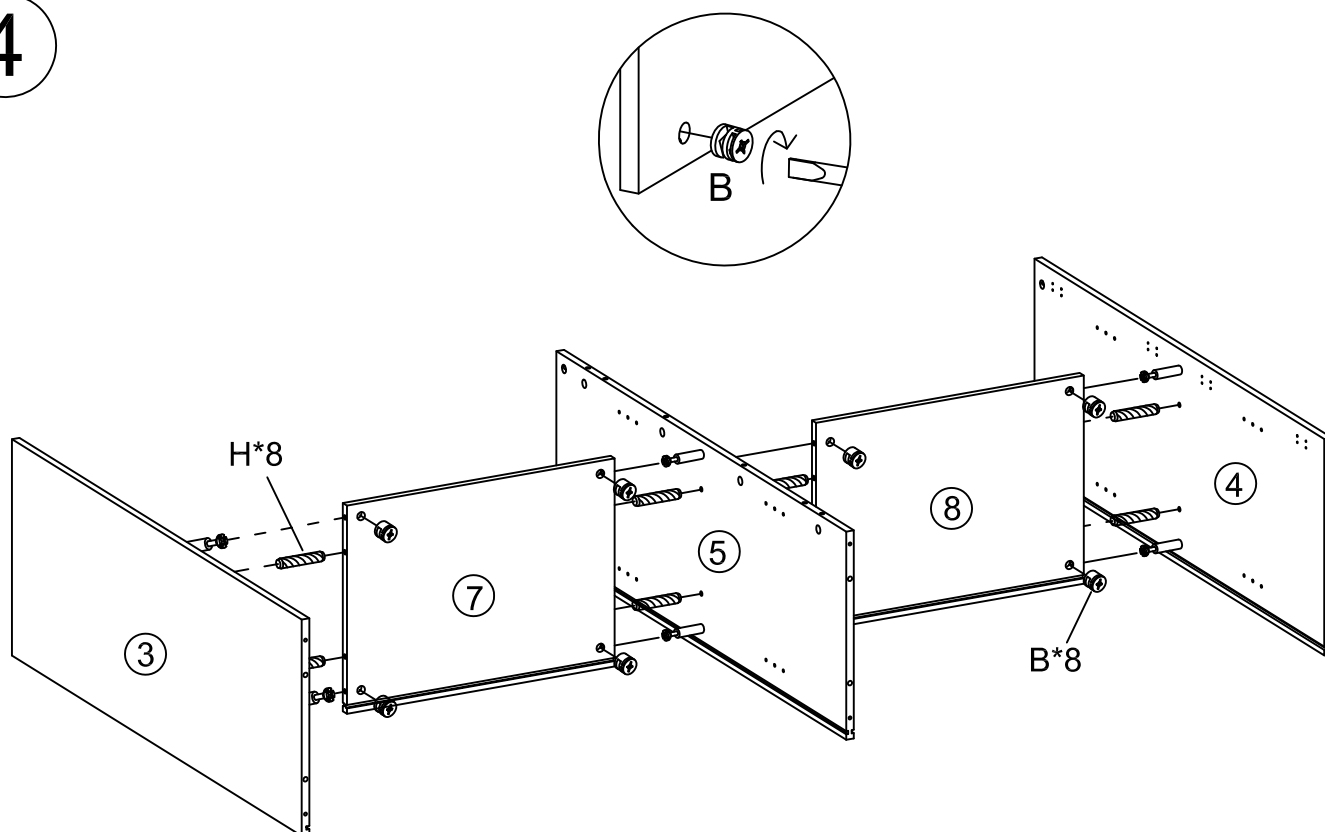


B	×8	H	×8
			
φ15mm		φ8*30mm	

5


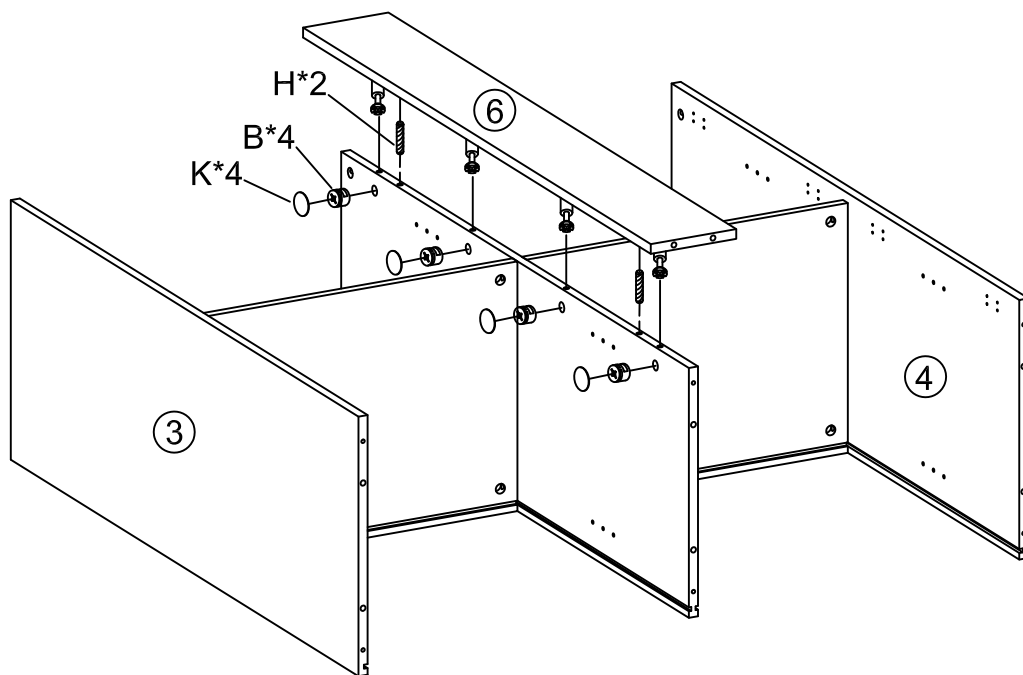


B	×4	H	×2	K	×4
					
ø15mm		ø8*30mm			

6




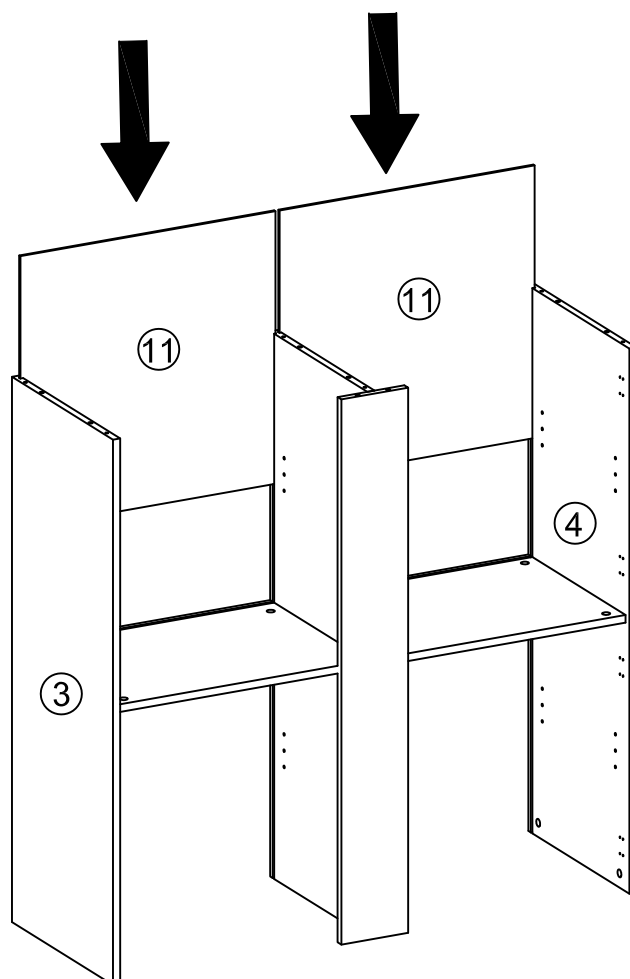


7

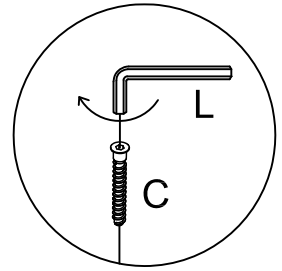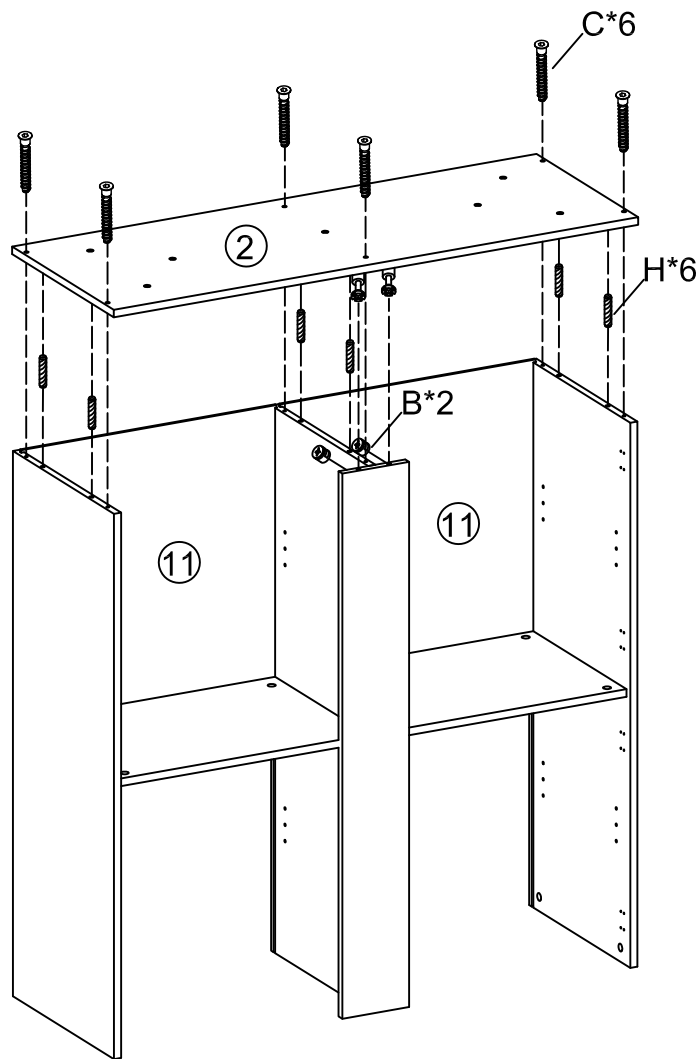





B	×2	C	×6
			
ø15mm		M7*50mm	
H	×6	L	×1
			
ø8*30mm			


8

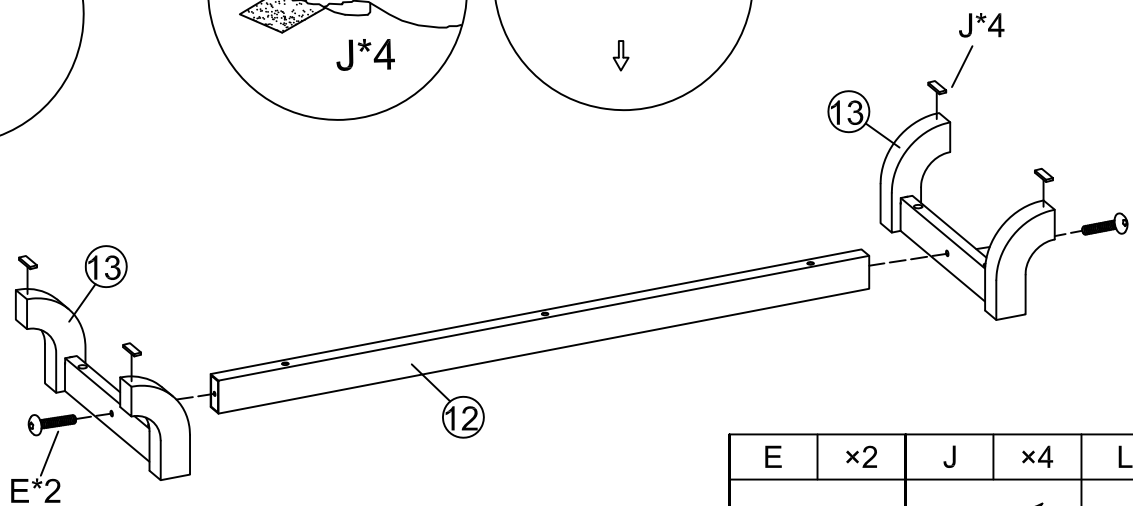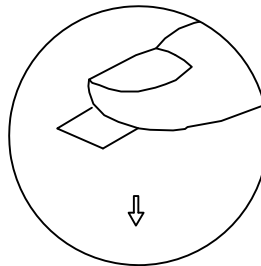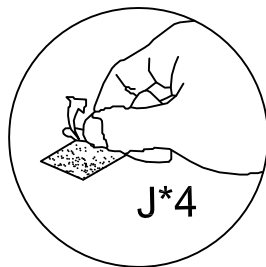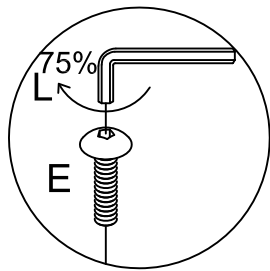


E	×2	J	×4	L	×1
					
M6*35mm					

9

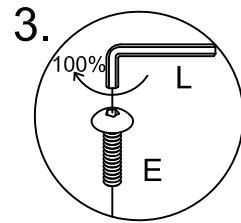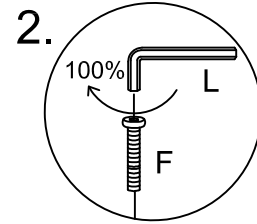
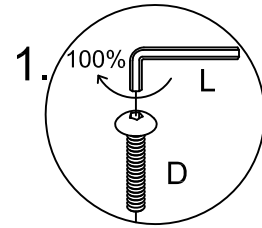
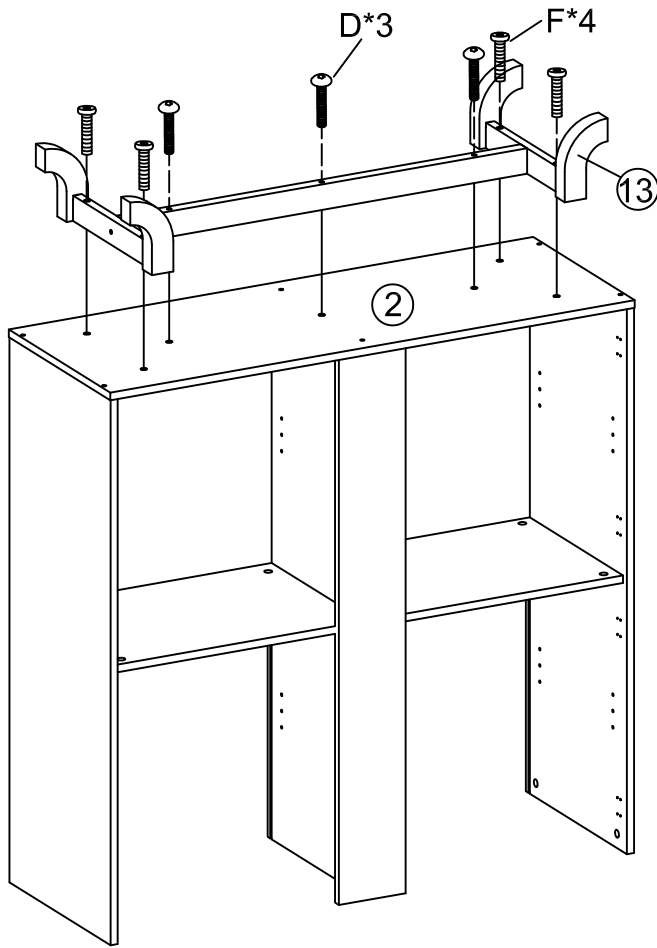


D	x3	F	x4	L	x1
					
M6*60mm		M6*50mm			

10

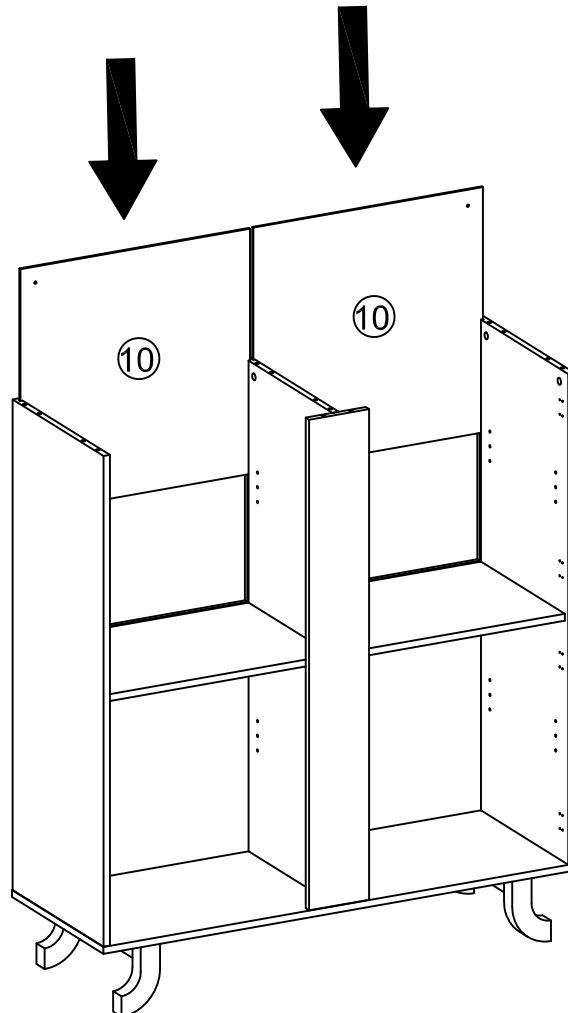






11

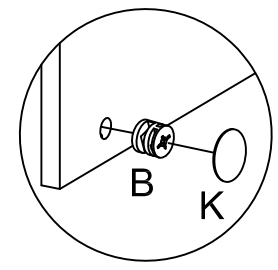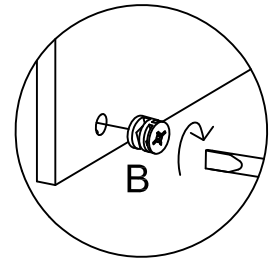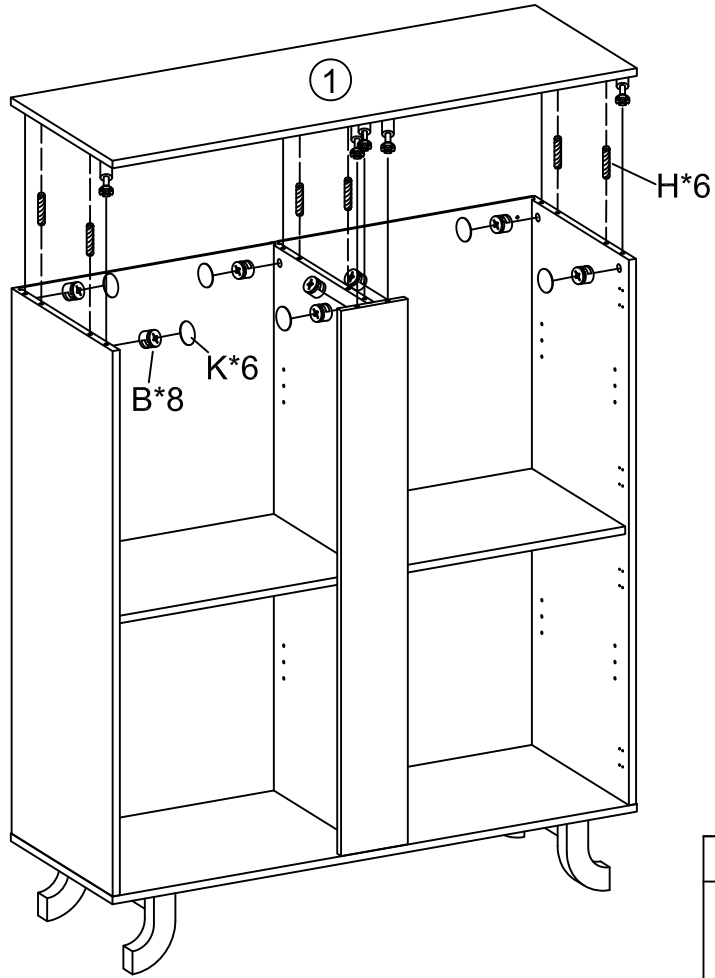

B	x8
ø15mm	


H	x6	K	x6	L	x1
ø8*30mm					

12

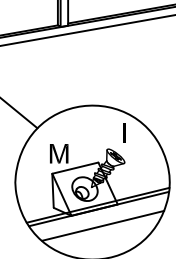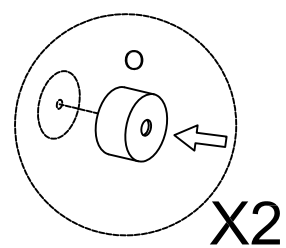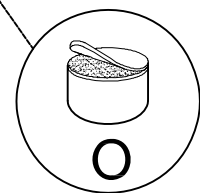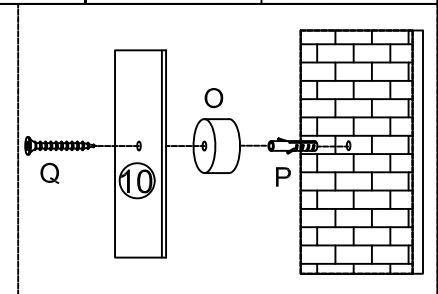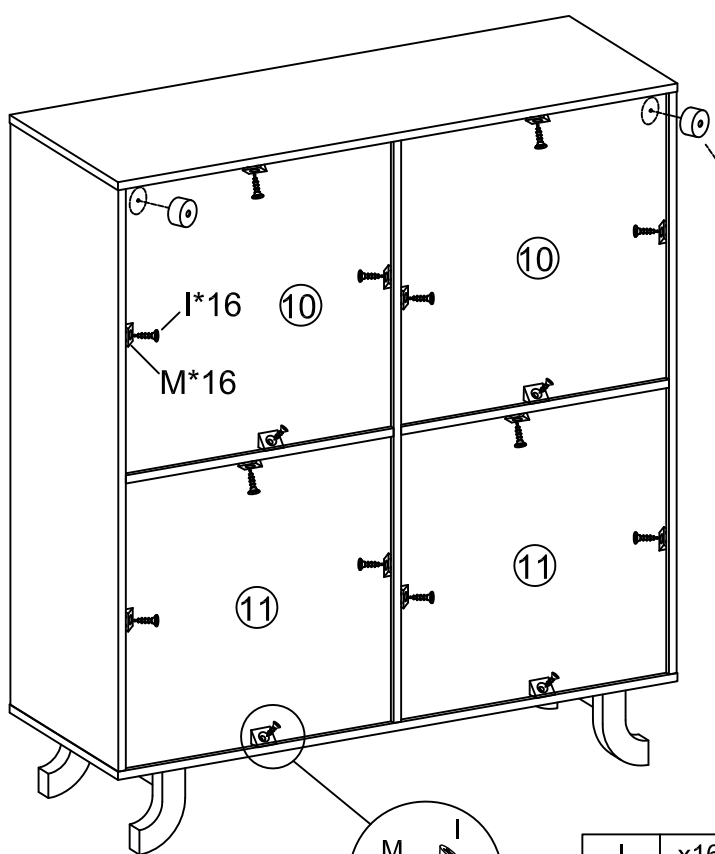


I	x16	M	x16	O	x2	P	x2	Q	x2
ø3*14mm								ø4*45mm	

13

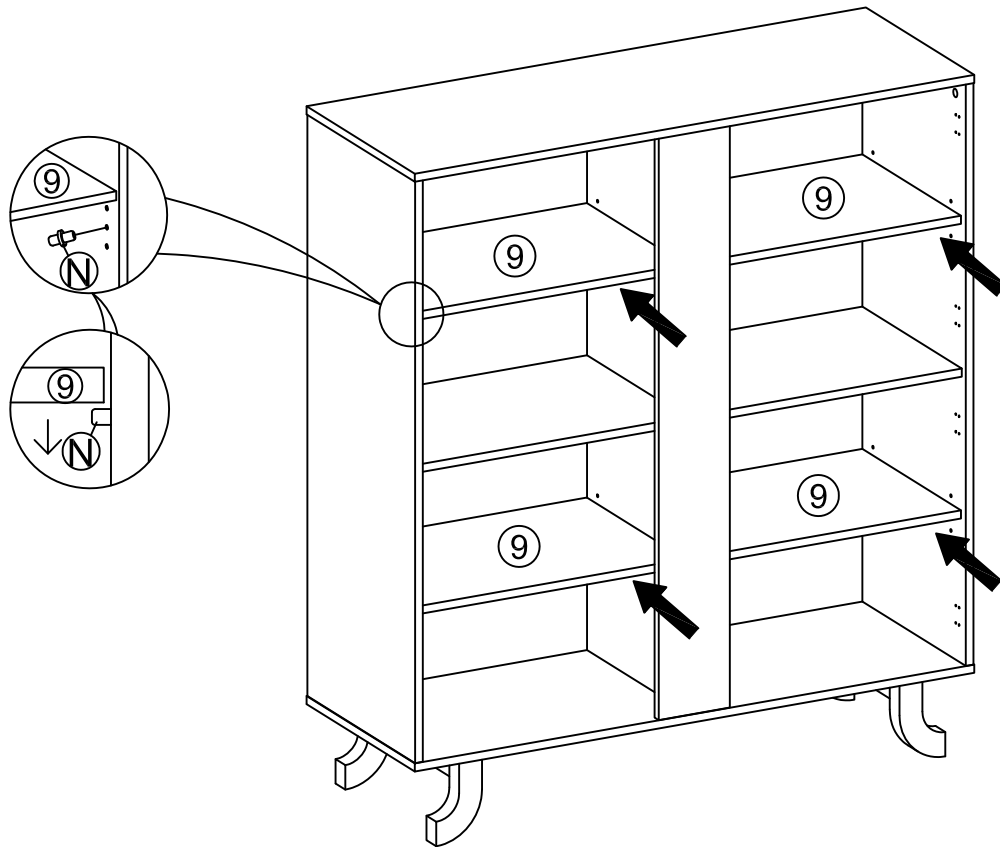



N	×16
	

14

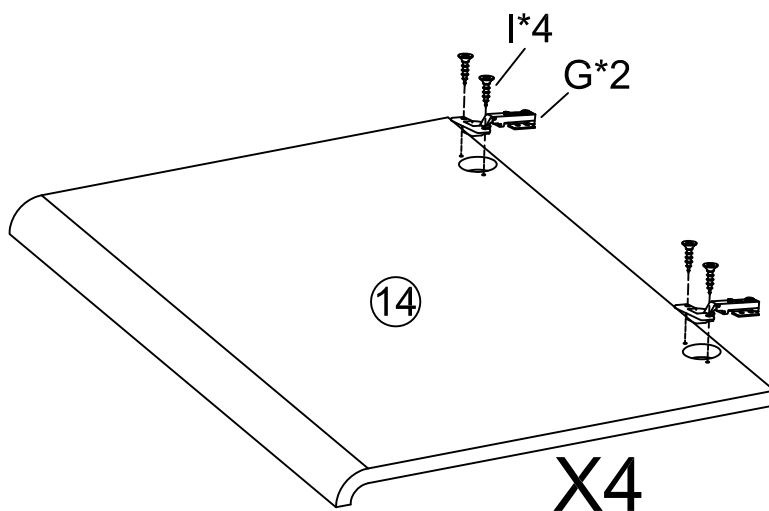

I	×16	G	×8
			
Ø3*14mm			

15

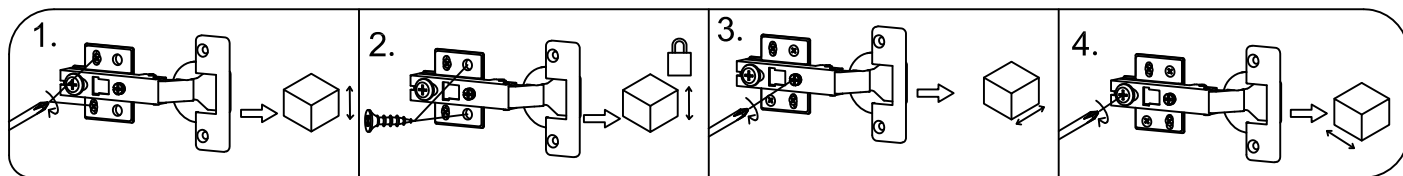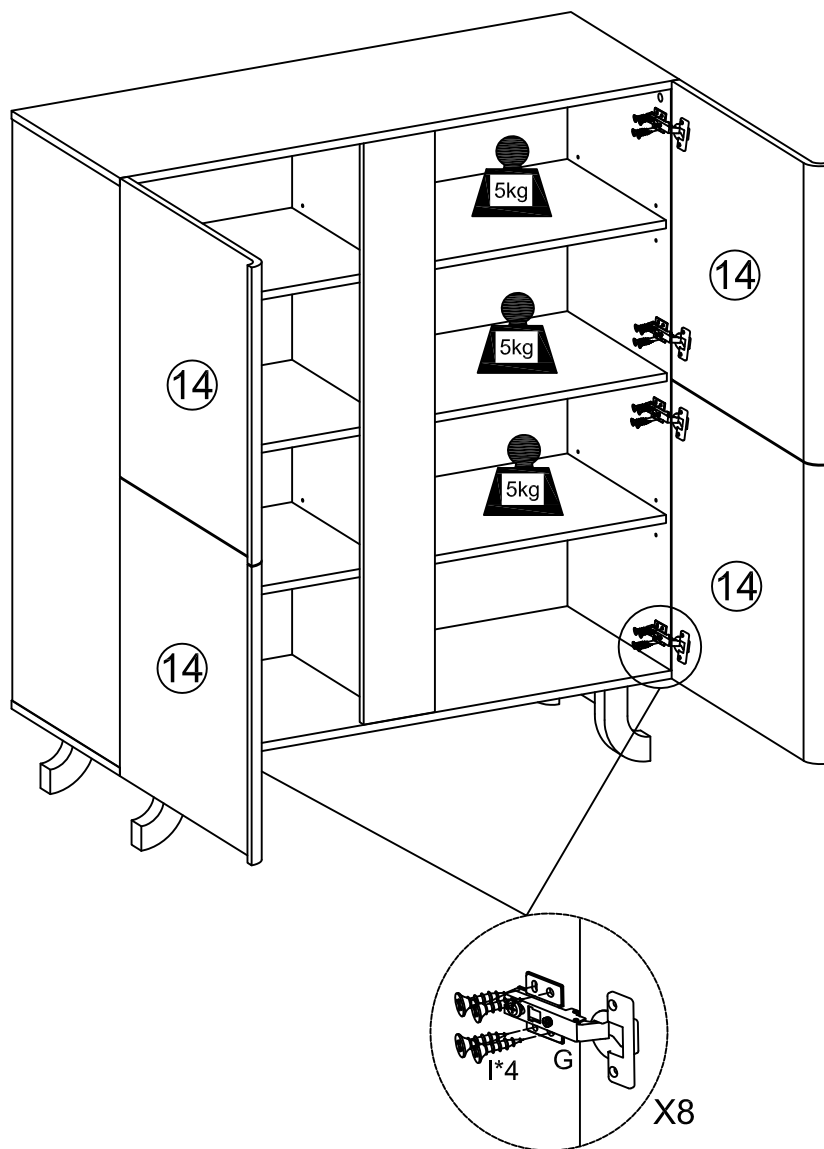

I	x32
	
Ø3*14mm	