



ASSEMBLY INSTRUCTIONS: 12540081/01

BELDANO 


XXXLutz KG
Roemerstrasse 39
AT-4600 Wels, Austria

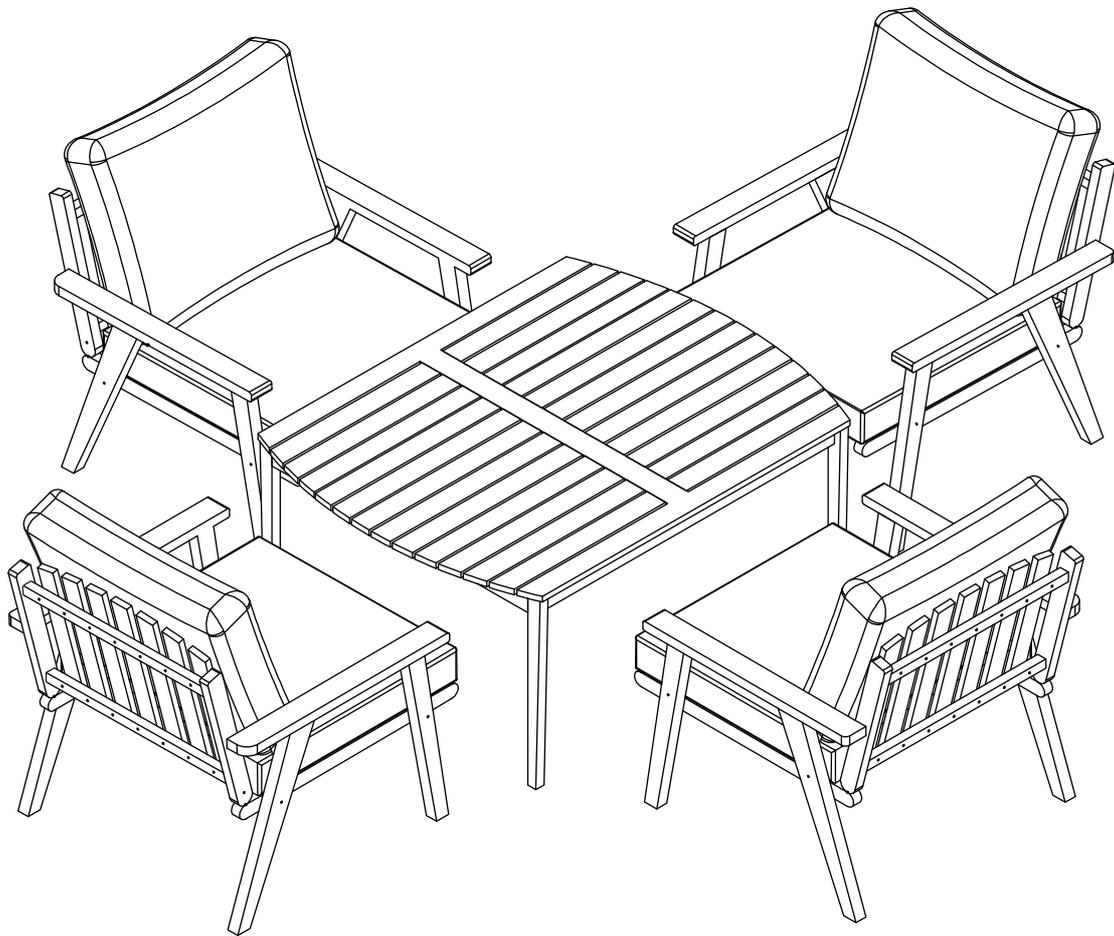


ASSEMBLY INSTRUCTIONS: 12540081/01

No	Name of Hardware	Fix	Qty
1	Screw M6x55 mm		4
2	Allen Key		1



A x1

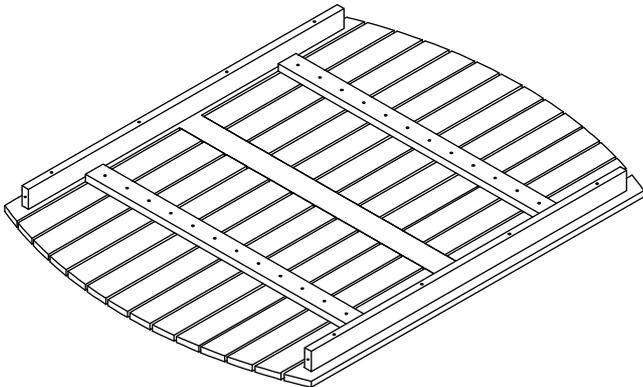


B x2

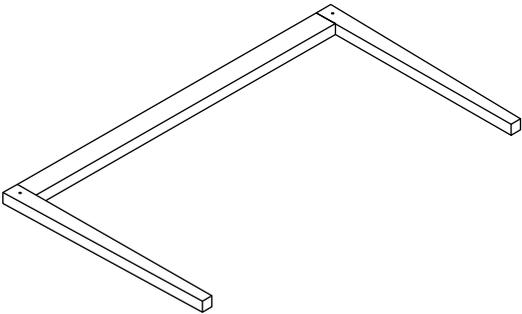


Step 1:

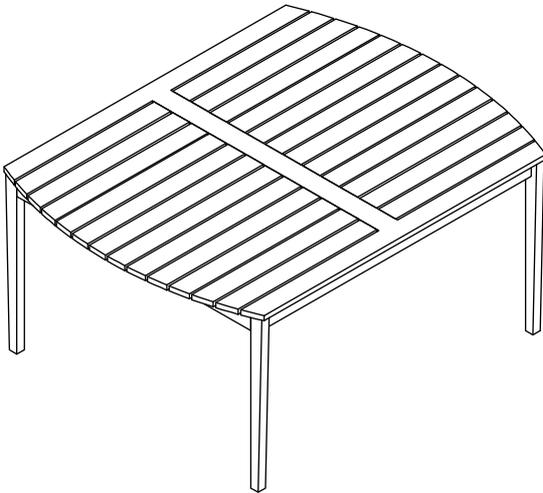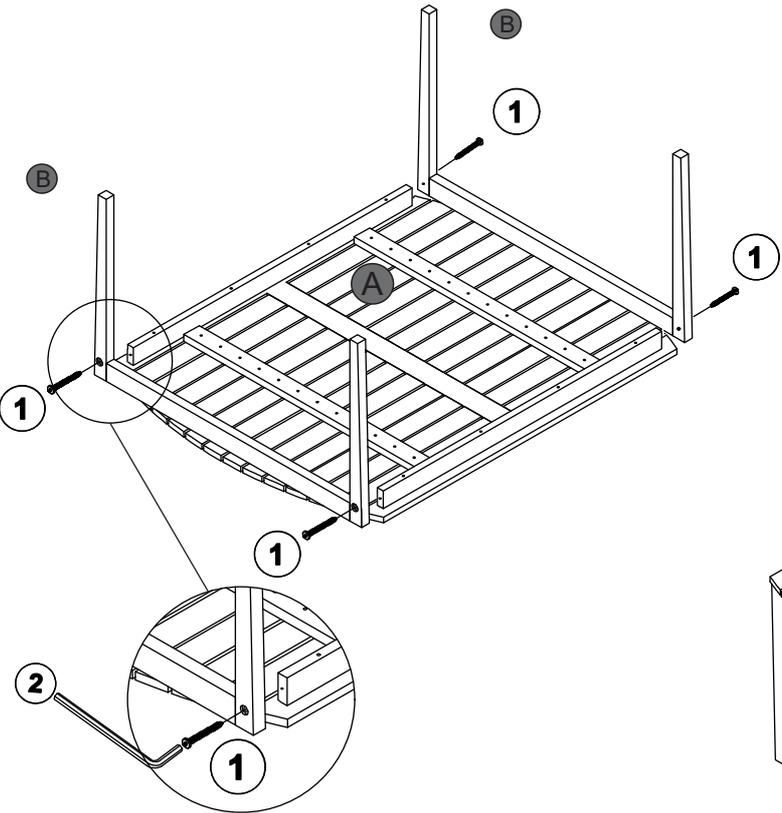

ASSEMBLY INSTRUCTIONS: 12540081/01

No	Name of Hardware	Fix	Qty
1	Bolt M6x35 mm		6
2	Nut		4
3	Allen Key		2


A x1

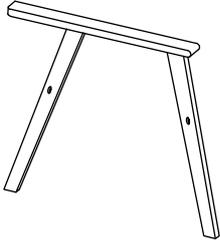


B x1




C x1

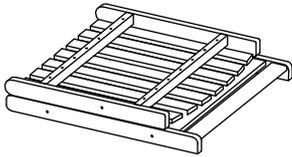

D x1

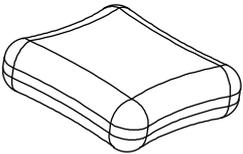


E x1

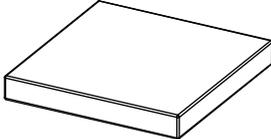

X4


Step 1:

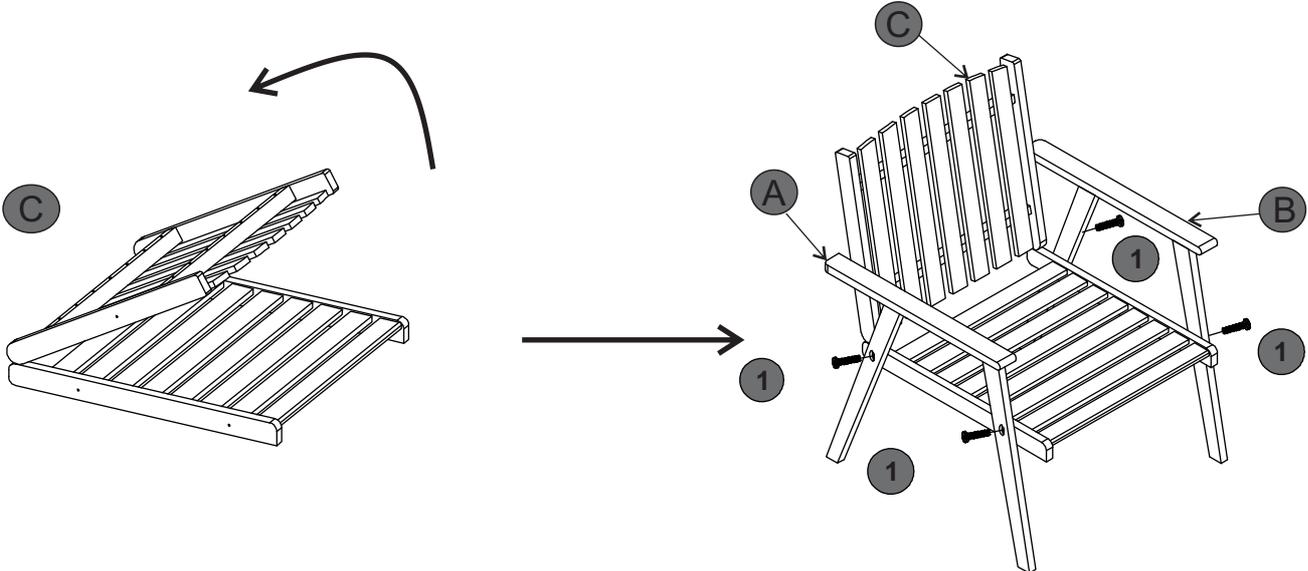

X4


ASSEMBLY INSTRUCTIONS: 12540081/01

Step 2:

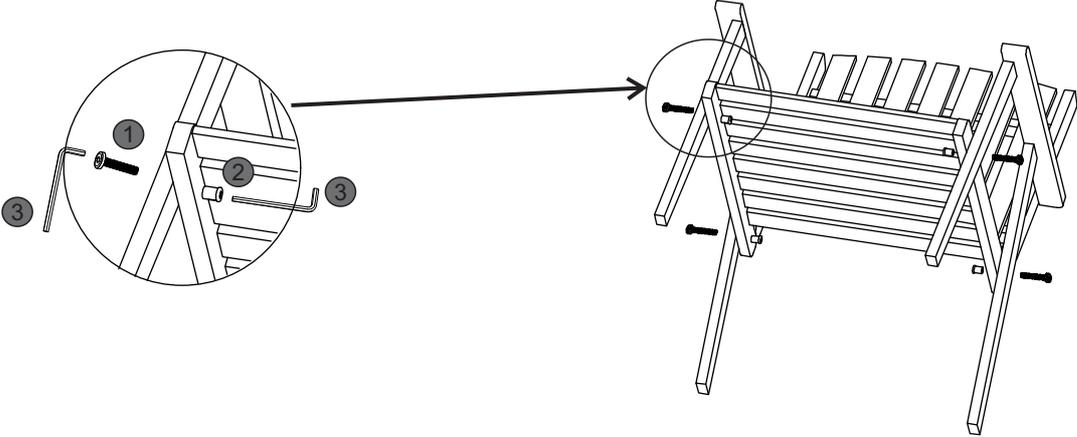


X4

Step 3:

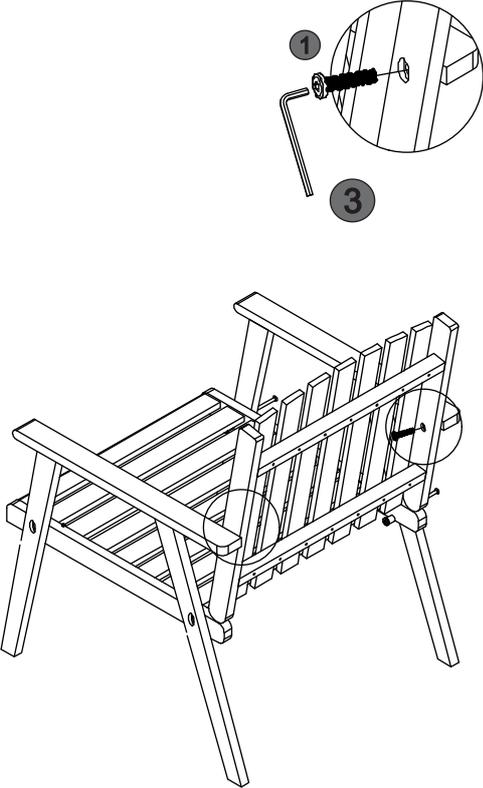

X4

Step 4:

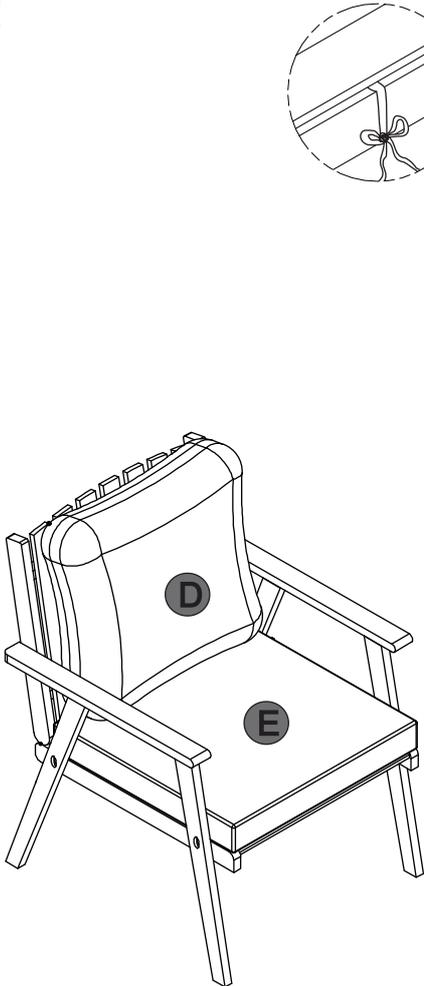

X4