

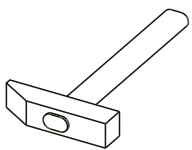
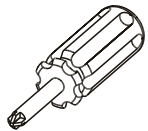
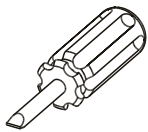
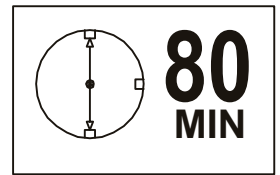
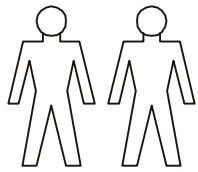
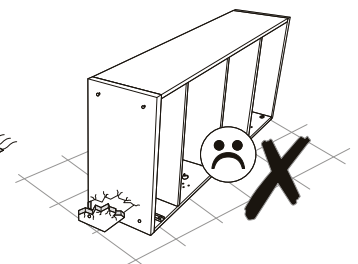
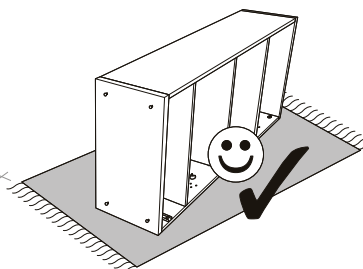
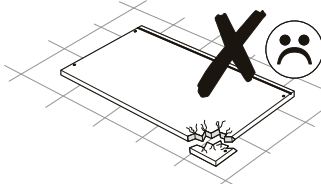









HARVEY - SIDEBOARD 160

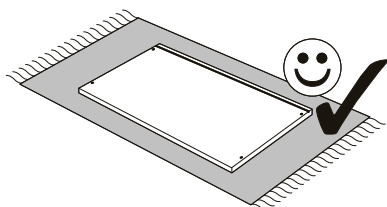


Ø5
Ø8

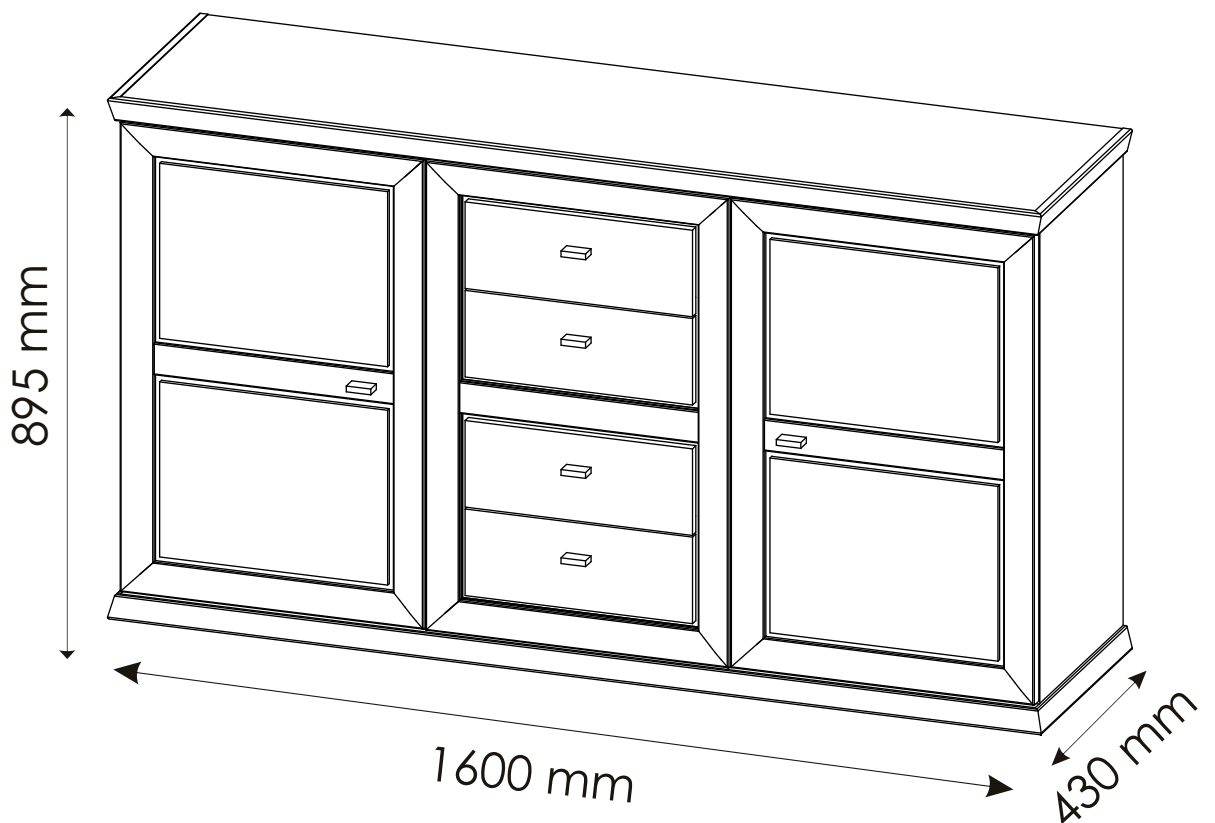

HARVEY - SIDEBOARD 160


A0 8 x 30mm x56 	B1 f 7 x 50 mm x20 	C0 x24 
C2 x36 	C7 x36  16mm	D0 3 x 15 mm x38 
D10 4 x 16 mm x8 	D21 5 x 13 mm x2 	D31 6,3 x 13 mm x32 
E0 5 x 50 mm x2  8 x 50 mm 	H2 4 x 22 mm x12 	J3 x4 
J10 x4 	K 4mm x1 	L6 x6 
M1 x38 	N14 x4  L-350mm	P0 x2 
Q3 x8 	U0 x12 	U2 x8 
U3 x12 		

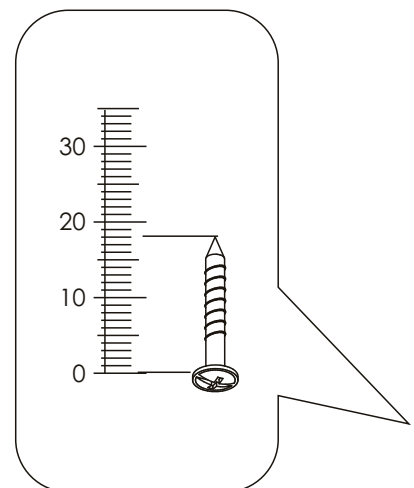


HARVEY - SIDEBOARD 160


1	837	393	16	x1	1/4
2	837	393	16	x1	1/4
3	837	393	16	x1	1/4
4	837	393	16	x1	1/4
5	837	373	16	x1	1/4
6	837	373	16	x1	1/4
7	499	368	16	x2	2/4
8	350	120	16	x4	2/4
9	350	120	16	x4	2/4
10	344	118	16	x4	2/4


11	384	80	16	x4	2/4
12	354	344	2,8	x4	2/4
13	390	148.5	16	x4	3/4
14	805	521	25	x2	3/4
15	805	520	25	x1	3/4
16	847	509	2,8	x2	3/4
17	847	518	2,8	x1	3/4
18	1602	430	40	x1	4/4
19	1602	430	40	x1	4/4
					2/4

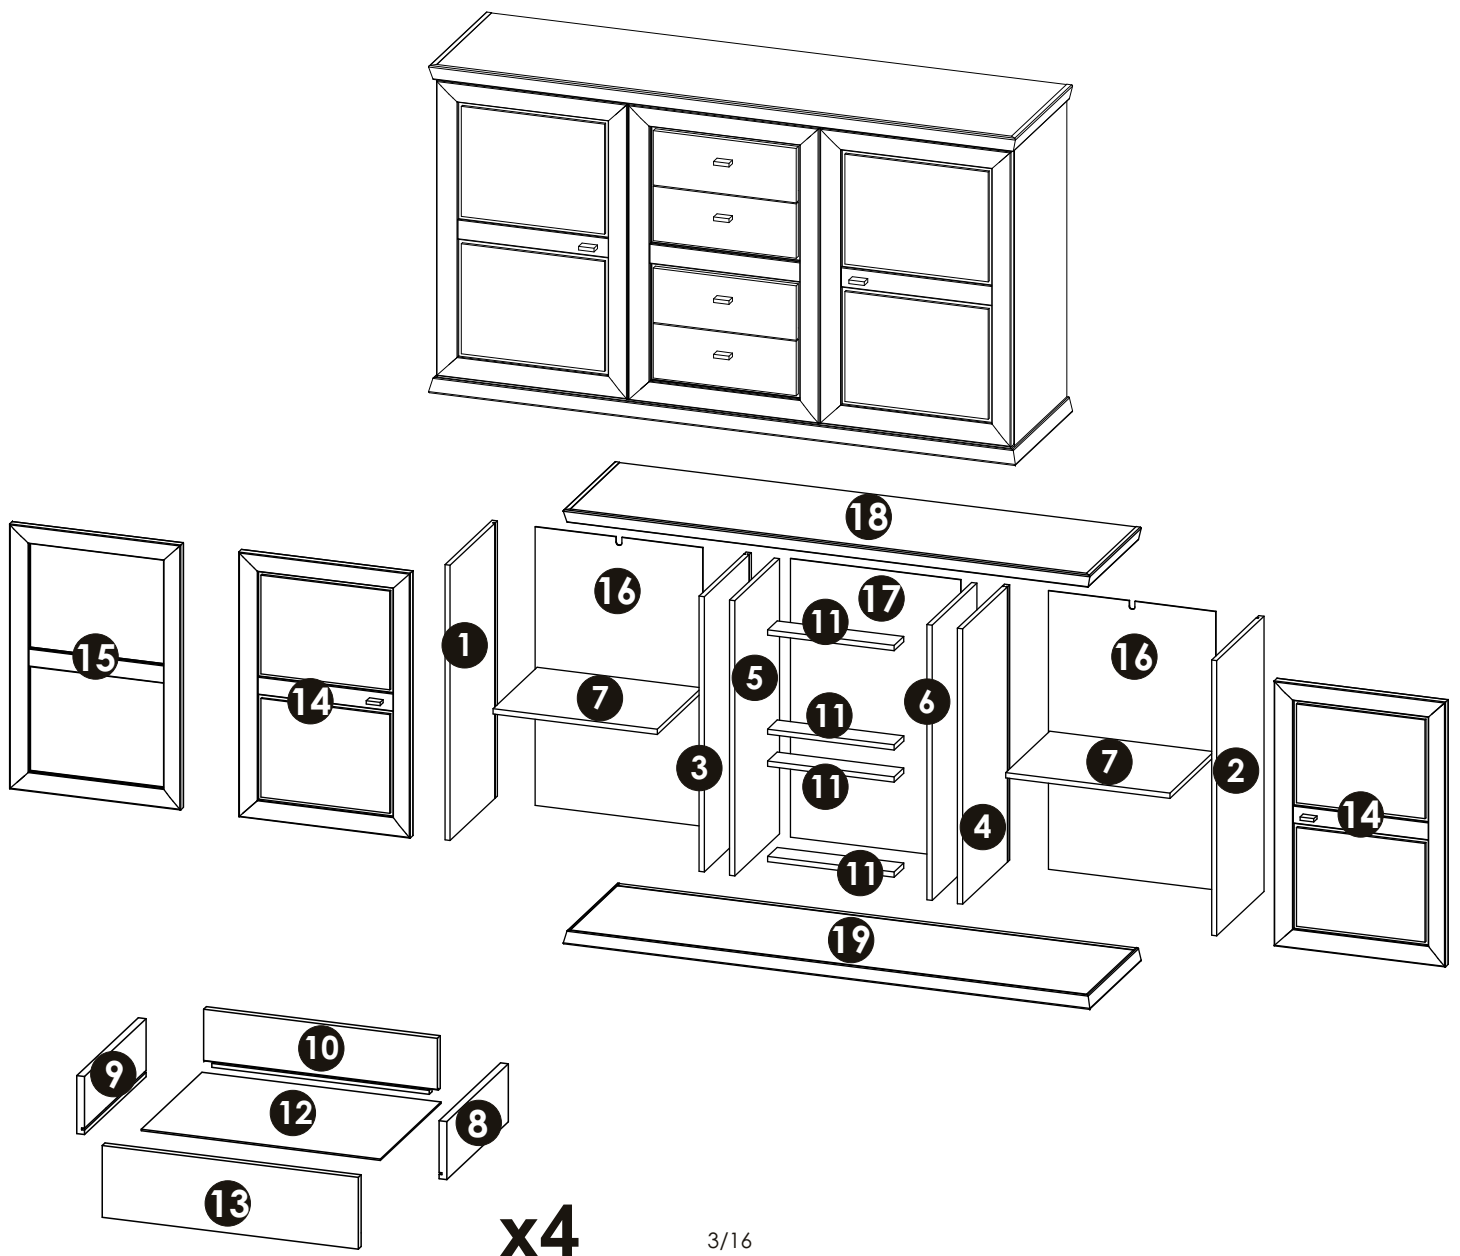


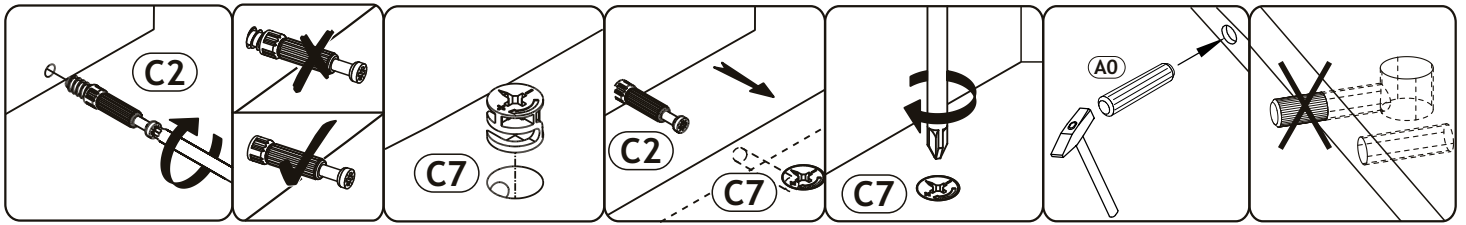



1 ▶

A0 8 x 30mm  x4	C7  16mm x4	J3  x2
Q3  x2		

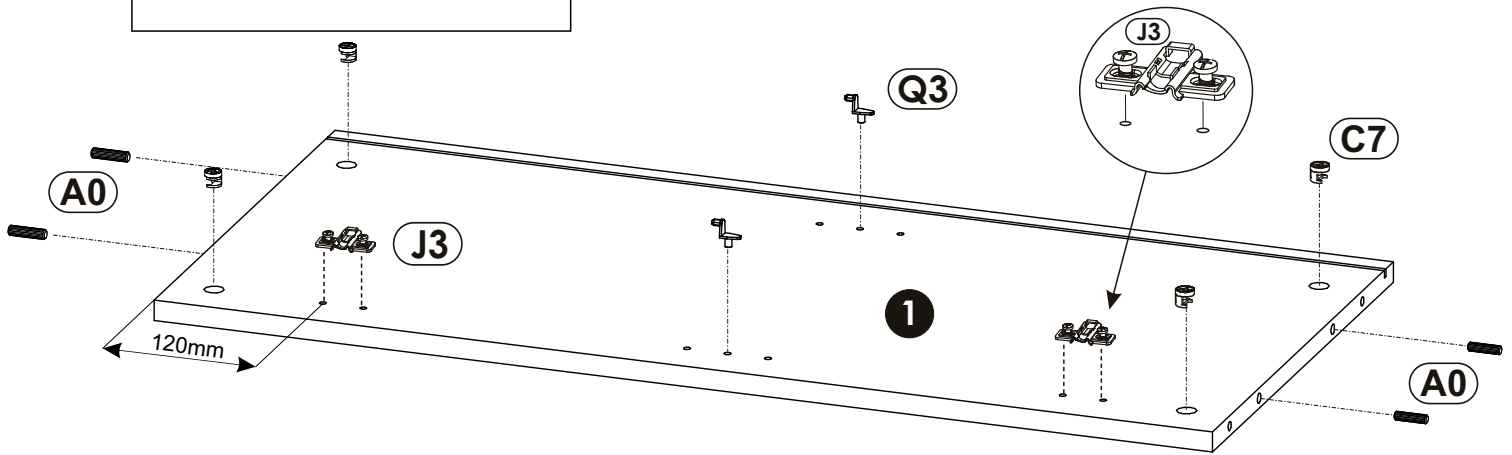



2 ▶

A0 8 x 30mm  x4	C7  16mm x4	J3  x2
Q3  x2		

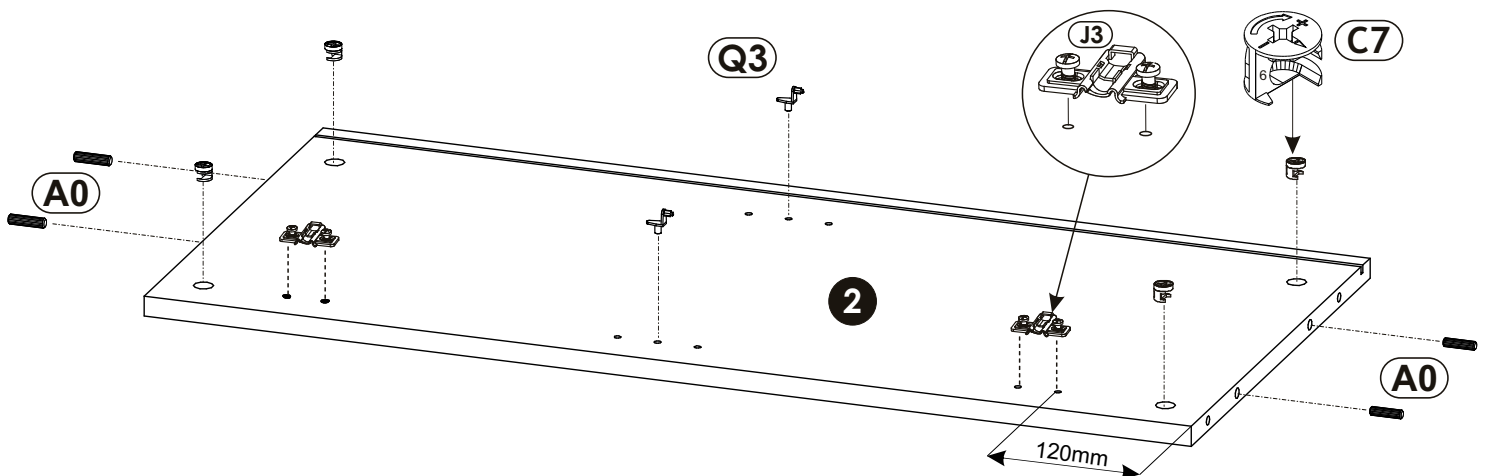



3▶

(A0) 8 x 30mm 	x4	(C7) 16mm 	x4	(Q3) 	x2
--	-----------	---	-----------	---	-----------


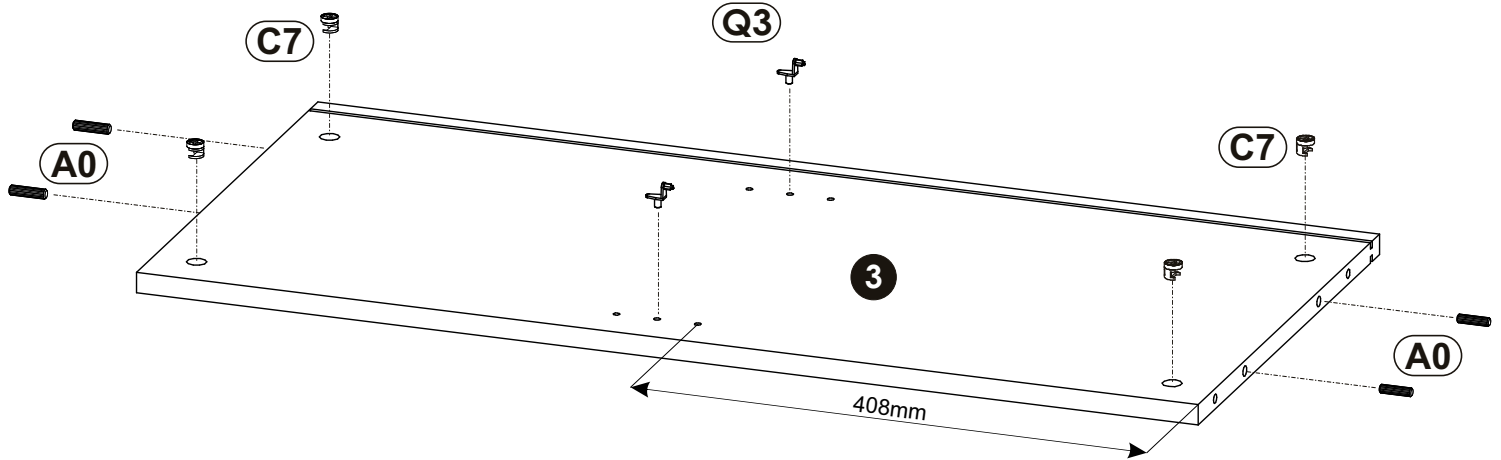



4▶

(A0) 8 x 30mm 	x4	(C7) 16mm 	x4	(Q3) 	x2
--	-----------	--	-----------	--	-----------


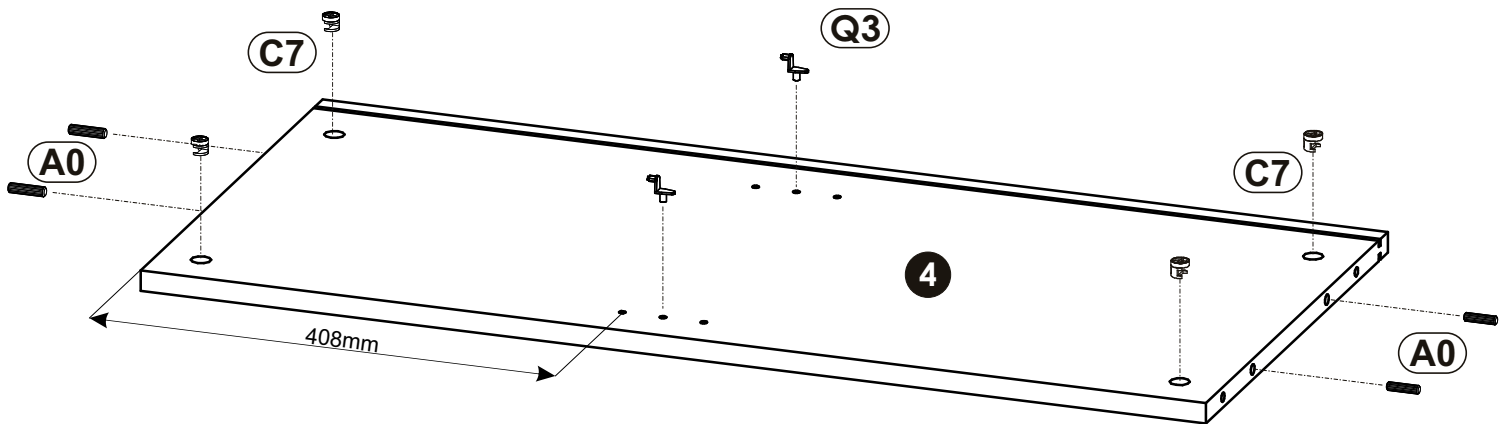


5▶

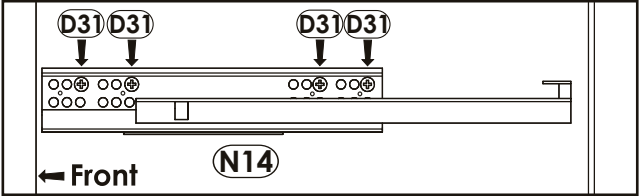
(A0) 8 x 30mm 	x4	(C7) 16mm 	x2	(D31) 6,3 x 13 mm 	x16
(N14) L-350mm 	x4	 Inset diagram showing the front view of the N14 rail with D31 screws being installed. The rail is labeled N14 and the screws are labeled D31. The direction of installation is indicated as 'Front'.			

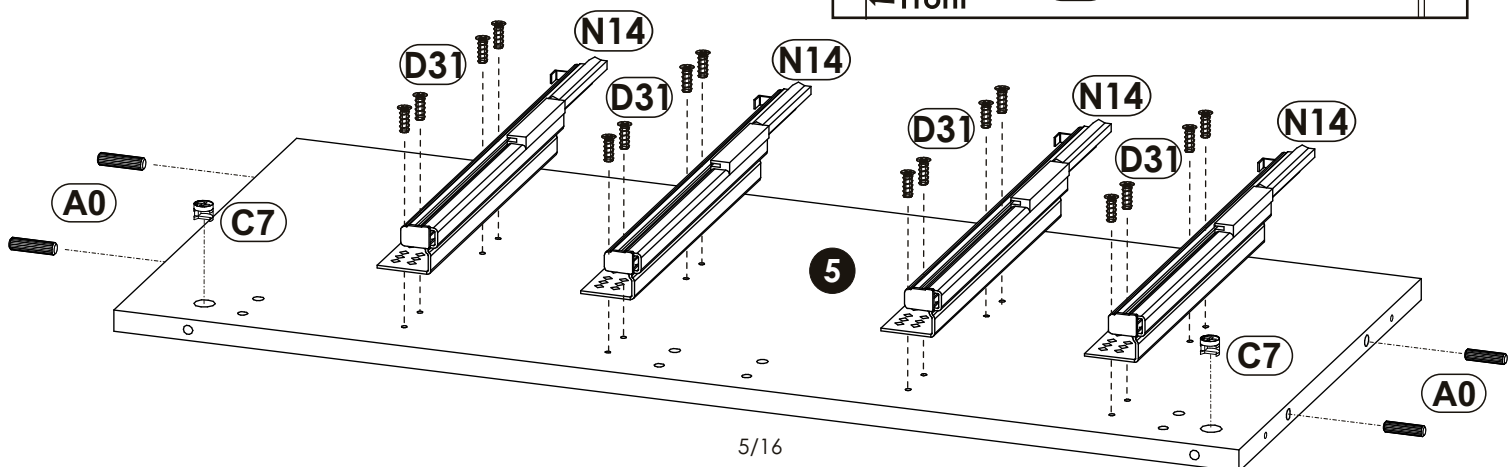



6 ▶

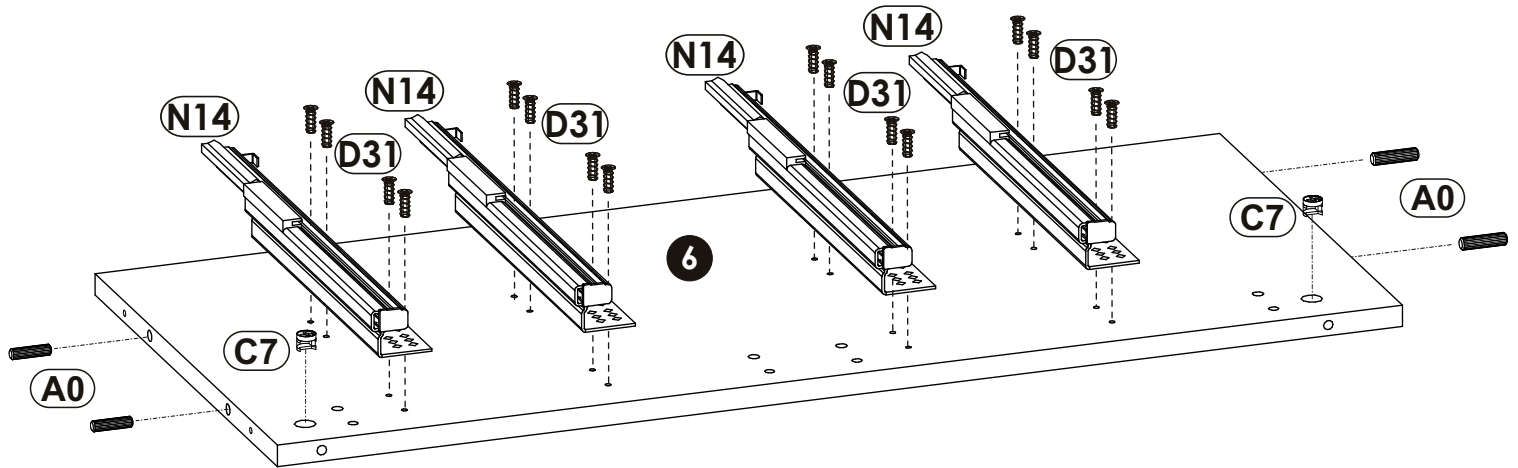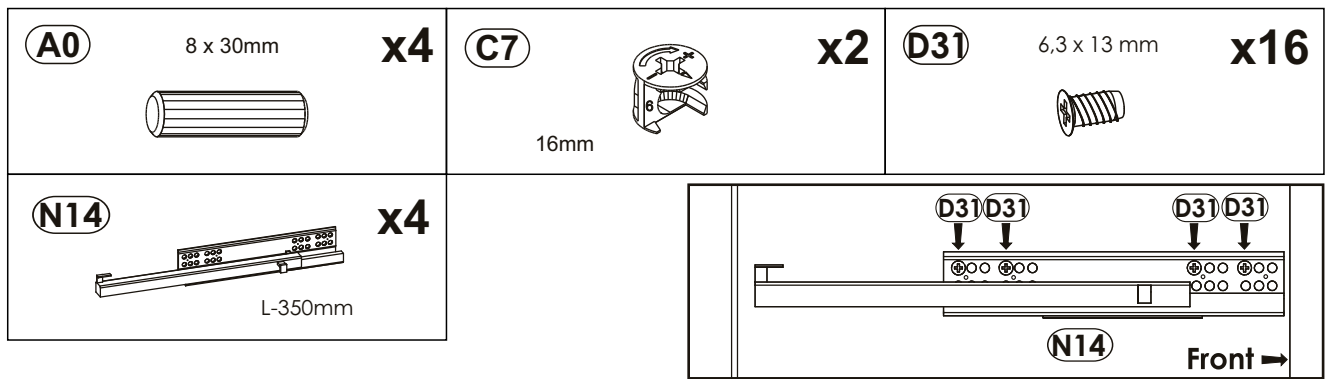



7 ▶

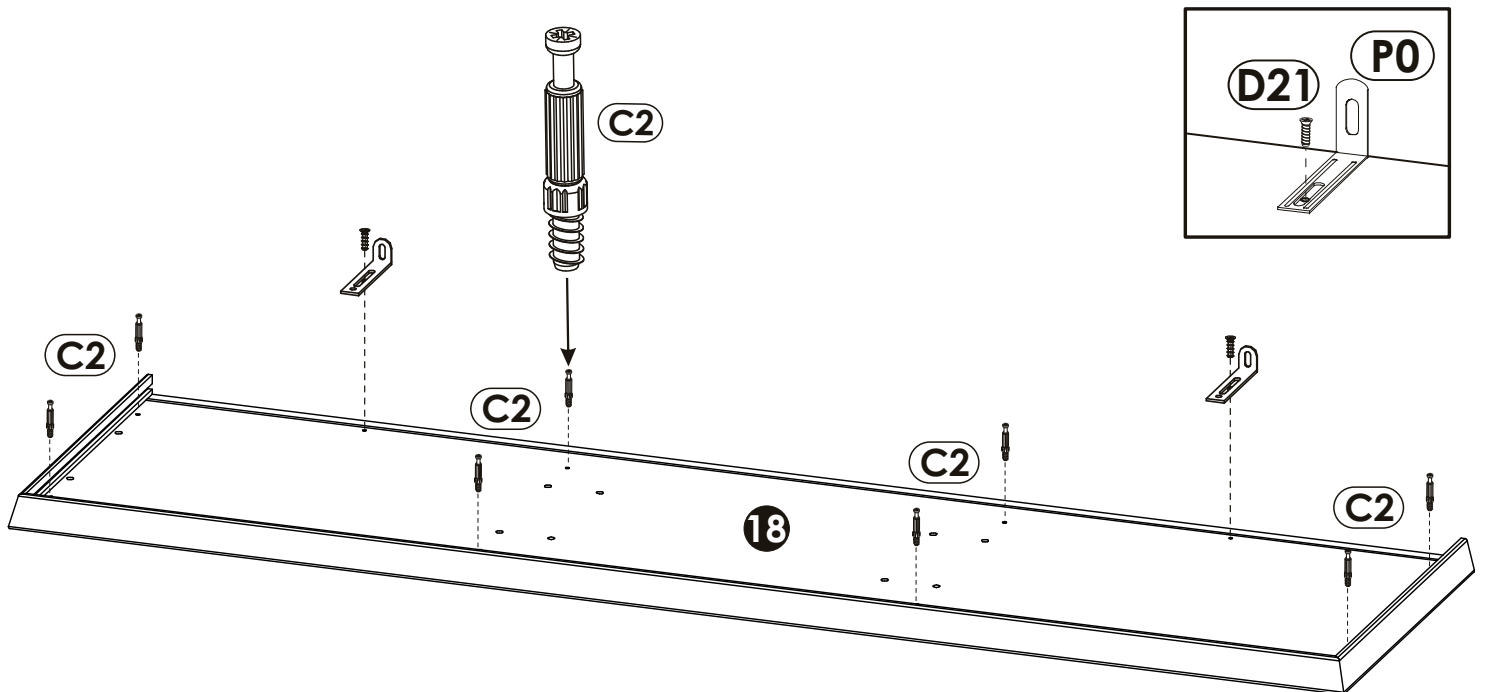



8 ▶

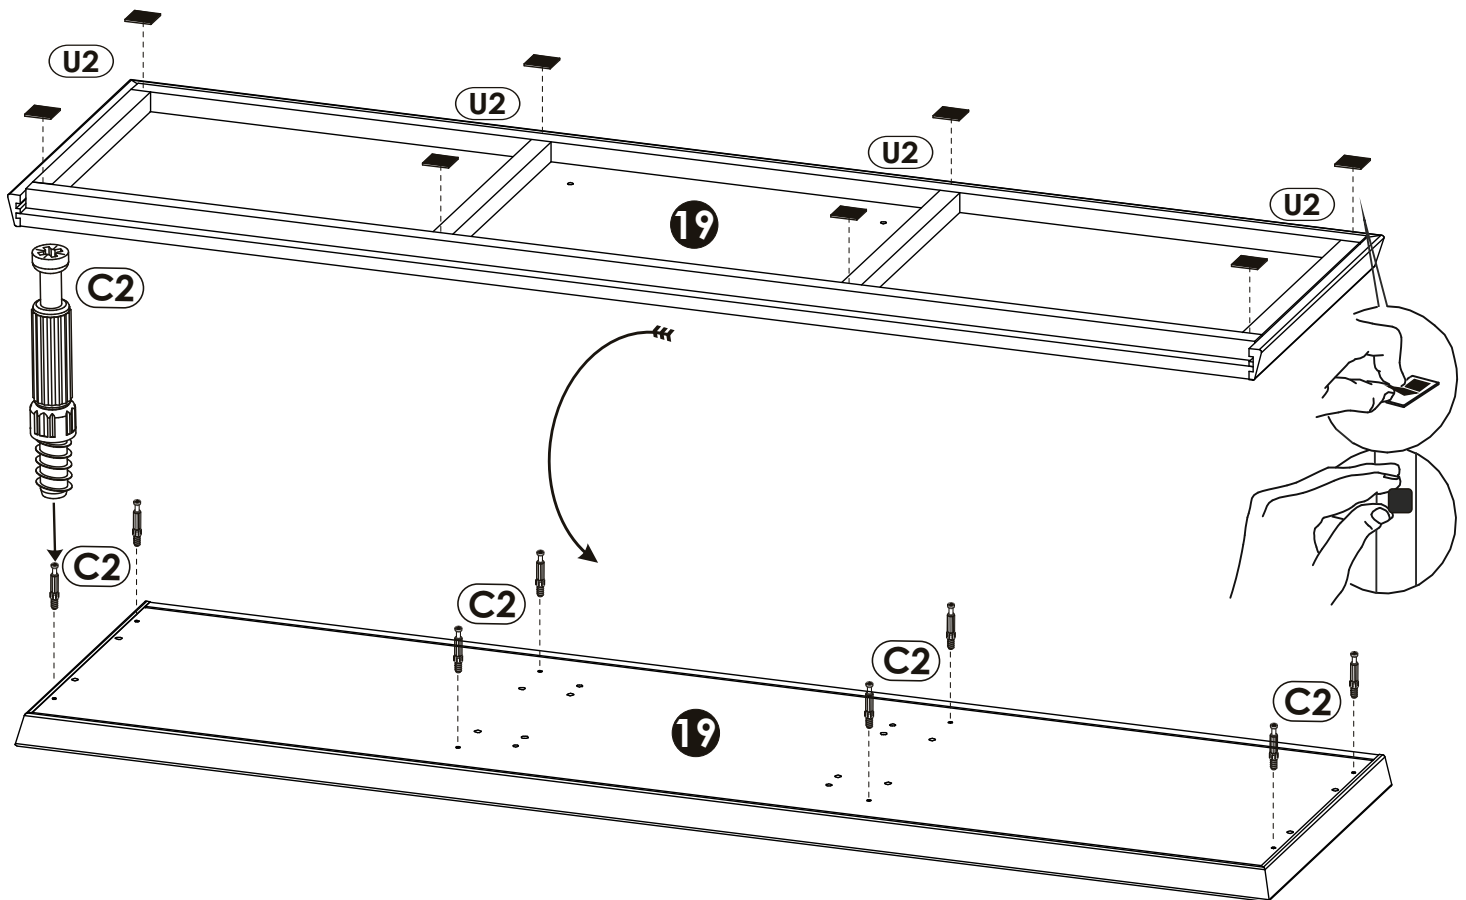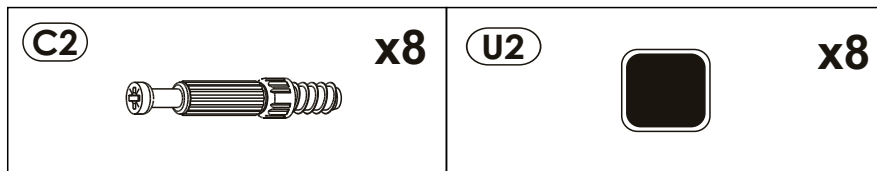


9 ▶

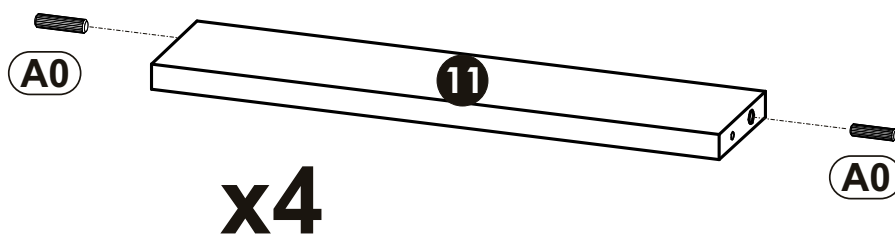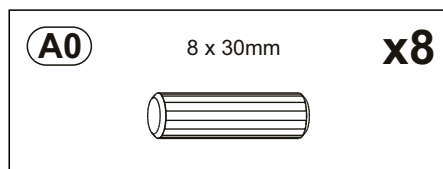


10 ►

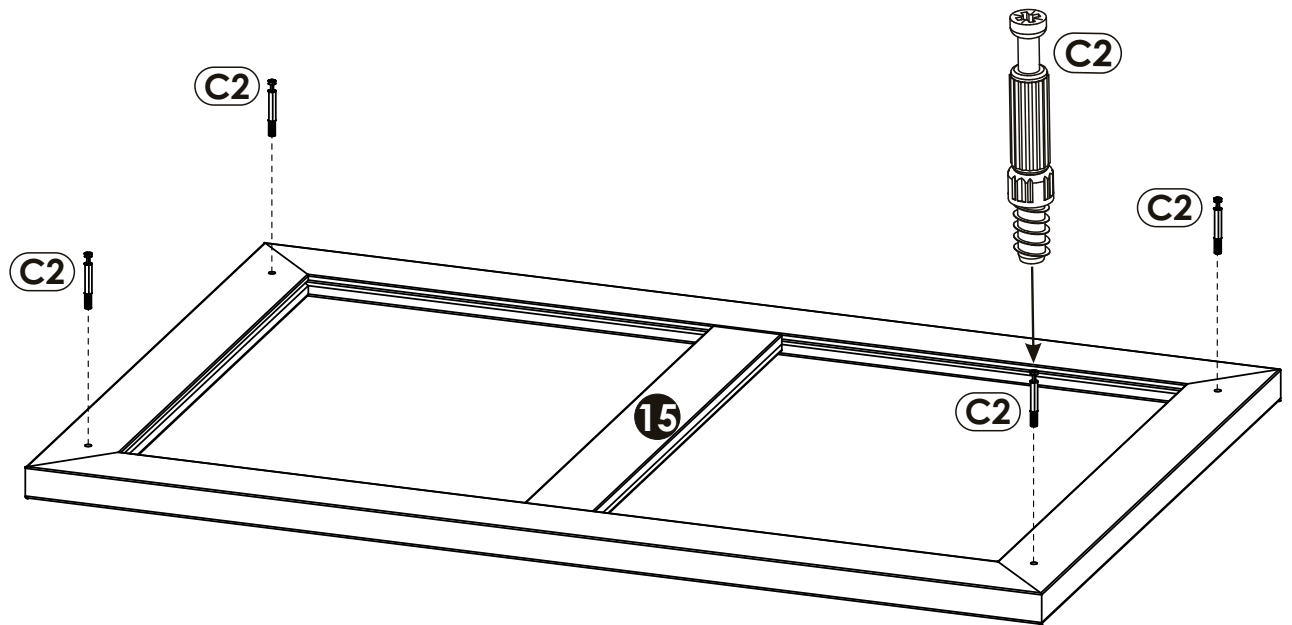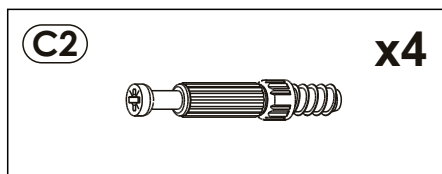


11 ►

D10 4 x 16 mm 	x8	J10 	x4	H2 4 x 22 mm 	x4
L6 	x2	U0 	x4	U3 	x4

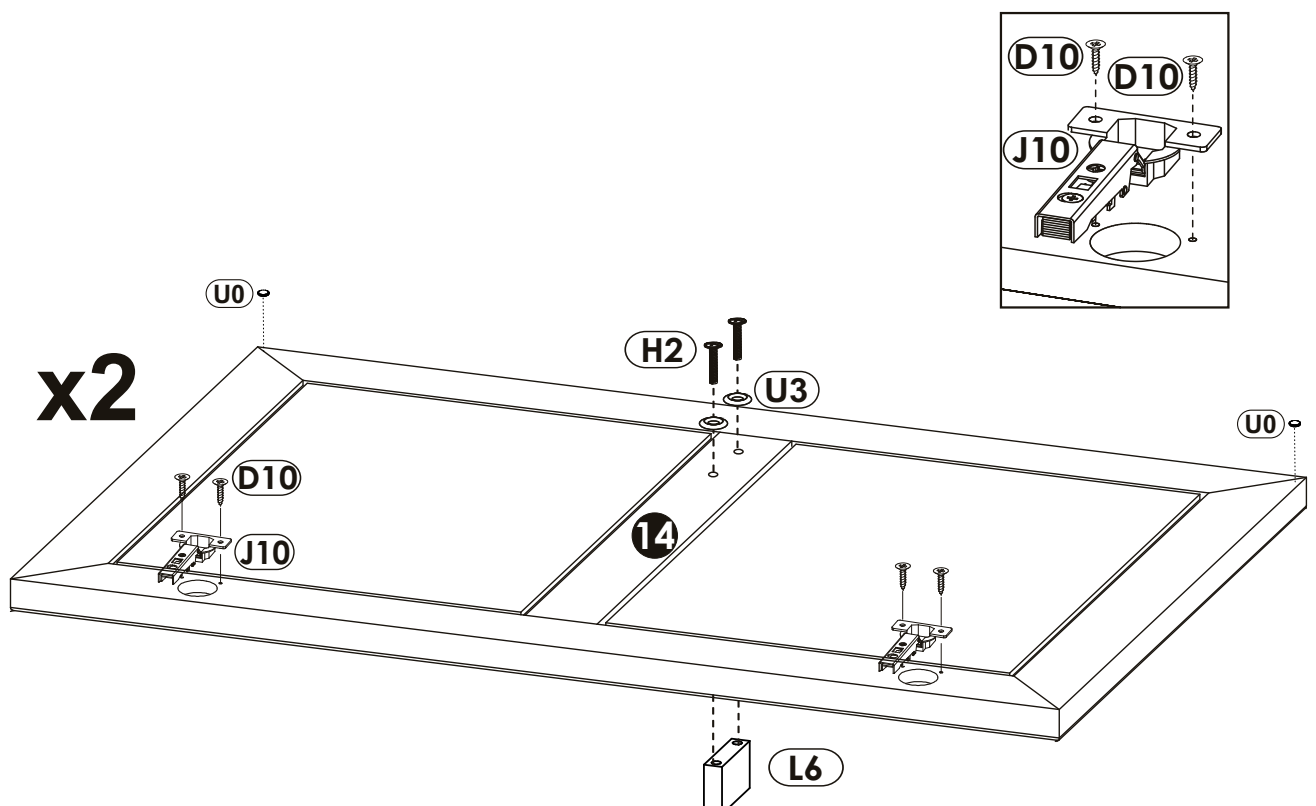



12▶

(A0) 8 x 30mm x8 	(C7)  x16 16mm
---	---

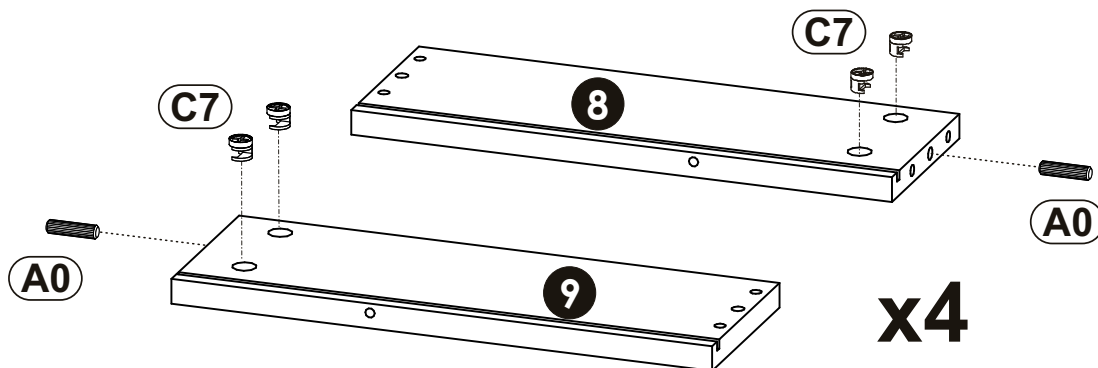


13▶

(A0) 8 x 30mm x16 
--



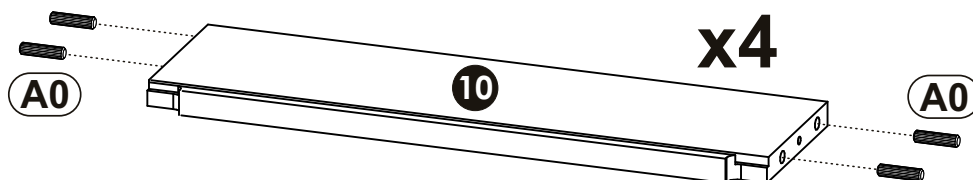


14▶


(C2)  x16	(H2) 4 x 22 mm x8 	(L6)  x4
(U0)  x8	(U3)  x8	

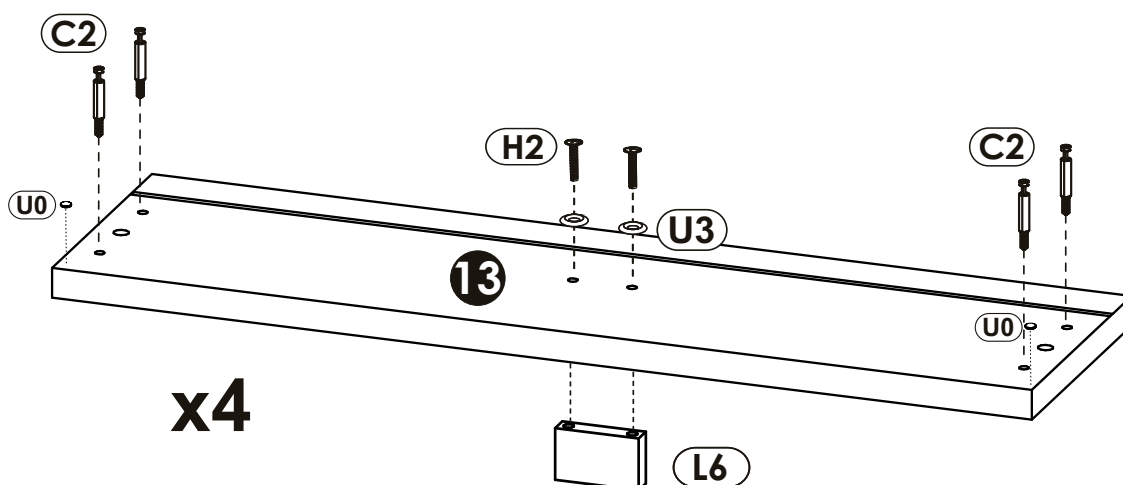




15▶

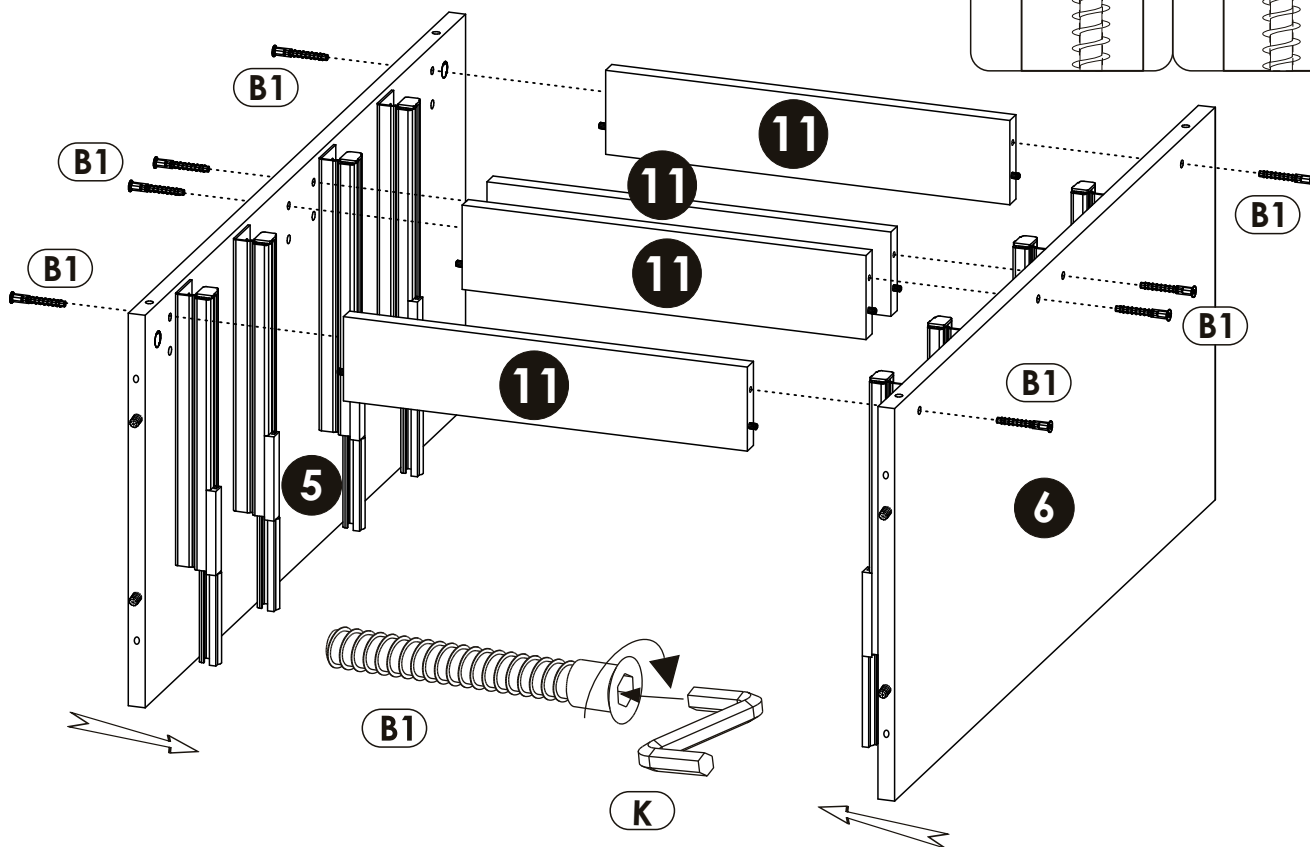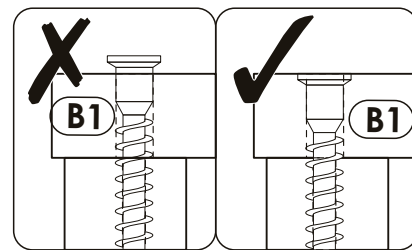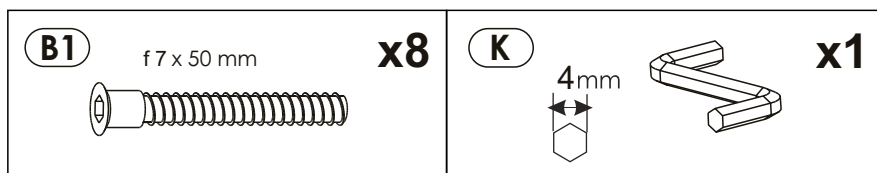


16▶

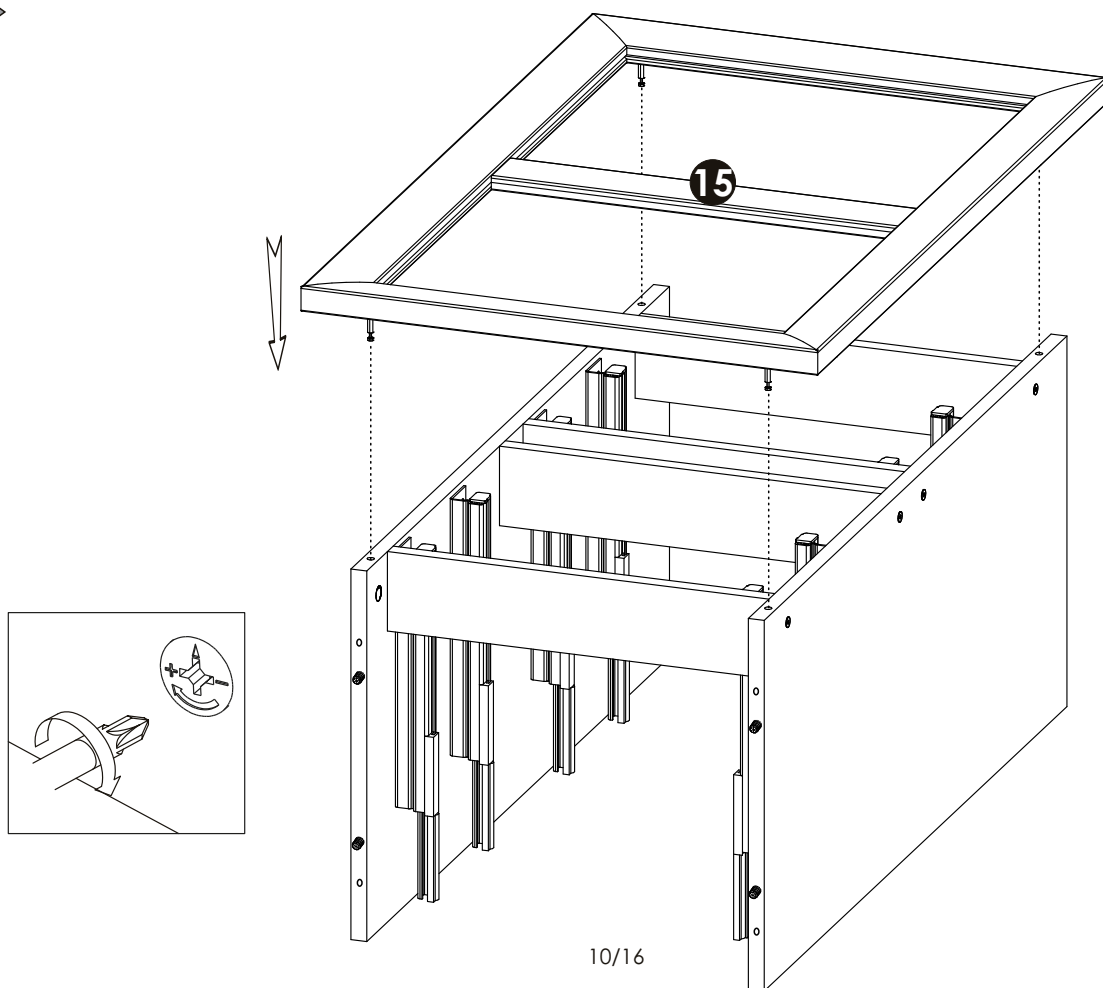



17▶

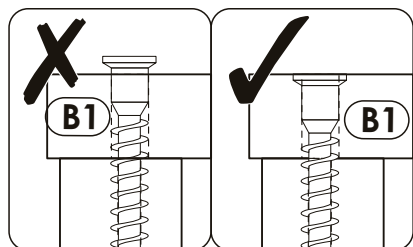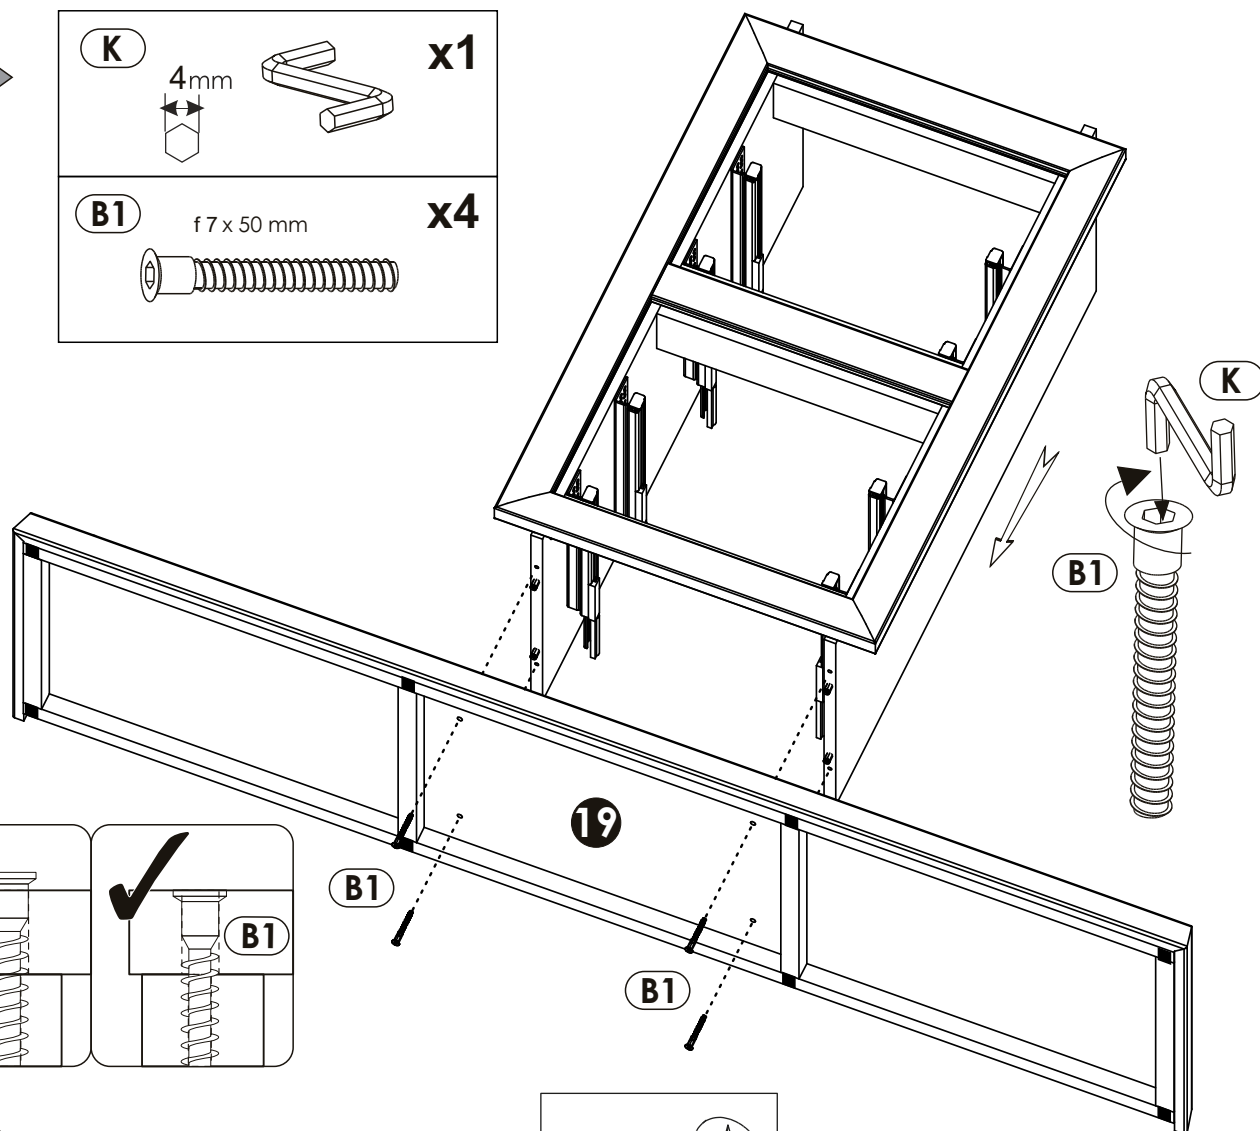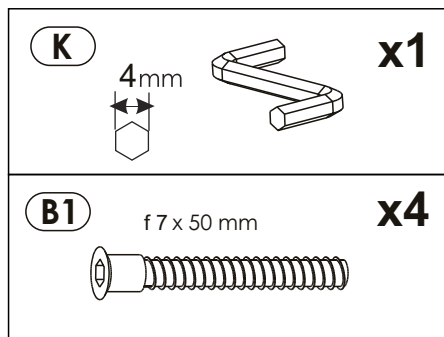

18▶






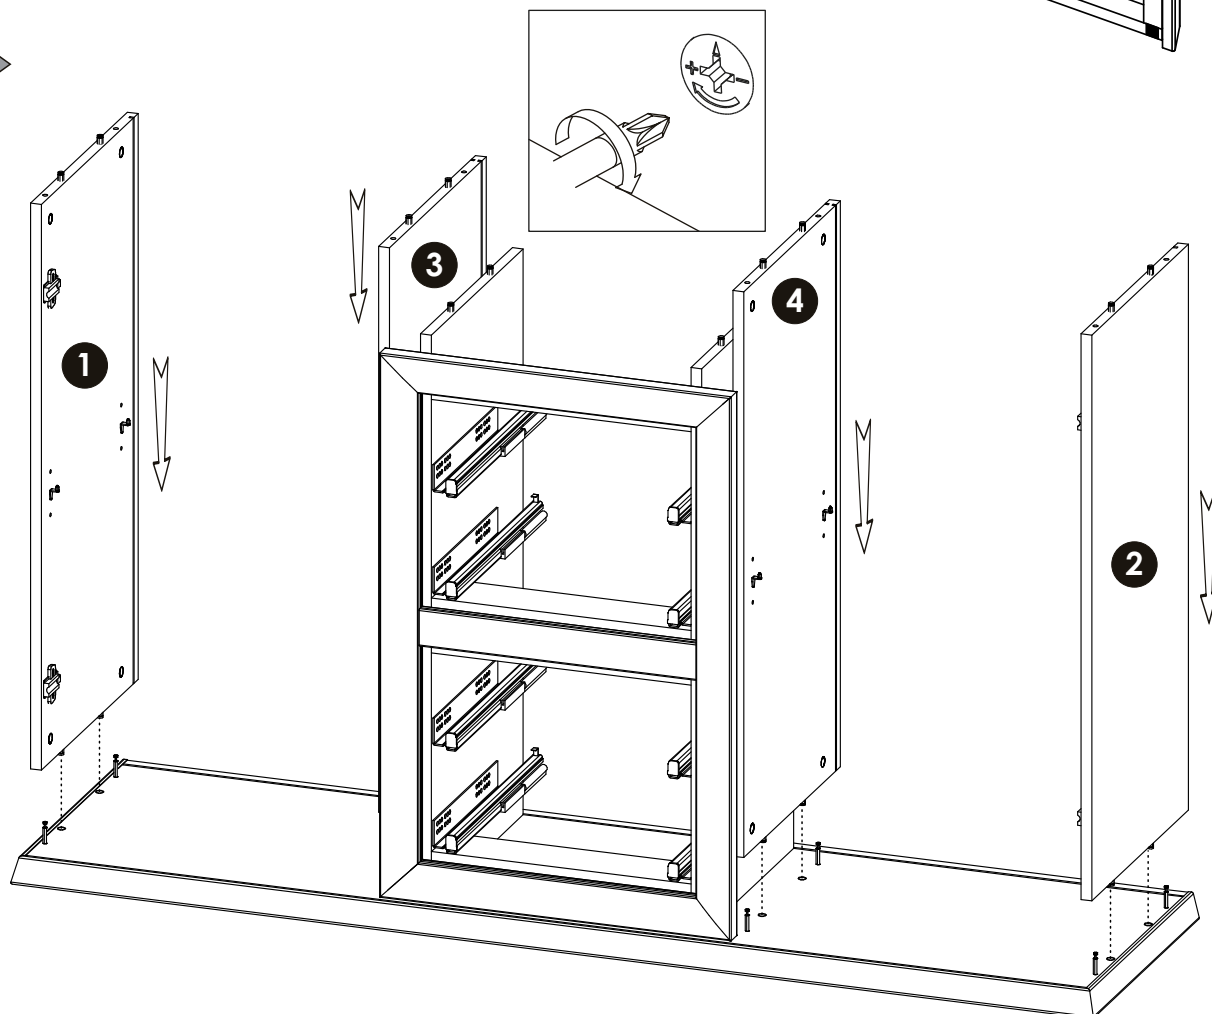


19▶








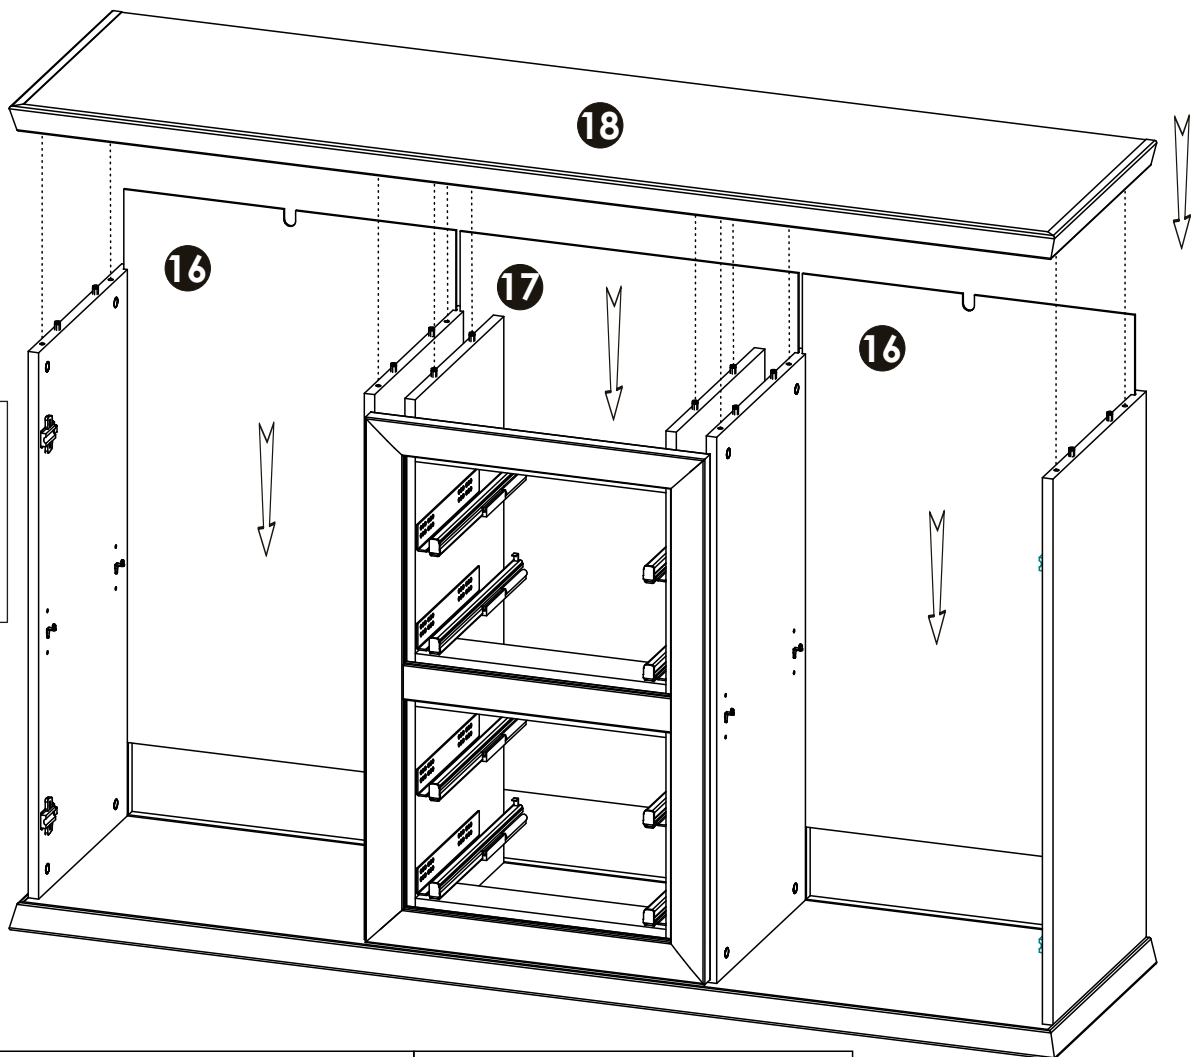
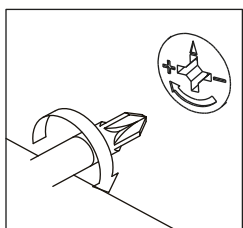


20▶





D0	3 x 15 mm	x30	M1		x30
					

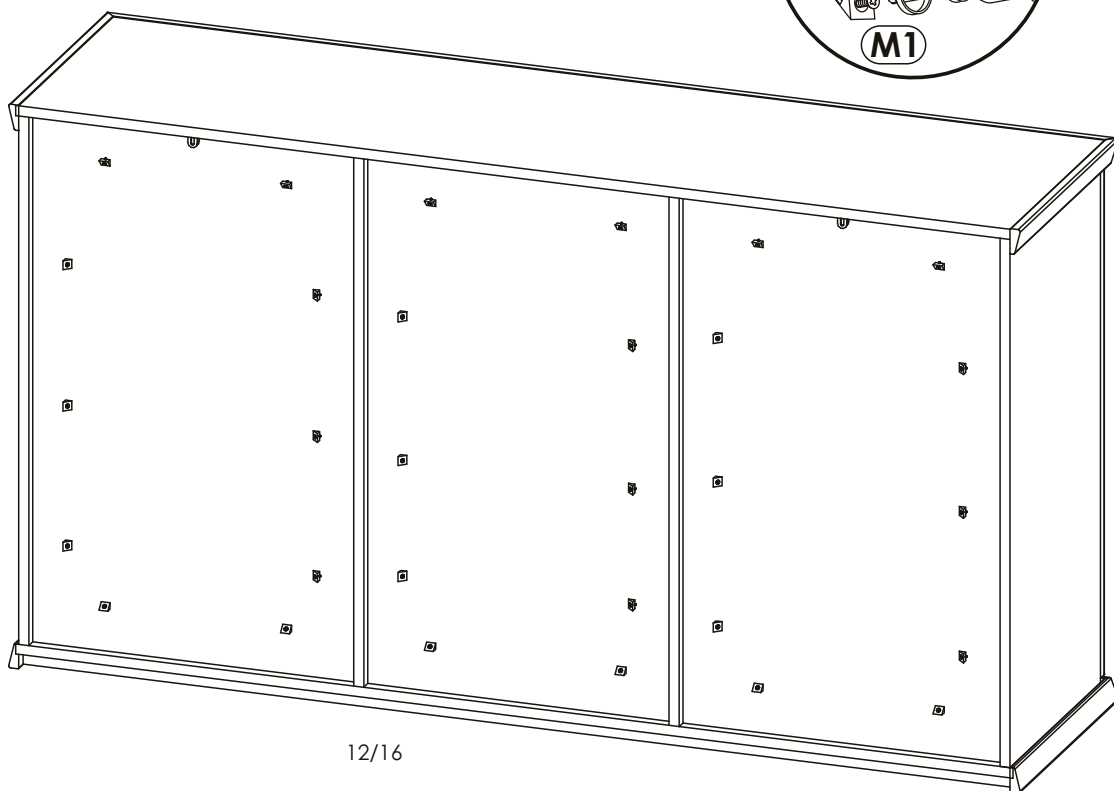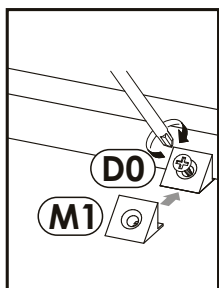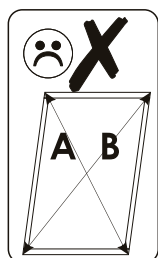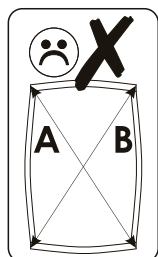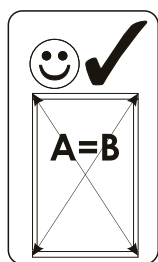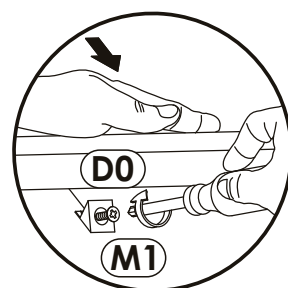



21▶

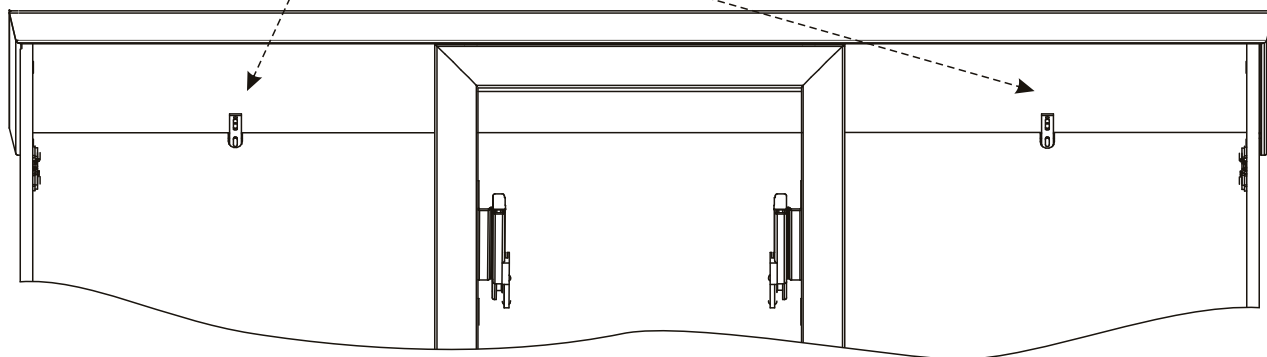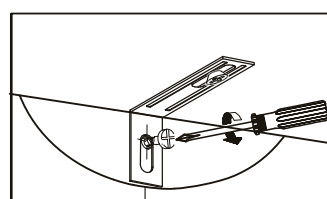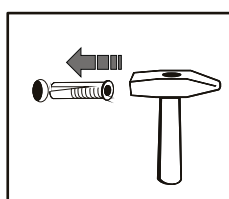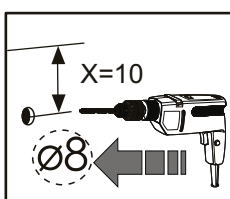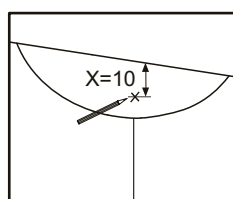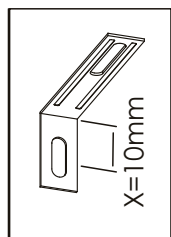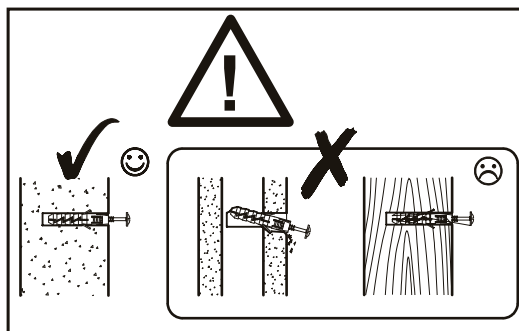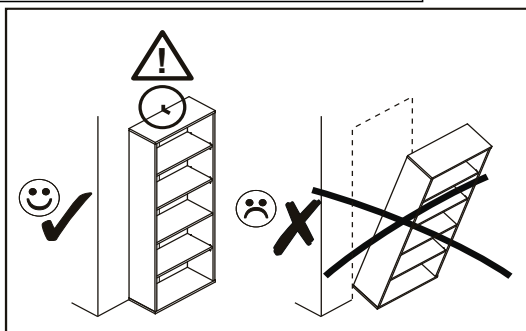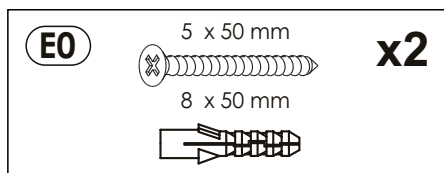

22▶

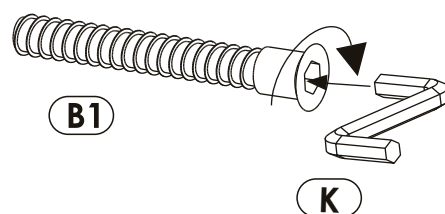
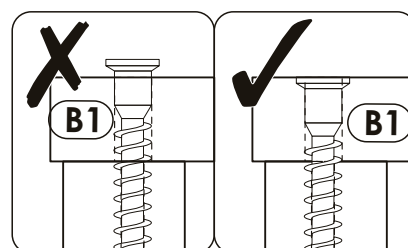
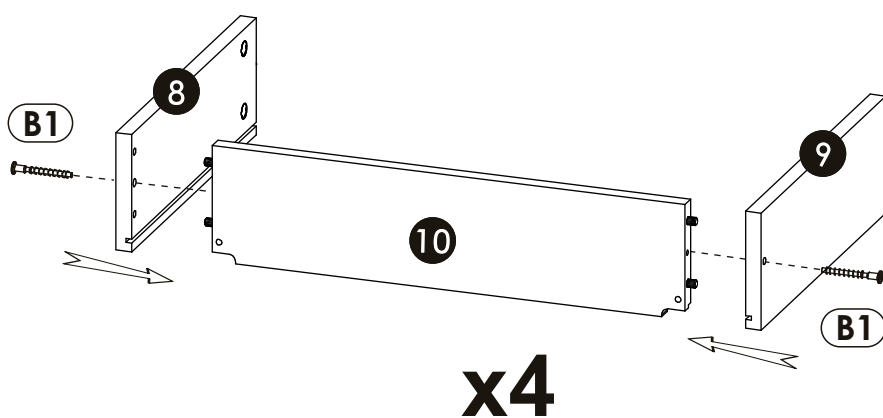
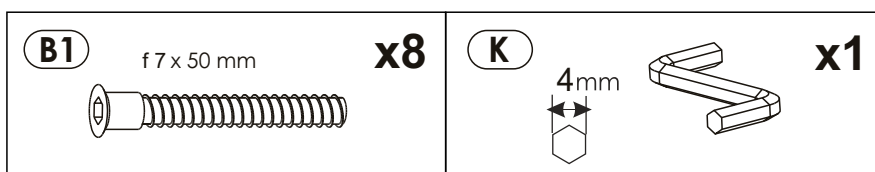


23▶



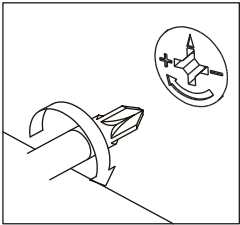
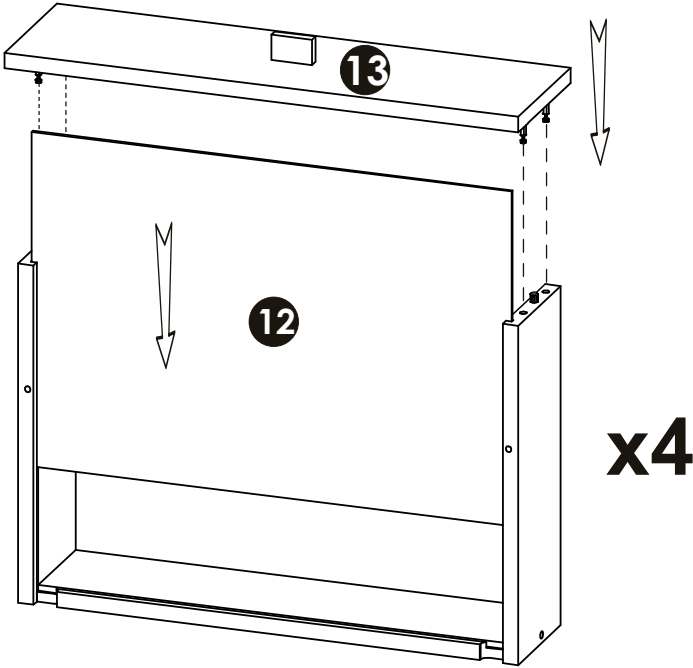


24▶




D0	3 x 15 mm	x8	M1		x8

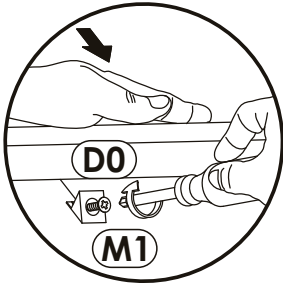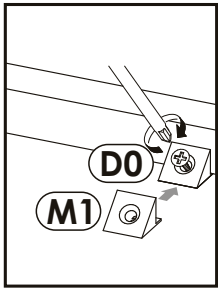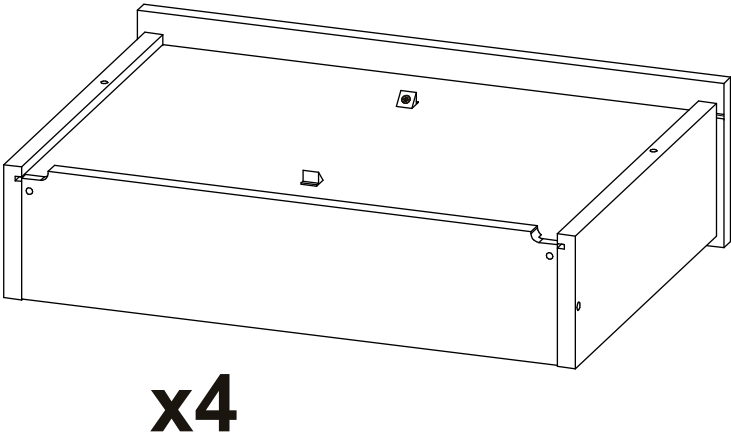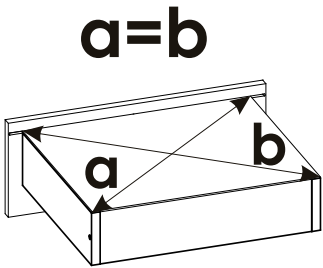

25▶

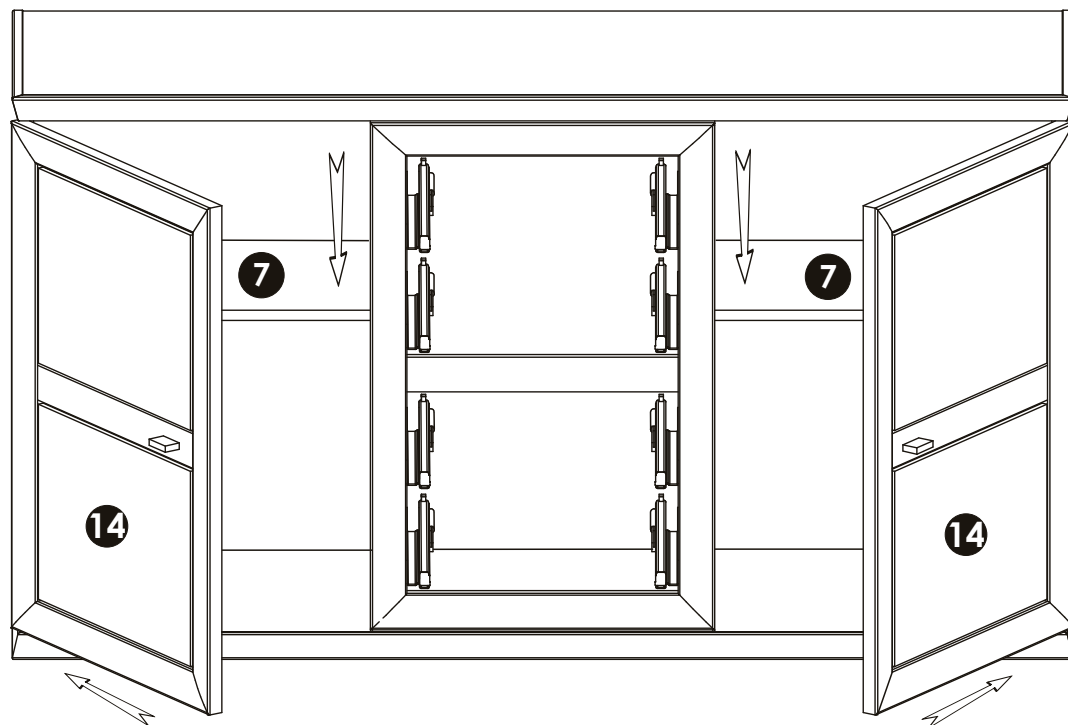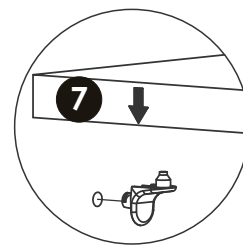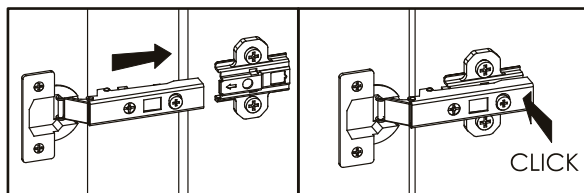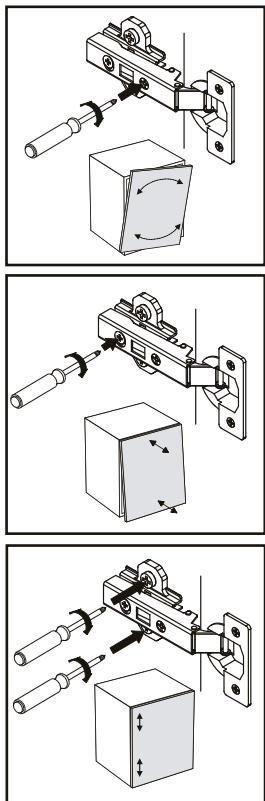

26▶

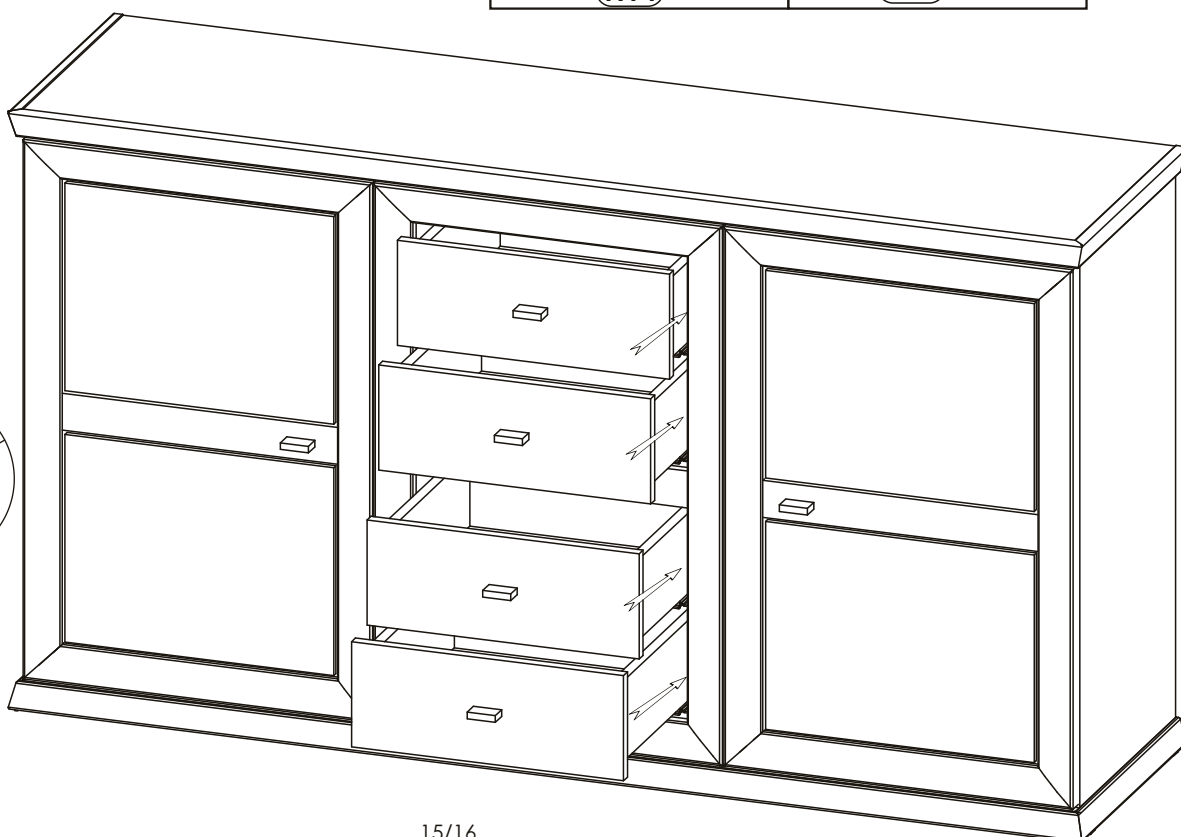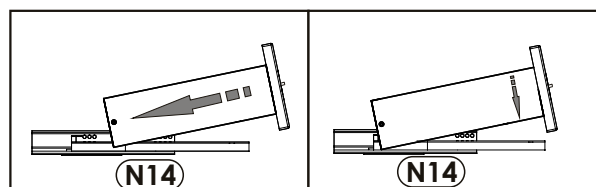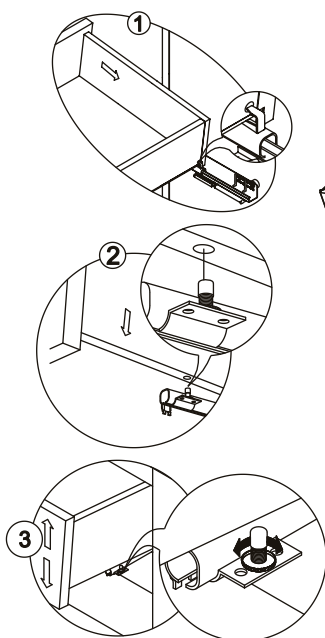

27▶▶

