


WESTPHALEN 8-H

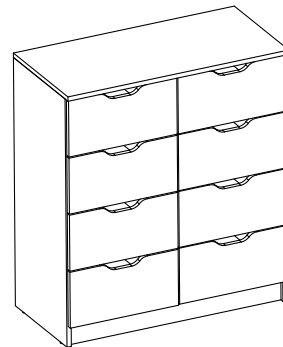

Montageanleitung / Notice de Montage / Assembling Instruction

ART. NR: 19 040 018
EAN: 4010340 194181

ORDER : -----

DE: Wichtige Montage – Tipps hier zum herunterladen:

EN: Important assembling suggestions download:

FR: Conseils de montage importants à télécharger ici :

BG: Важни съвети за сглобяване, които да изтеглите от тук:

CZ: Důležité montážní typy ke stažení zde:

EE: Olulised kokkupanemisetpanekute allalaadimine:

DK: Viktige montage tips til at downloade:

ES: Descarga de sugerencias de montaje importantes:

FI: Tärkeät kokoamisedotukset ladataan:

GR: Λήψη σημαντικών προτάσεων συναρμολόγησης:

HR: Preuzimanje važnih prijedloga za sastavljanje:

HU: Fontos összeszerelési javaslatok letöltése:

IT: Download importanti suggerimenti di montaggio:

LT: Svarbūs surinkimo pasiūlymai atsisiųsti:

LU: Wichtig Versammlungsvorschläge herunterladen:

LV: Svarīgu montāžas ieteikumu lejupielāde:

NL: Belangrijke montagesuggesties downloaden:

NO: Viktige nedlastingsforslag:

PL: Pobieranie ważnych sugestii montażowych:

PT: Download de sugestões importantes de montagem:

RO: Descărcare de sugestii importante de asamblare:

RS: Преузимање важних предлога за састављање:

RU: Важные предложения по сборке скачать:

SL: Prenos pomembnih predlogov za sestavljanje:

SE: Viktiga hämtningsförslag:

SK: Stiahnutie dôležitých návrhov na zostavenie:

TR: Önemli montaj önerileri indir:


ARB: المهمة التجميع اقتراحات تنزيل:



Z. A. du Niederwald
F-67470 Seltz
www.interlink-sas.com



WESTPHALEN 8-H

①	Ø8x35	32x	①6		8x
②	Ø6x30	32x	①7		8x
③		1x	①8		32x
④		18x			
⑤		6x			
⑥		10x			
⑦		42x			
⑧		9x			
⑨		40x			
⑩		1x			
⑪		5x			
⑫		6x			
⑬		4x			
⑭		77x			
⑮		32x			



Inter Link SAS

Z. A. du Niederwald
F-67470 Seltz
Frankreich/France

International:

Téléfon: (0033) 3 88 05 55 50

Téléfax: (0033) 3 88 05 55 68

National:

Téléphone 03 88 05 55 59

Télécopie 03 88 05 55 79

e-mail:





service@interlink-sa.com

www.interlink-sa.com




90 min.


2-18

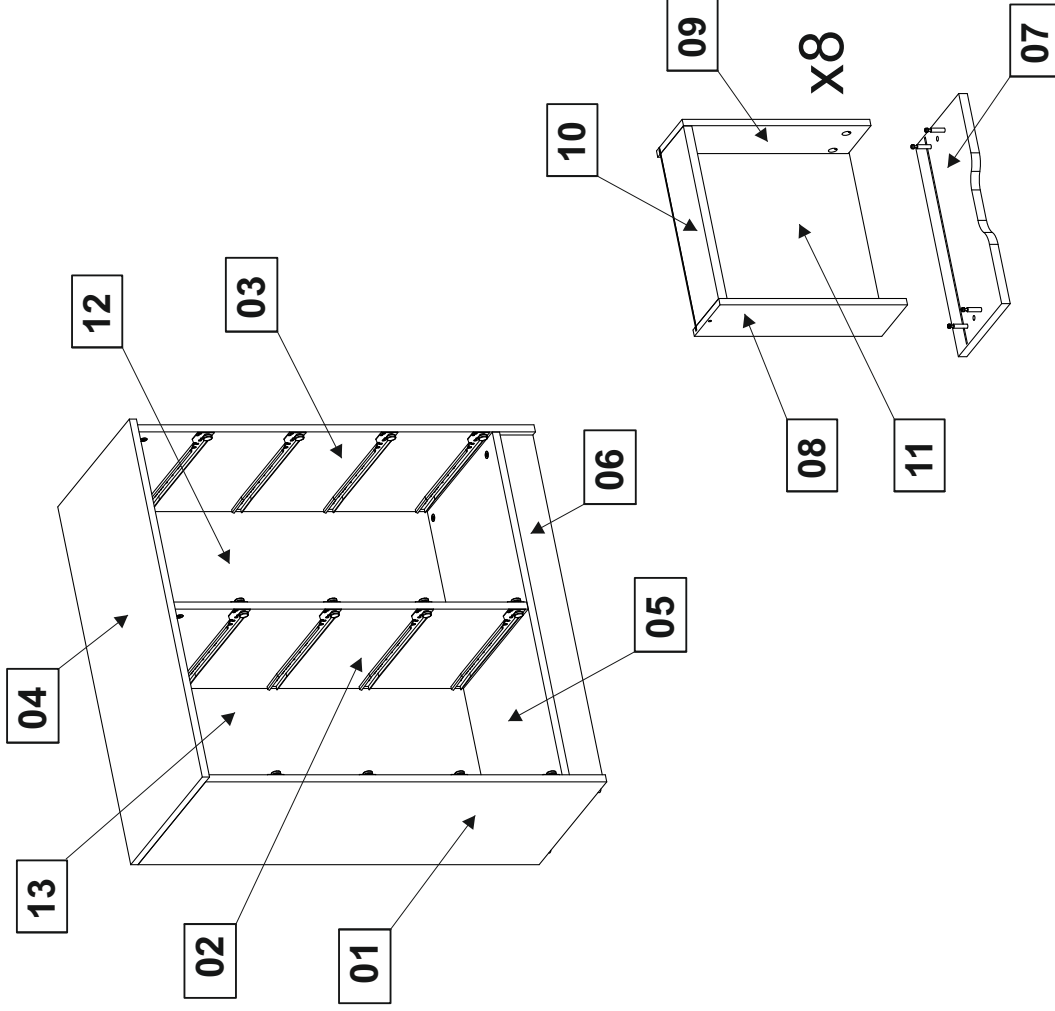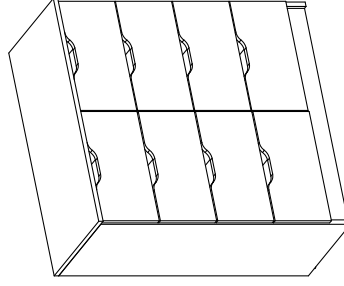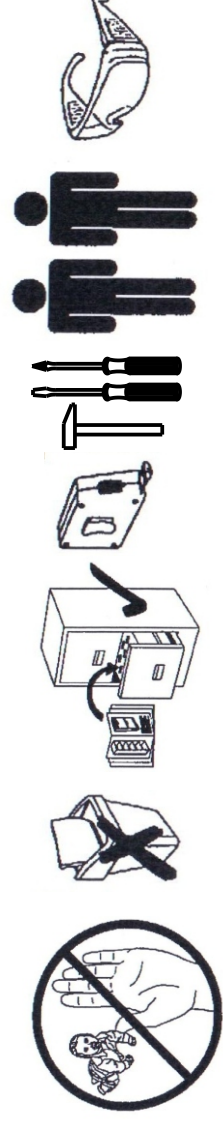


WESTPHALEN 8-H

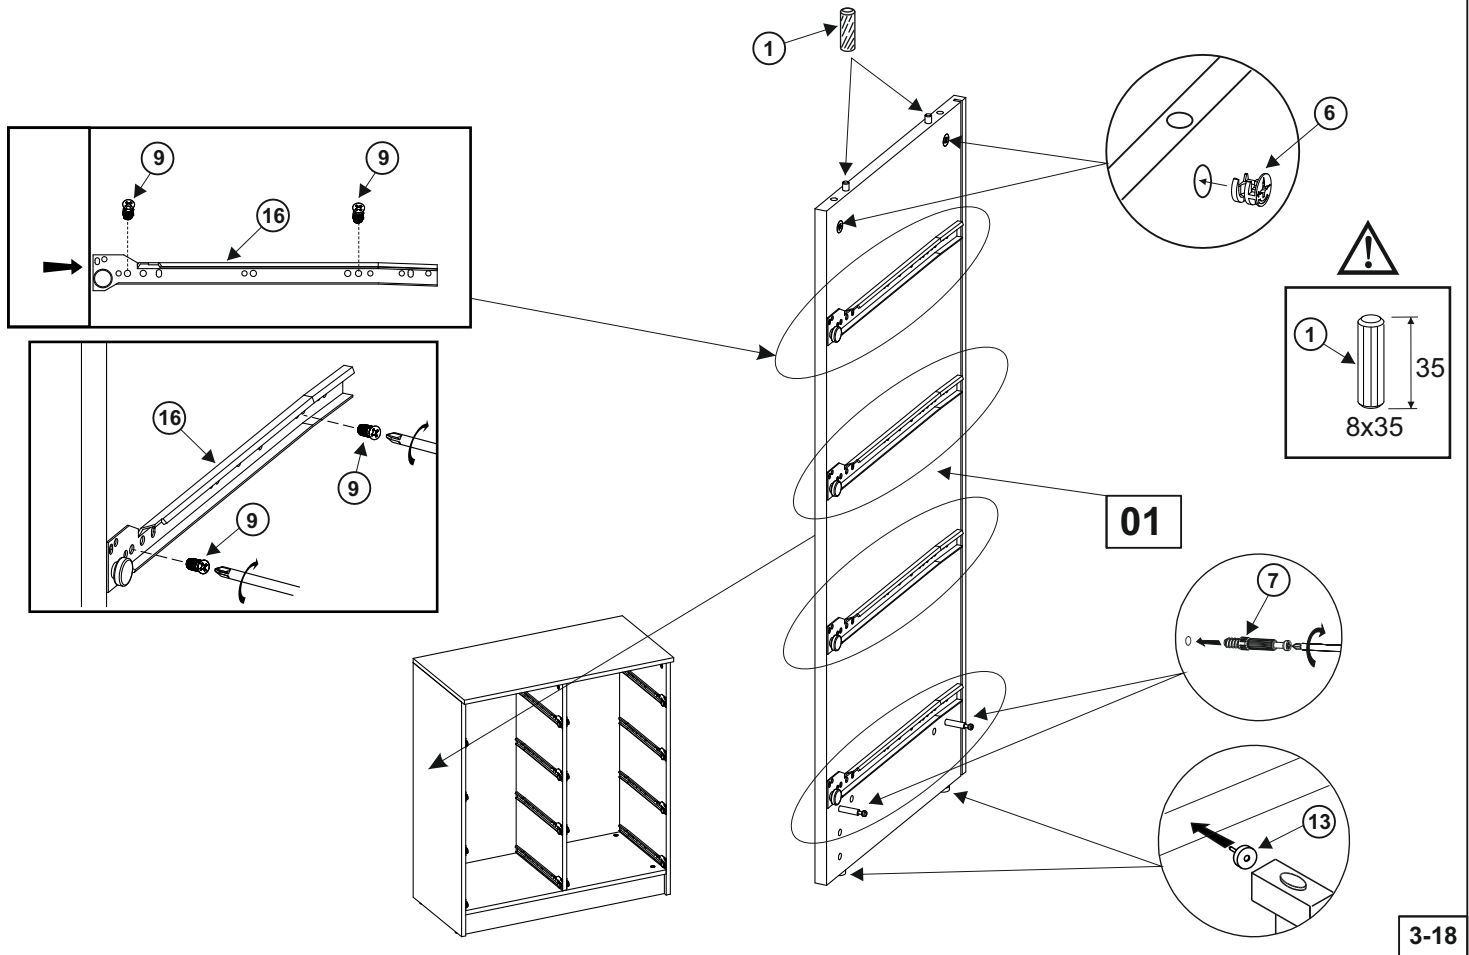


WESTPHALEN 8-H

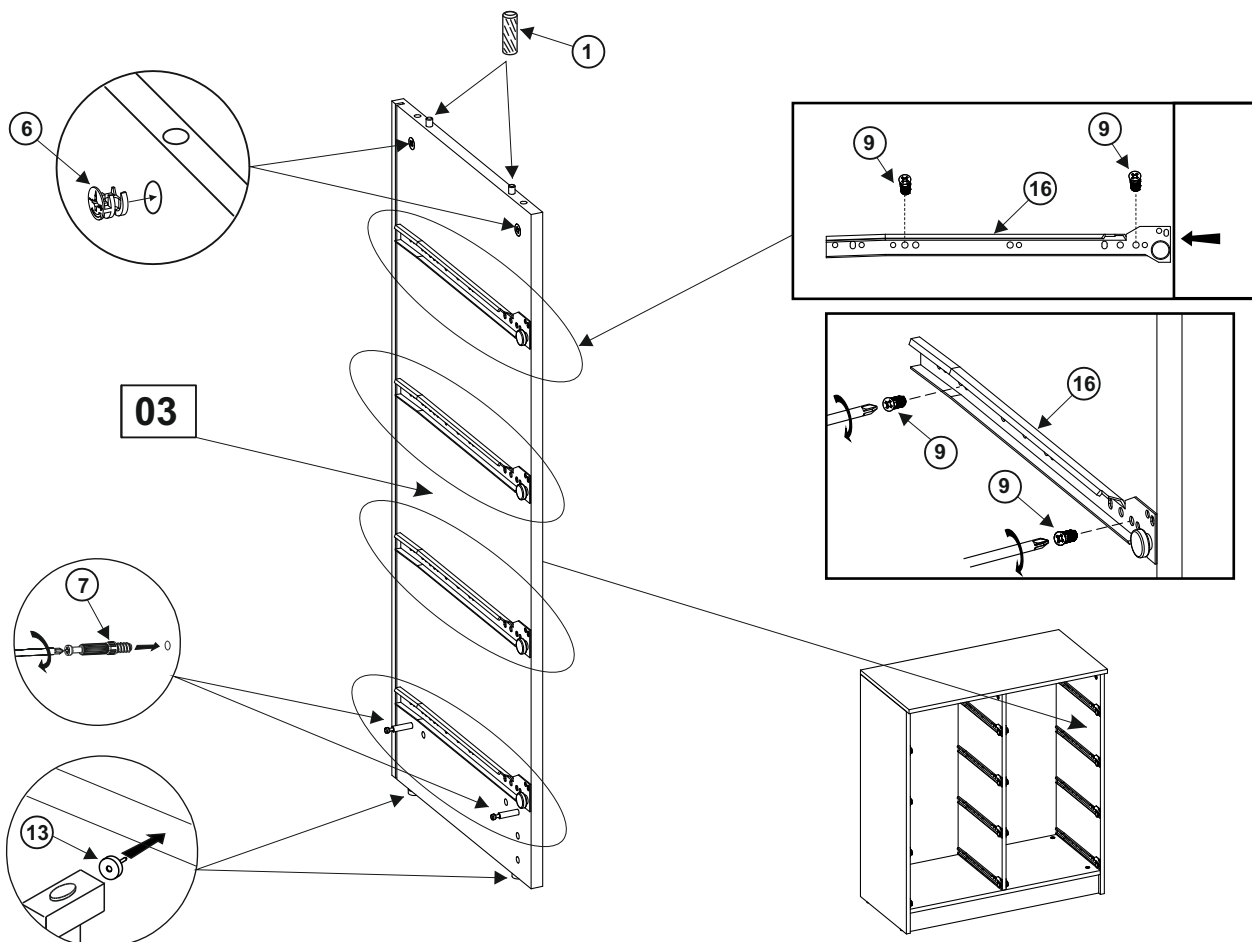


WESTPHALEN 8-H

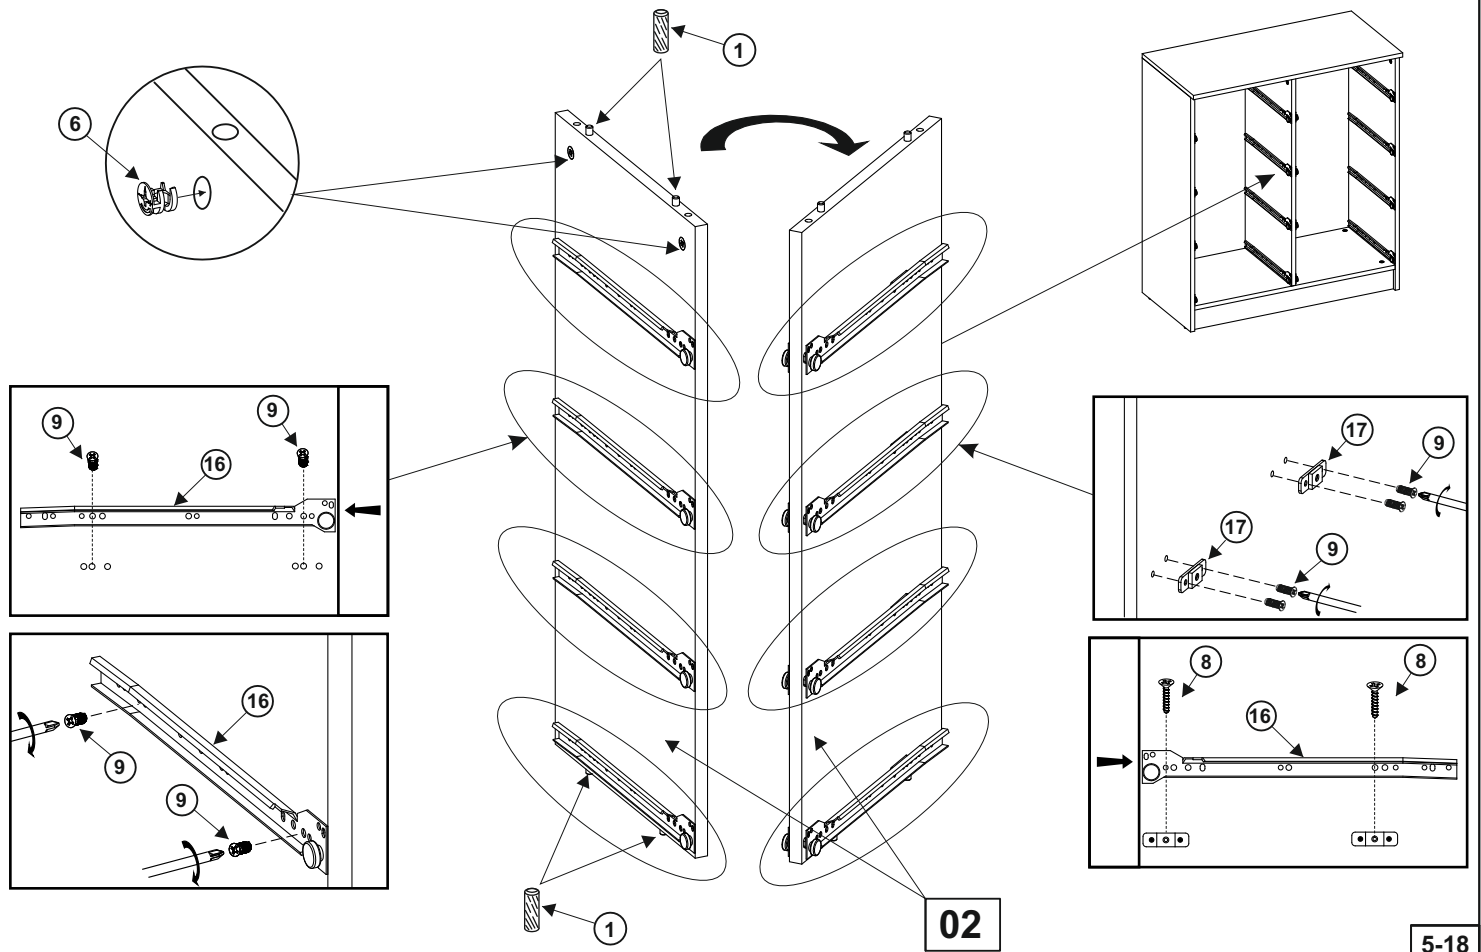

WESTPHALEN 8-H

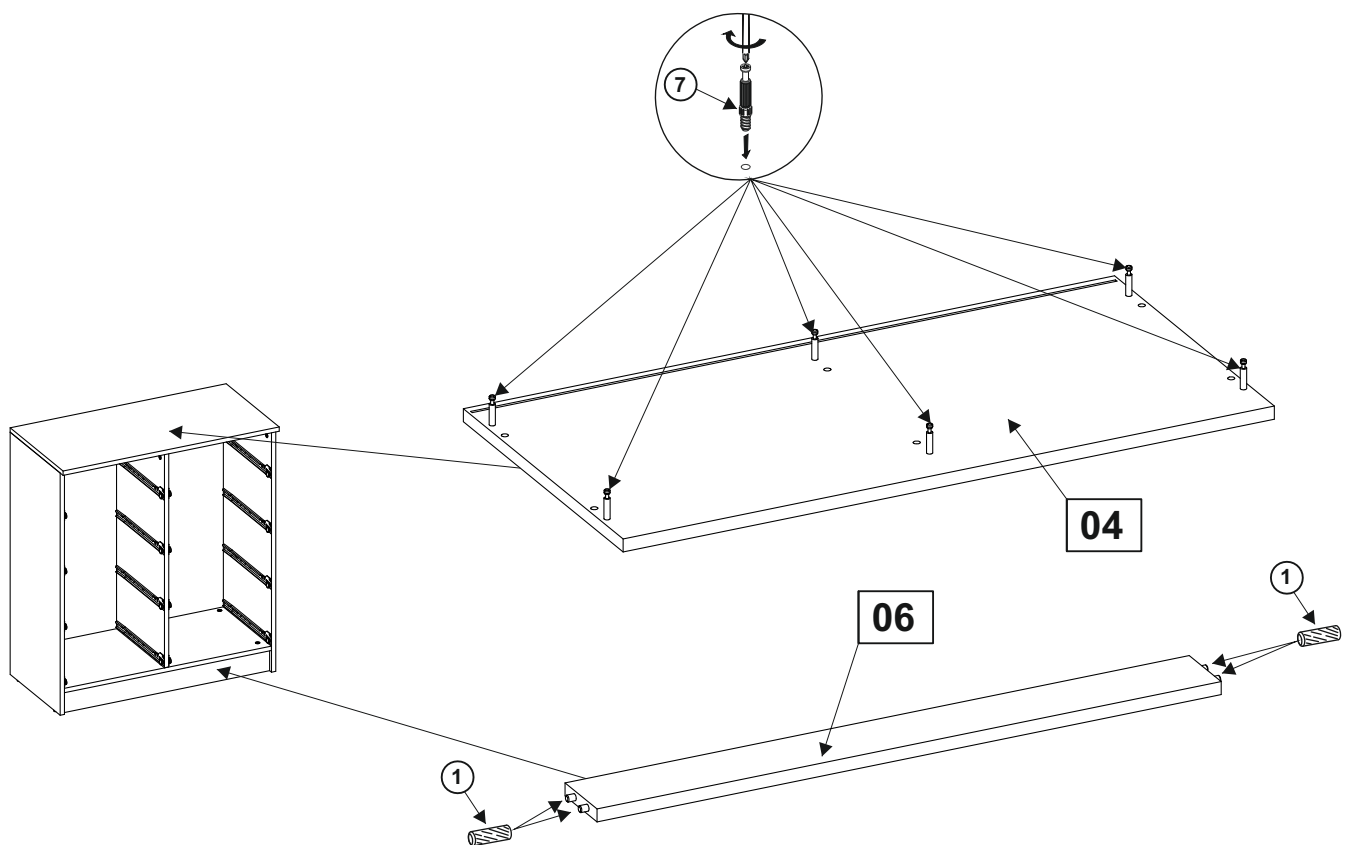


WESTPHALEN 8-H

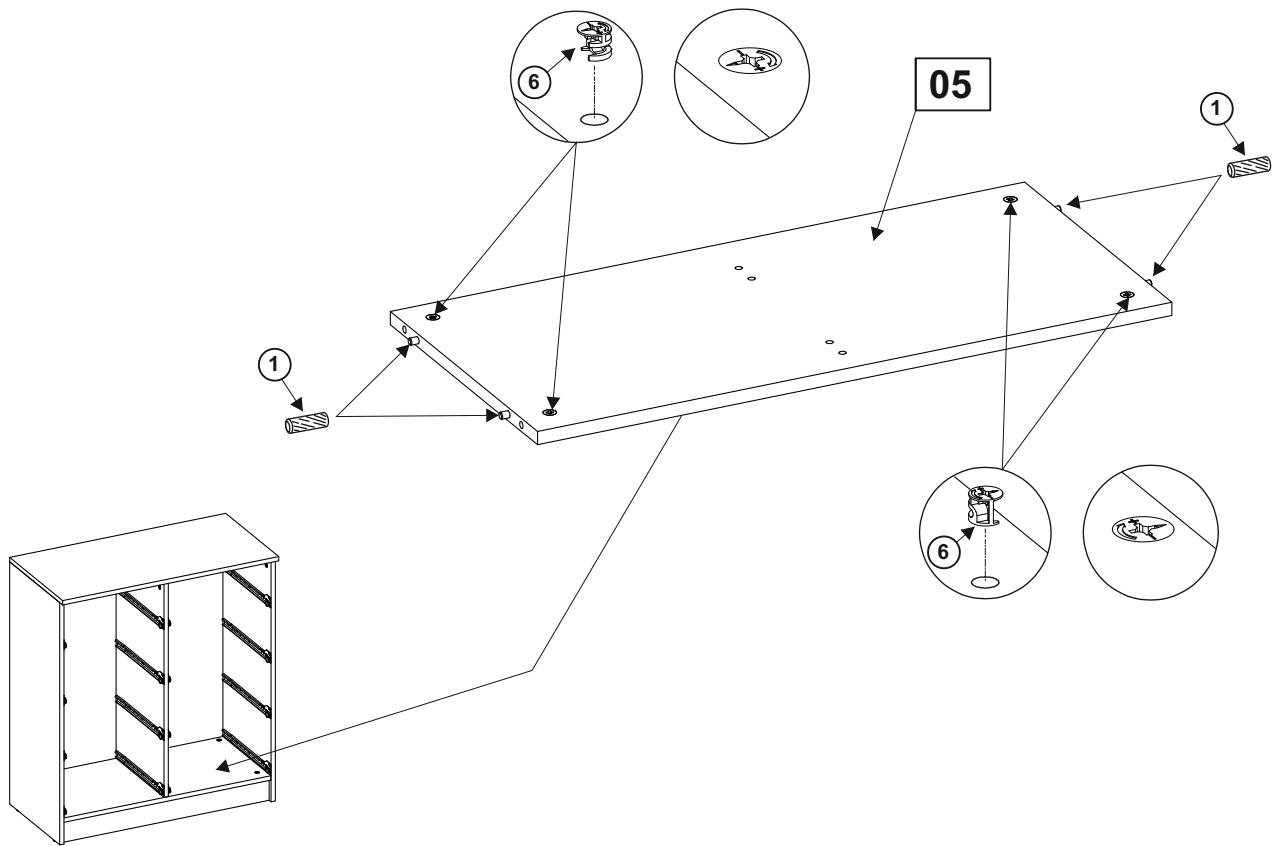


7-18

WESTPHALEN 8-H

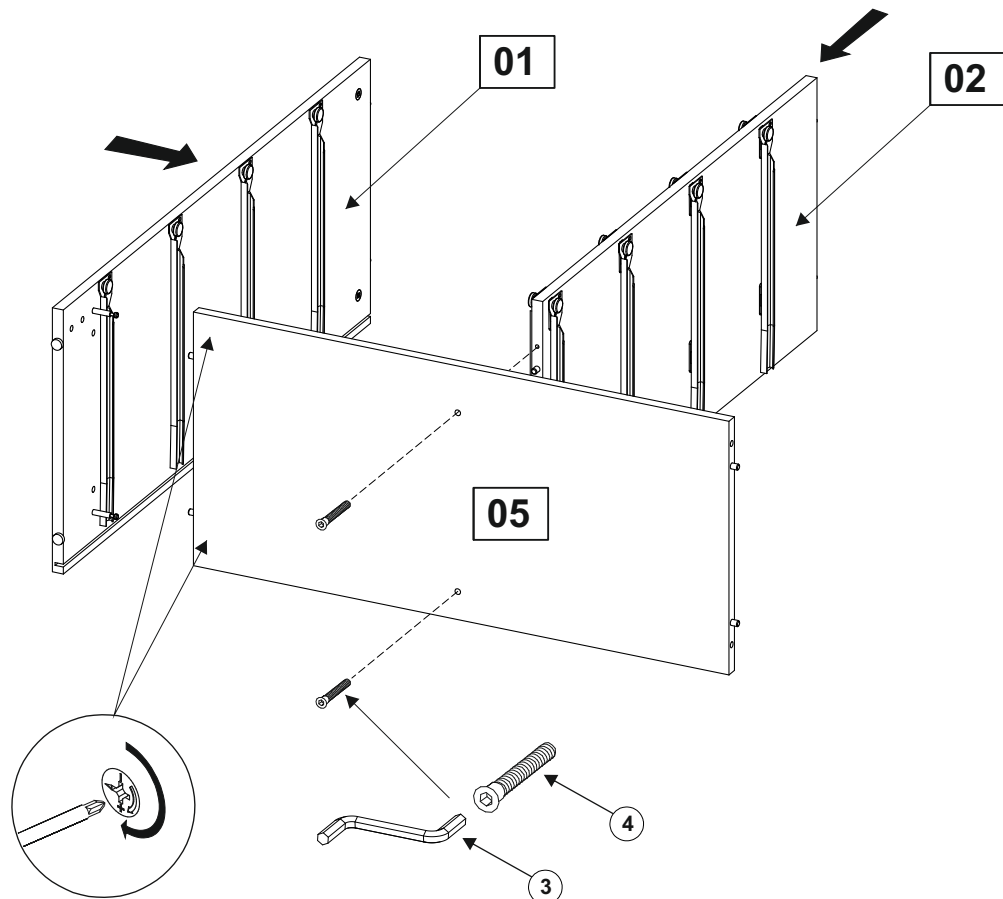


8-18

WESTPHALEN 8-H

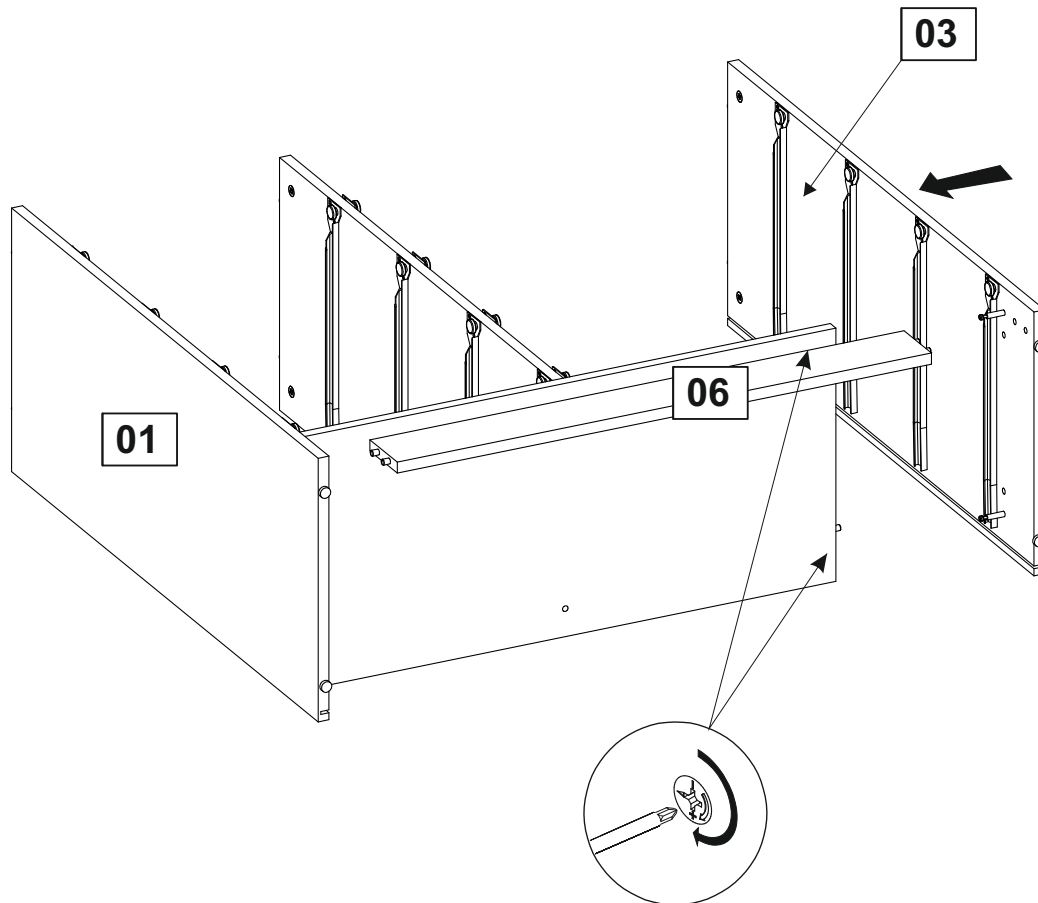



9-18

WESTPHALEN 8-H

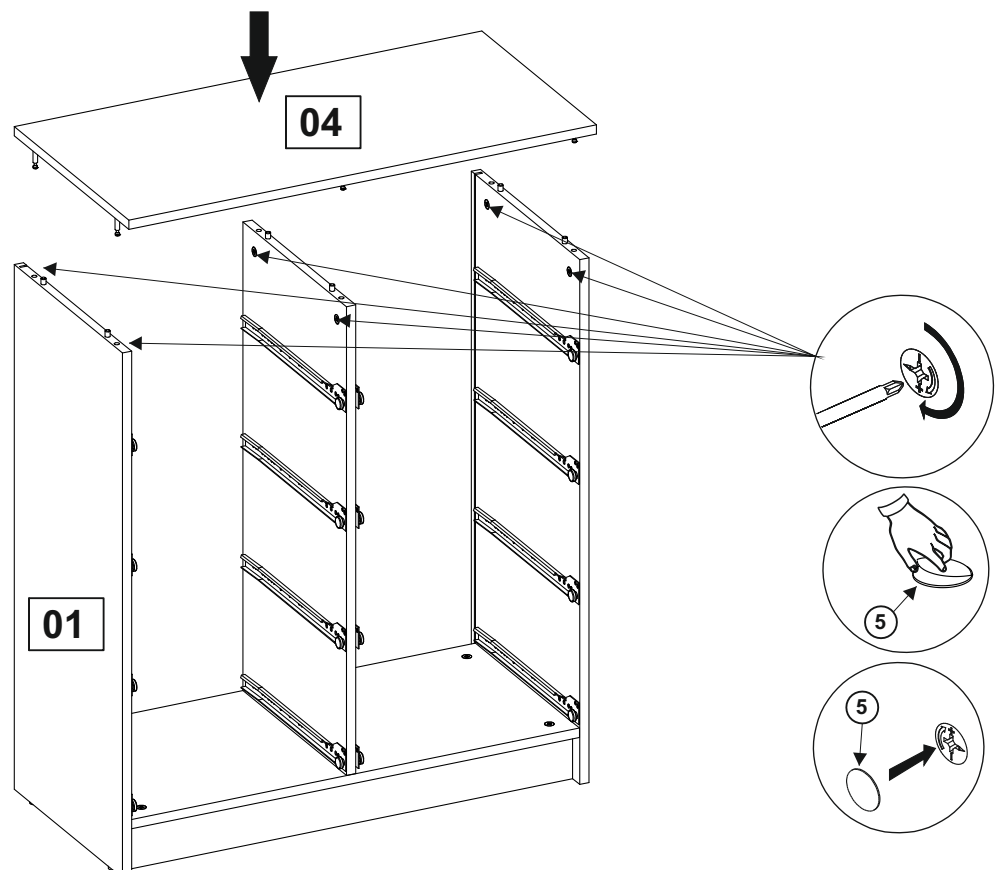





10-18

WESTPHALEN 8-H

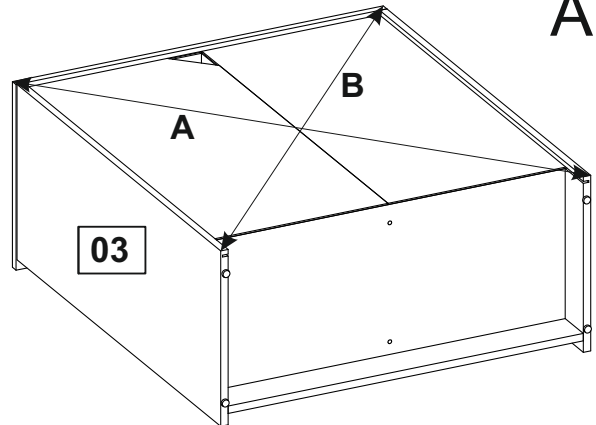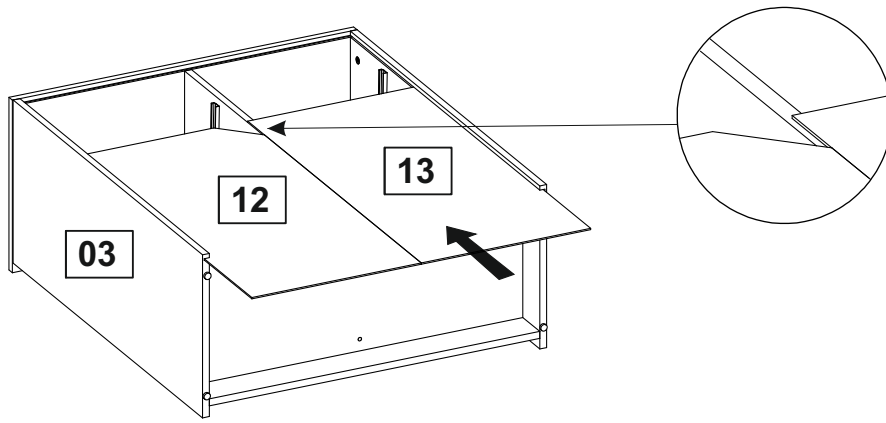





11-18

WESTPHALEN 8-H

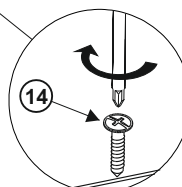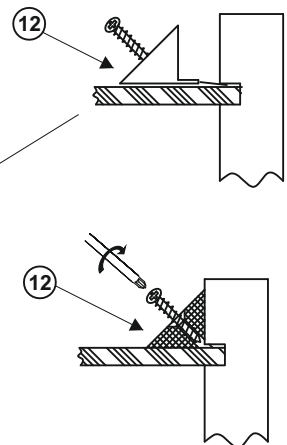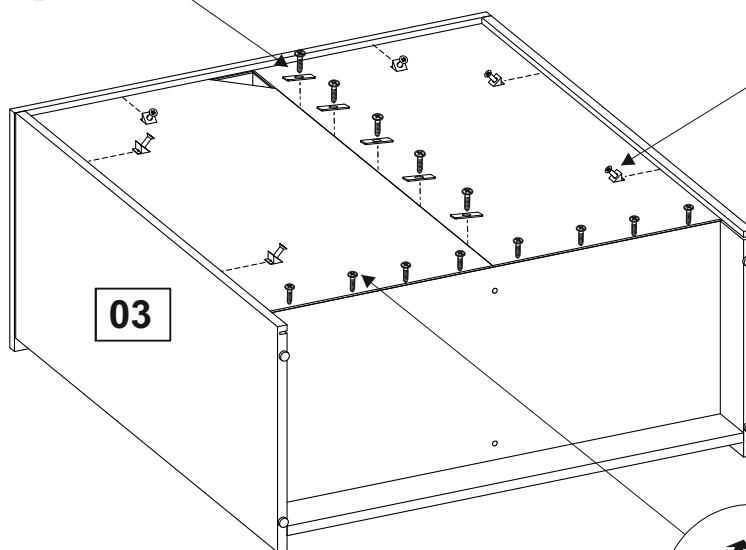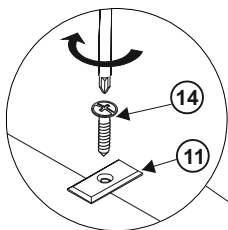





12-18

WESTPHALEN 8-H

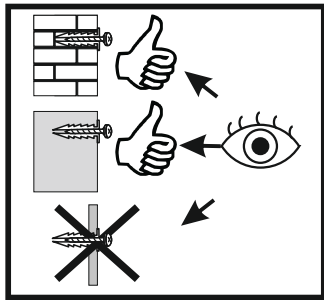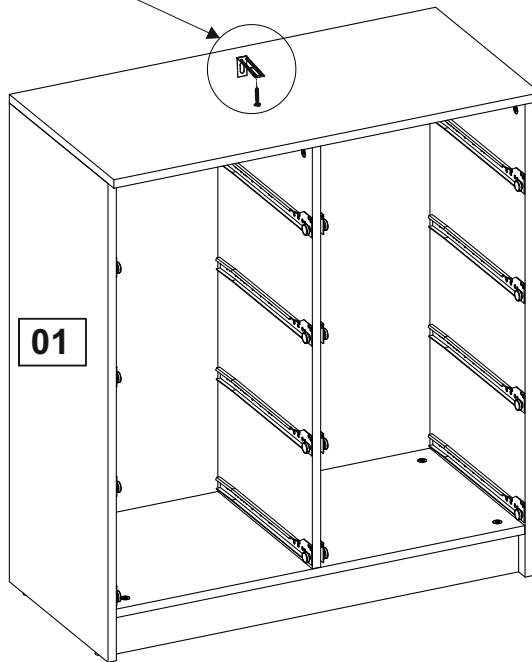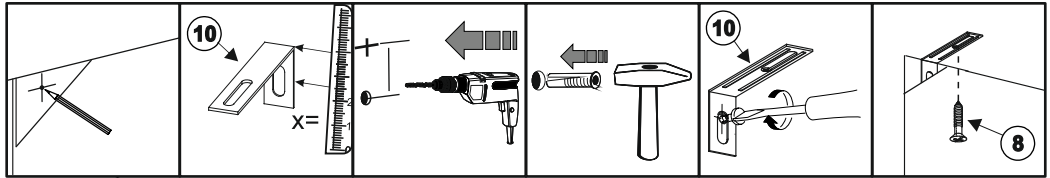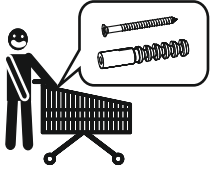


13-18

WESTPHALEN 8-H

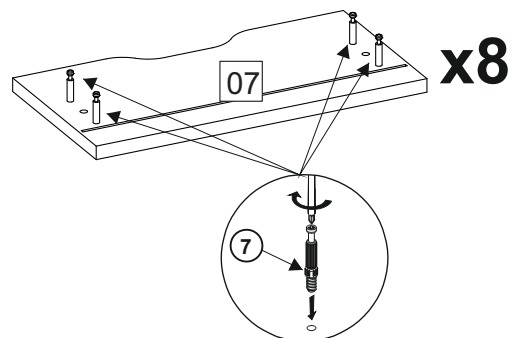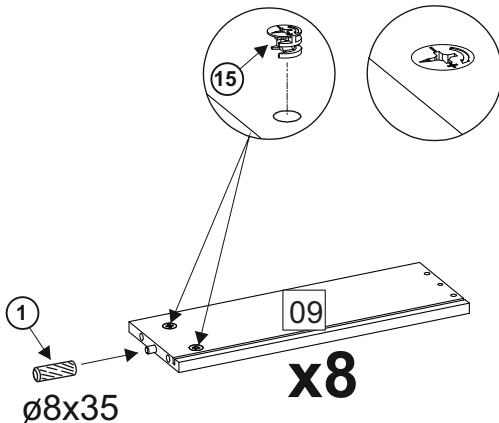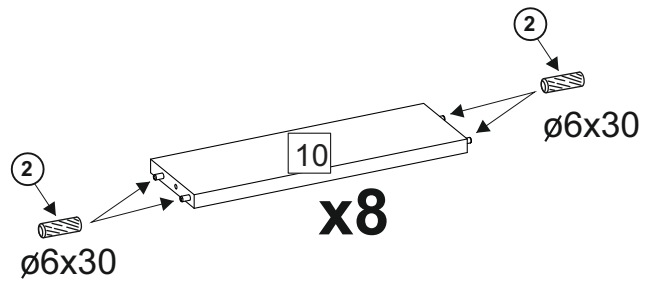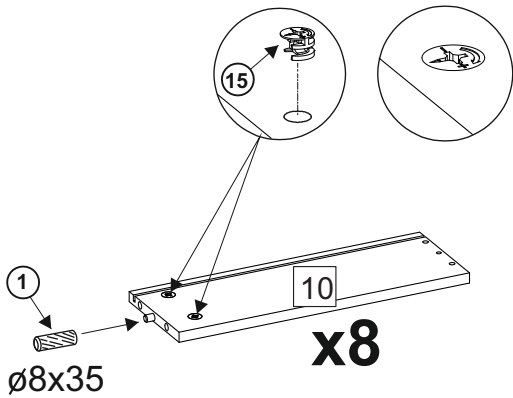


14-18

WESTPHALEN 8-H

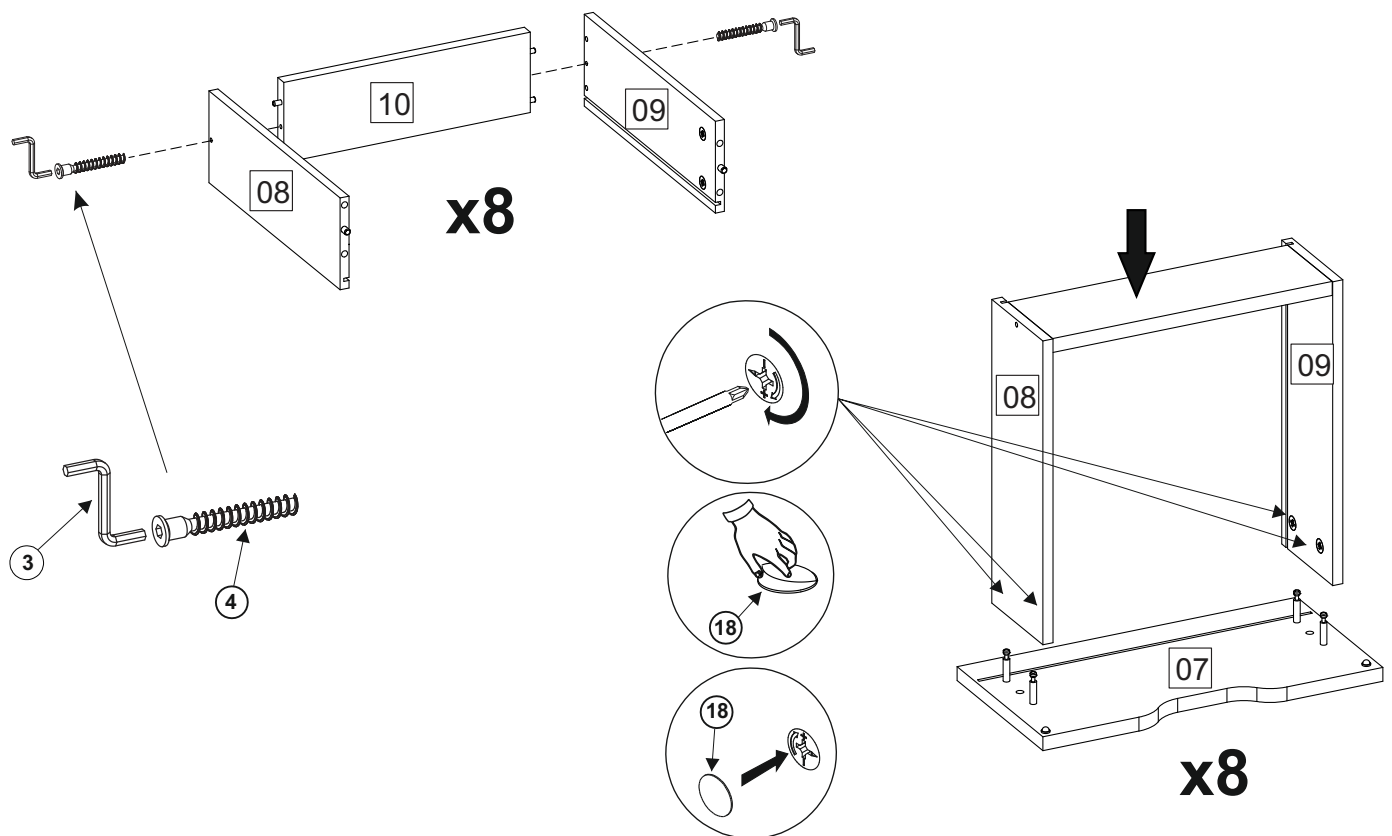



15-18

WESTPHALEN 8-H

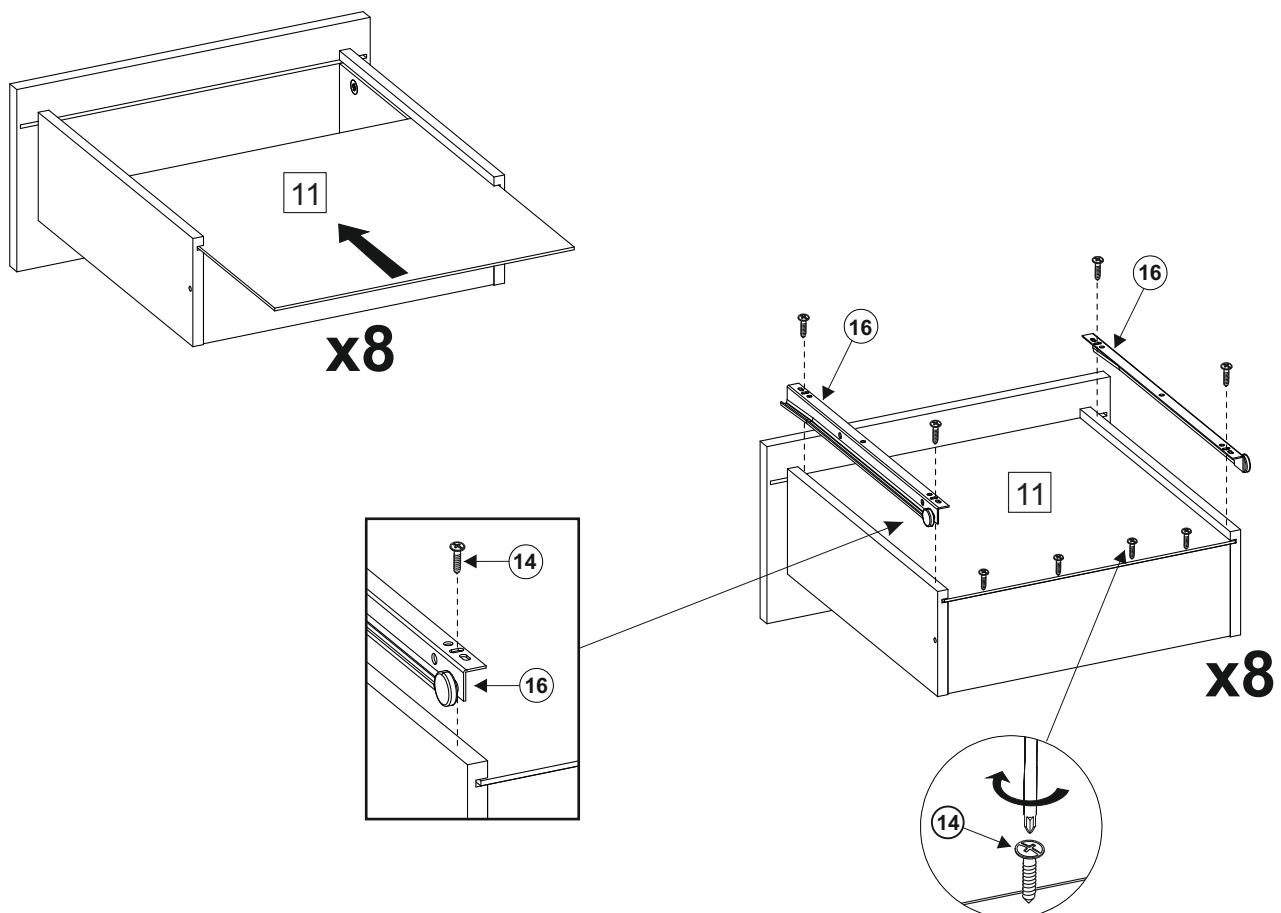


16-18

WESTPHALEN 8-H

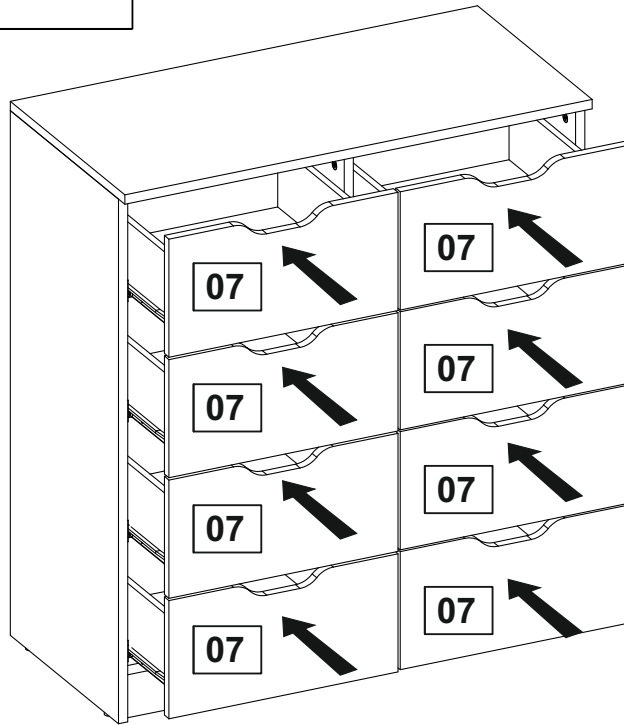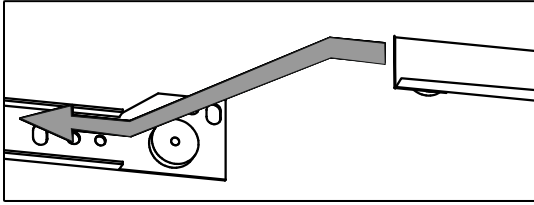

17-18

WESTPHALEN 8-H

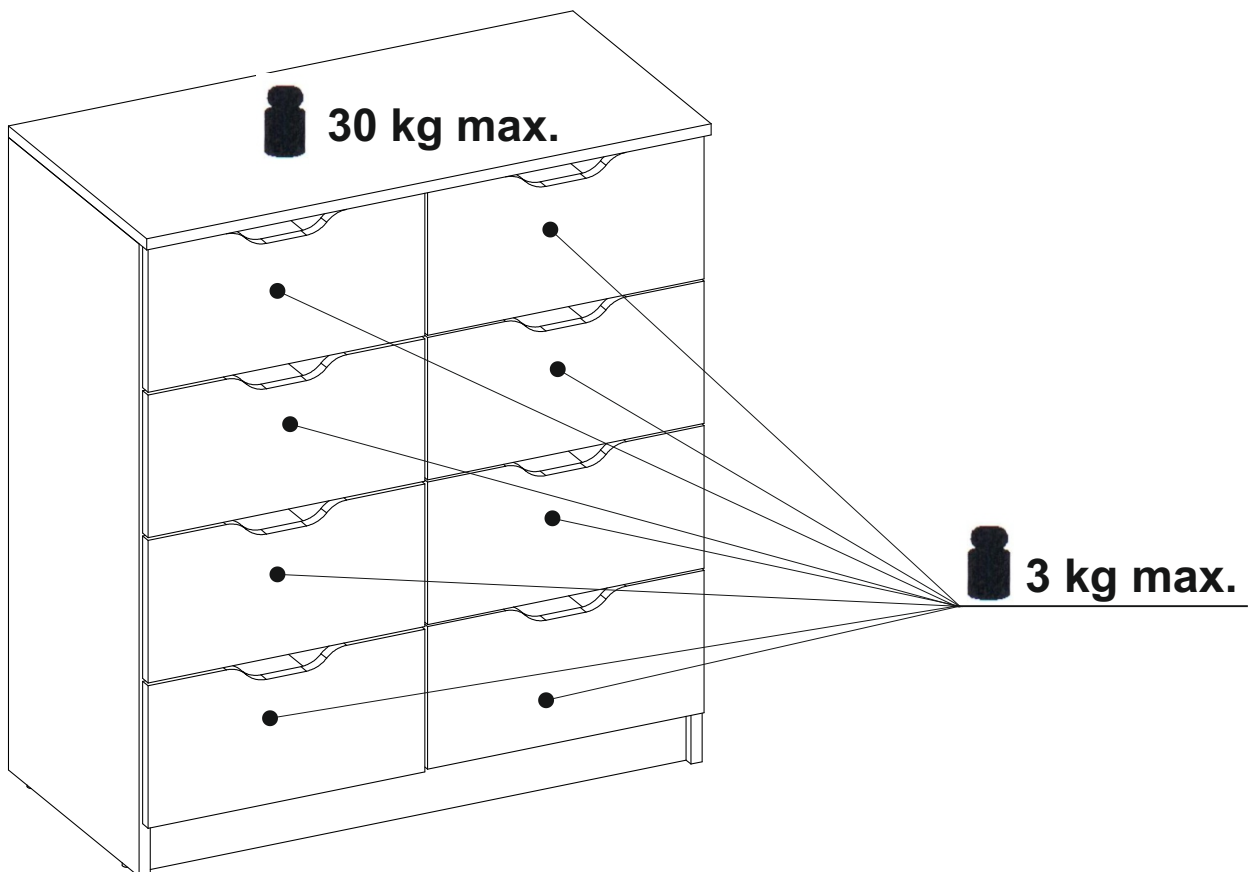

18-18