

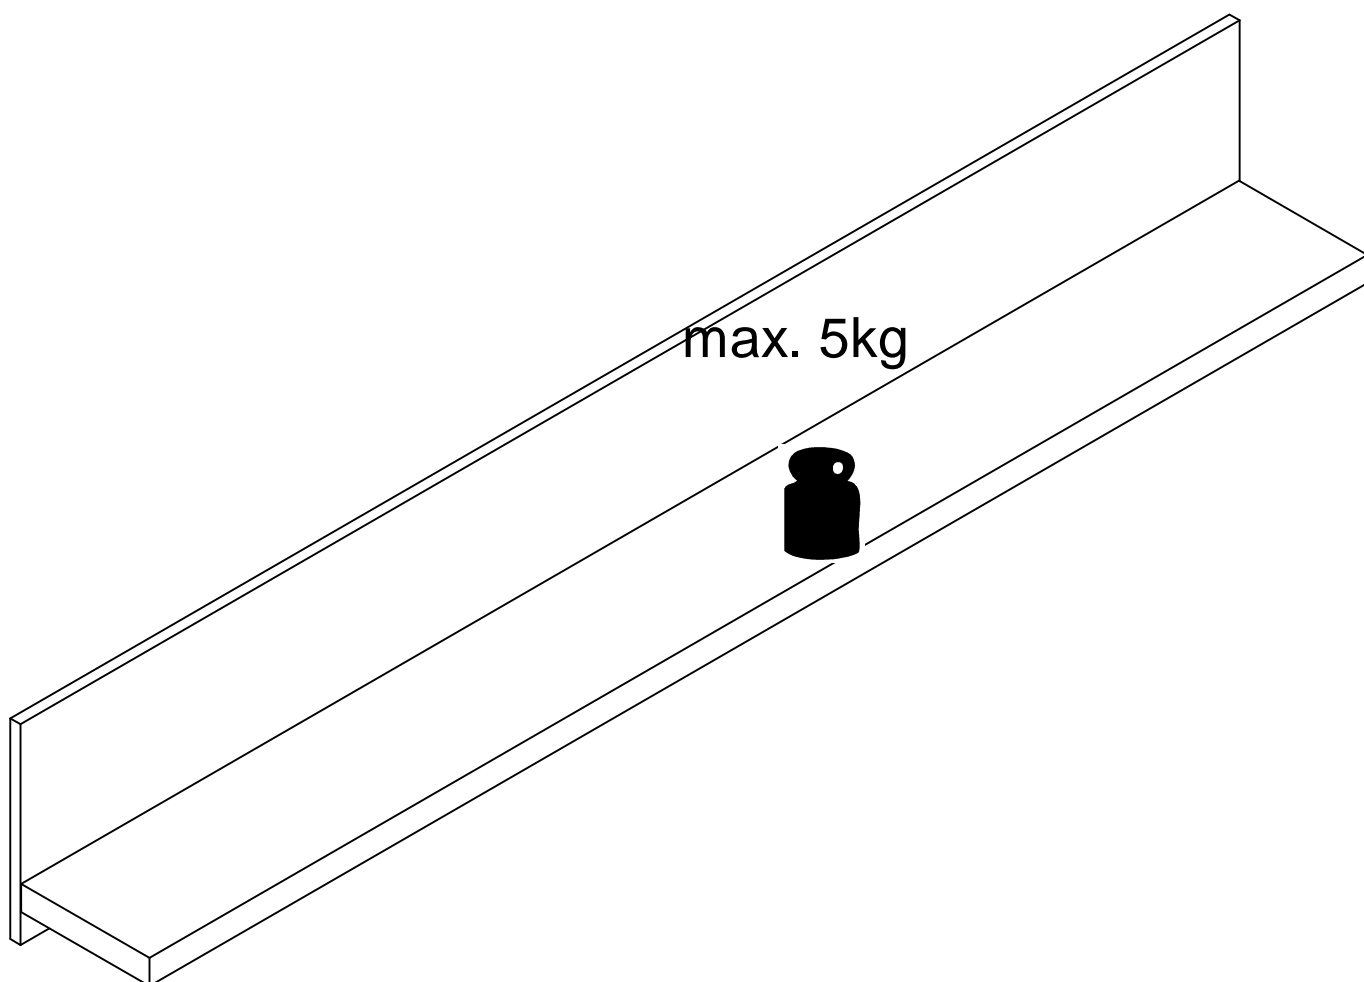
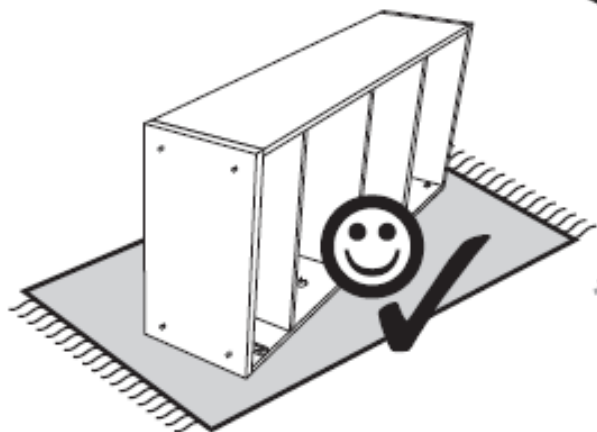
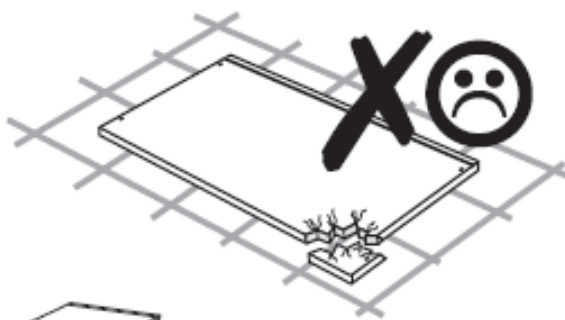
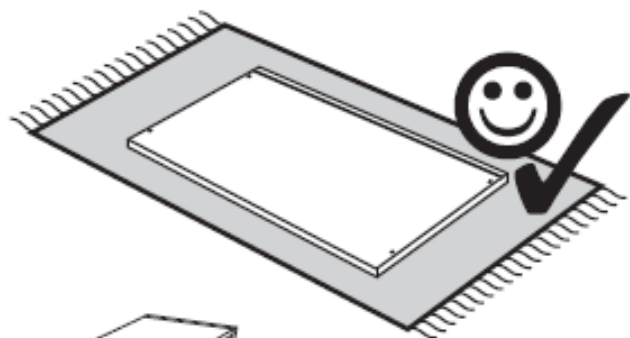
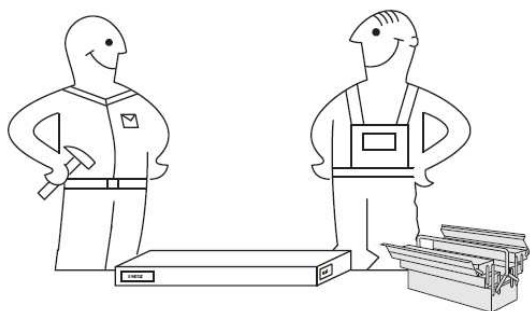



Eleganza

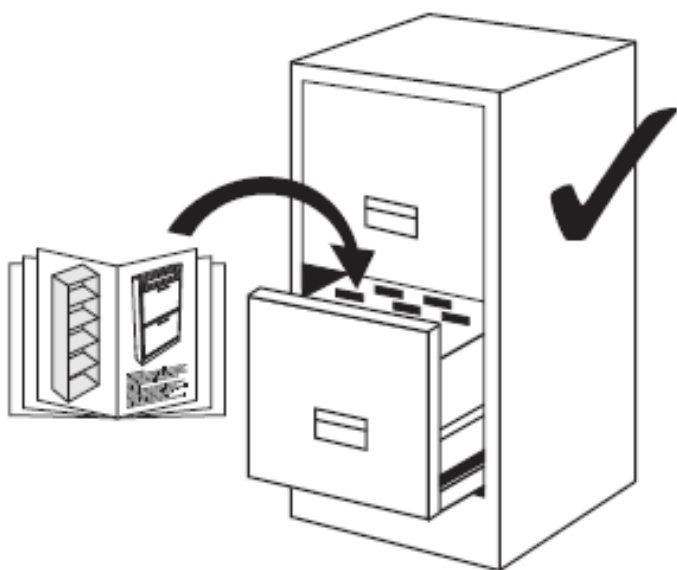





3044HW Wotaneiche
(Rustica Oak)

33

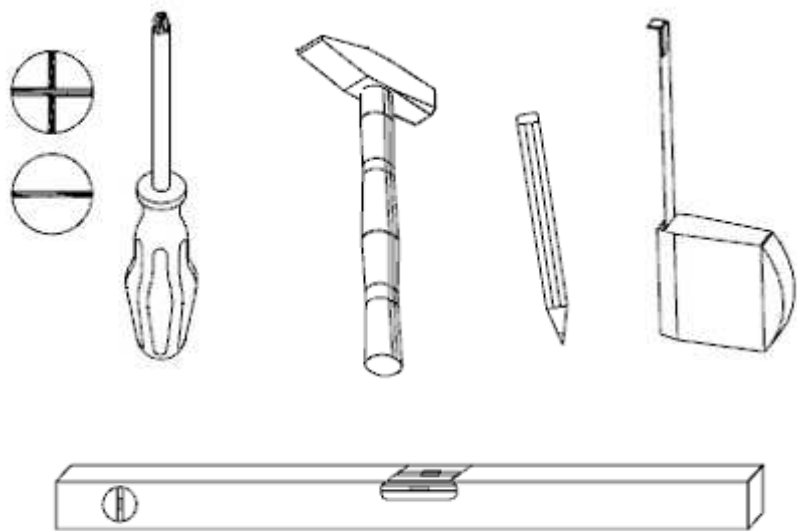

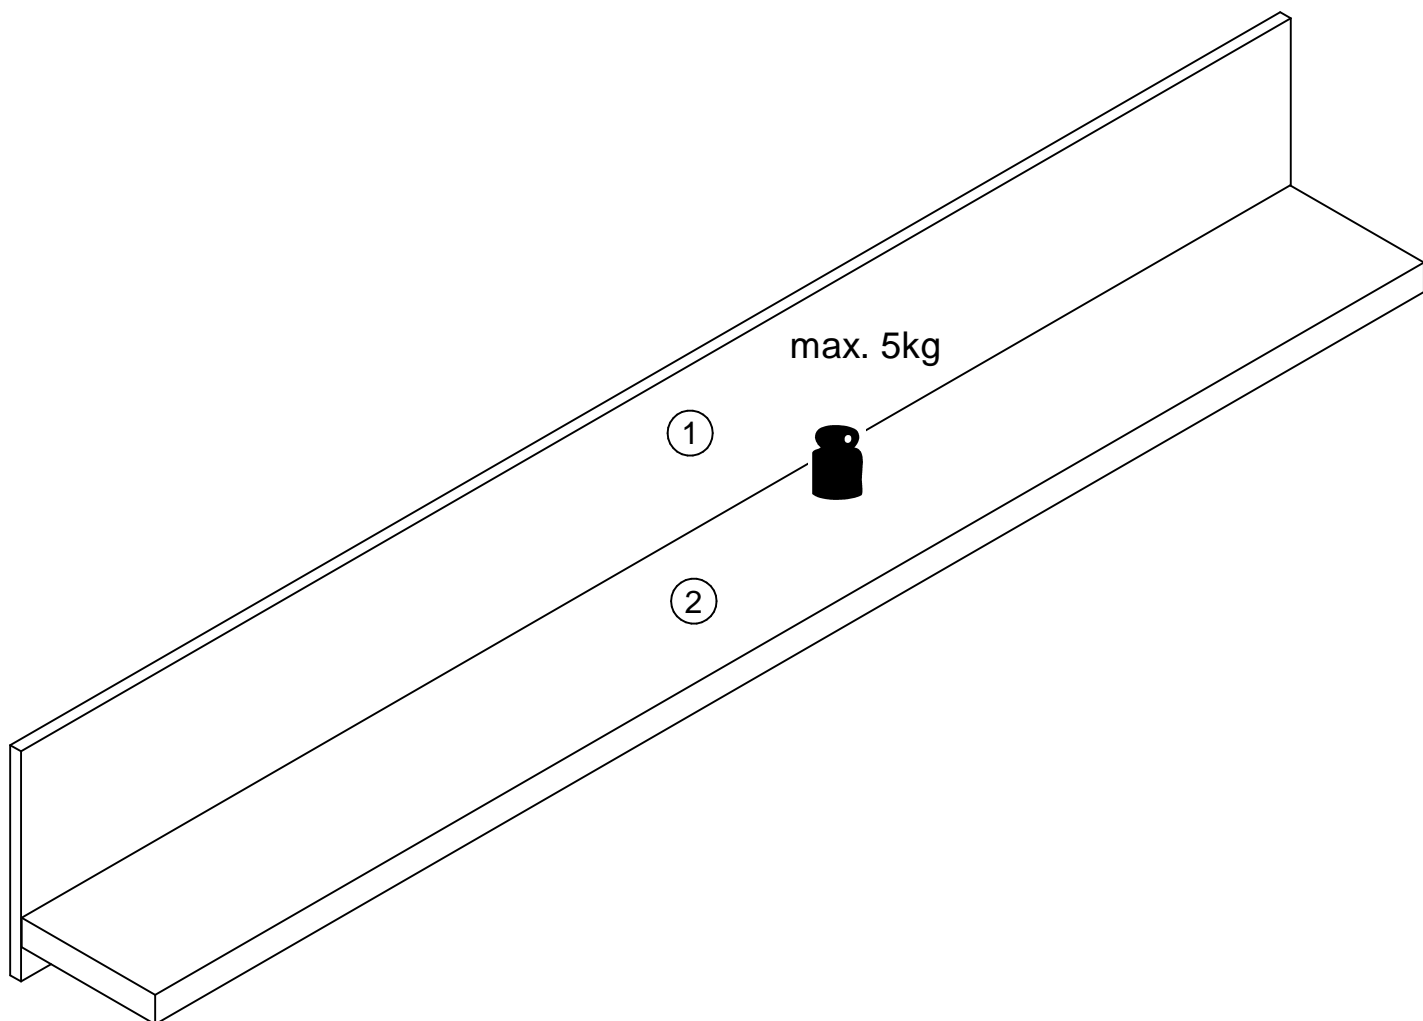


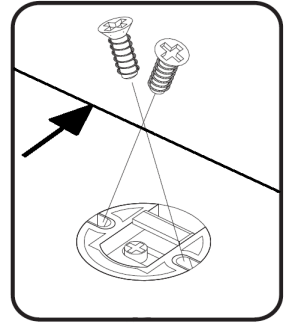
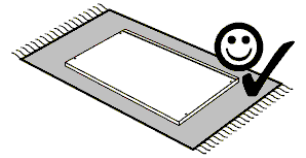
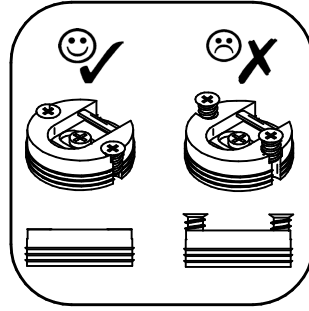
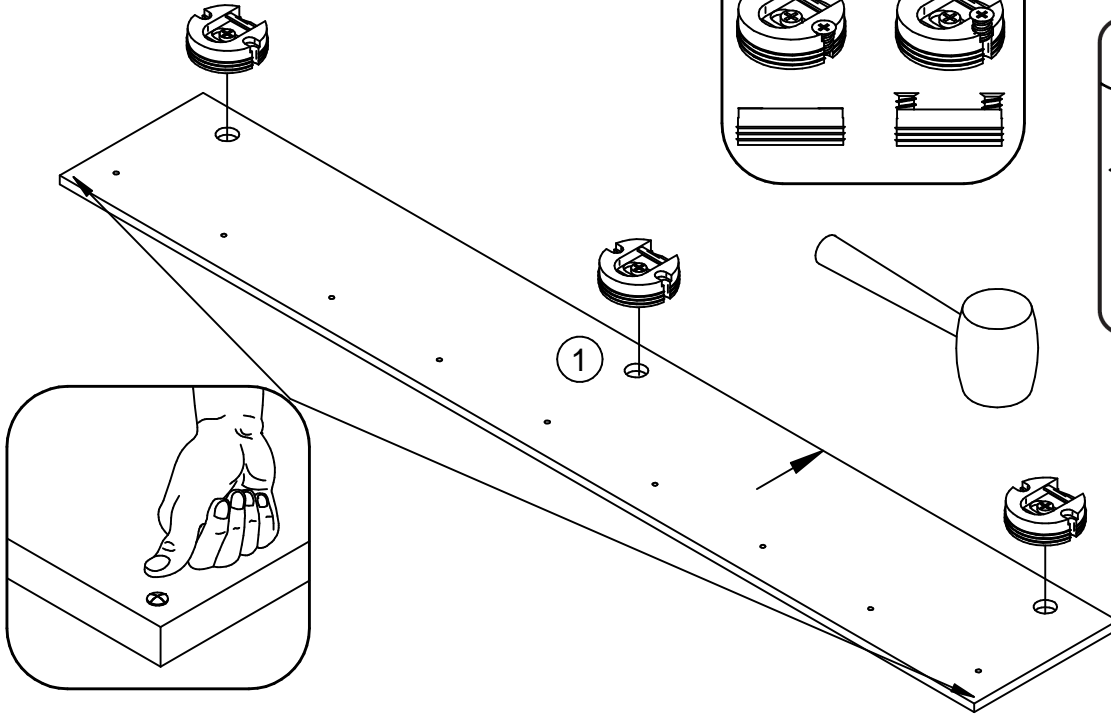






BT1007	MM1188	MM1070	MM1001	BT1008	MM1007
					
x3	x6 Ø6,3x9	x2 Ø7x1,5	x9 Ø7,7x45	x3 5,8x50	x1 4mm





1.



BT1007 	MM1188 	MM1070 
x3	x6 Ø6,3x9	x2 Ø7x1,5




2.

MM1001 	MM1007 
x9 Ø7,7x45	x1 4mm

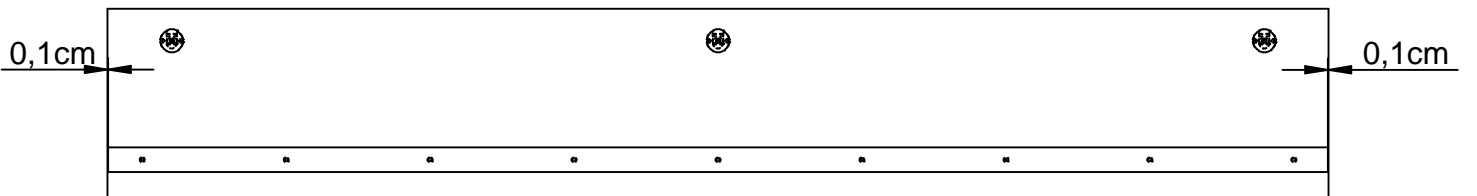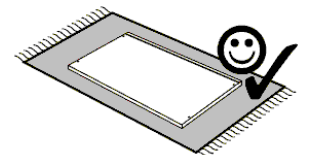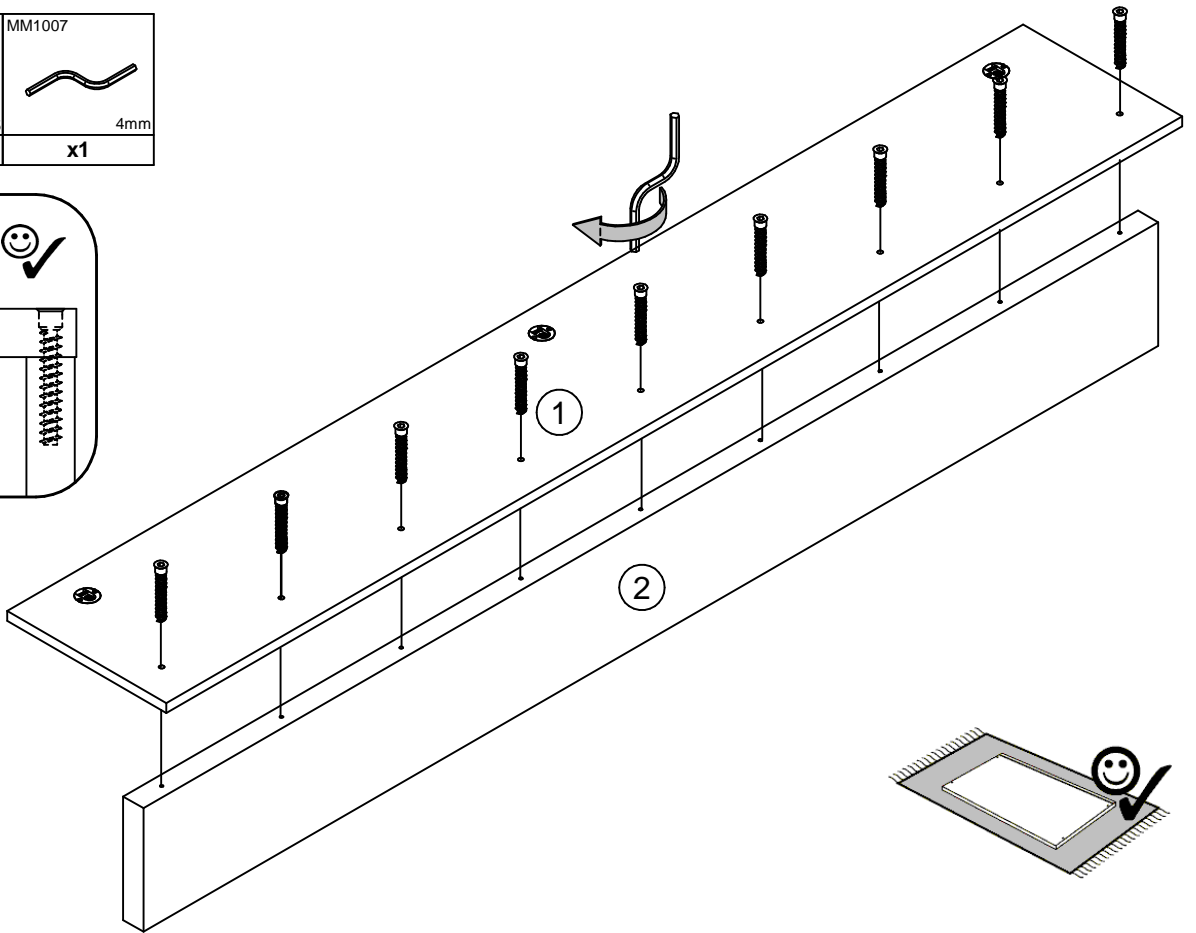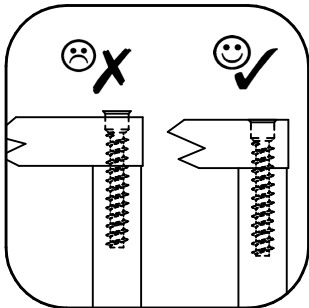


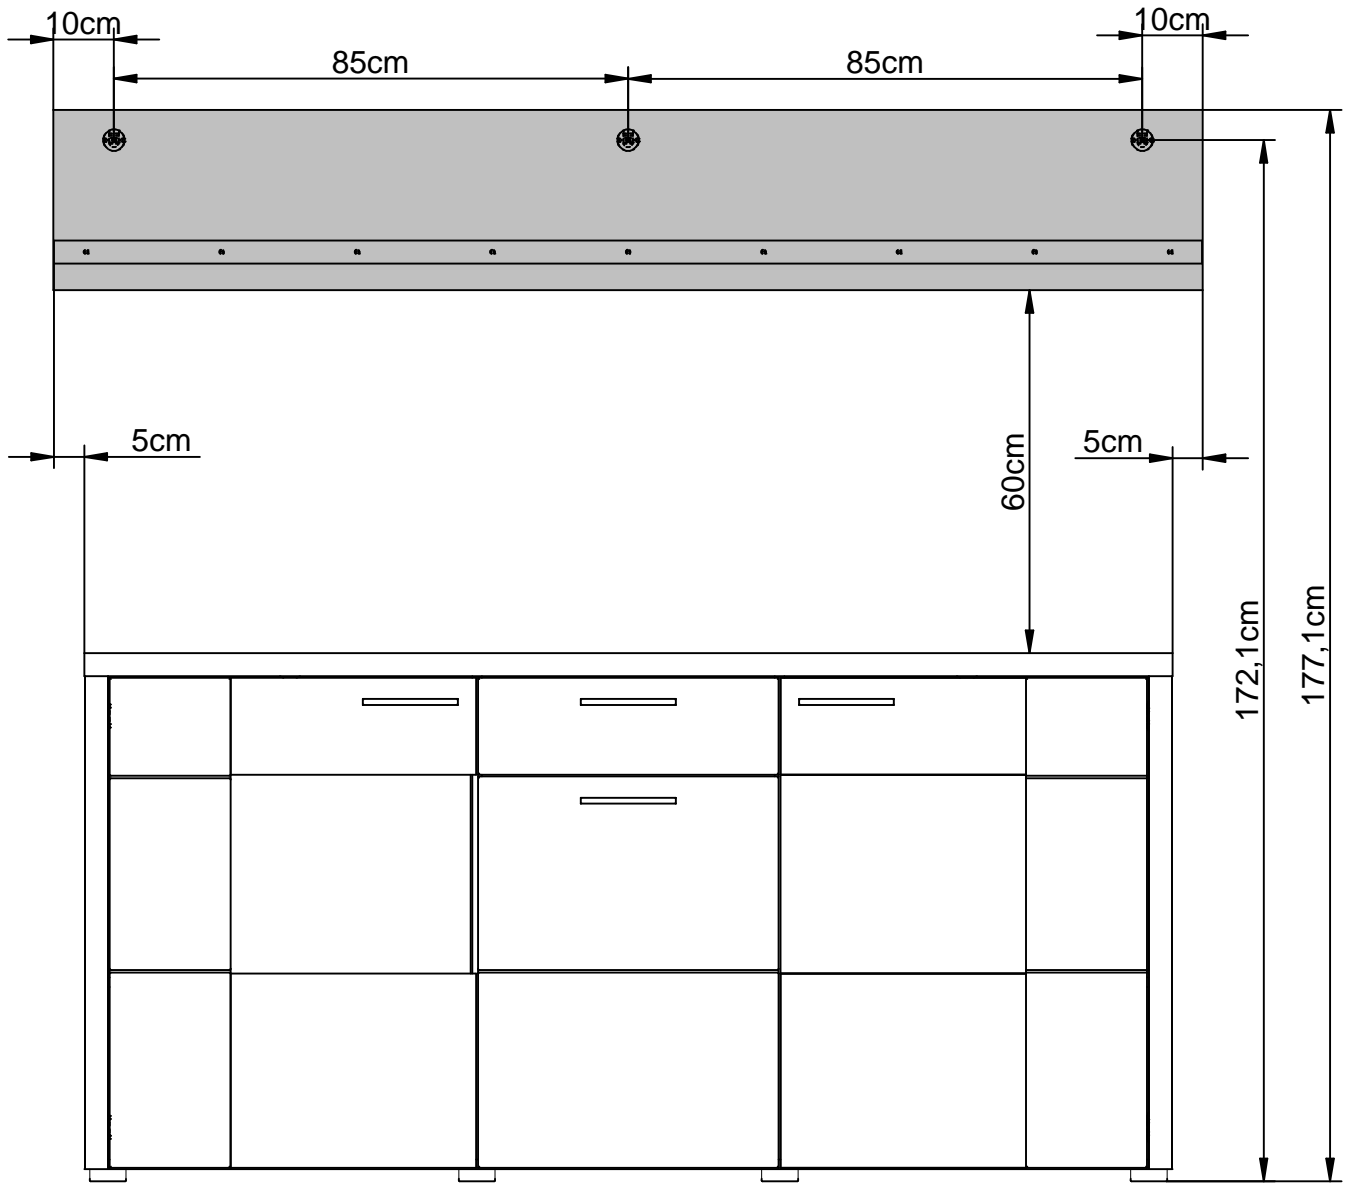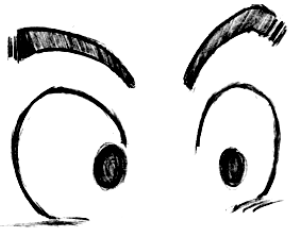




3.




3x

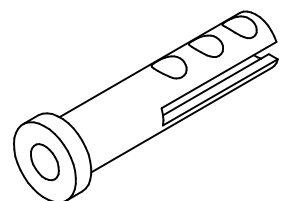

4.

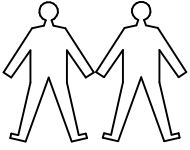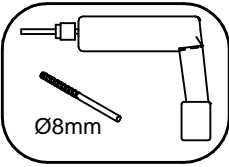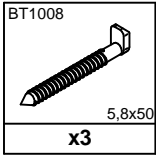

A

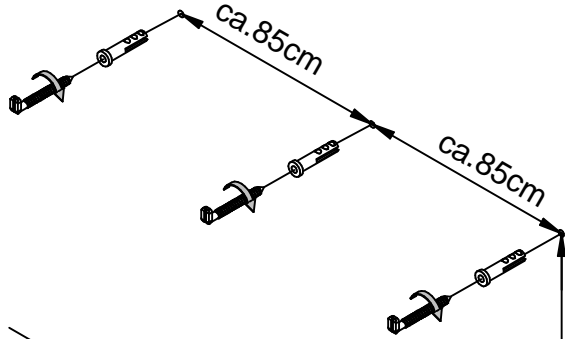

B

