
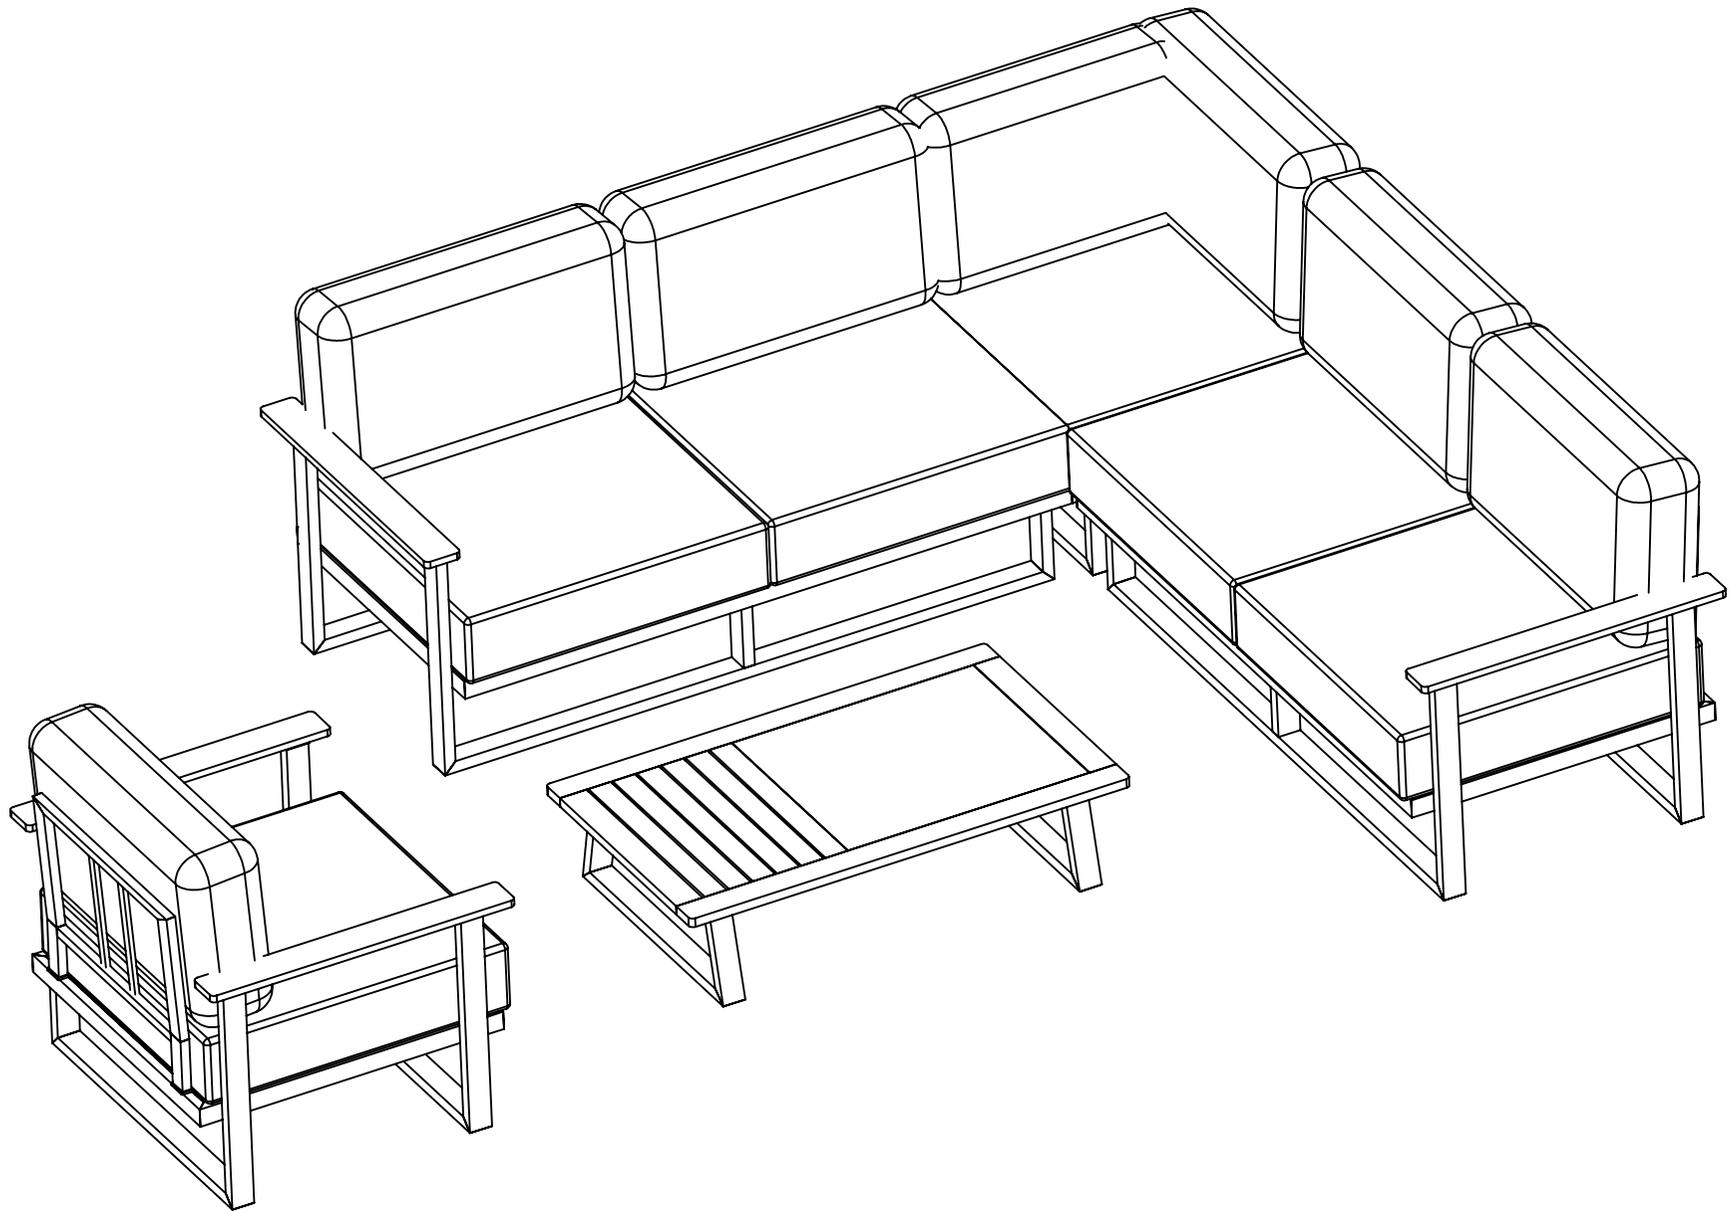
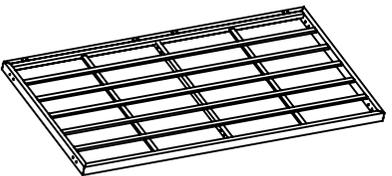
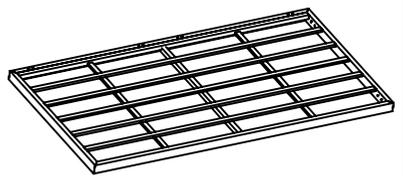
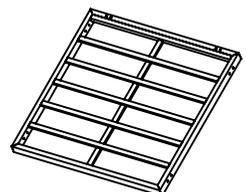
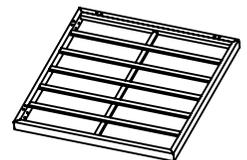
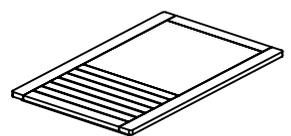
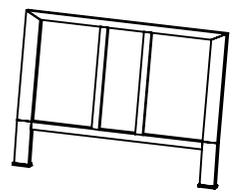
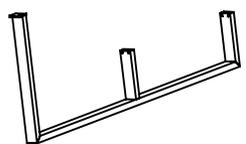
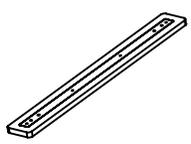

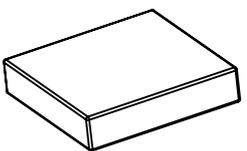




ASSEMBLY INSTRUCTION 24590022/01

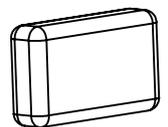


A1 x1 	A2 x1 	B x1 	C x1 	D x1 
E x7 	F x4 	G x2 	H x4 	I x2 
Kx2 	L x 6 	M x 6 	N x 1 	

No	1	2	3	4	5	6
Part Image						
Part Name	Bolt M6*50	Bolt M6*40	Bolt M6*10	Washer M6	Allenkey	Velcro
Q.ty	28	48	16	76	1	4


STEP 1

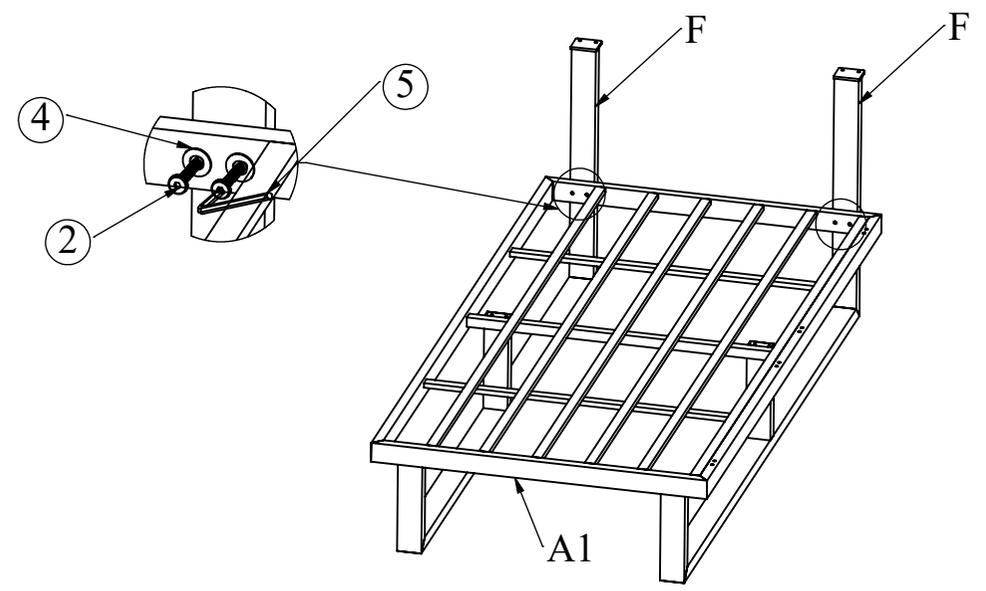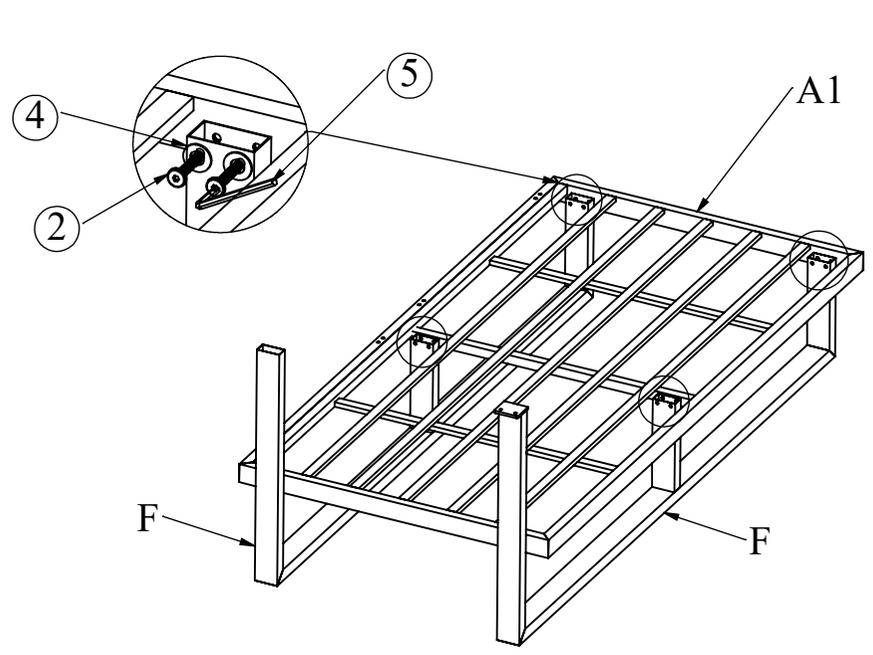


STEP 2

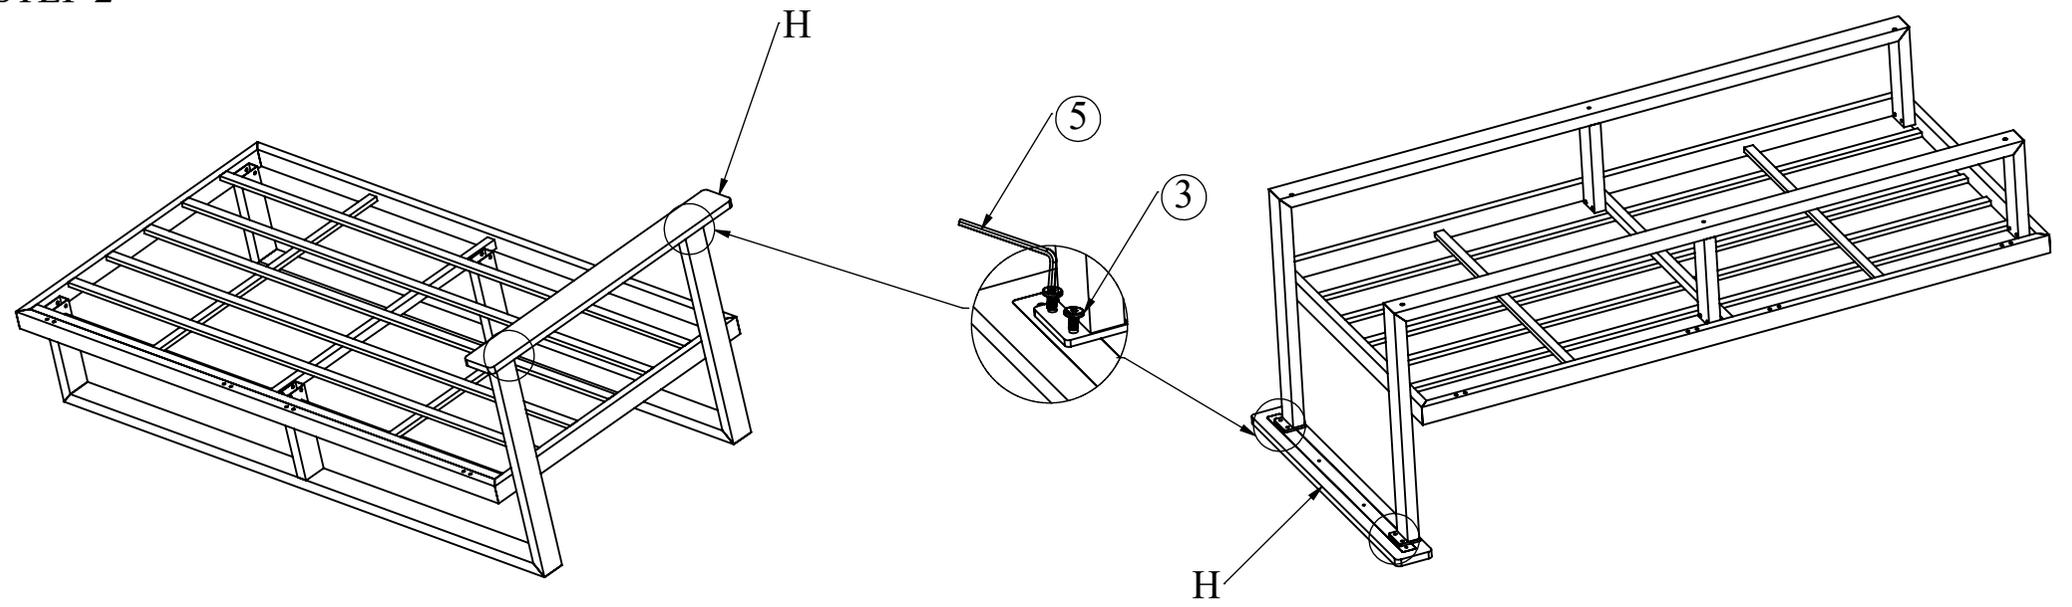


STEP 3

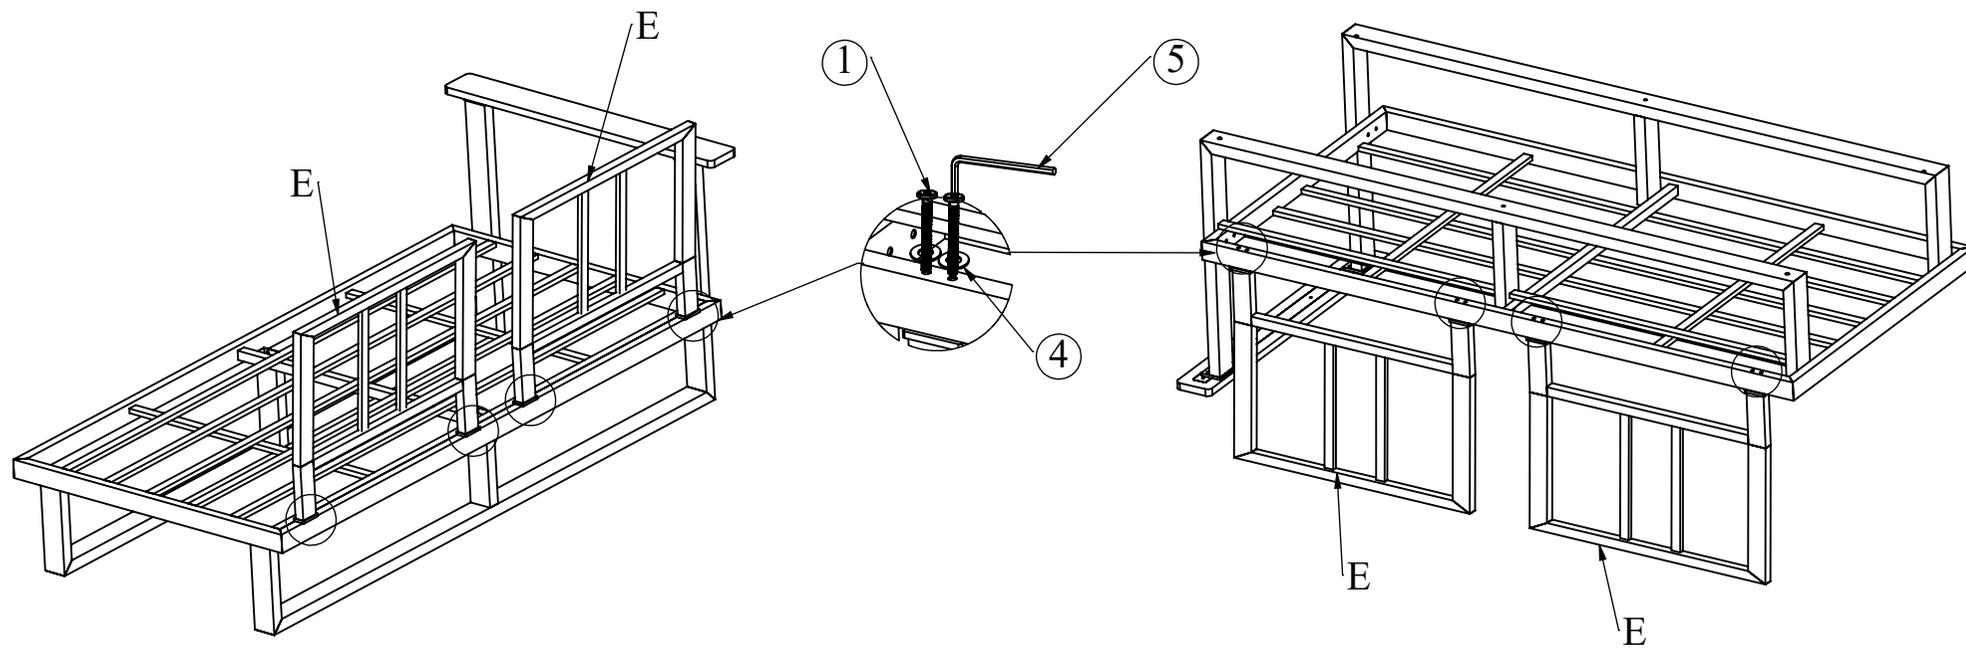


STEP 4

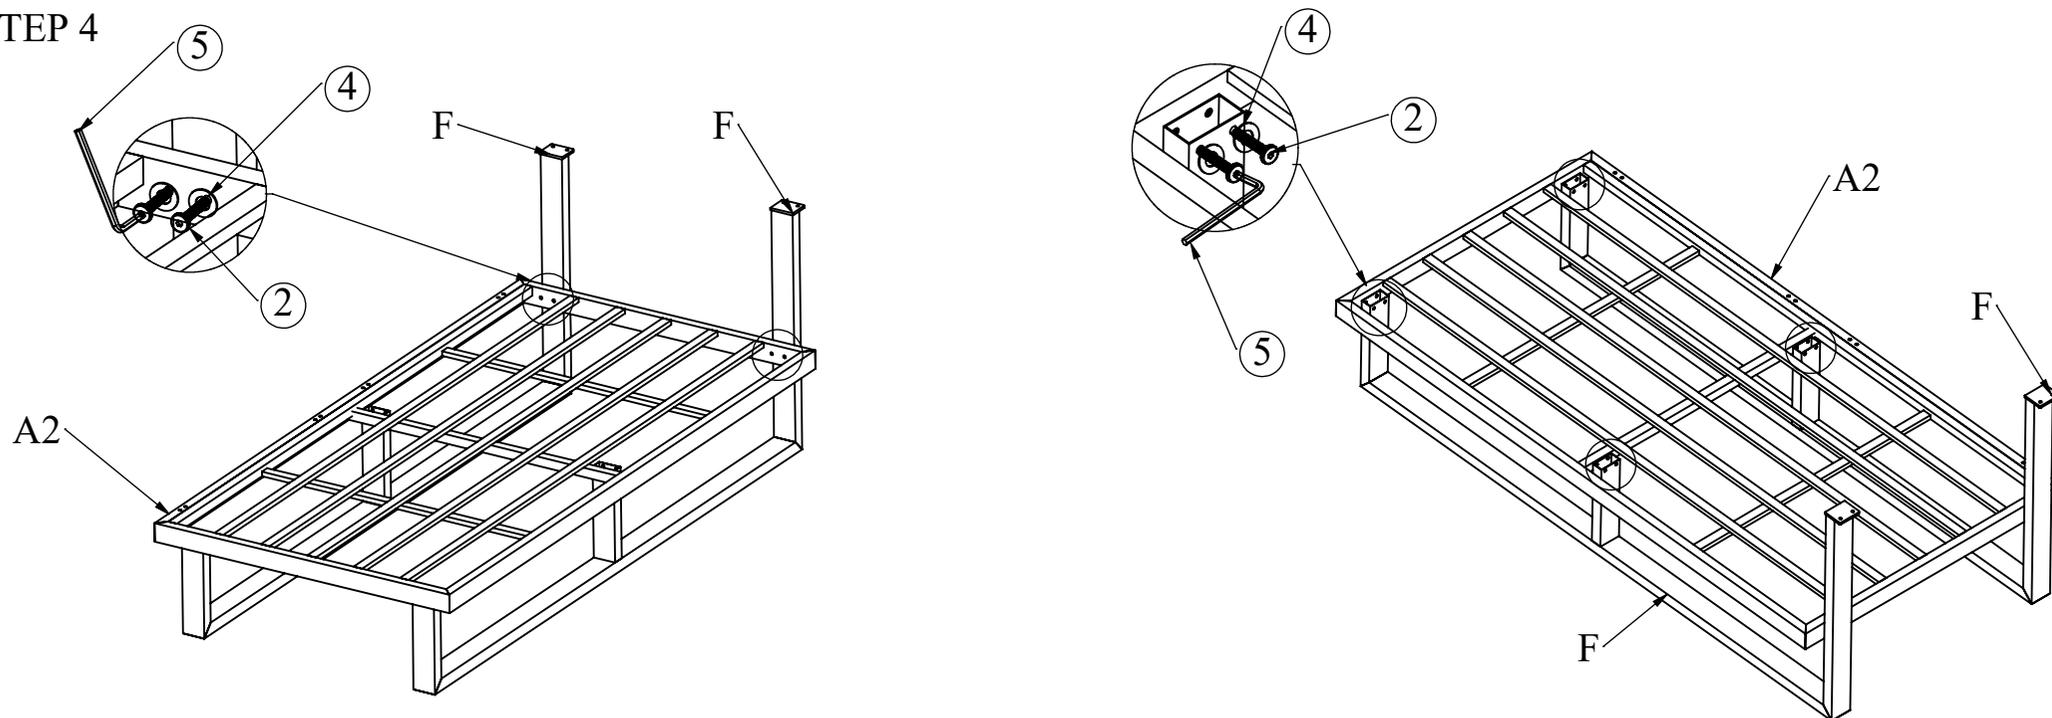


STEP 5

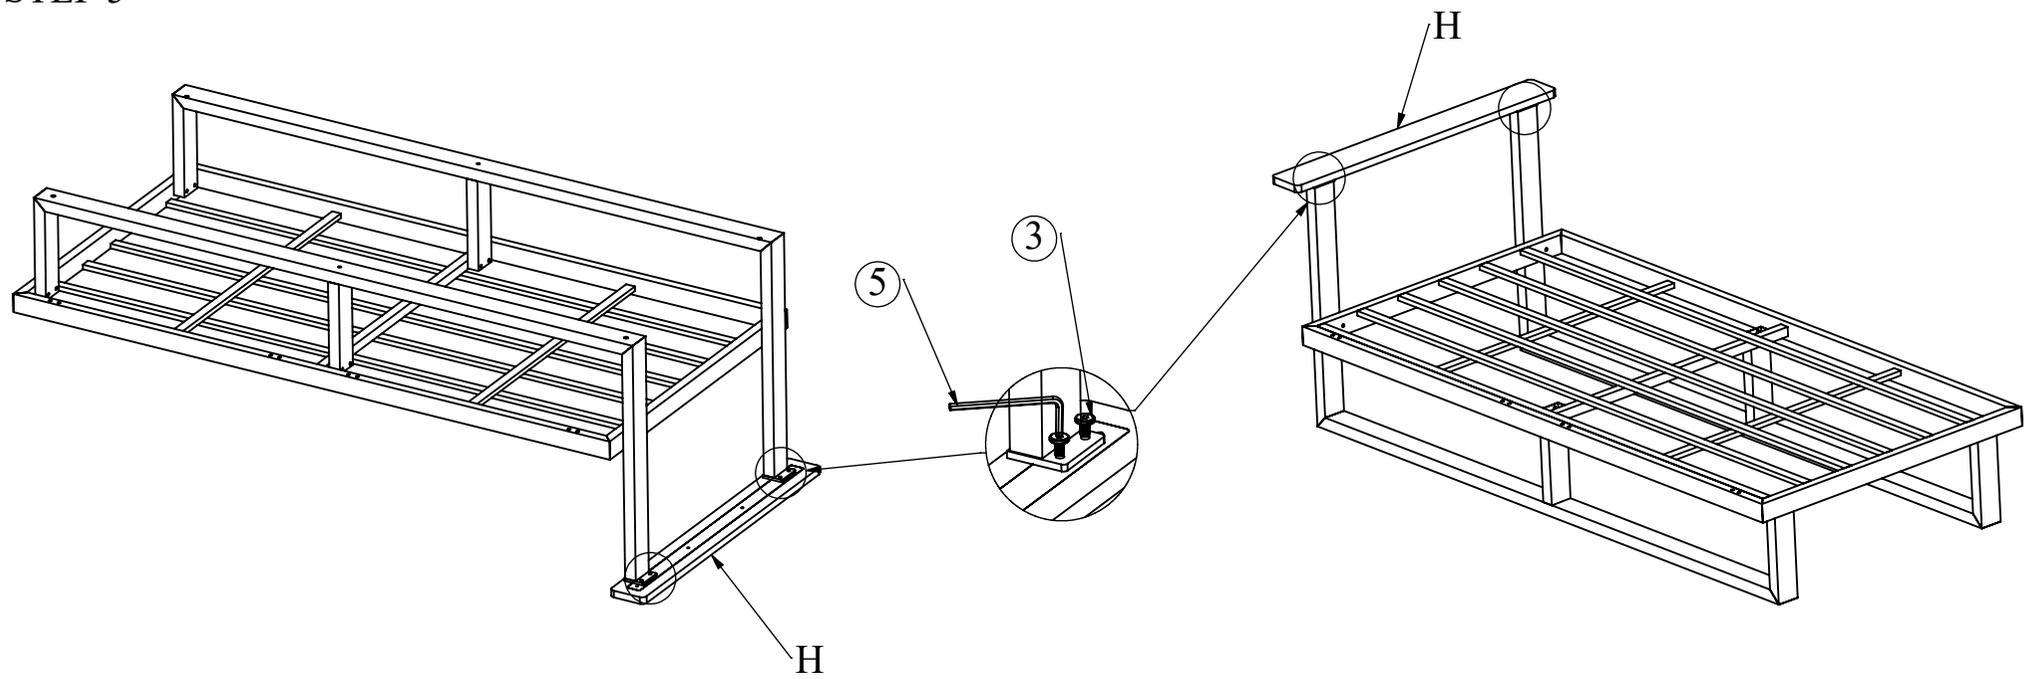


STEP 6

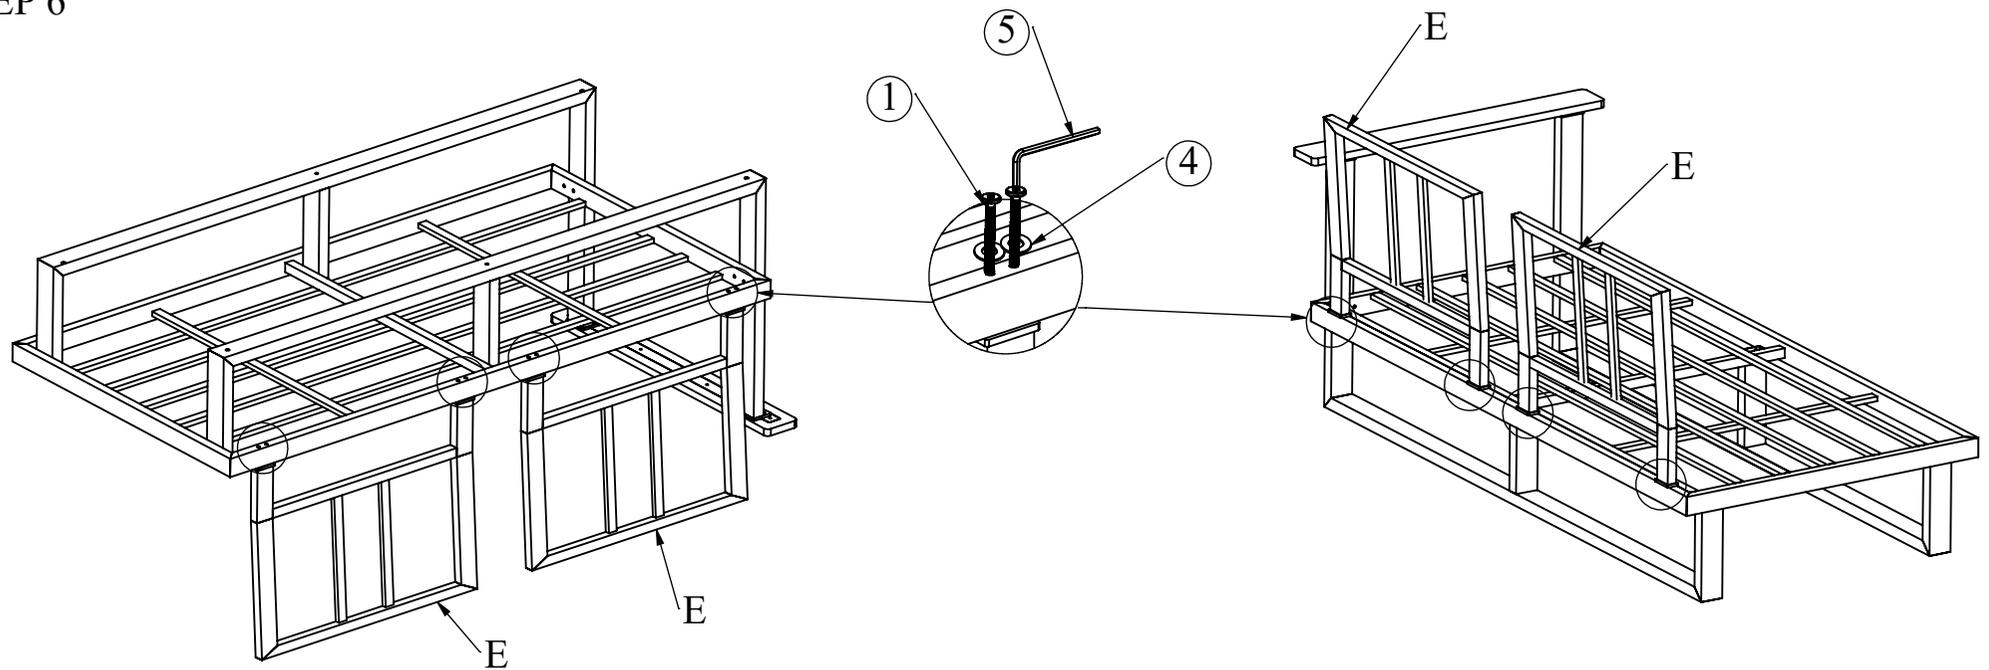


STEP 7

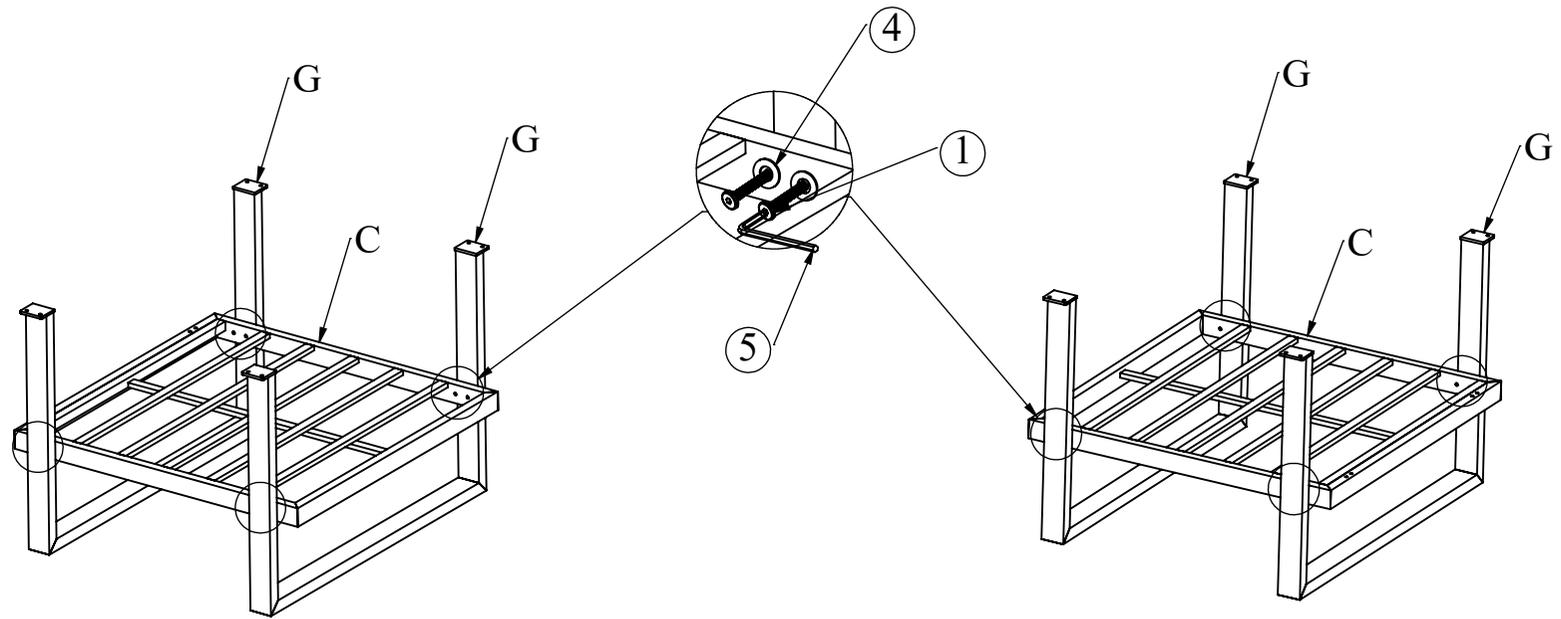


STEP 8

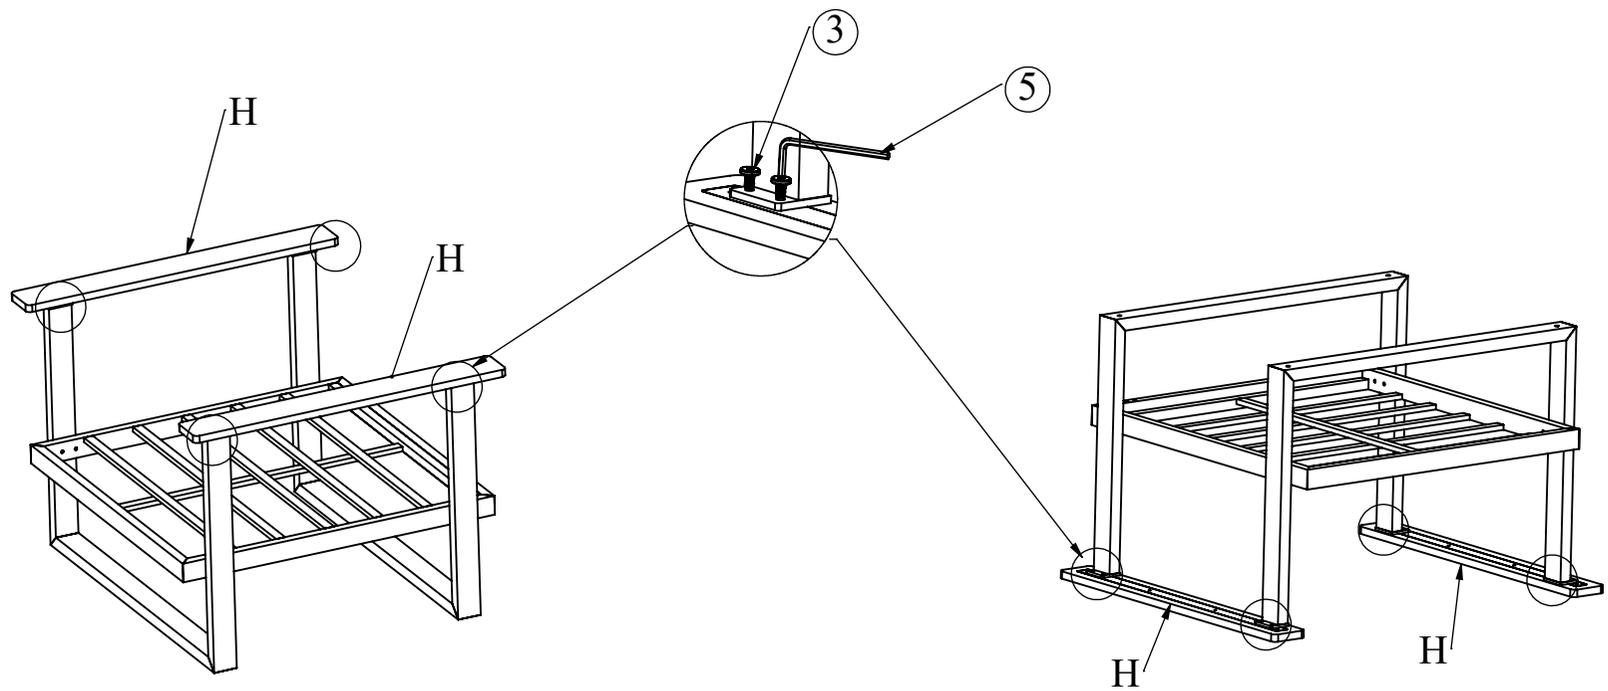


STEP 9

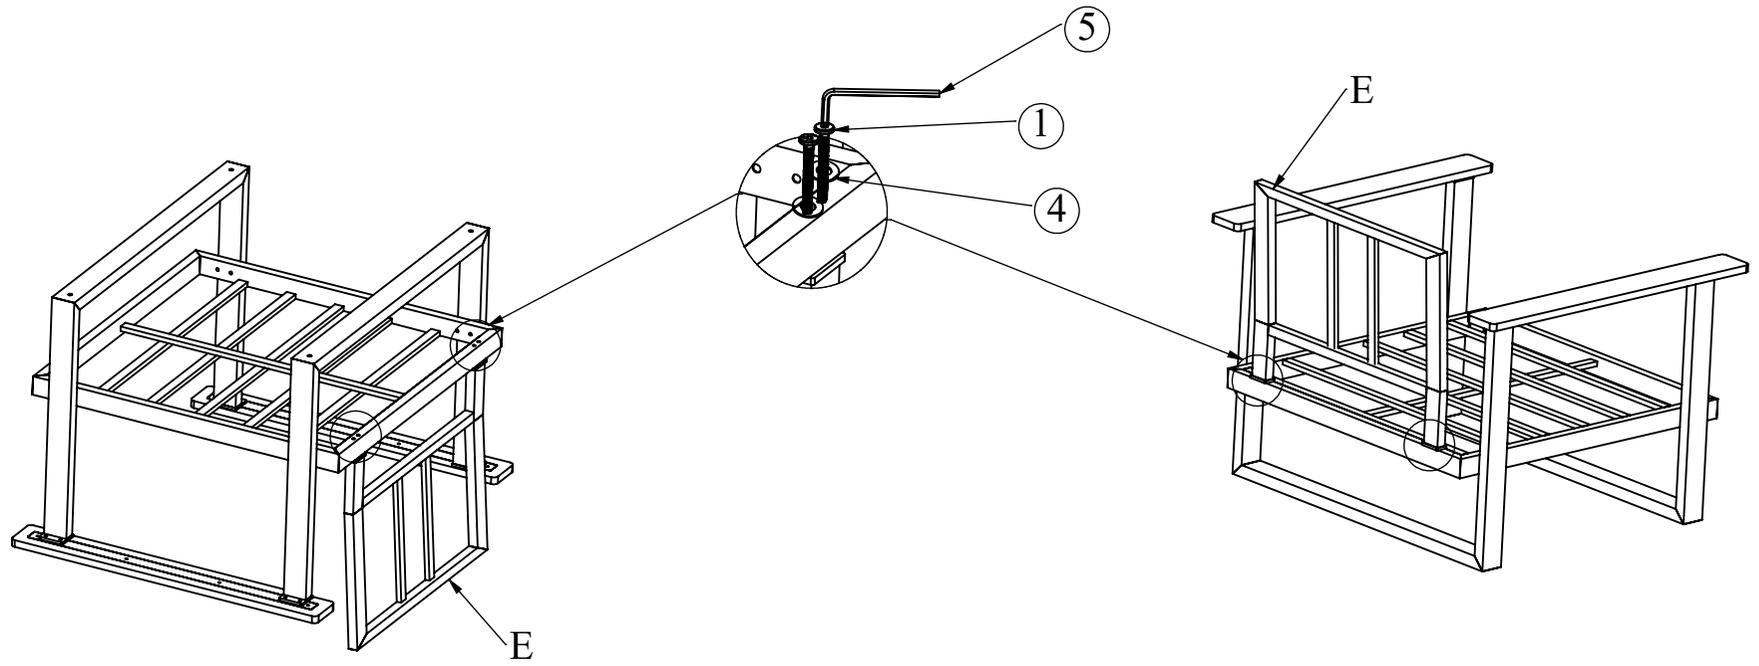


STEP 10

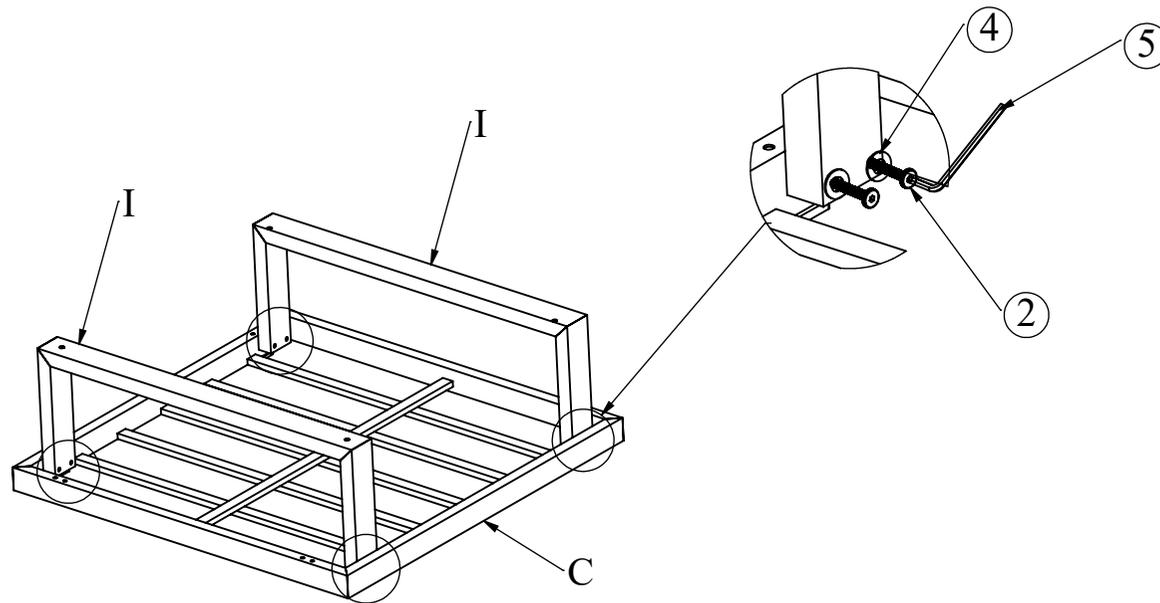


STEP 10

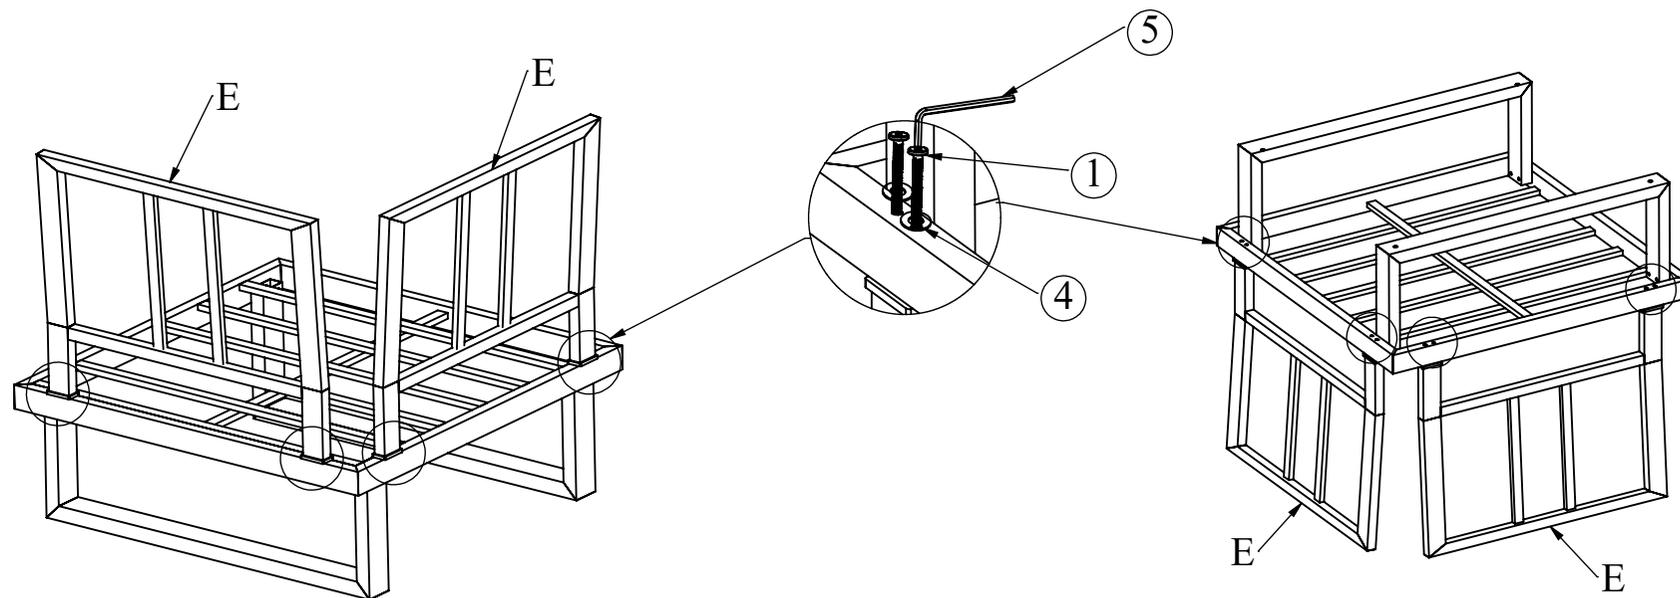

STEP 11

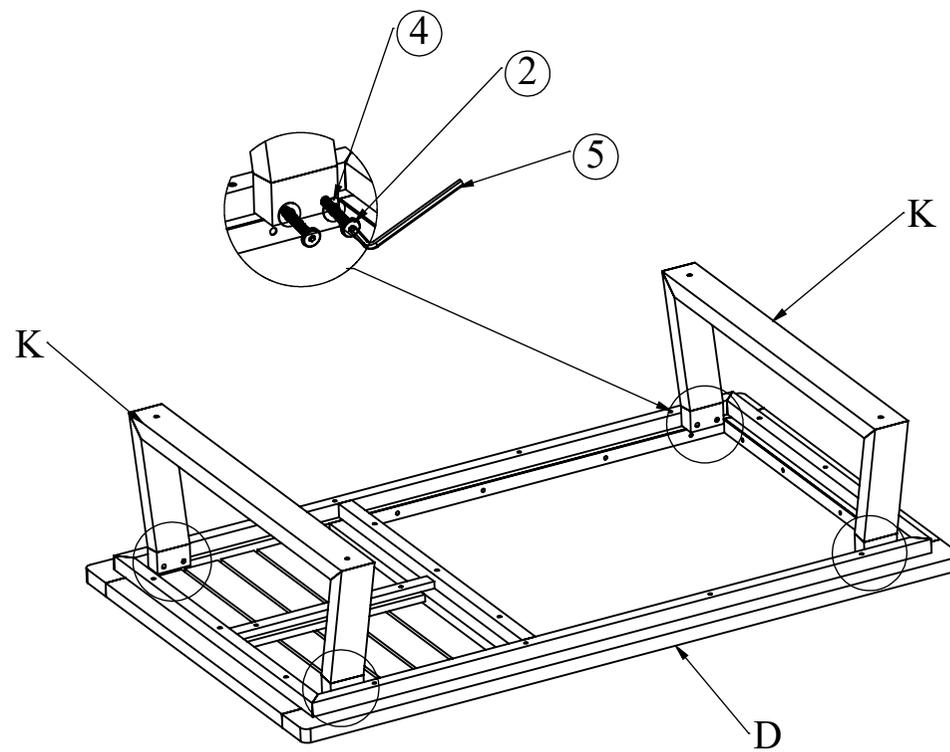

STEP 12

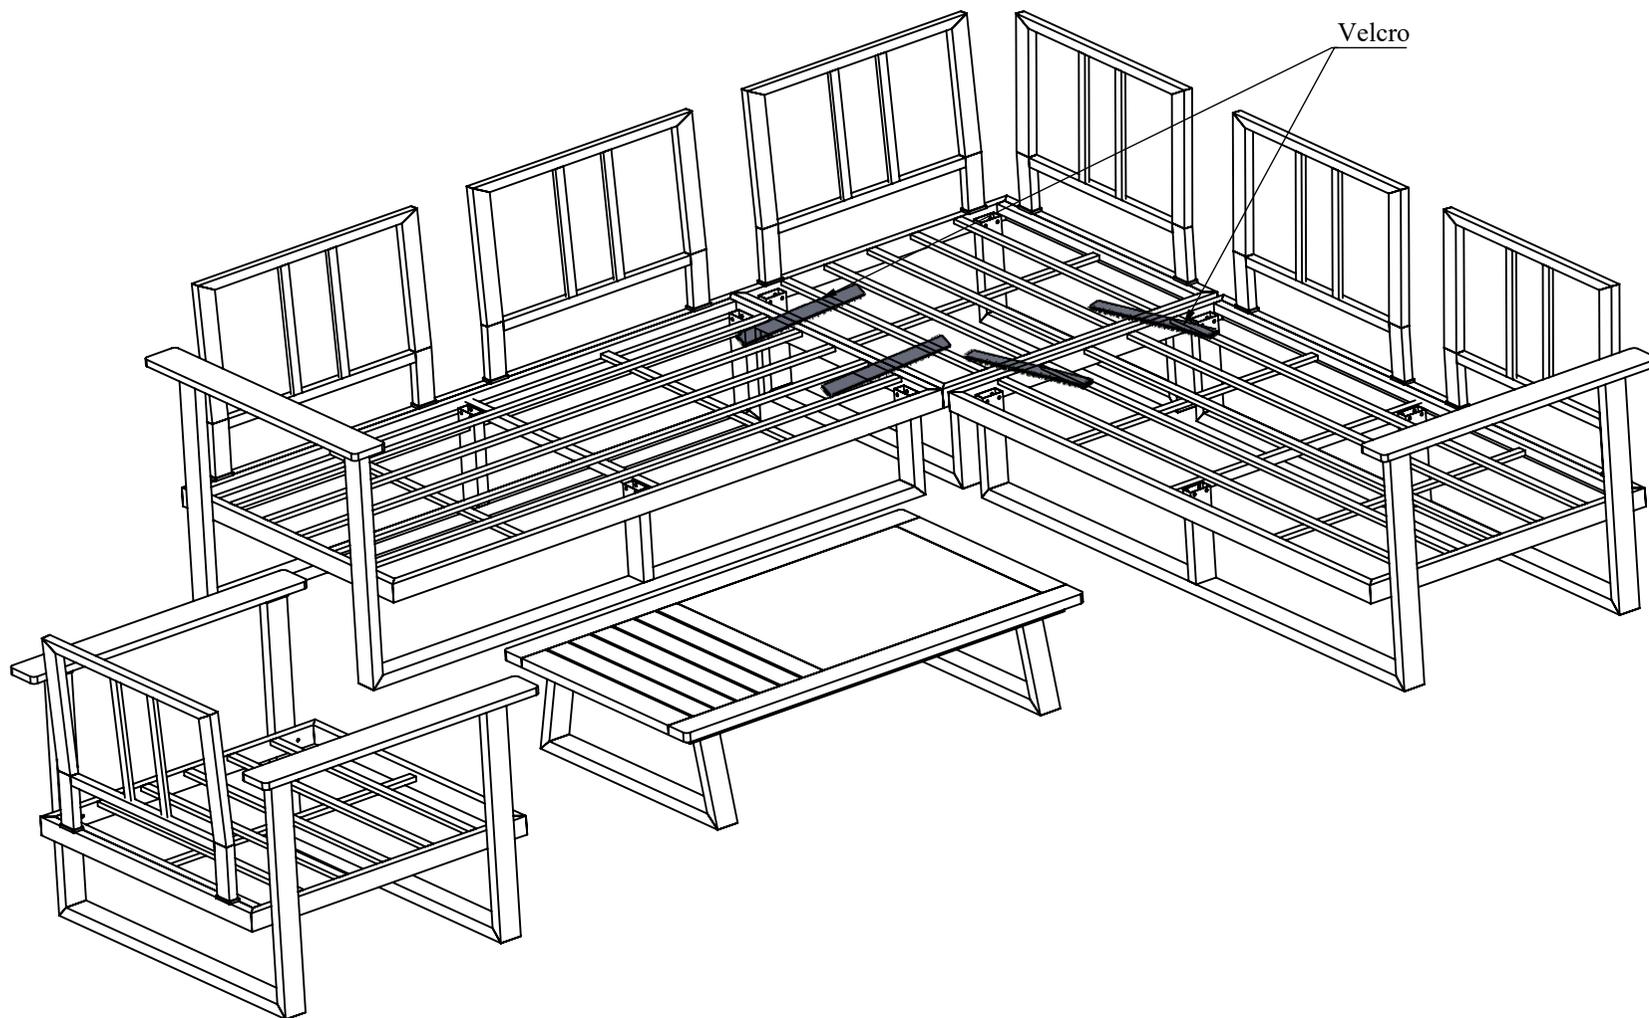

FINISH

