



Gerderobe

WL6.900

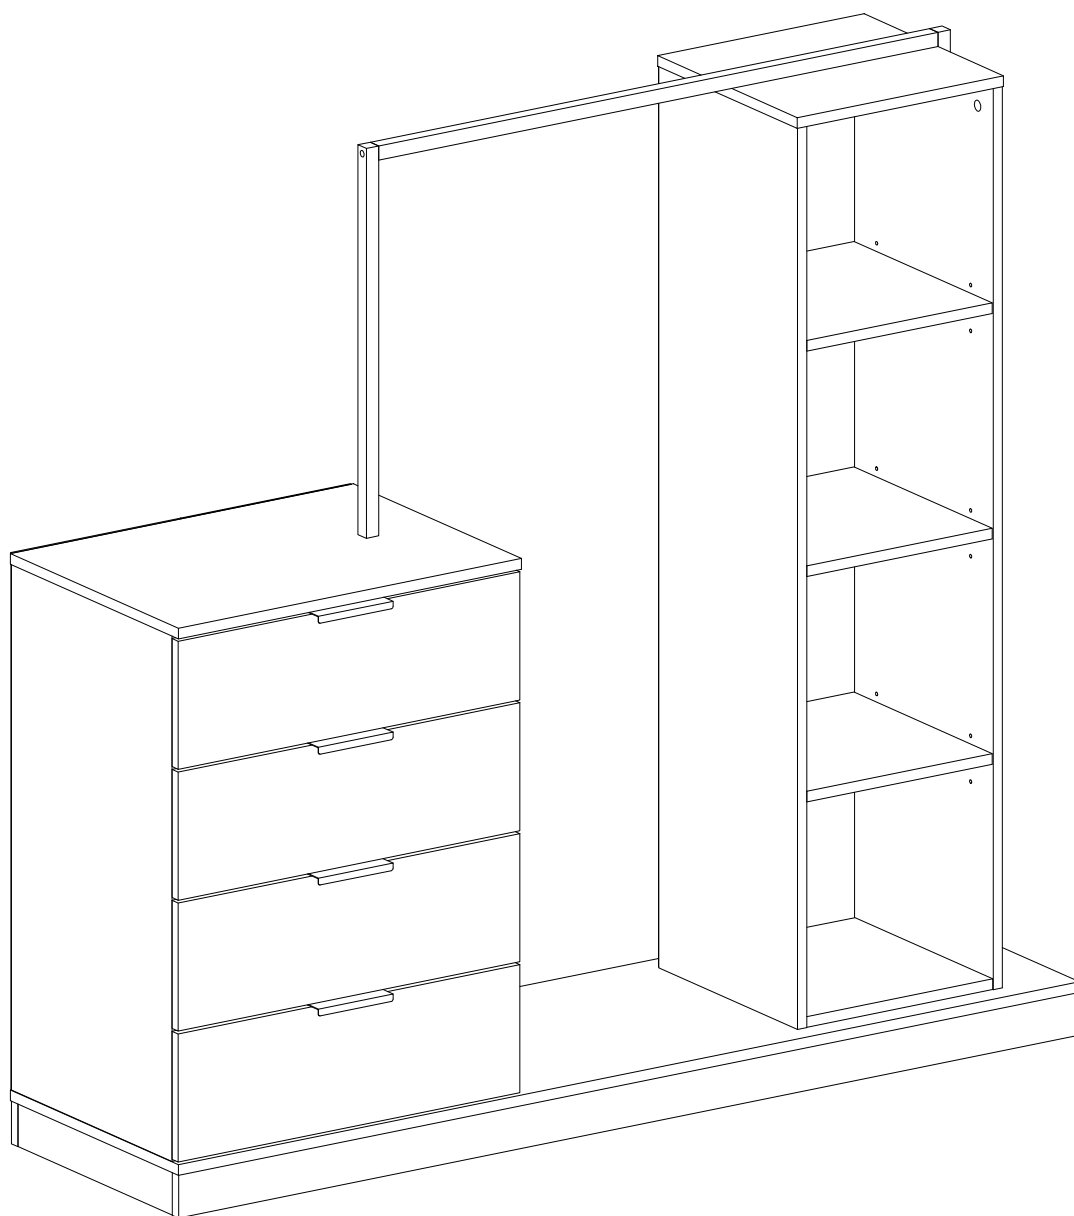


WOHLING®
Möbel zum Wohlfühlen

Parts List

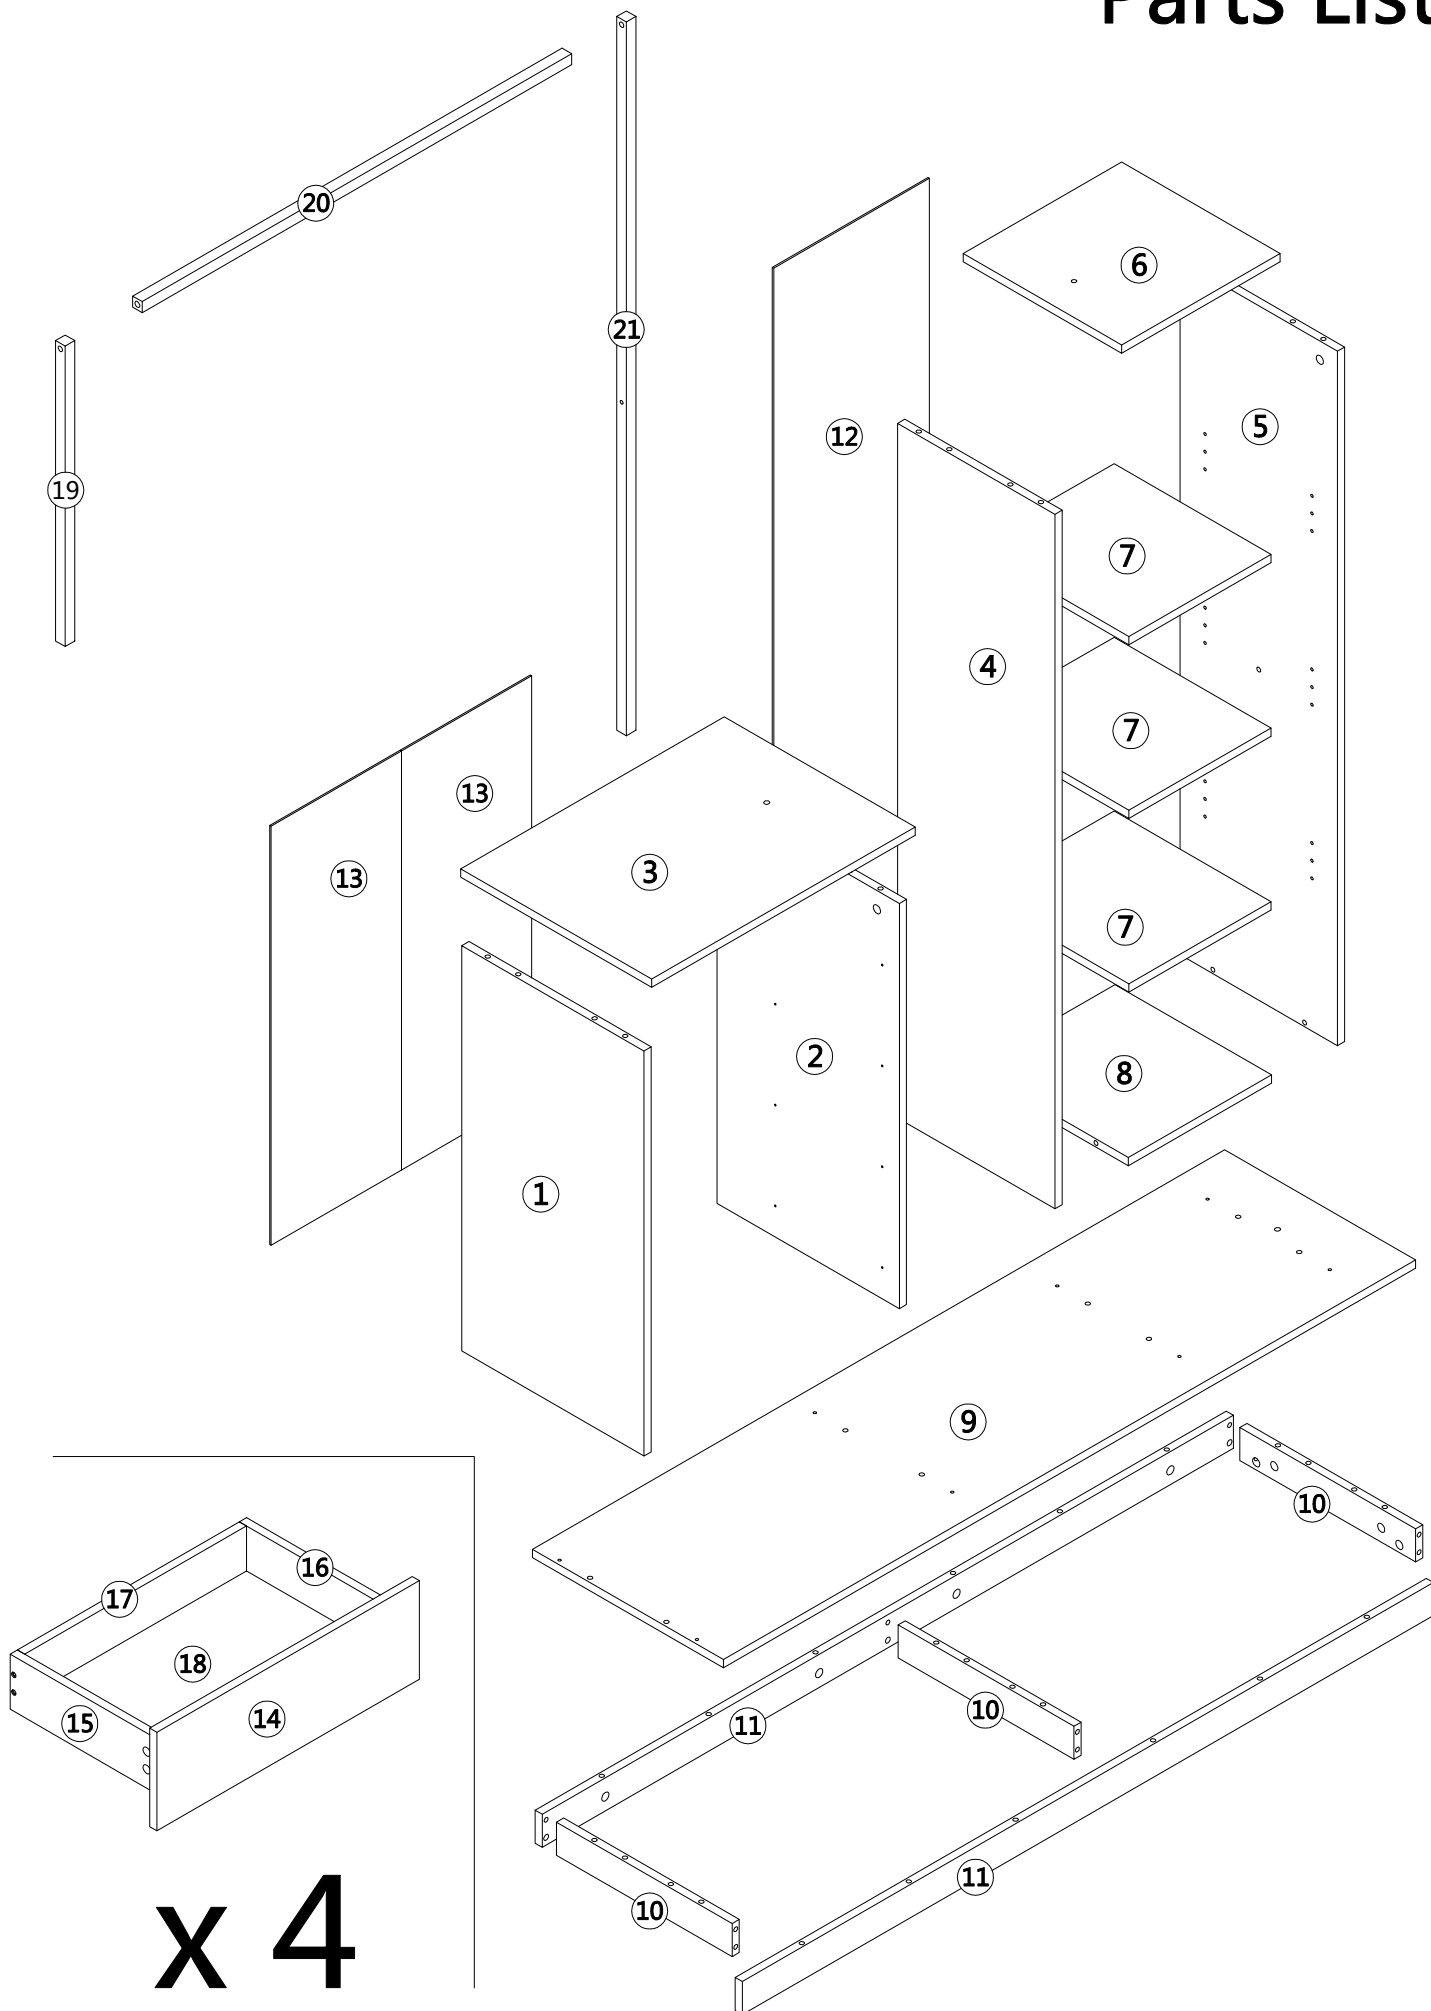


Hardware

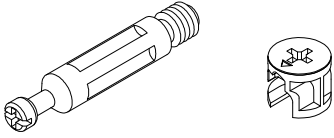

A1


A2

A x 44sets

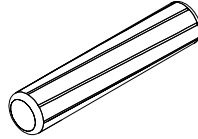


8 x 40MM

B x 36pcs




3.5 x 14MM

C x 40pcs

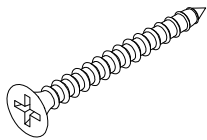

3.5 x 35MM


D x 24pcs

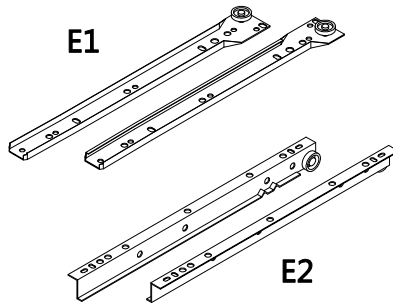

E1


E2

E x 4sets

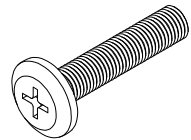


M6 x 30MM

F x 2pcs

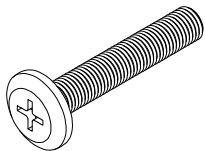


M6 x 35MM


G x 4pcs

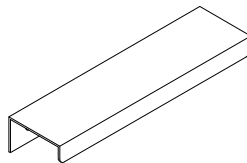


H x 4pcs

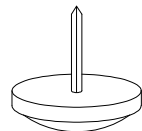


J x 9pcs

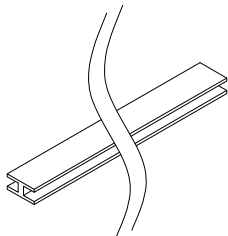

K x 1pc






L x 46pcs

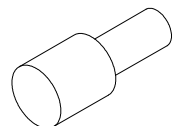

M x 12pcs






Step 1

A1 x 8 B x 20 C x 16 E1 x 8

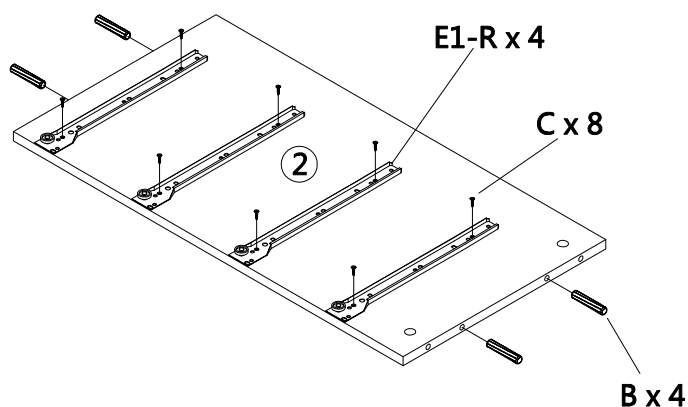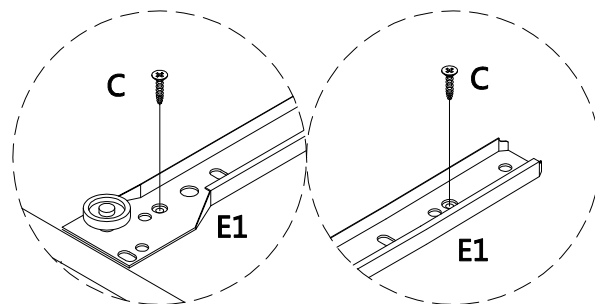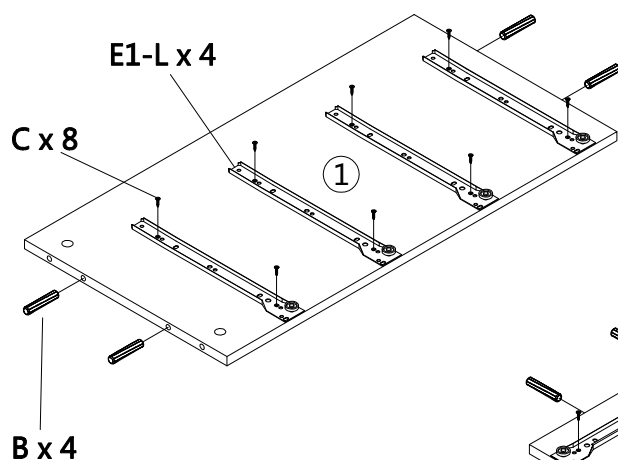


REMARK:

When installing, please make sure the screws are flattened, Not crooked; Otherwise the drawers will not be installed perfectly.

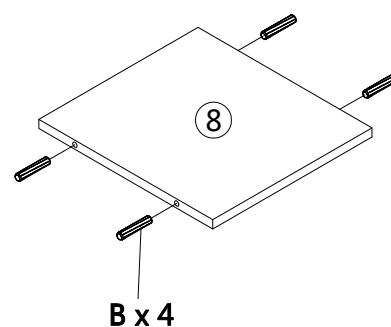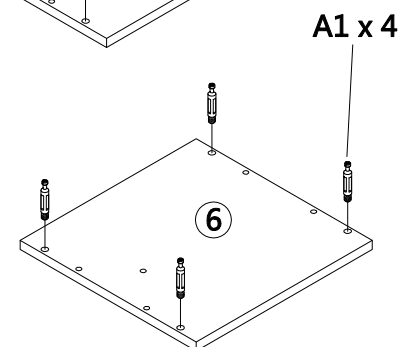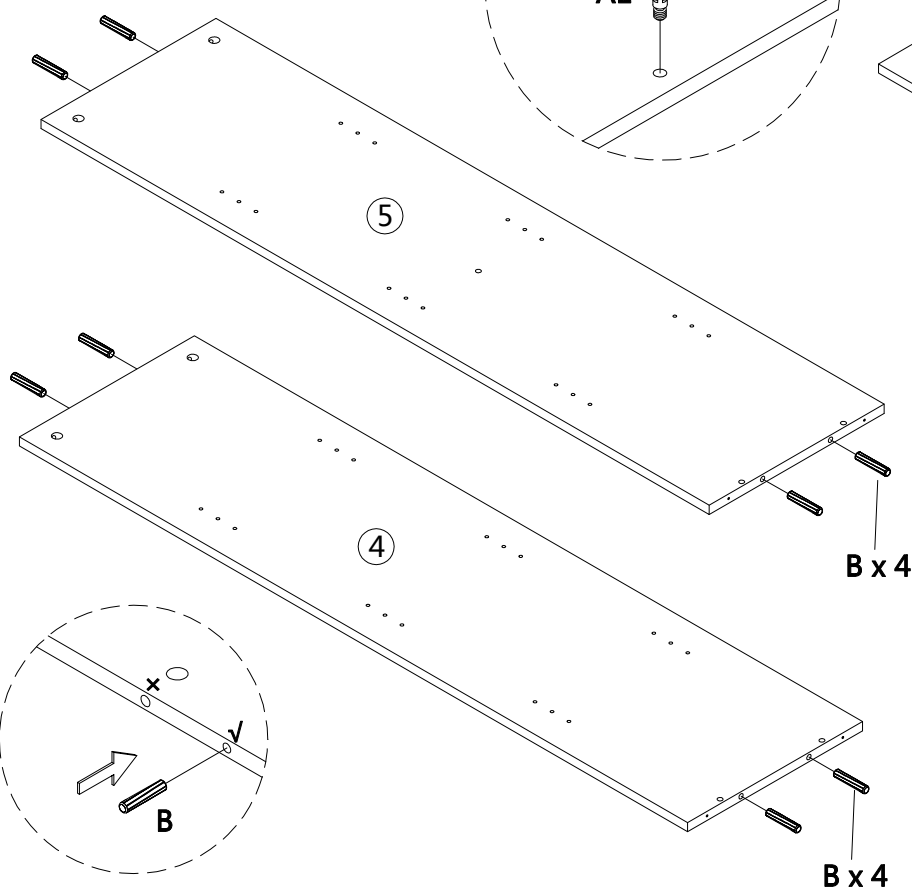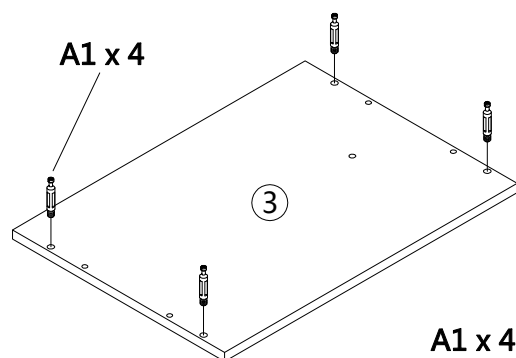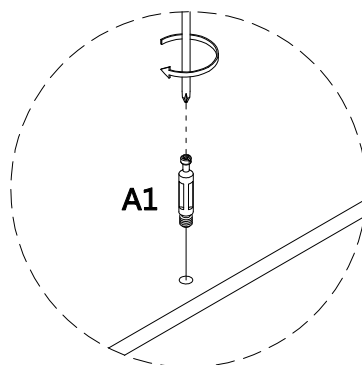


Step 2

A2 x 4

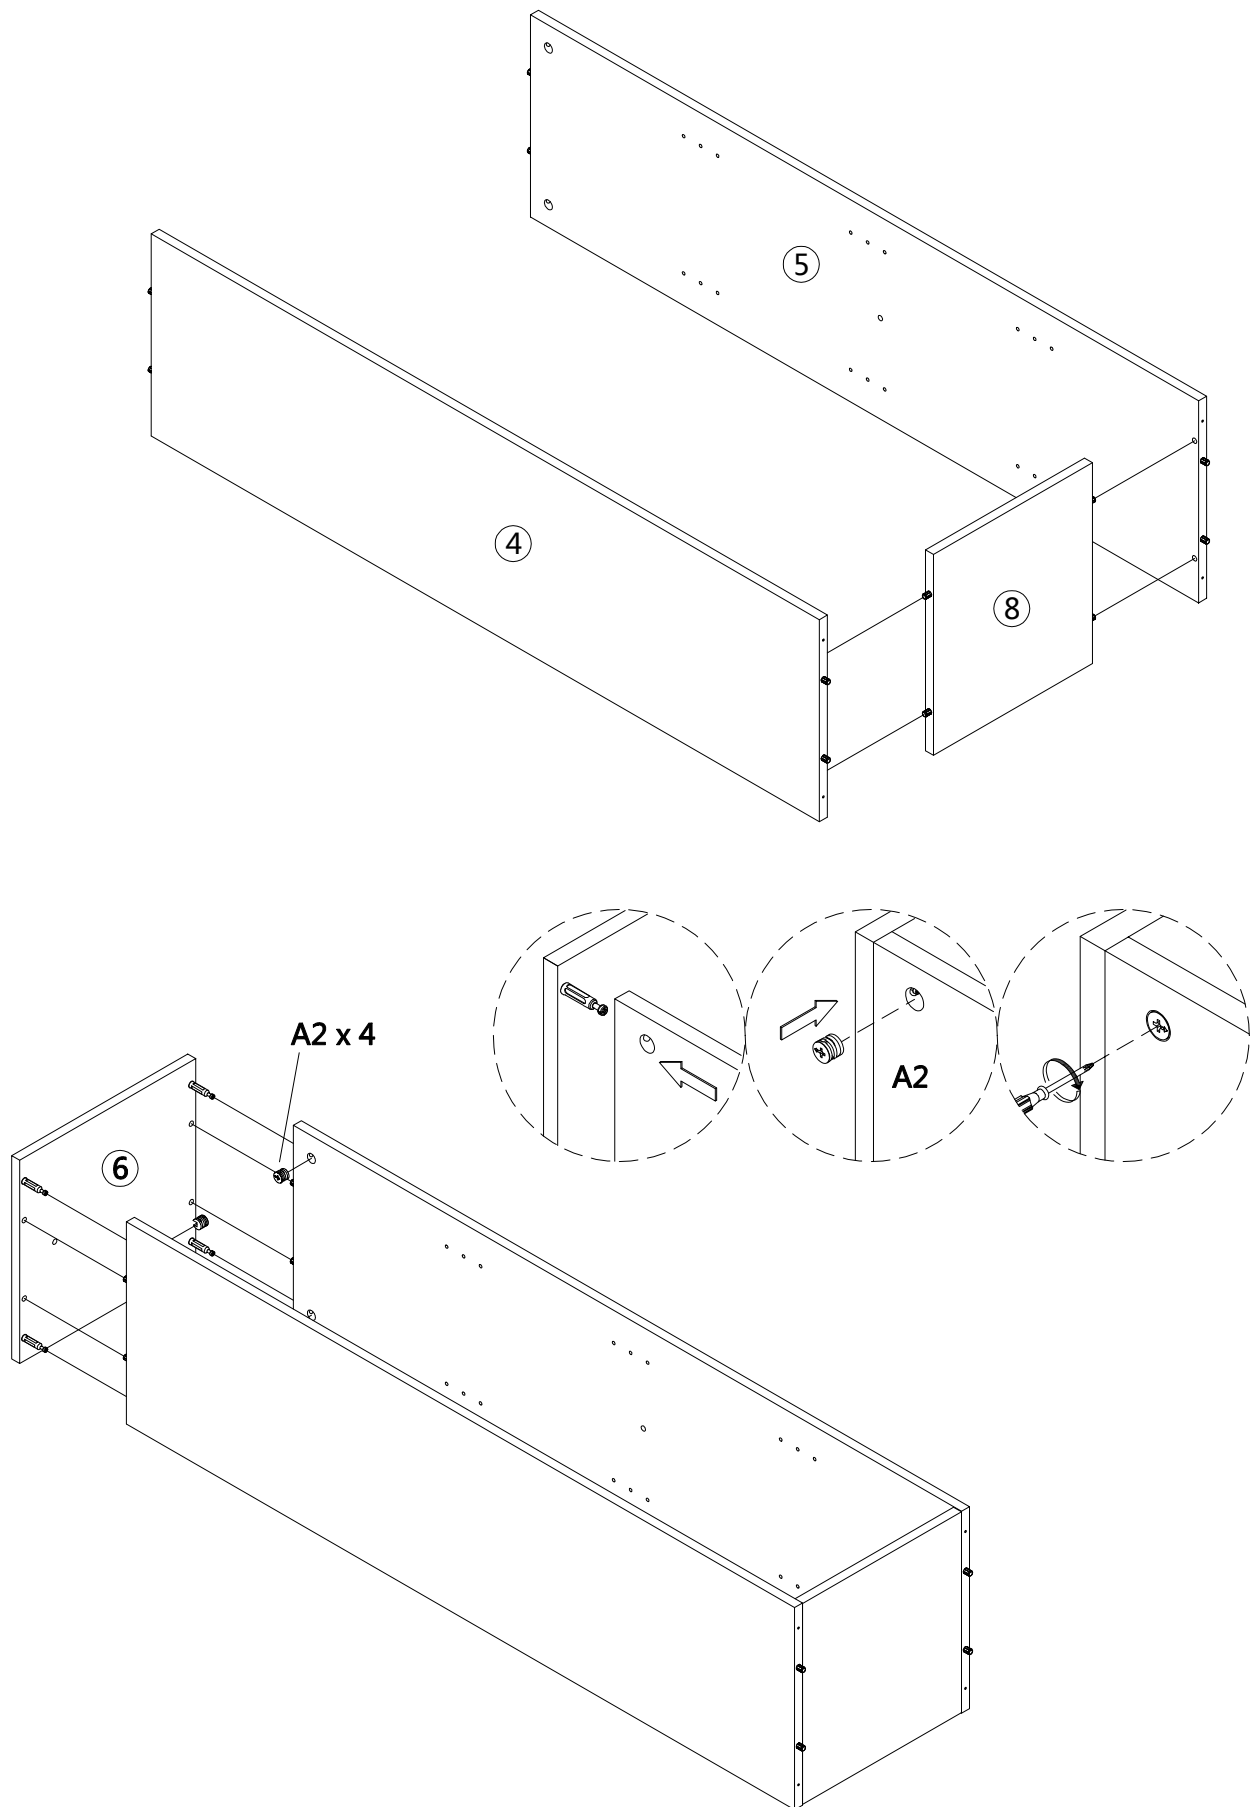


Step 3

A2 x 4 D x 8

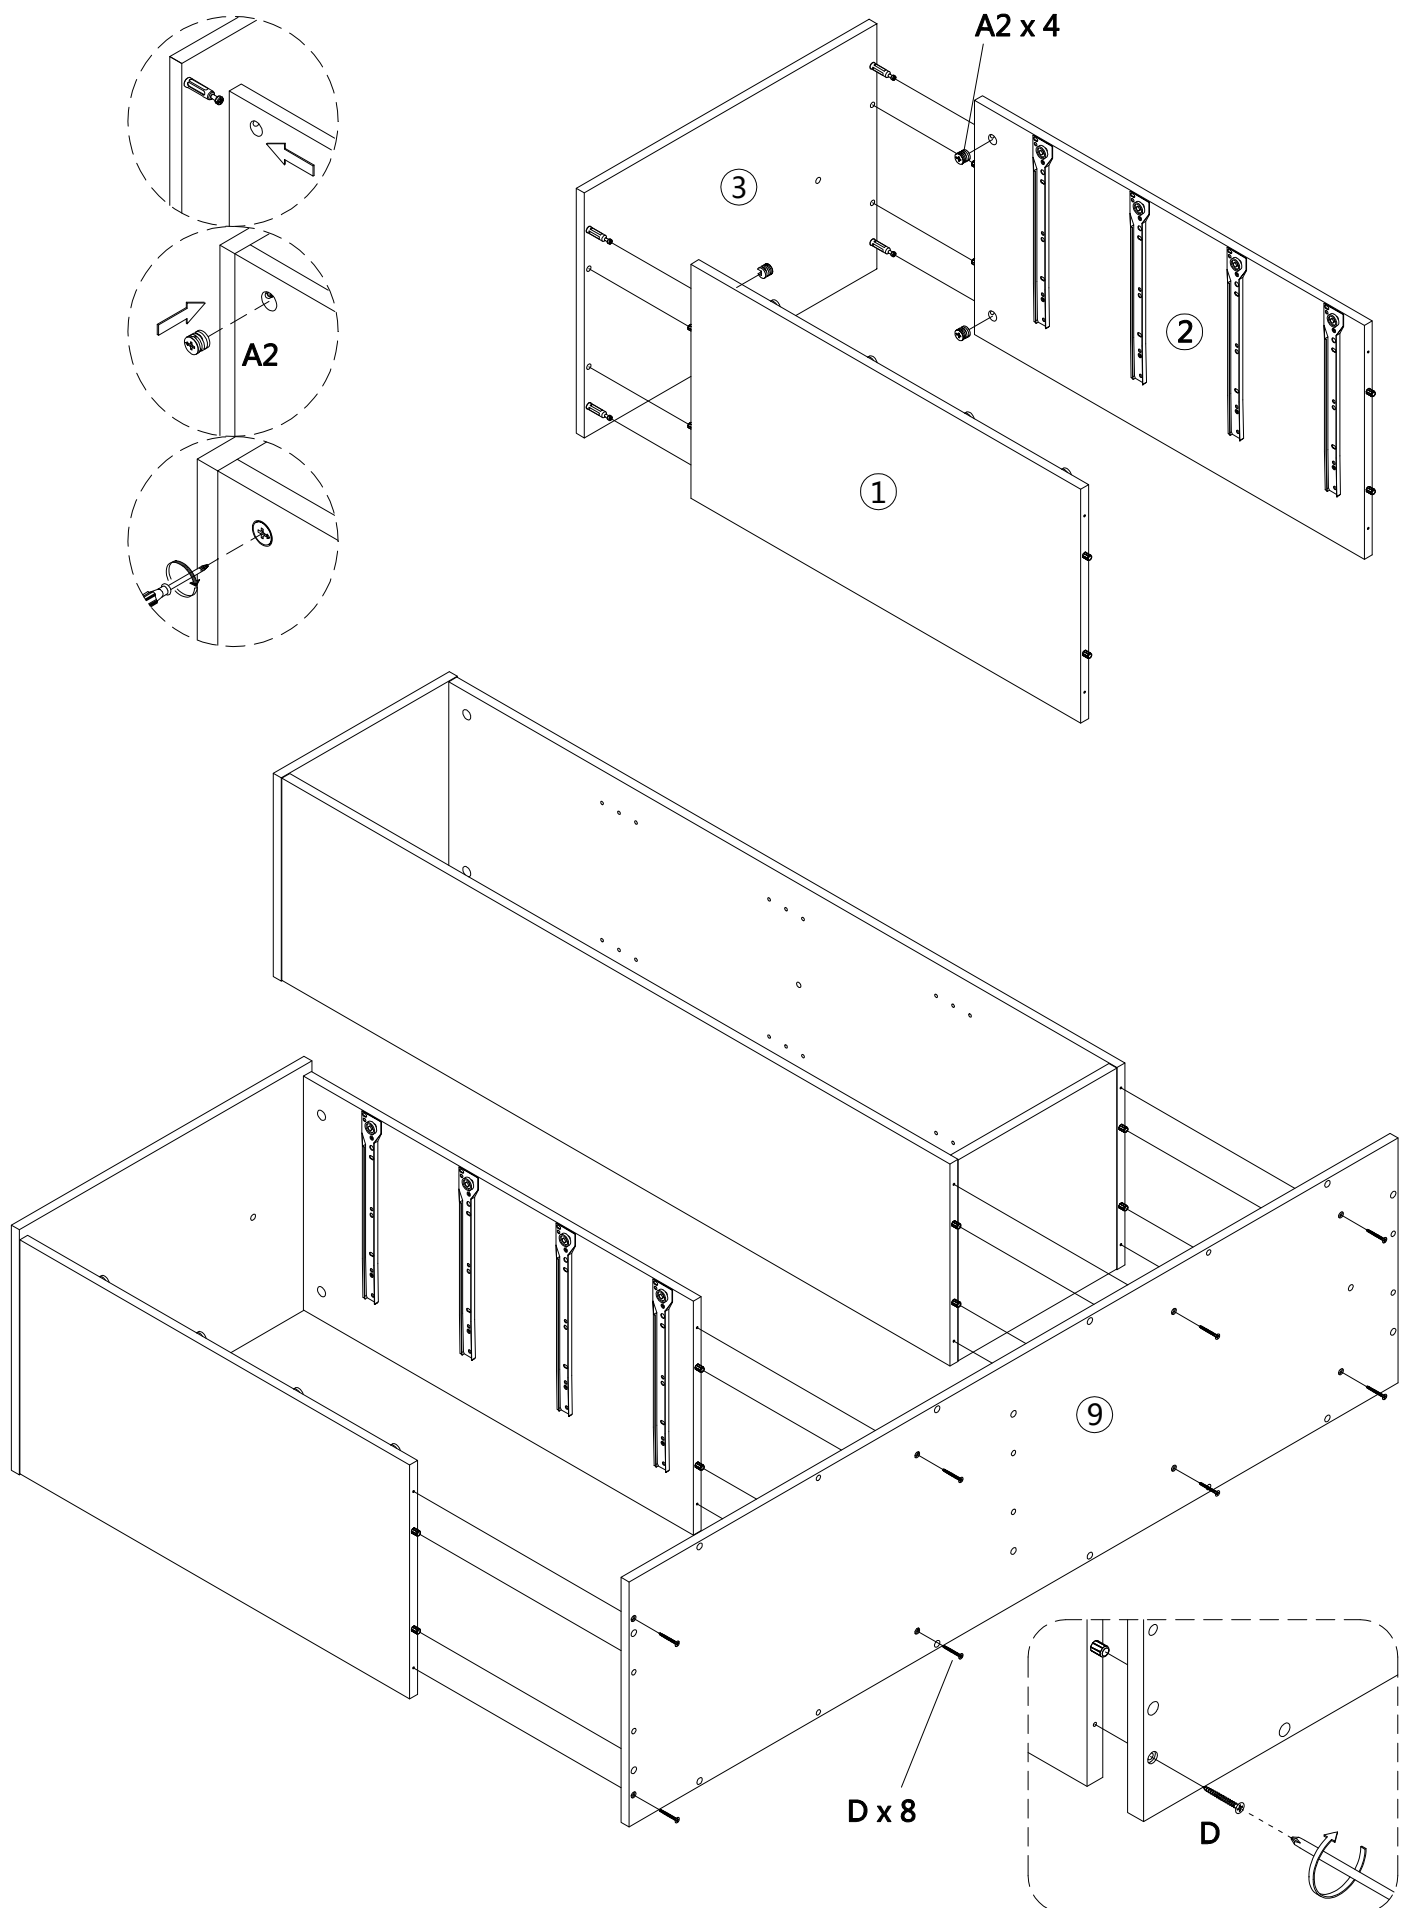


Step 4

A1 x 14

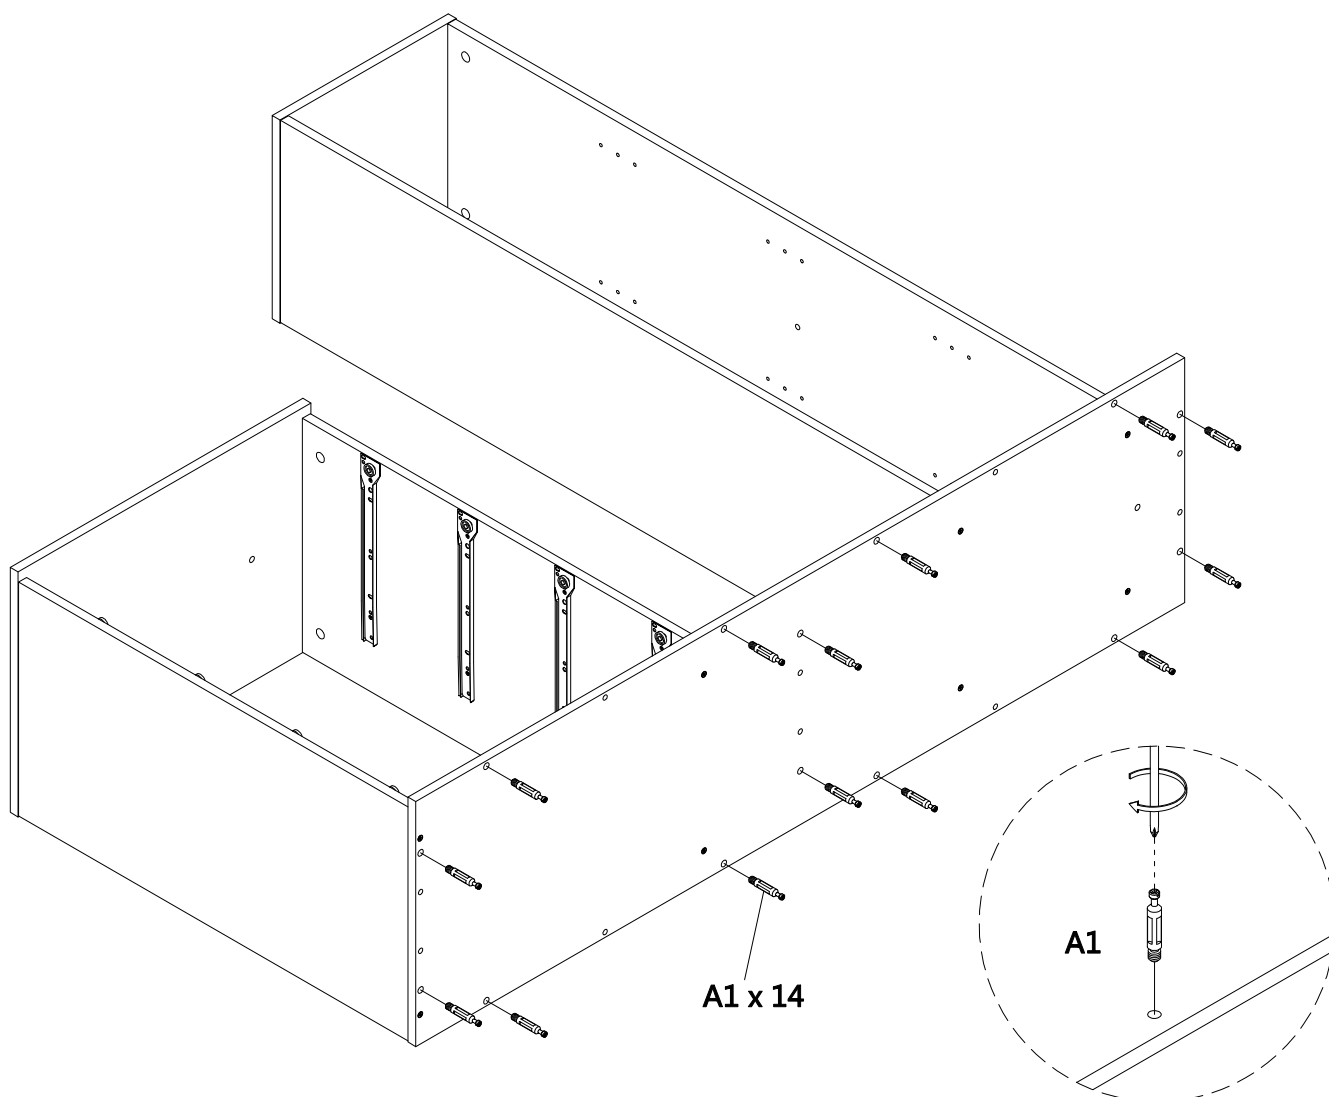





Step 5

A1 x 6 B x 16

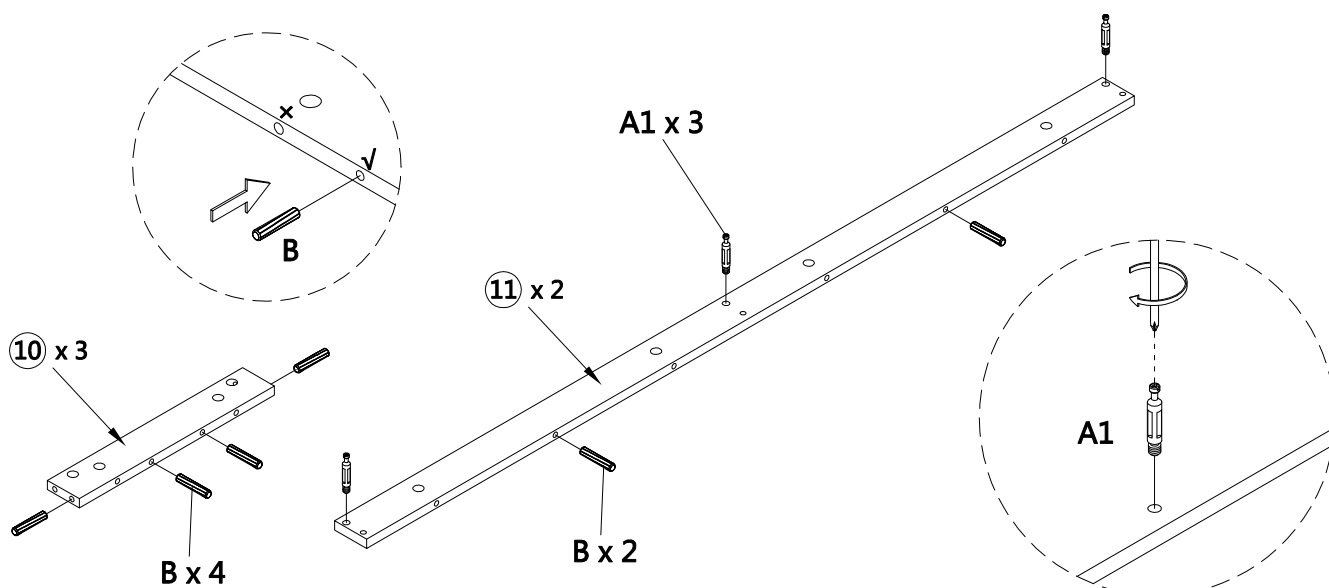


Step 6

A2 x 6 J x 9

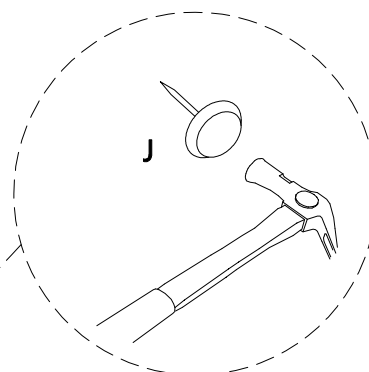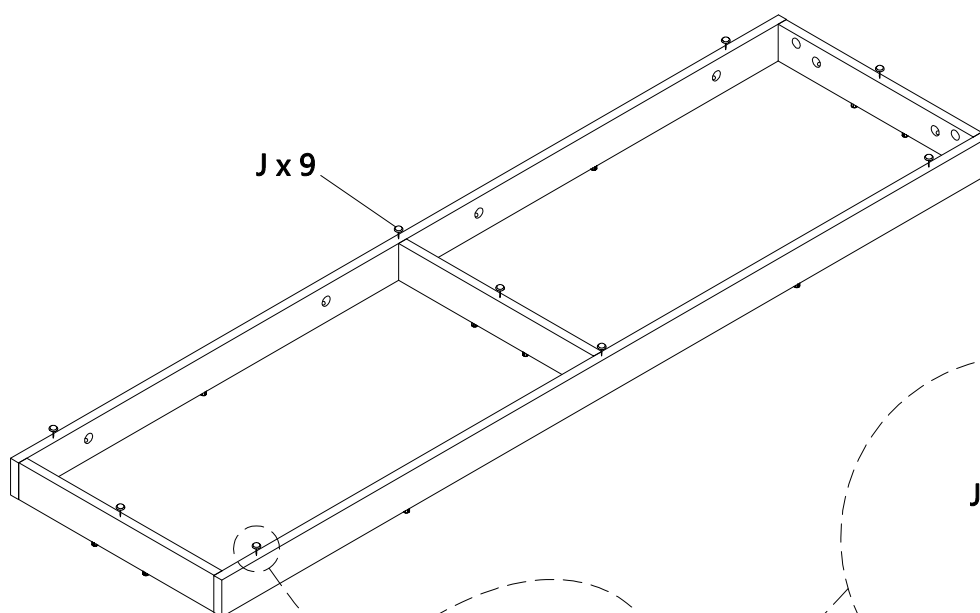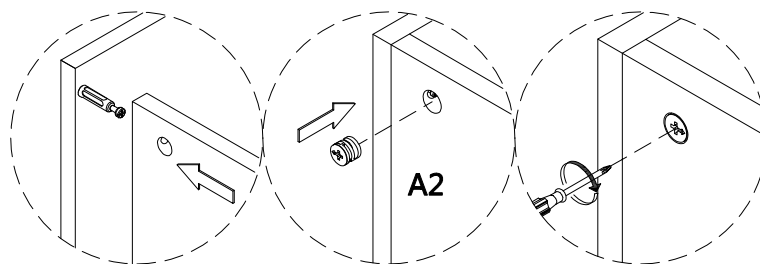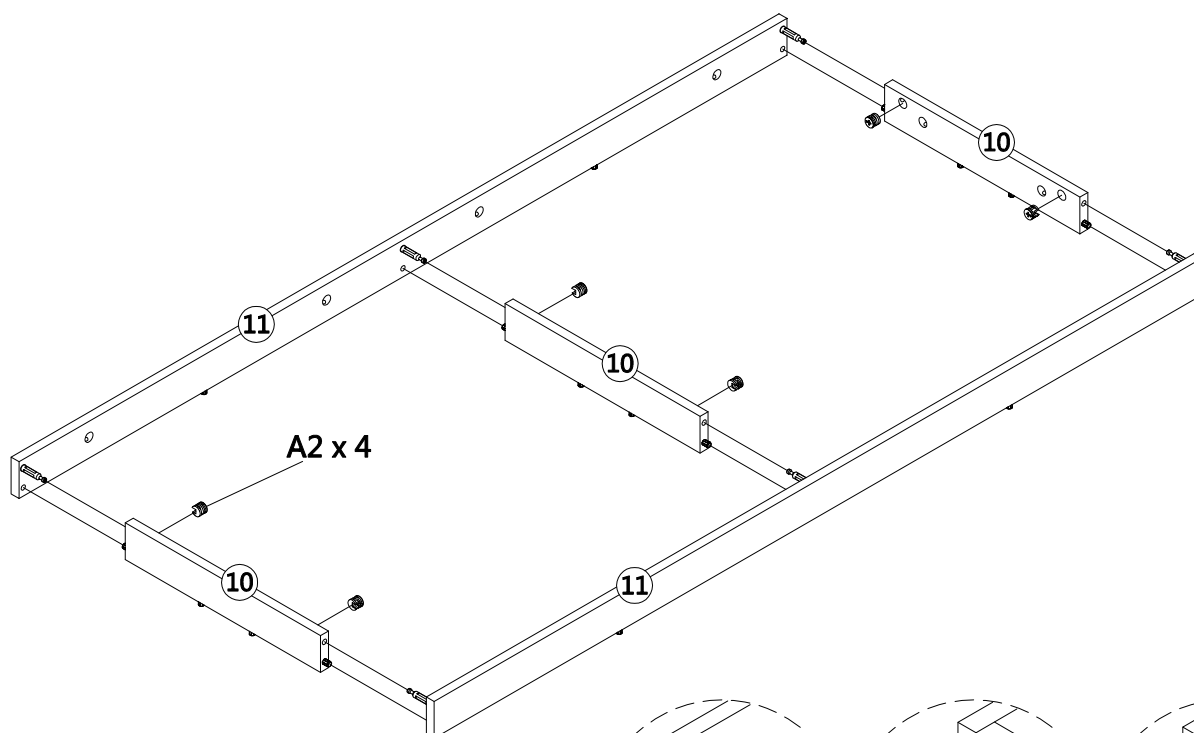


Step 7

A2 x 14

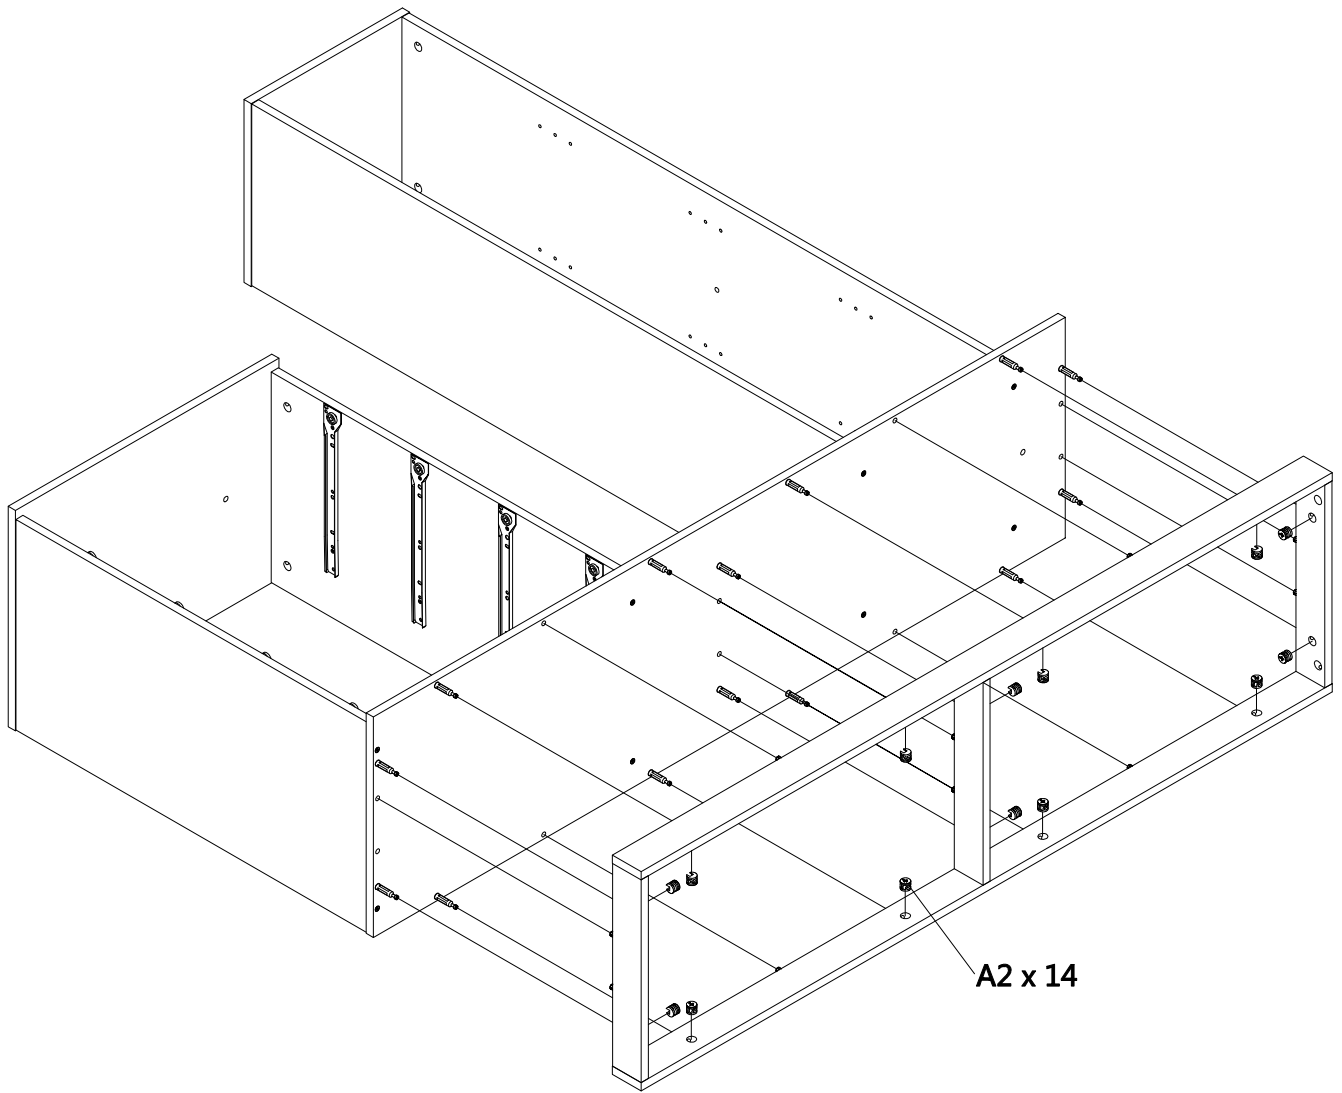





Step 8

G x 2

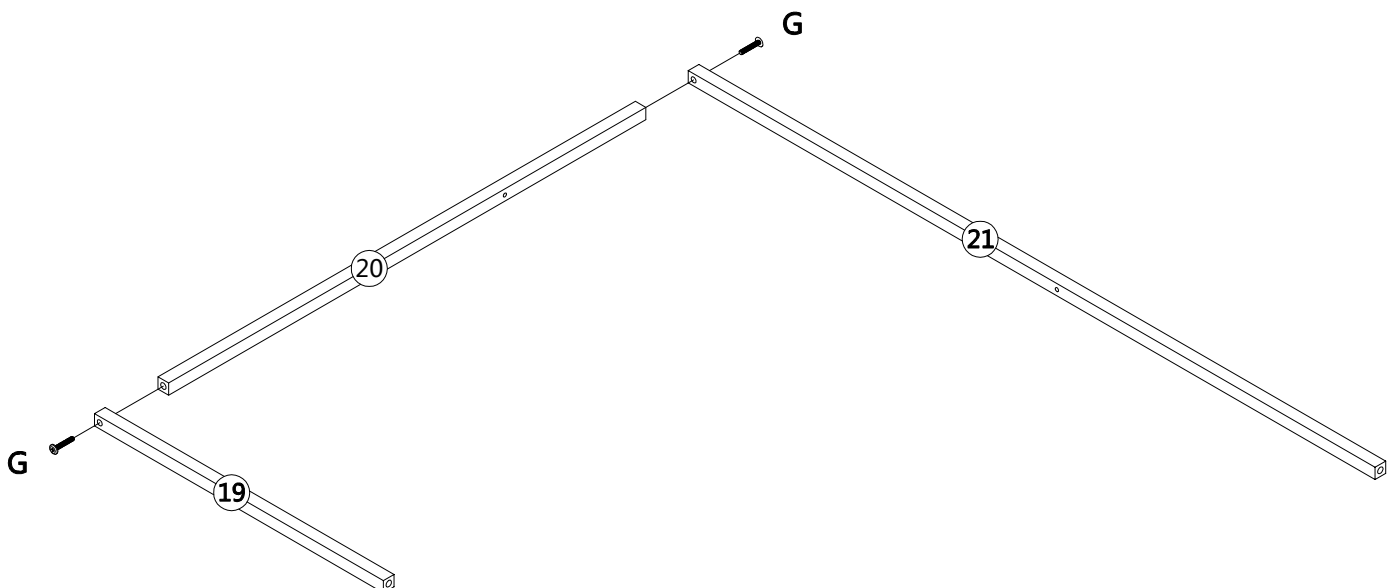




Step 9

F x 2 G x 2 K x 1 L x 46

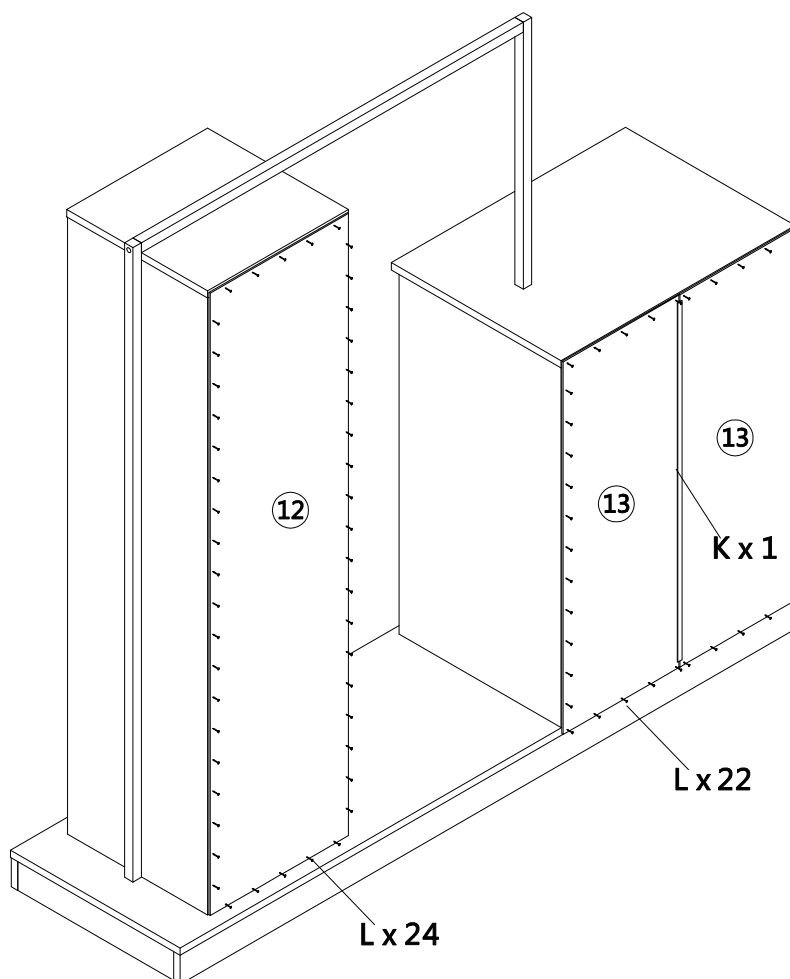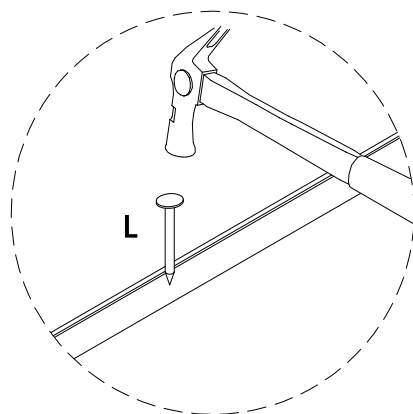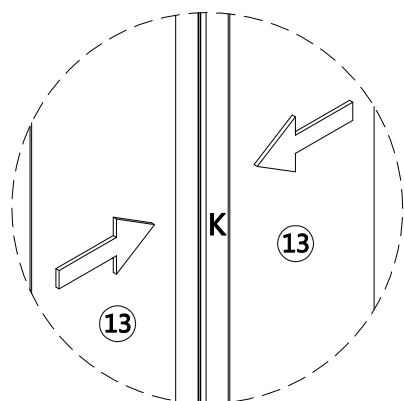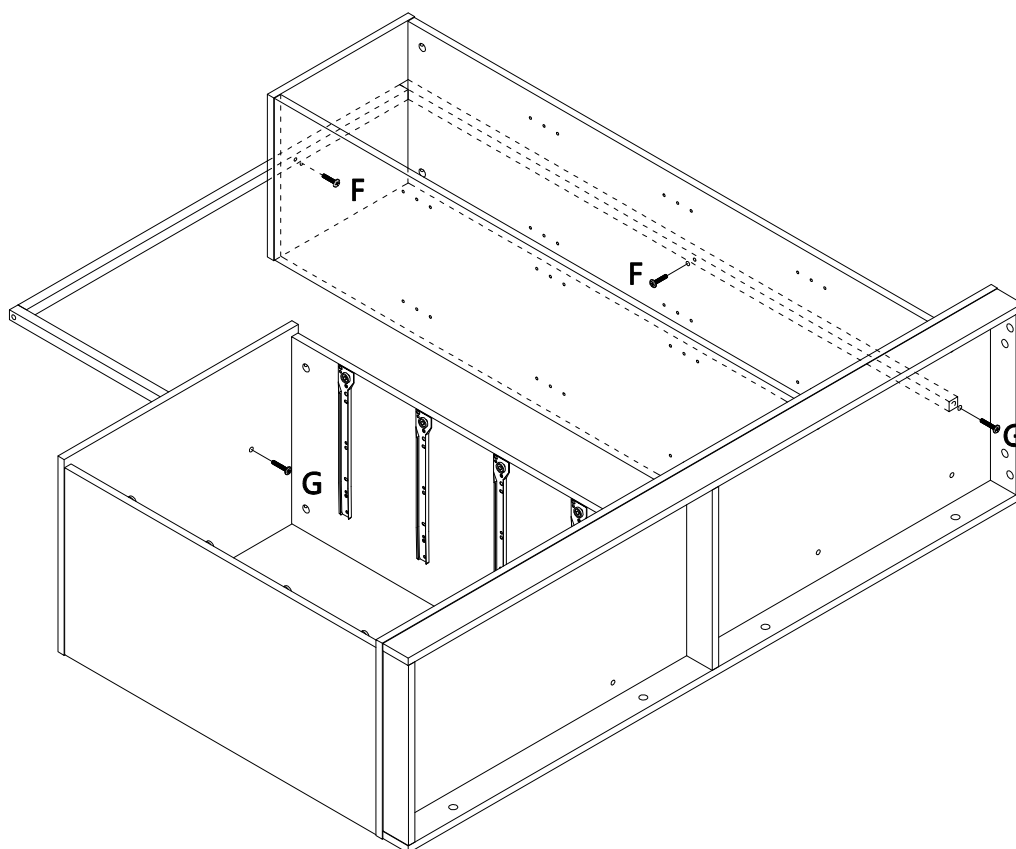

Step 10










M x 12

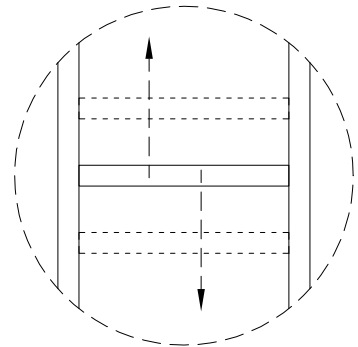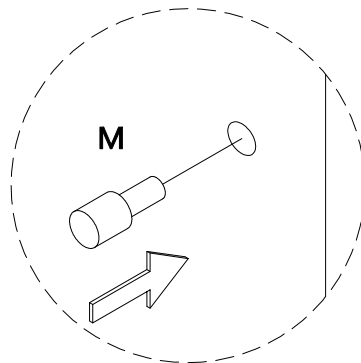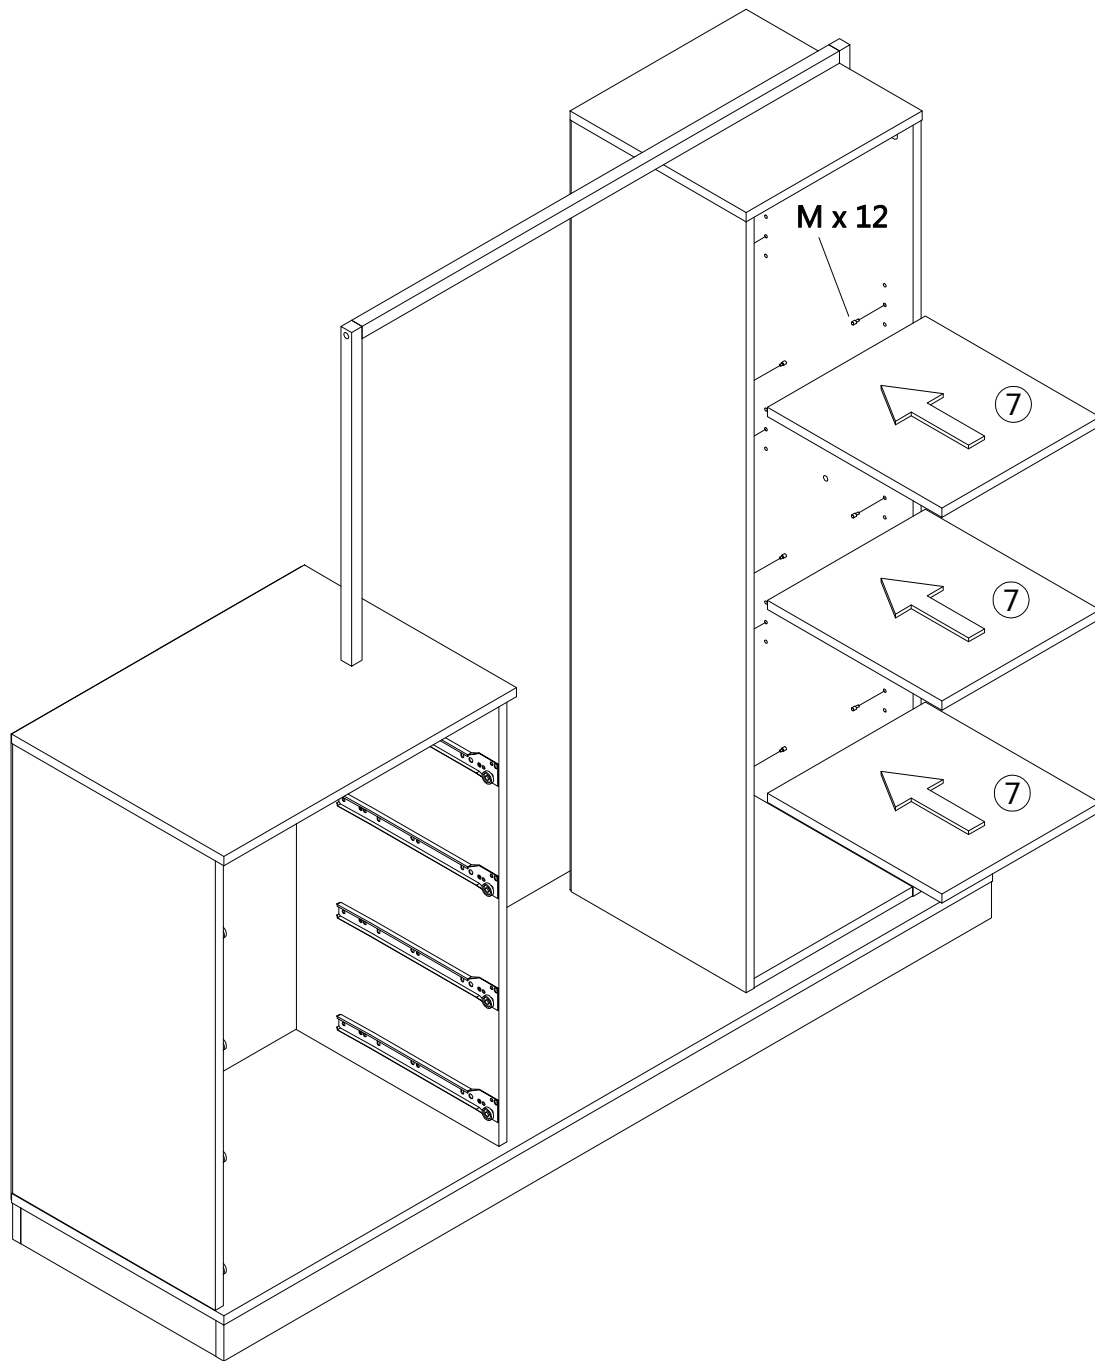

Step 11

A x 16 C x 24 D x 16 E2 x 8 H x 4

x 4

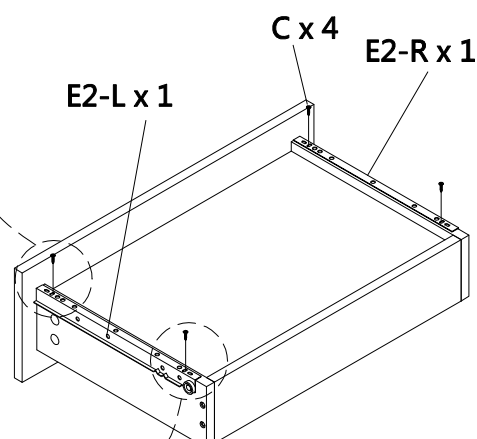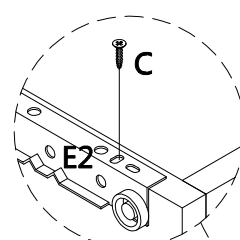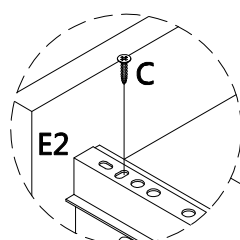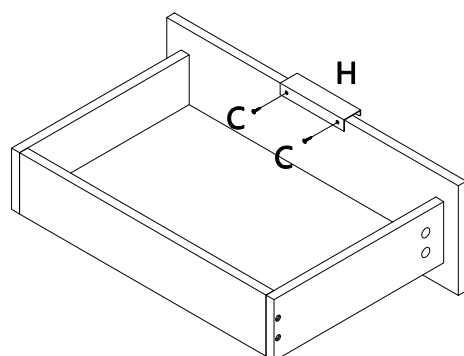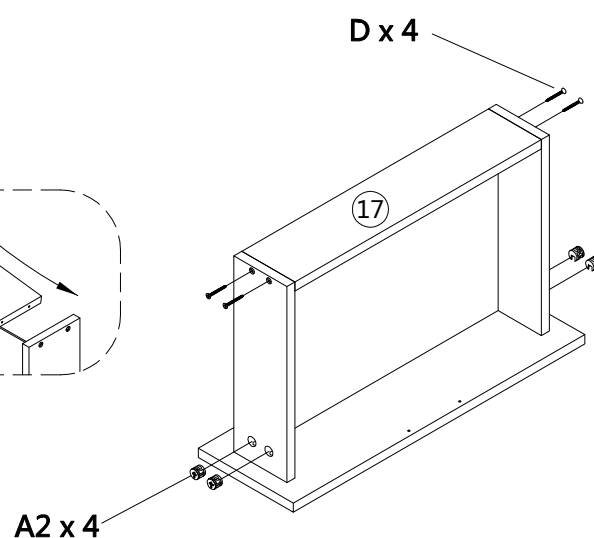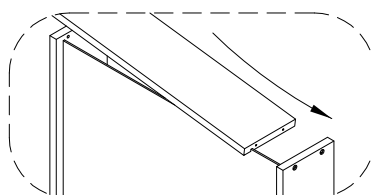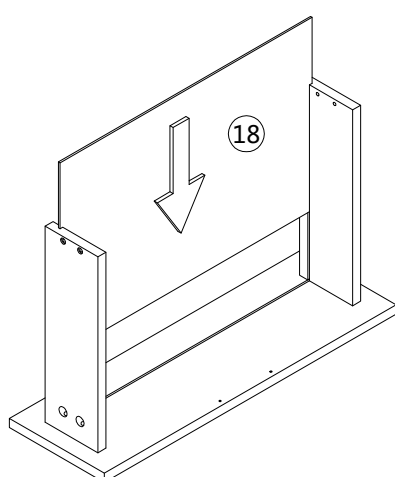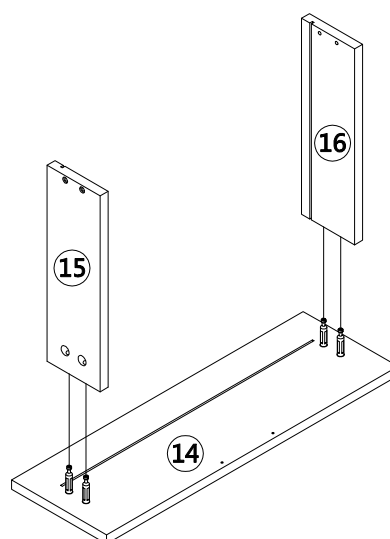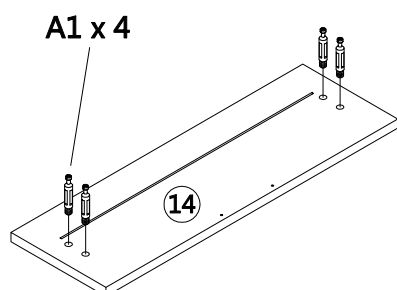

Step 12

