
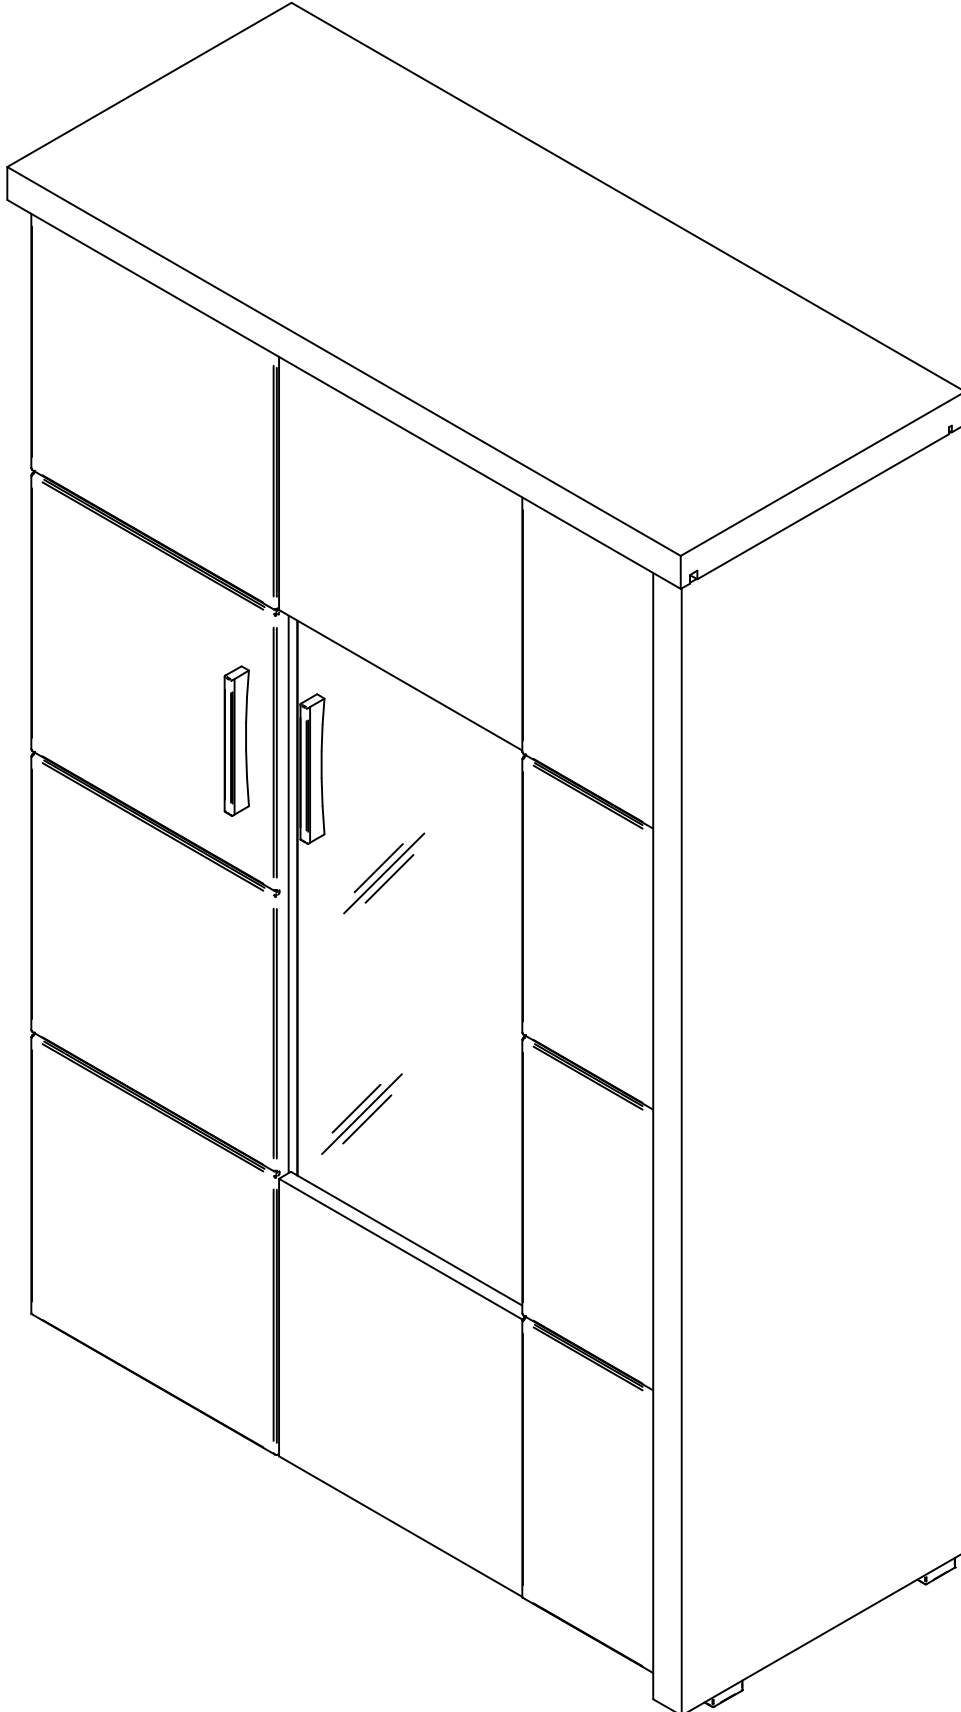
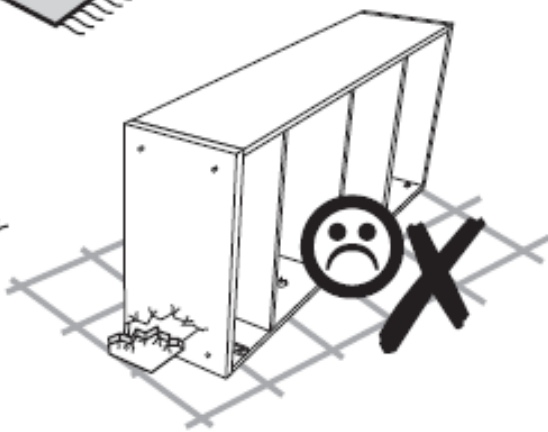
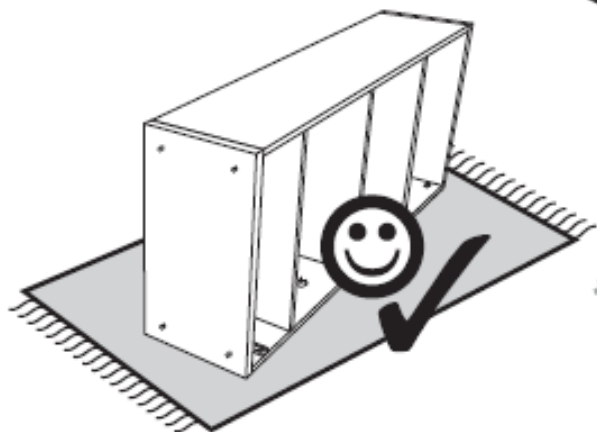
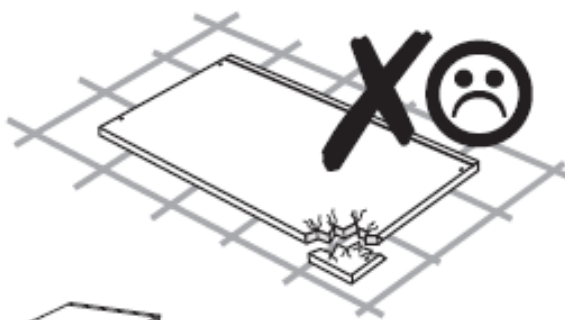
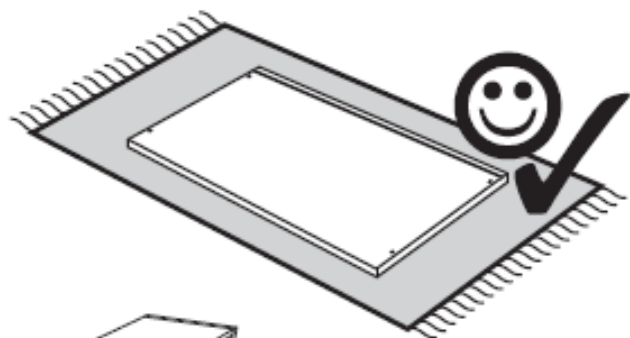
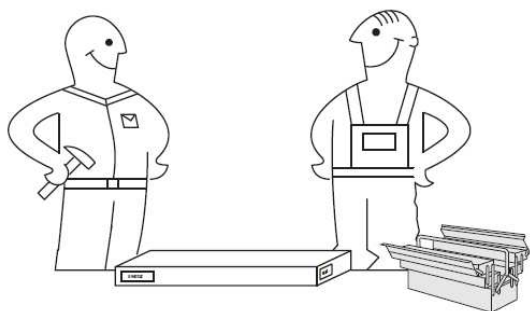
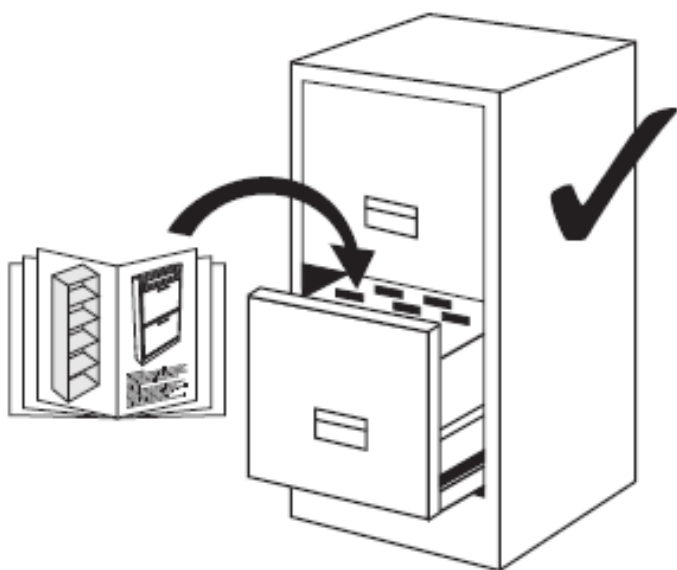



Eleganza

3044HW Wotaneiche
(Rustica Oak)

16






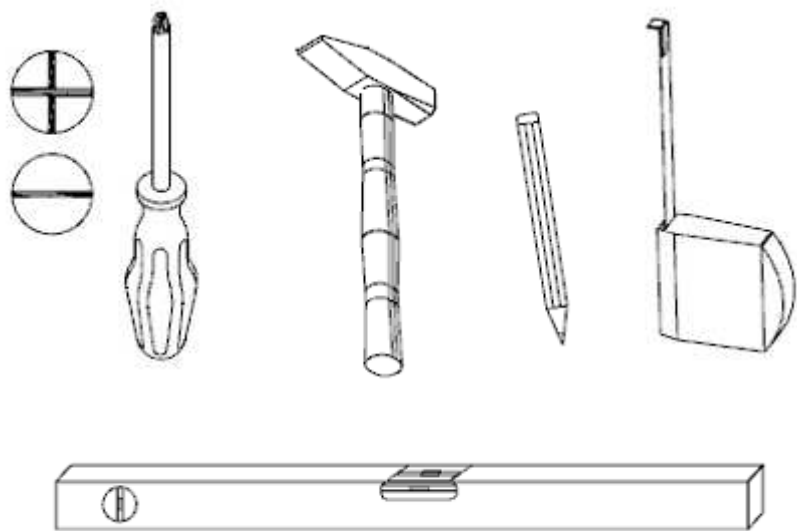








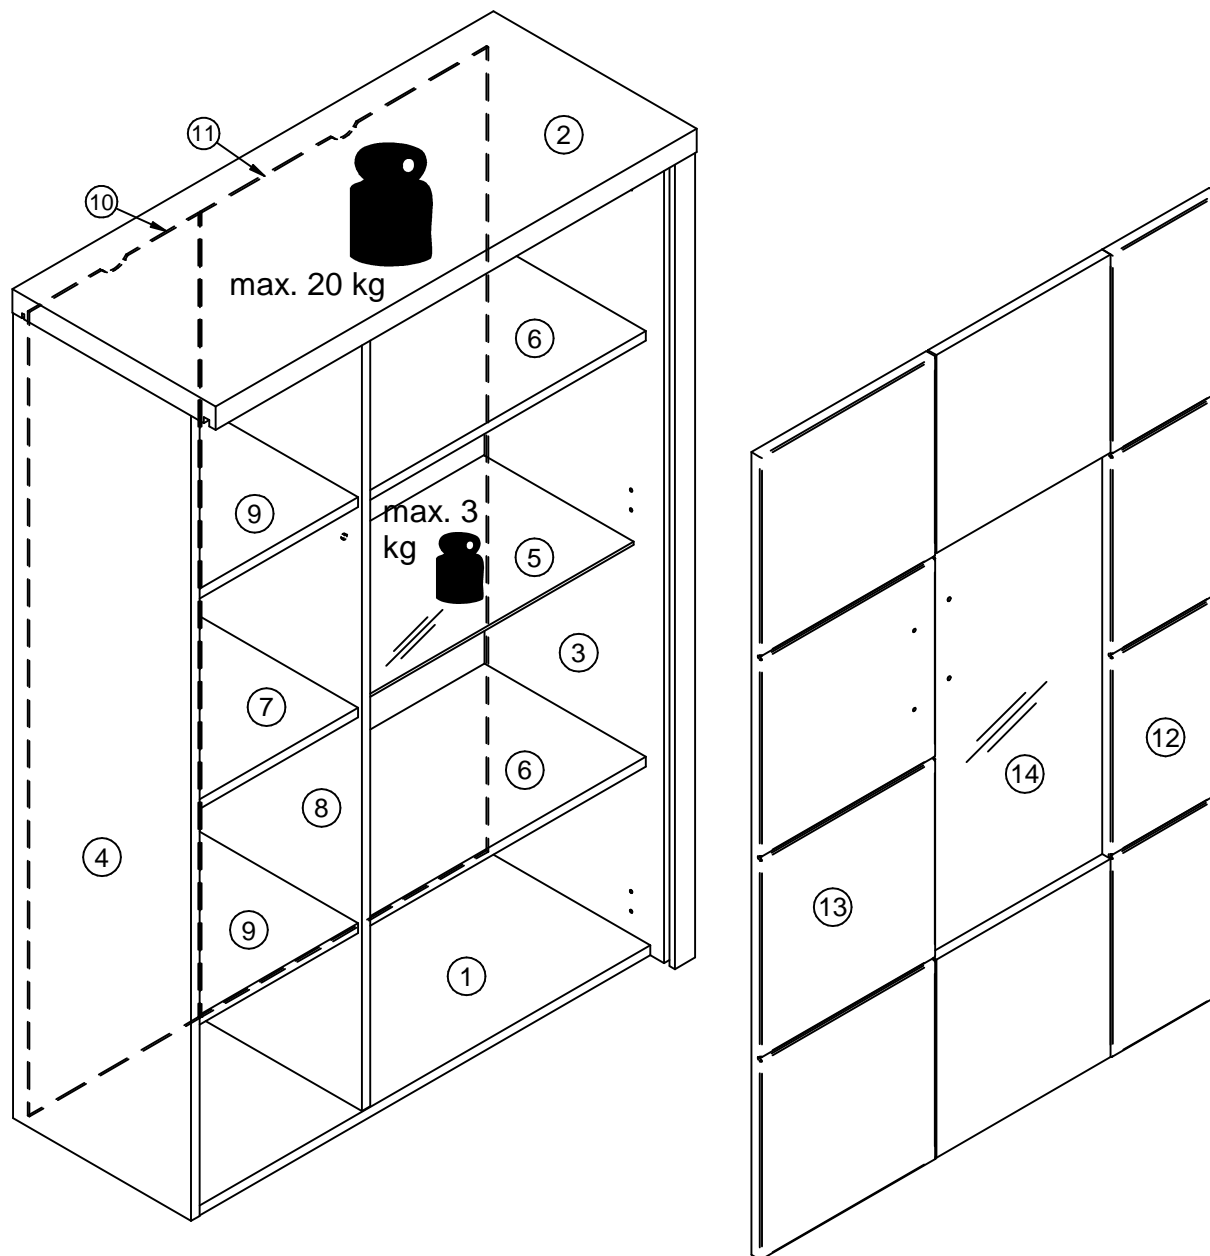








BT1015 ! x18	BT1016 ! x4	MM1016 11mm x22	MM1121 Ø8x30 x28	BT1142 x4	MM1048 Ø2,7x20 x18	BT50101 x8	BT50585 x4	BT1005.xx x8
BT50497 60x40x20 x5	MM1102 Ø4x25 x10	MM1134 Ø4x15 x4	BT51367 Ø9x6 x4	BT1089 x4	MM1046 Ø3,5x13 x16	BT51346 K=16 ! x2	BT51347 K=16 ! x1	BT51342 K=0 ! x2
BT51343 K=0 ! x1	BT51349 H=2 x6	BT51332 BA=128 x2	MM1022 M4x24 x2	MM1040 5x9x1 x2	MM1220 M4x10 x2	MM1070 Ø7x1,5 x4	BT1121 x2	MM1018 x1
ZU50926B_Trafo x1	MM1001 Ø7,7x45 x2	MM1007 4mm x1	BT50163.xxx Ø8 x1					

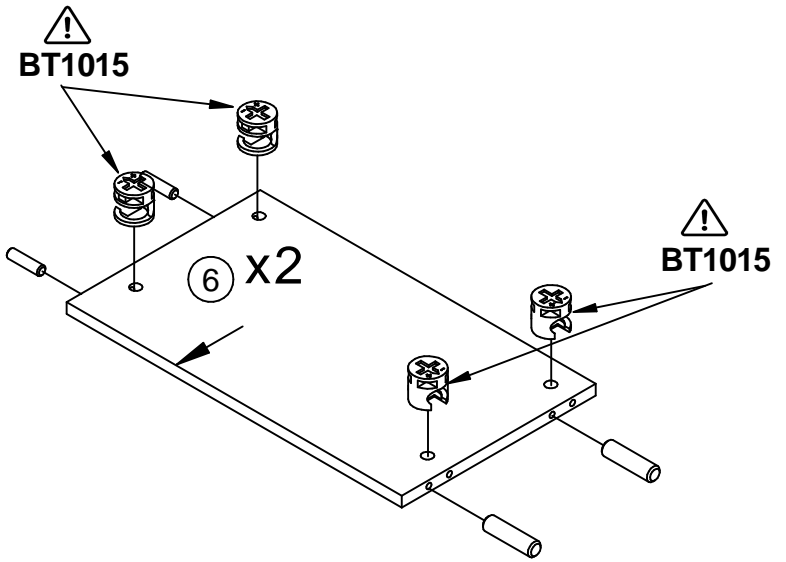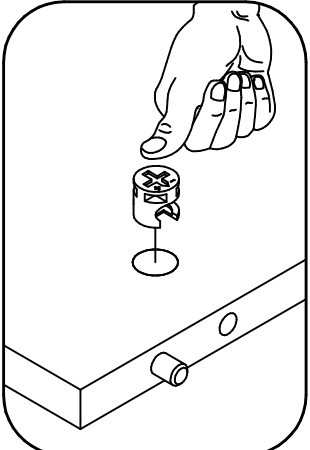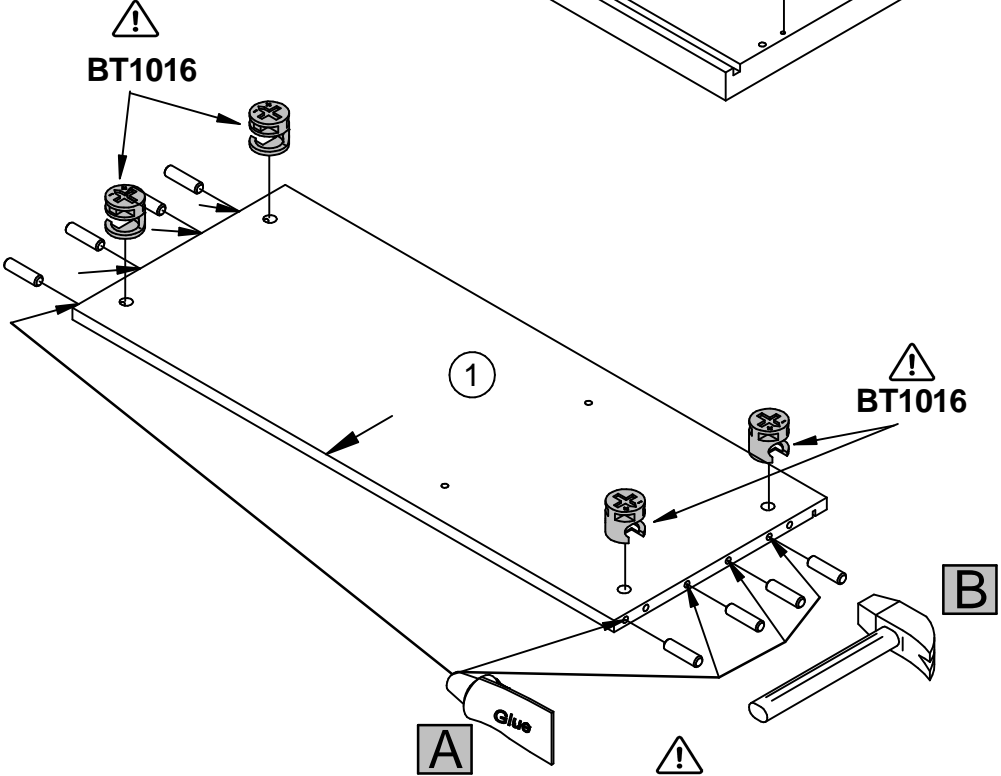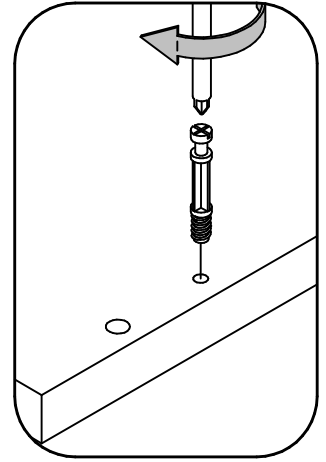
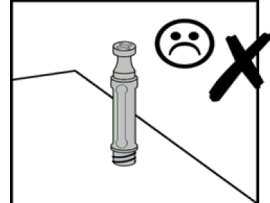
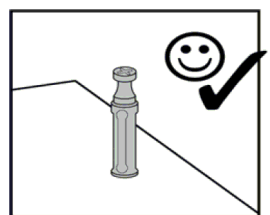
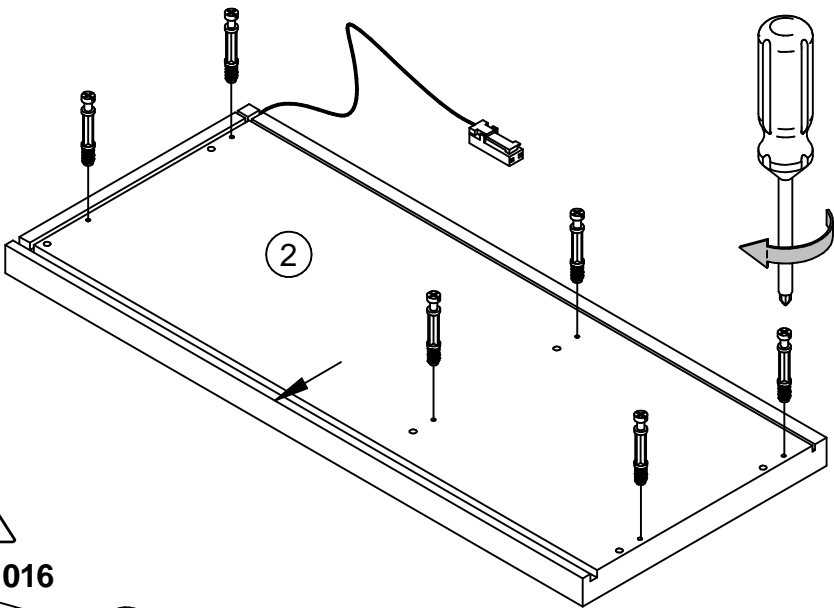
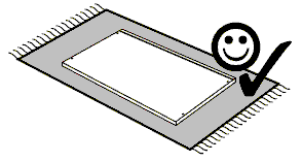
1.

BT1016  ⚠ x4	MM1121  Ø8x30 x16	MM1016  11mm x6	MM1018  x1	BT1015  ⚠ x8
---	---	---	---	---







2.

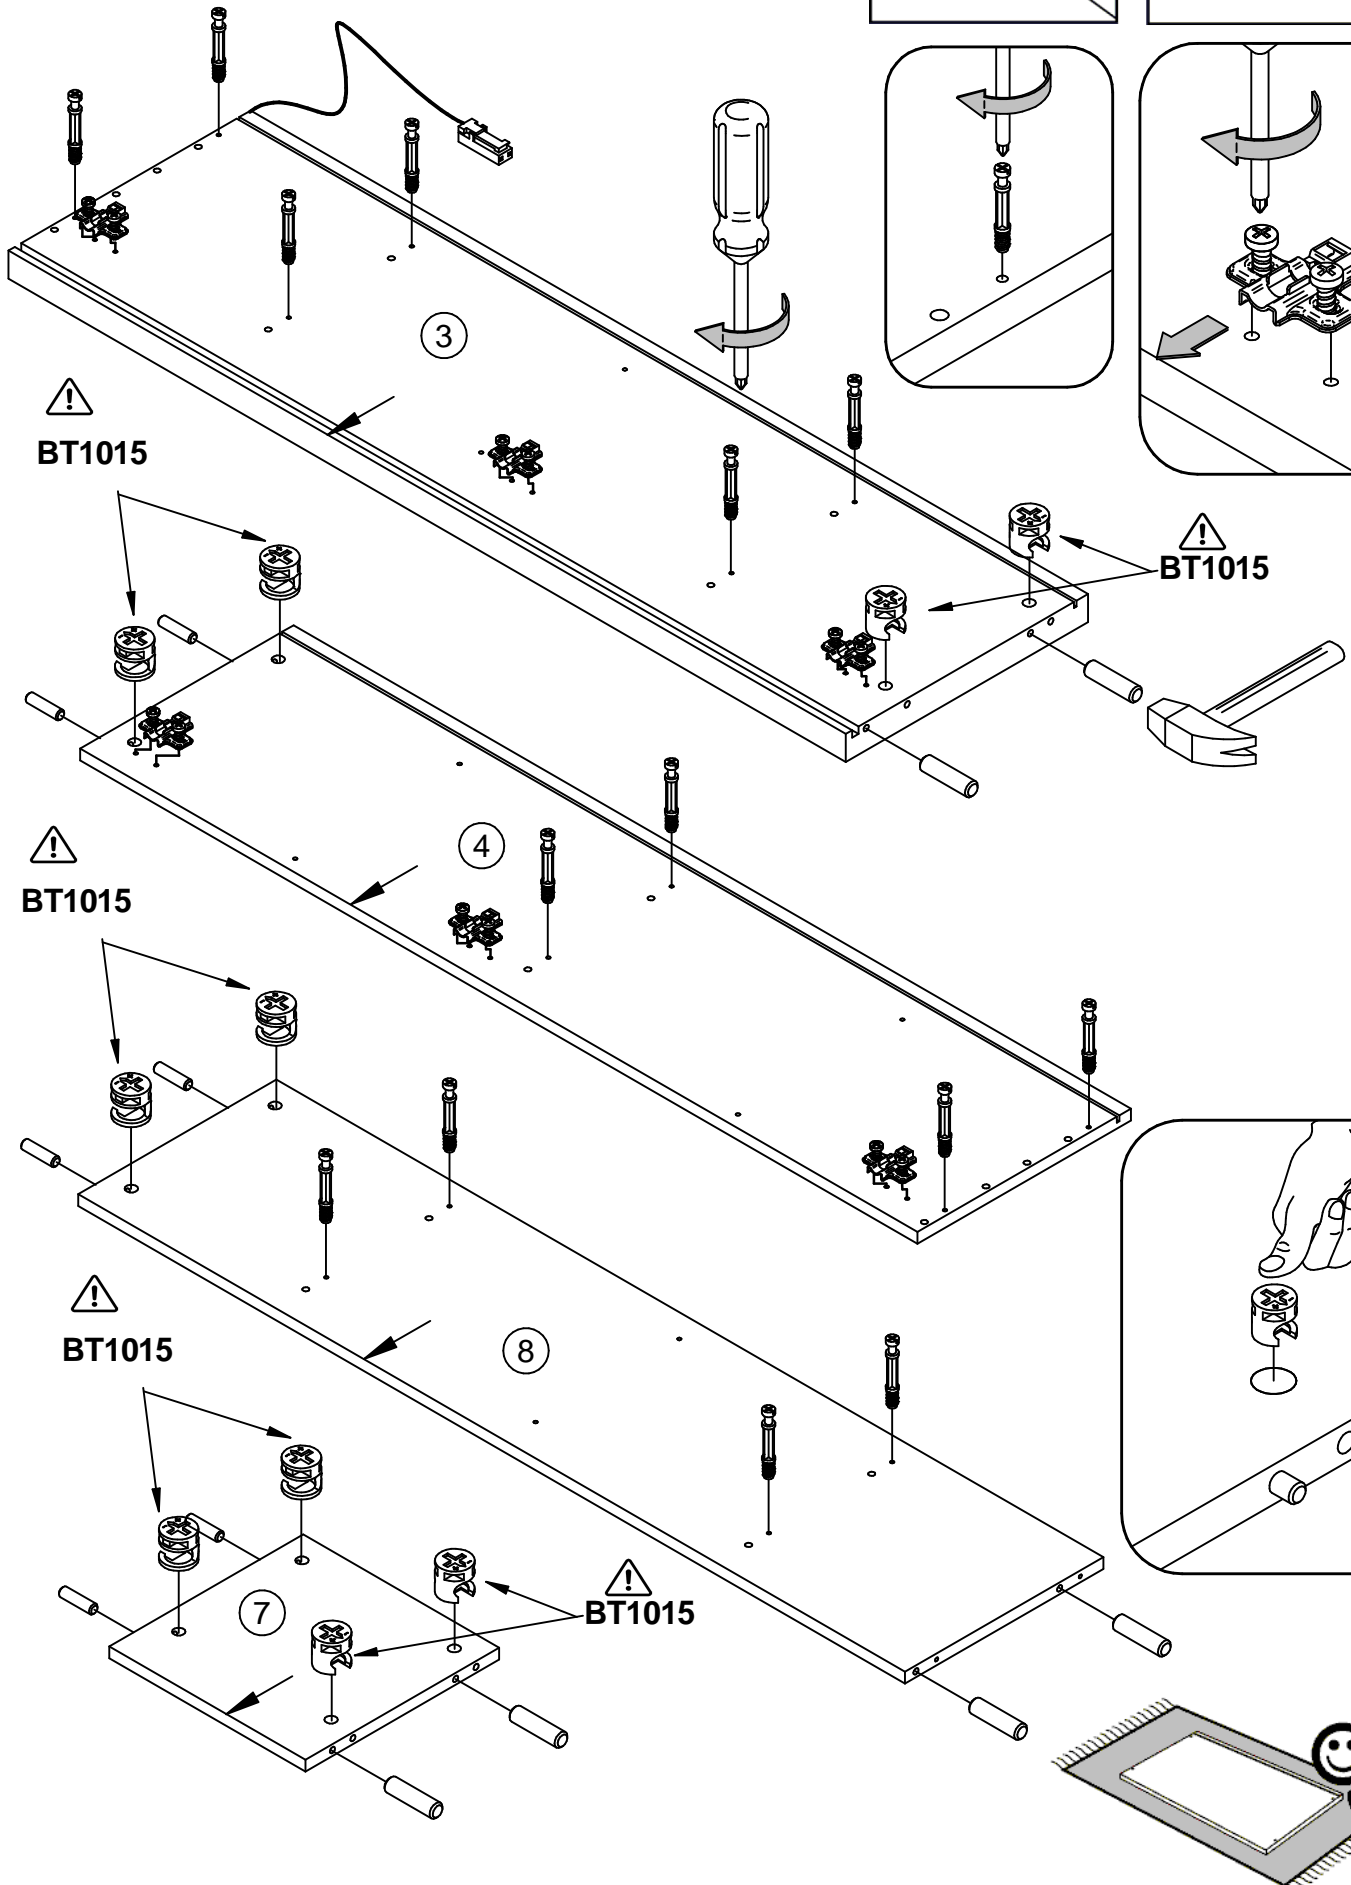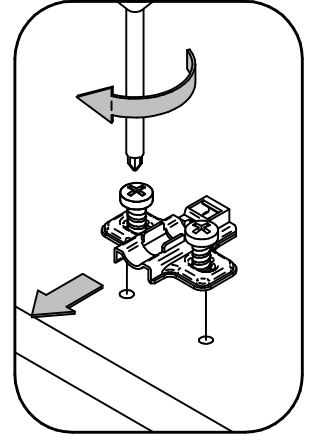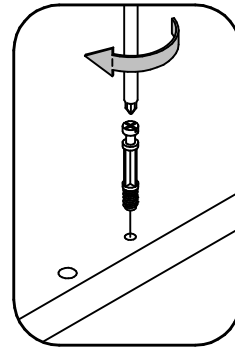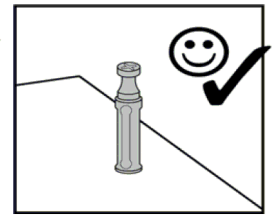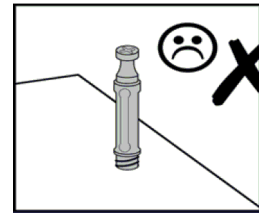BT1015  ! x10	MM1016  11mm x14	MM1121  Ø8x30 x12	BT51349  H=2 x6
---	---	--	--





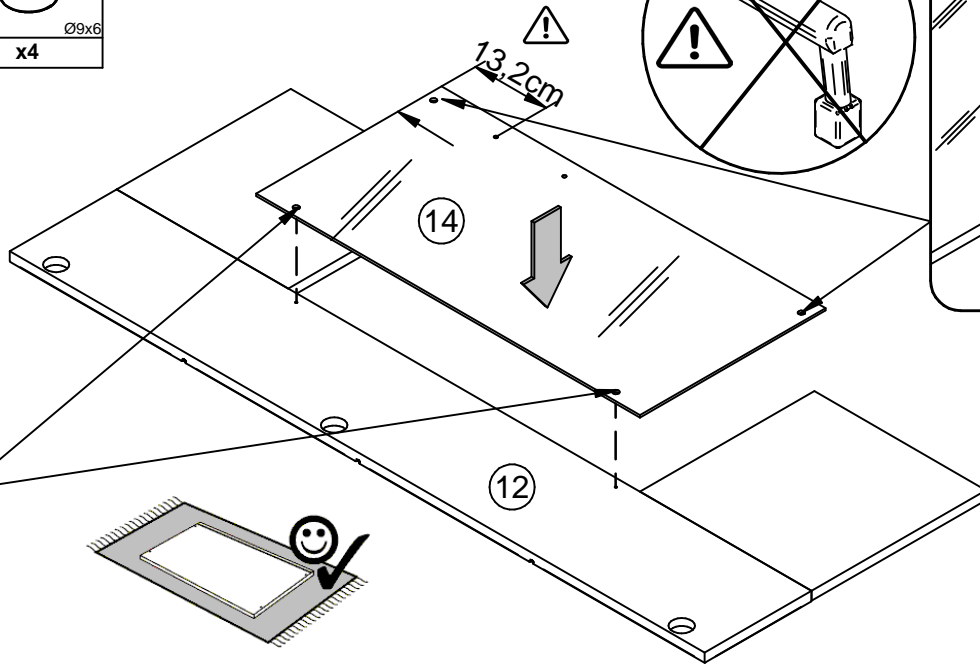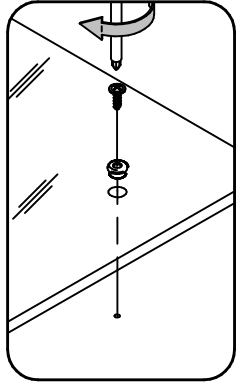


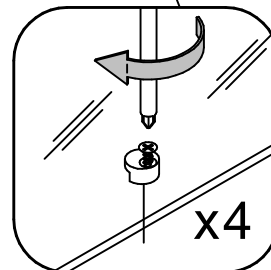
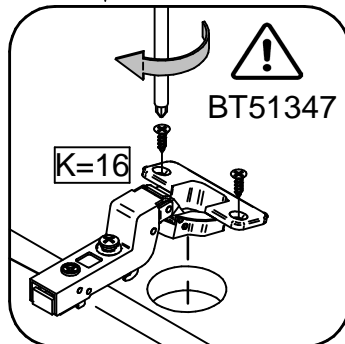
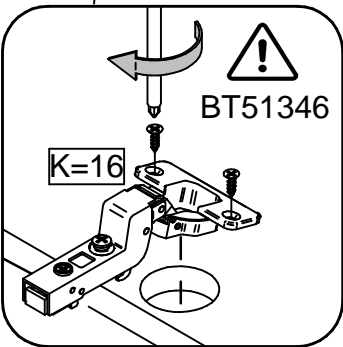
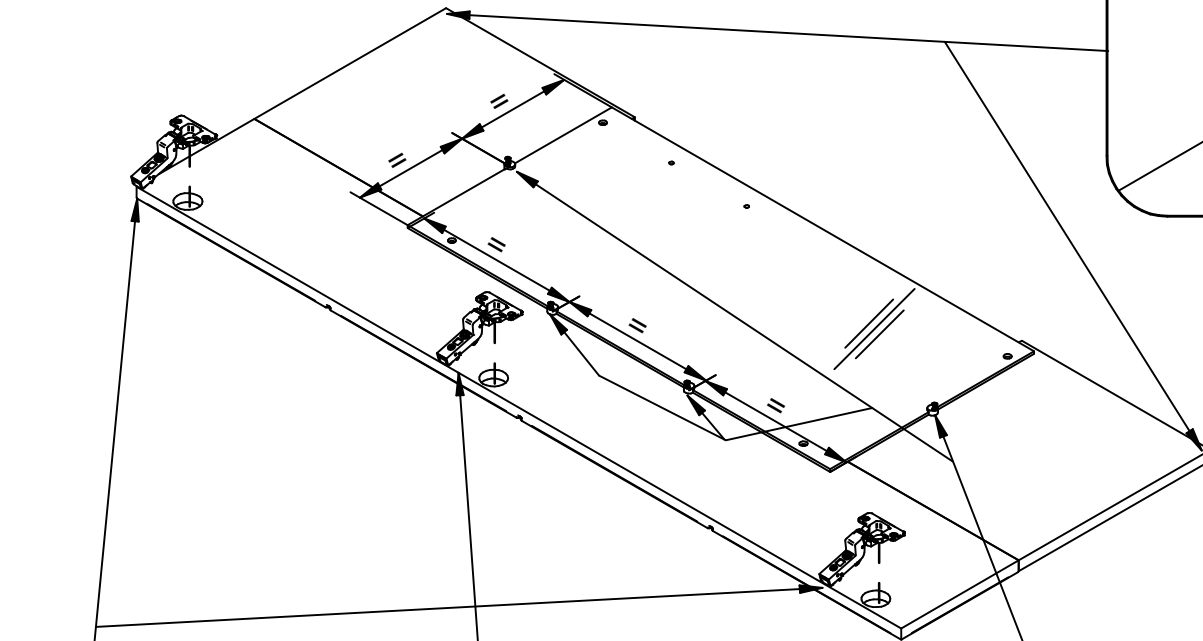
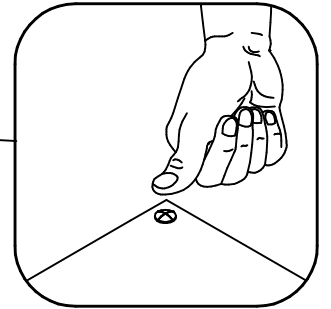
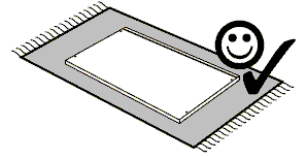
3.

MM1134	BT51367
	
Ø4x15	Ø9x6
x4	x4










4.

MM1046	BT51346	BT51347	MM1070	BT1089
				
Ø3,5x13	K=16	K=16	Ø7x1,5	
x6	x2	x1	x2	x4






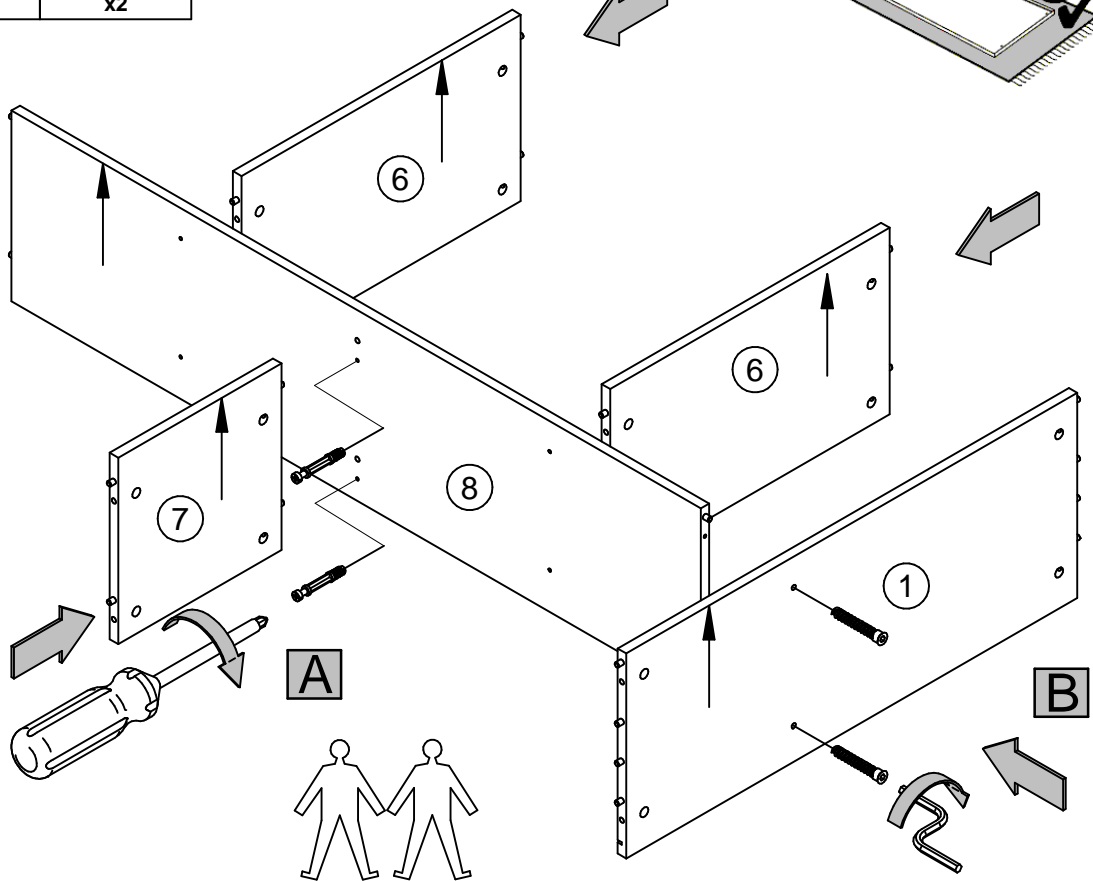
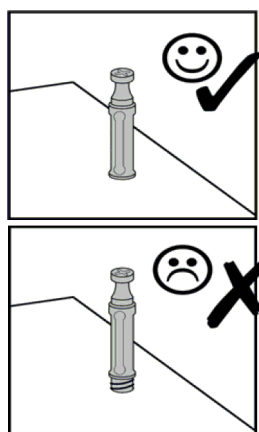
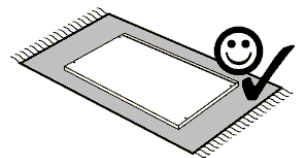
5.

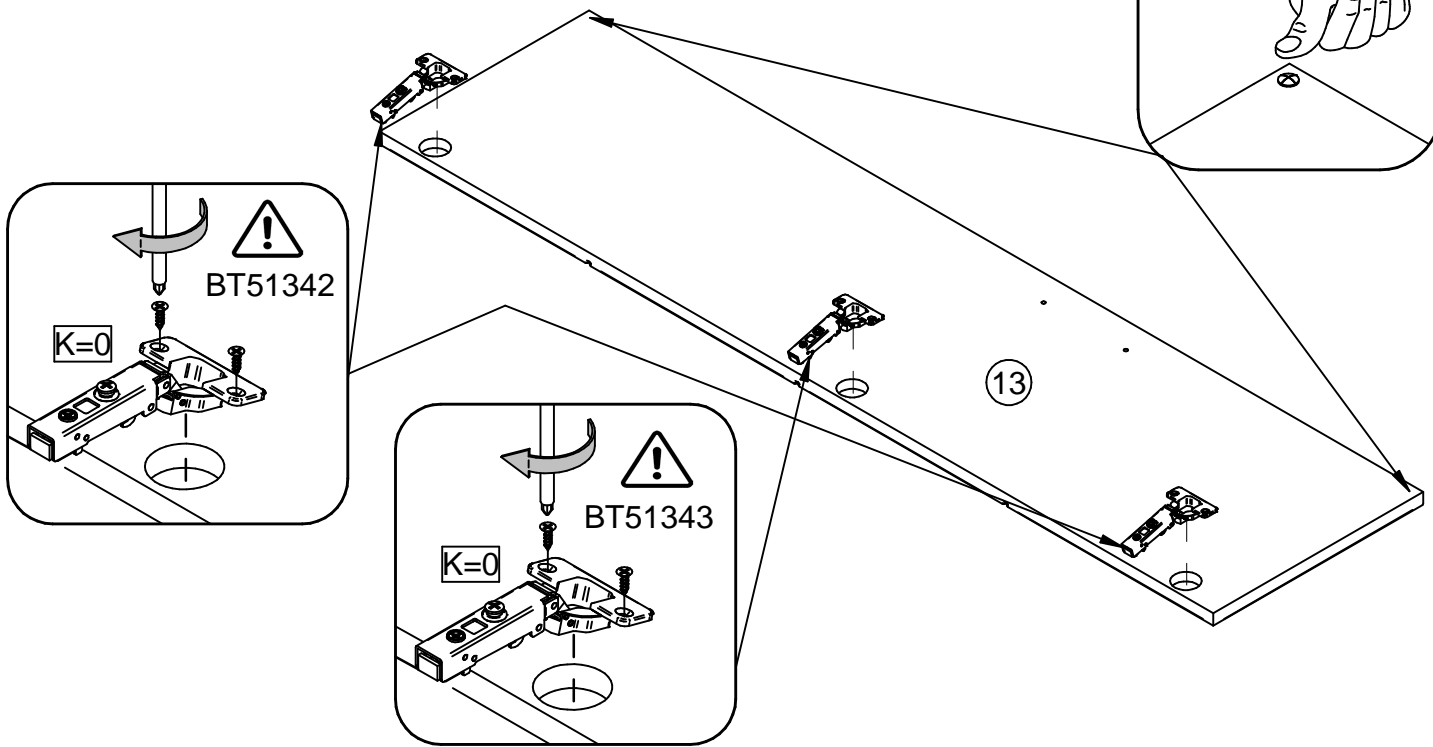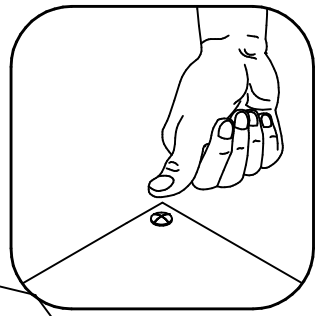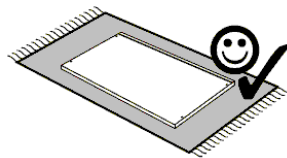MM1046  Ø3,5x13 x6	BT51342  K=0 x2	BT51343  K=0 x1	MM1070  Ø7x1,5 x2
---	--	--	--







6.





MM1001  Ø7,7x45 x2	MM1007  4mm x1	MM1016  11mm x2
--	--	---





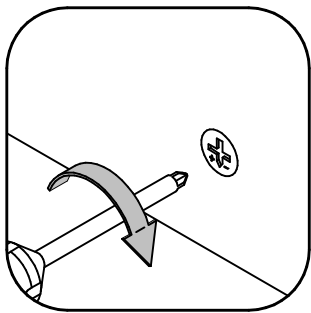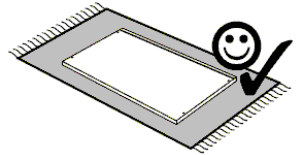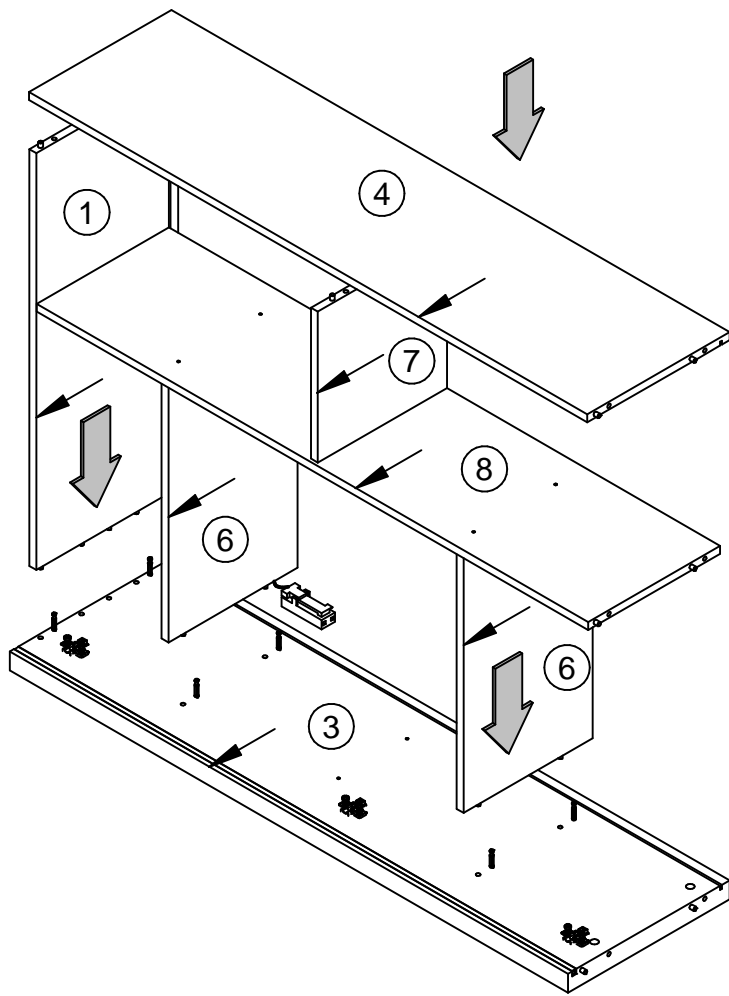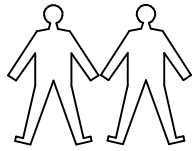


7.






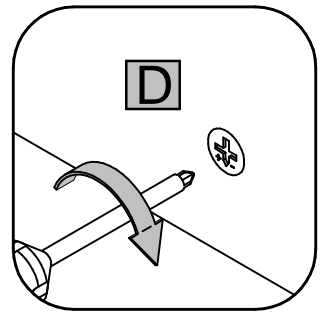
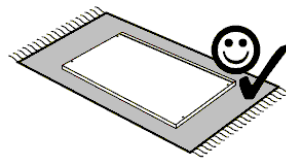
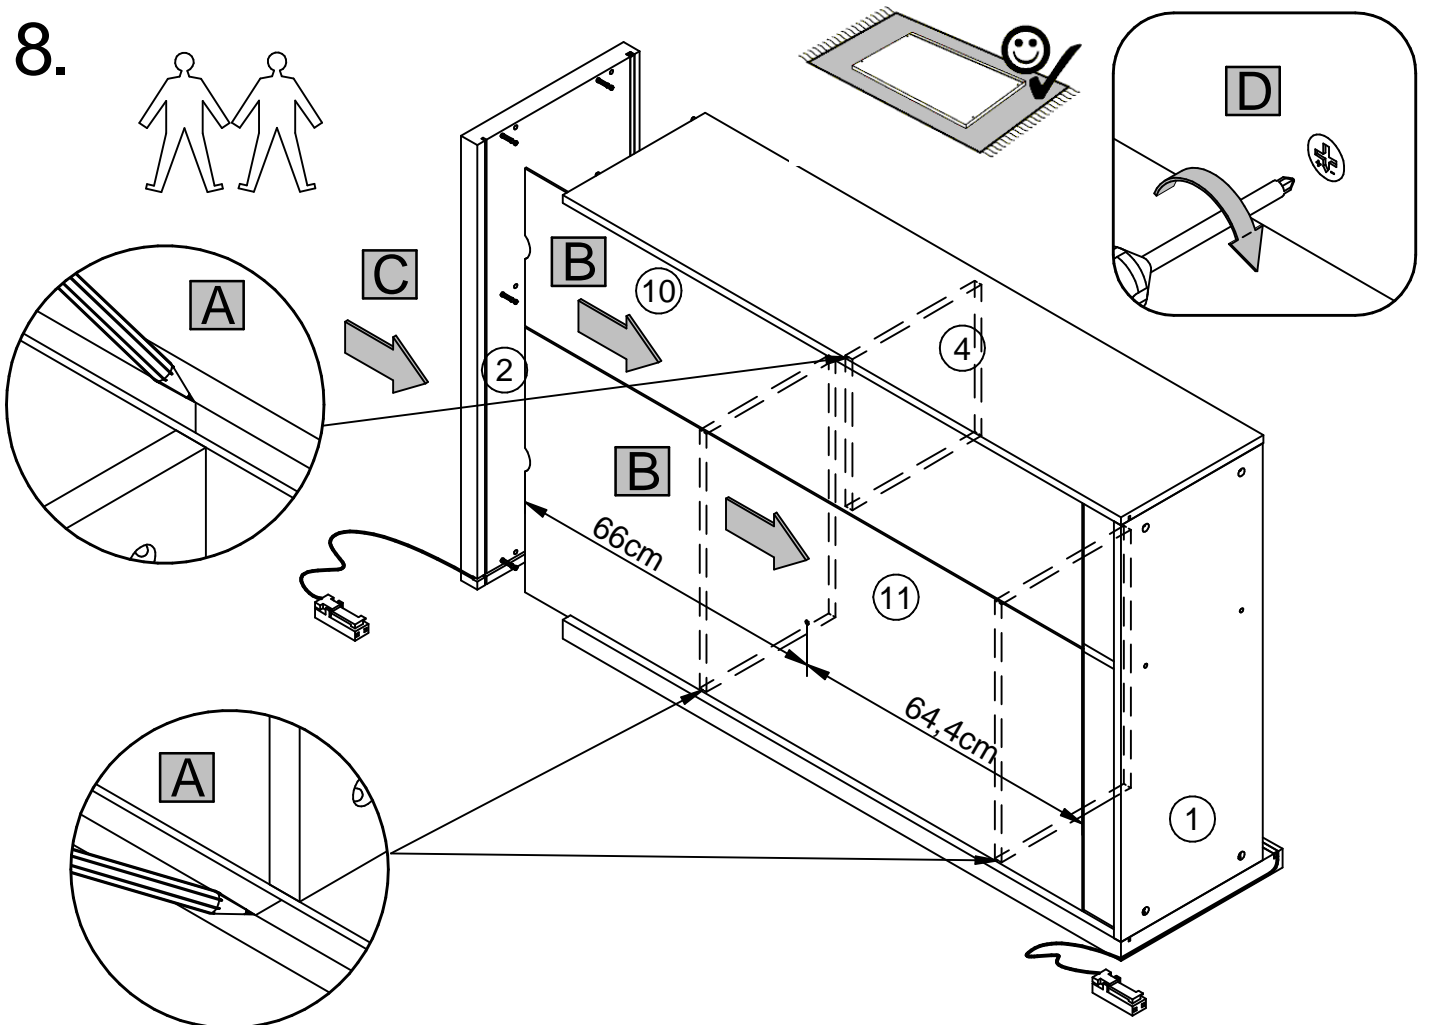
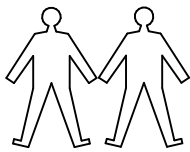


8.








9.

BT1142  x4	MM1048  Ø2,7x20 x18	BT50101  x8
BT50497  60x40x20 x5		
MM1102  Ø4x25 x10		

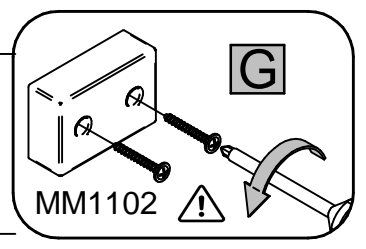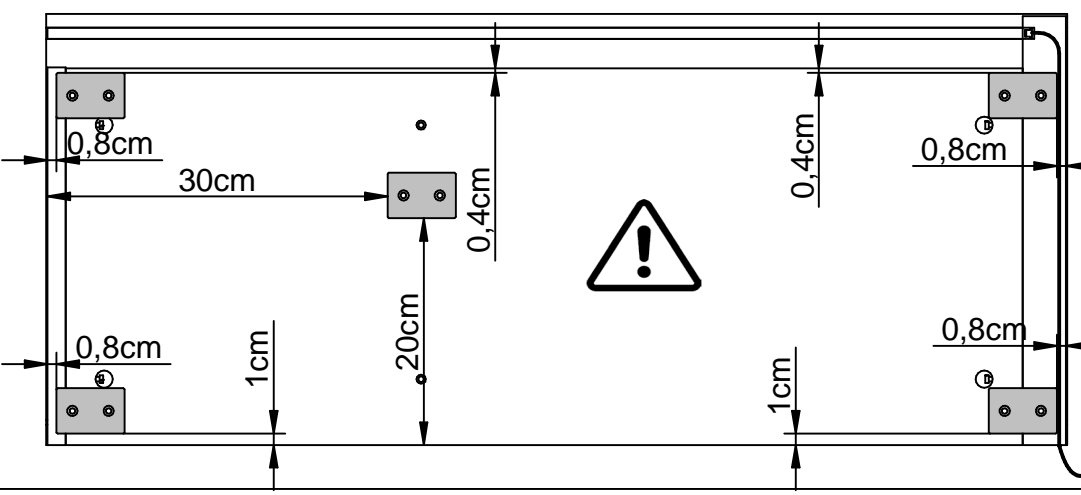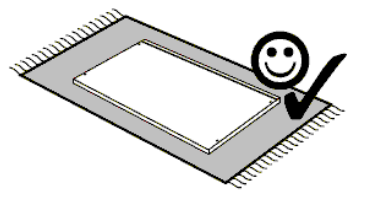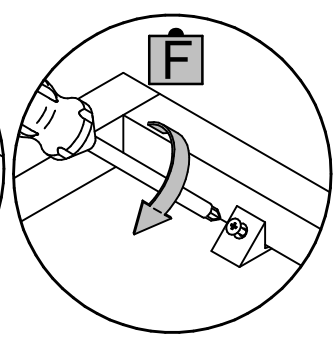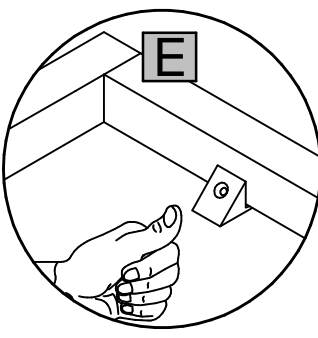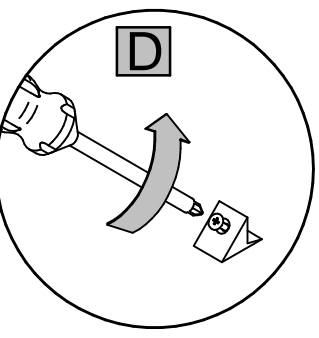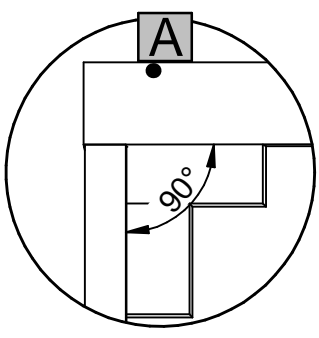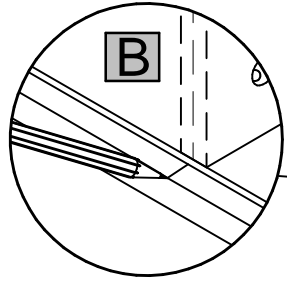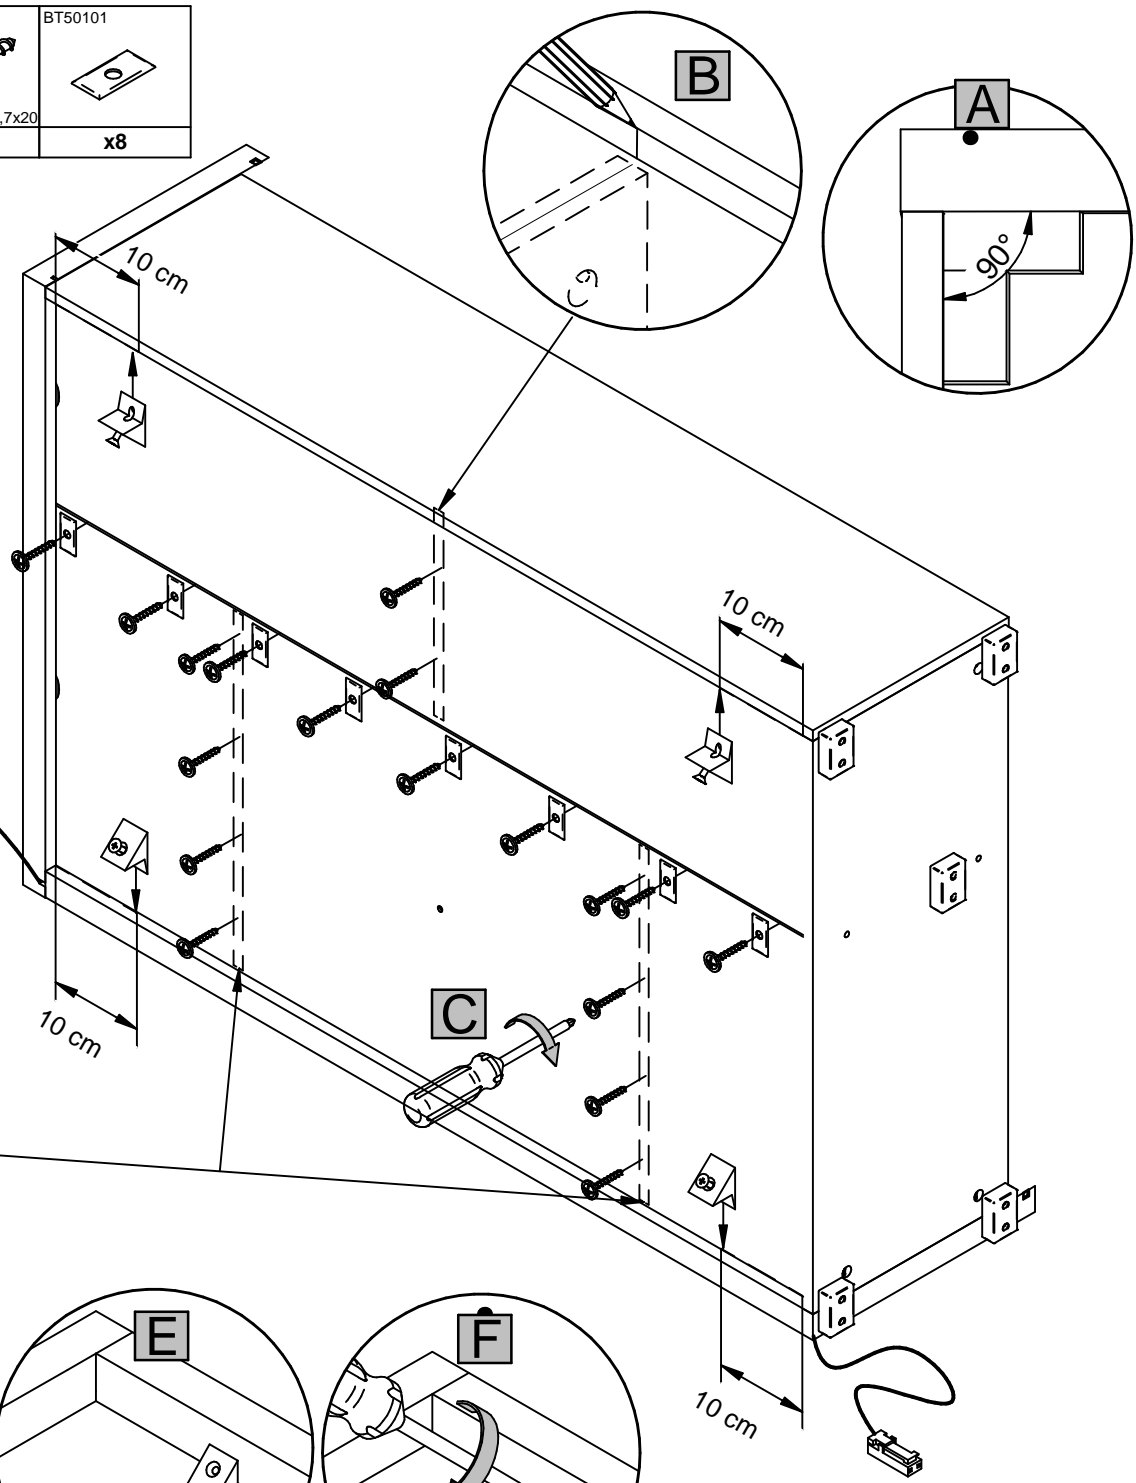






10.

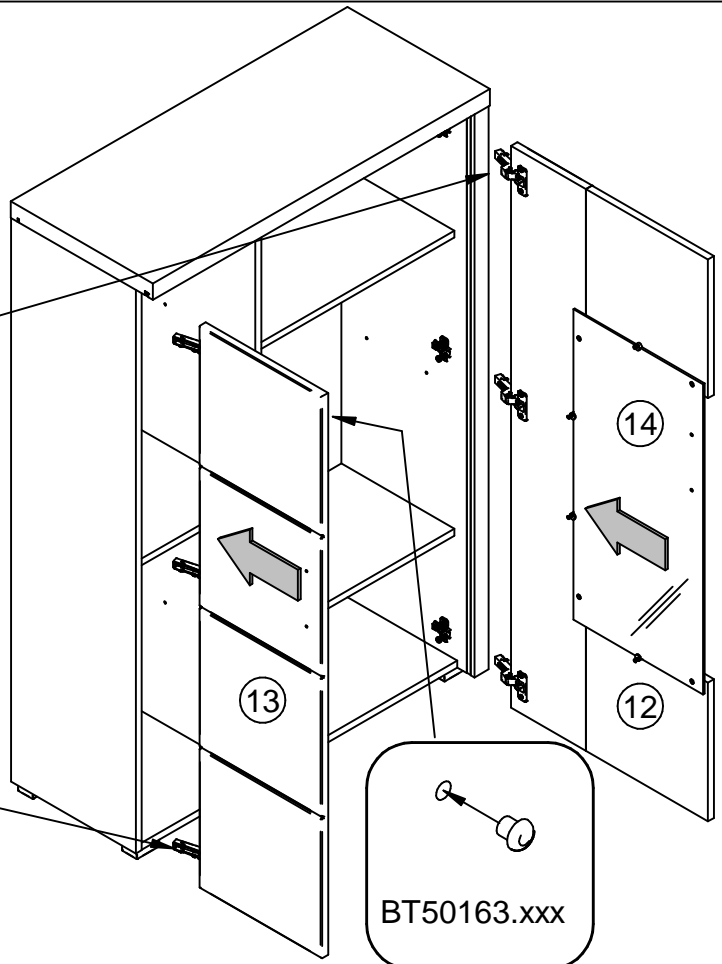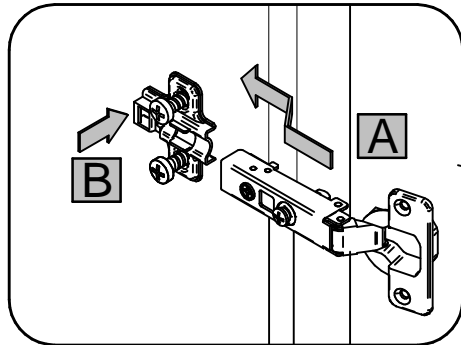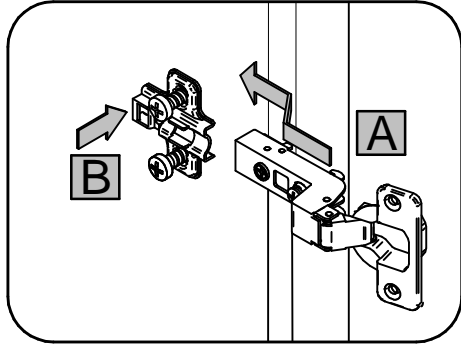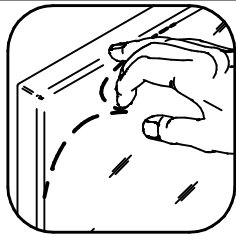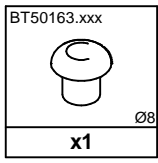


BT50163.xxx

11.




BT51332 BA=128 x2	MM1022 M4x24 x2	MM1040 5x9x1 x2	MM1220 M4x10 x2	BT1005.xx x8
BT50585 x4				

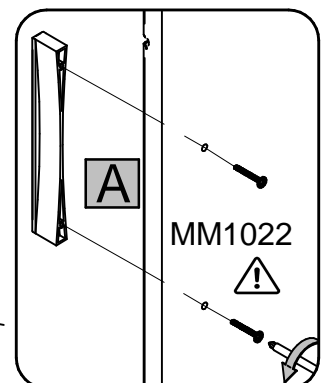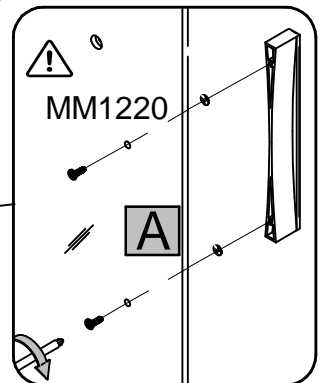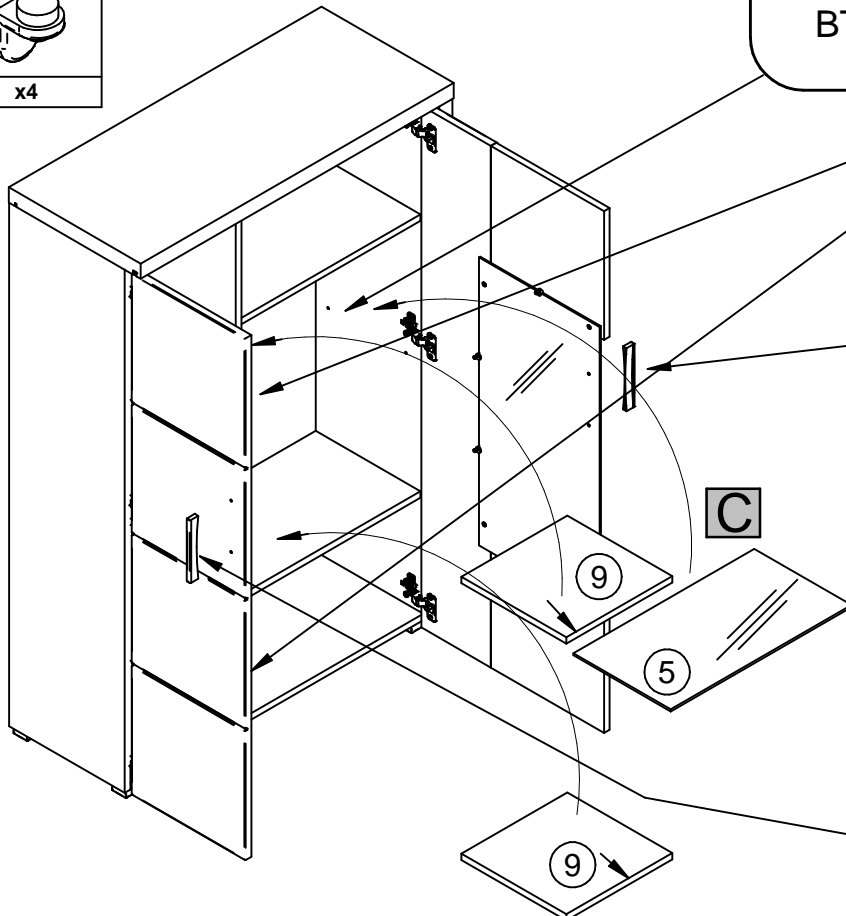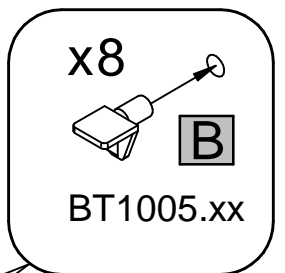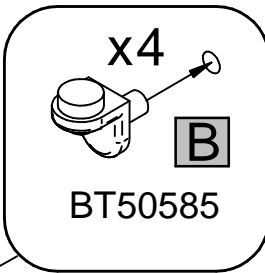

12.

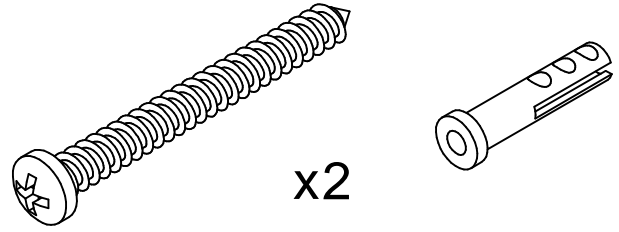

13.

BT1121 	MM1046 	ZU50326B_Trafo 
x2	x4 Ø3,5x13	x1

