
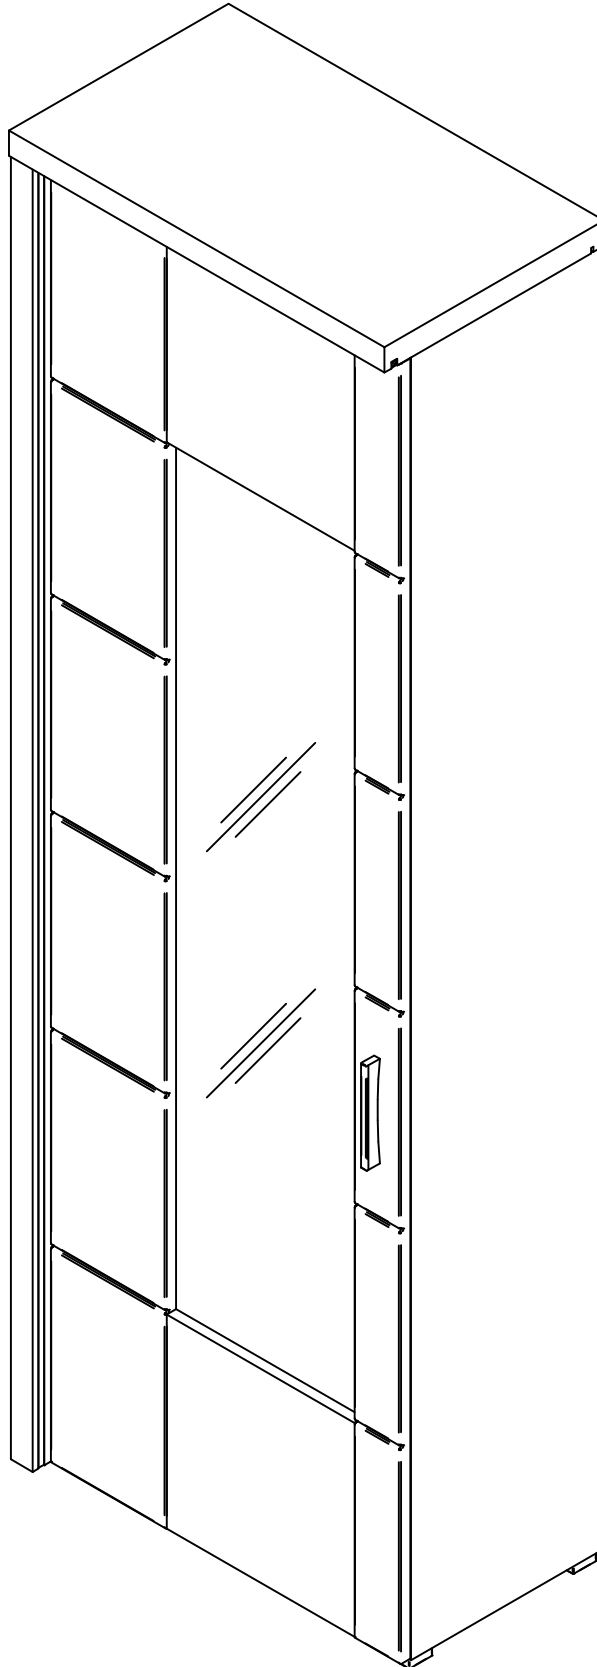
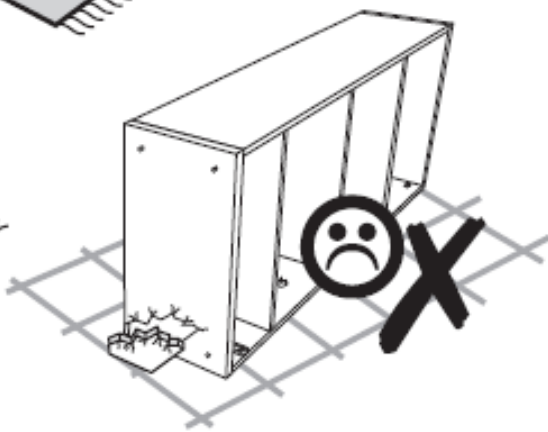
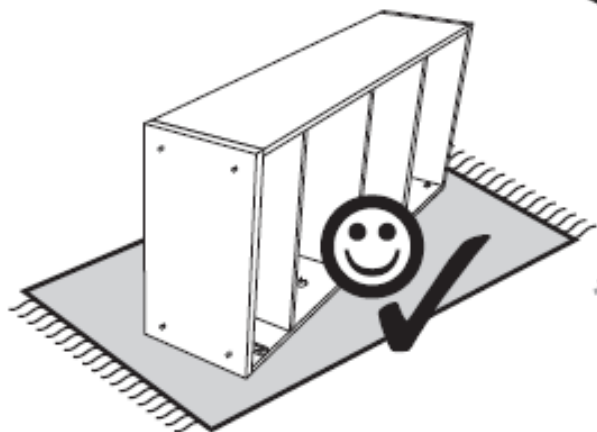
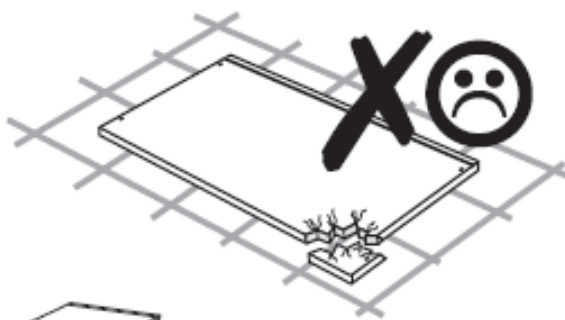
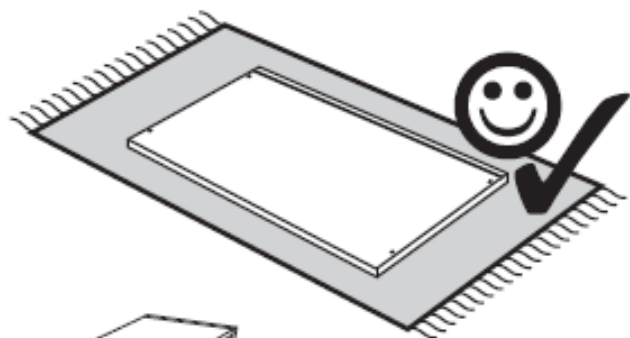
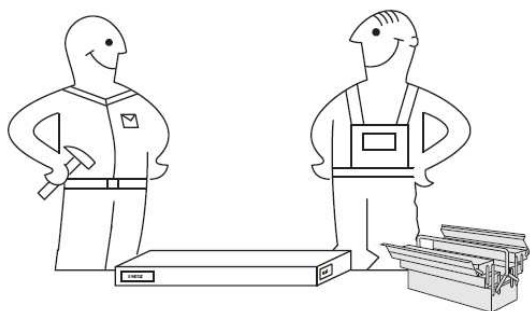
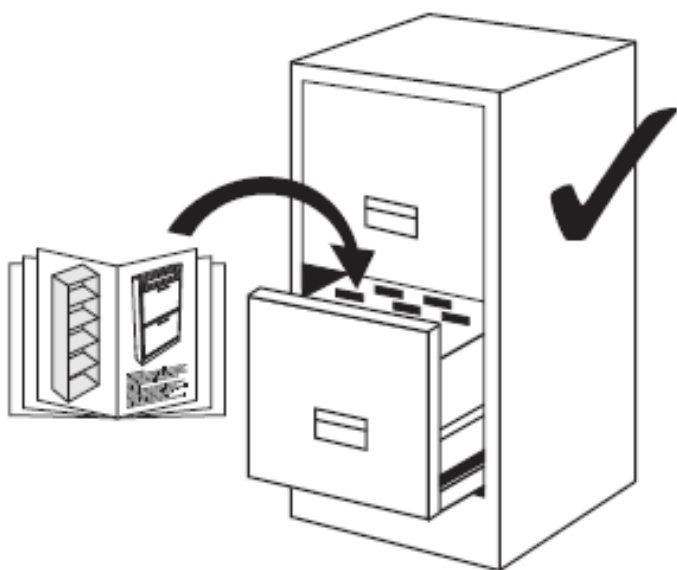




Eleganza

3044HW Wotaneiche
(Rustica Oak)

12





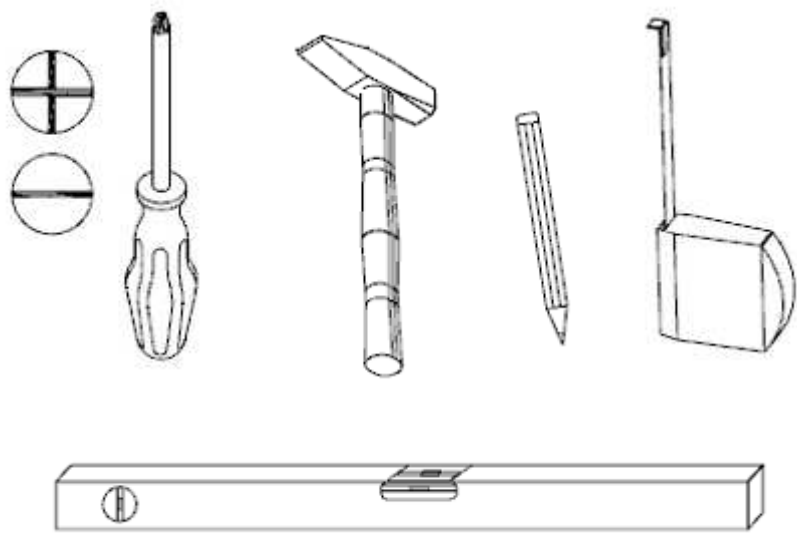

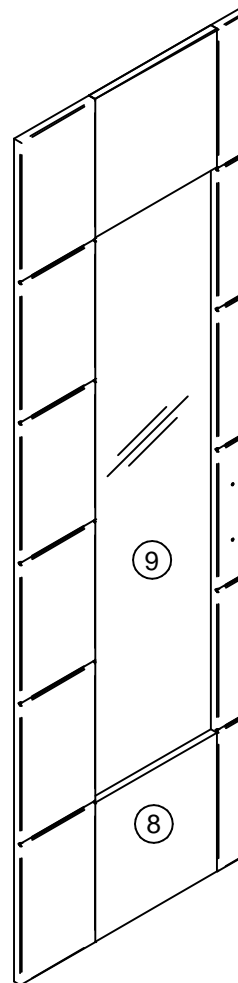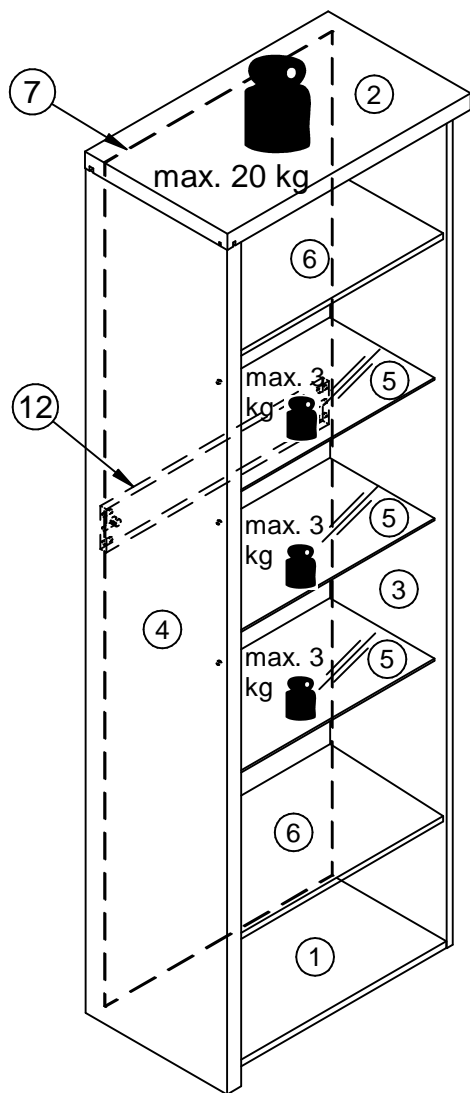
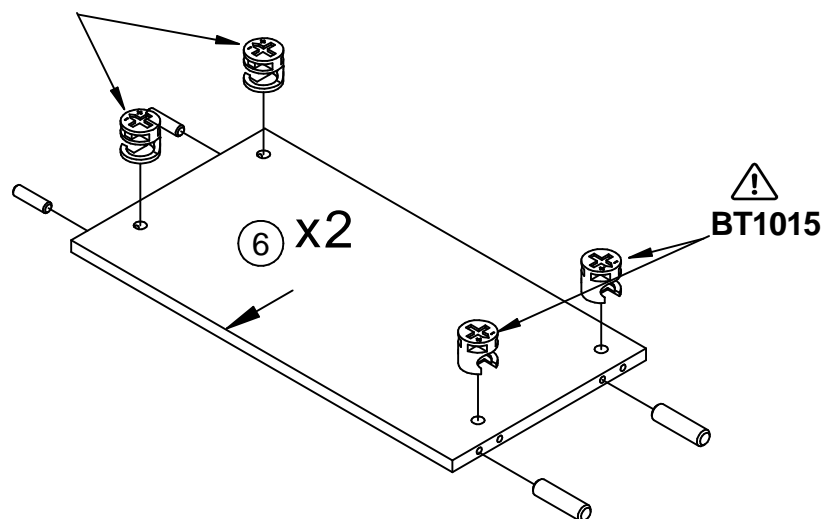
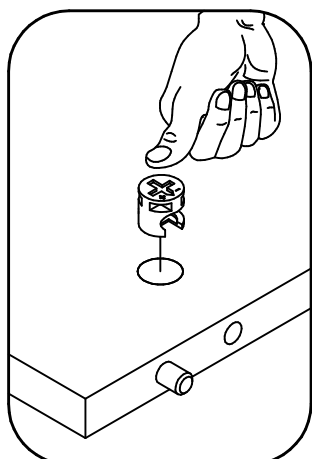
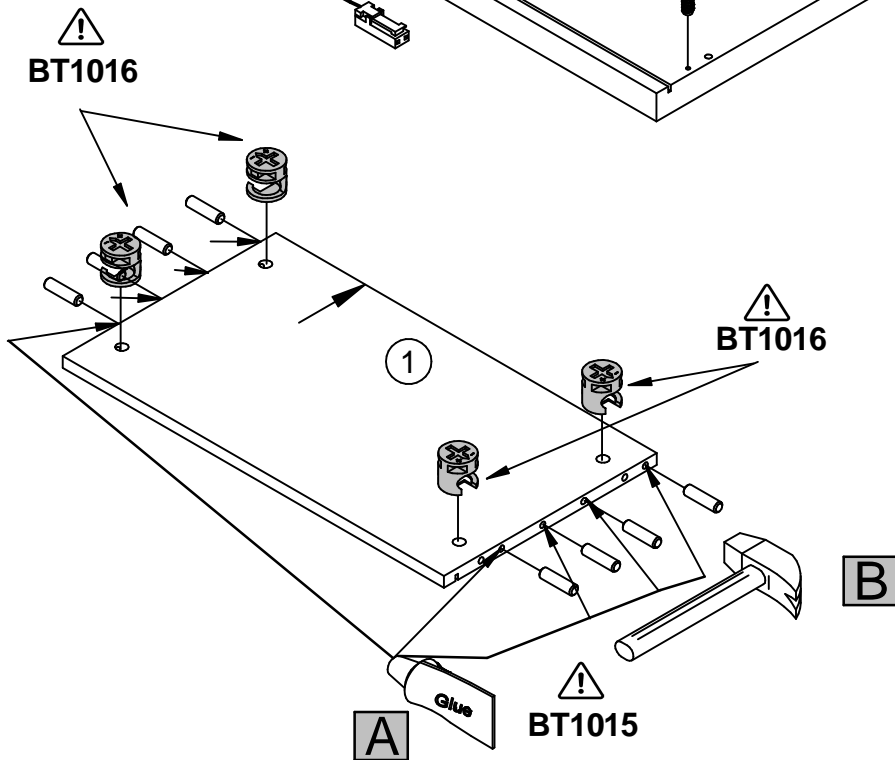
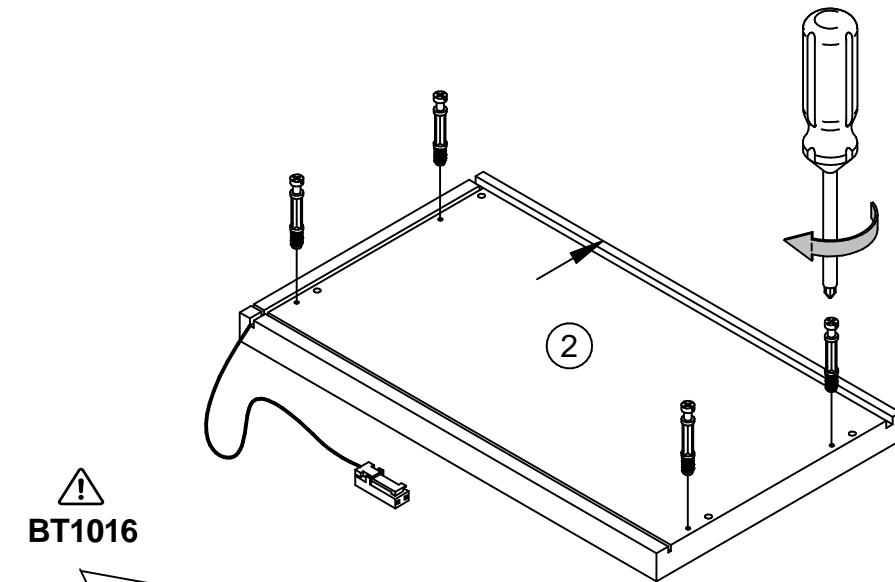
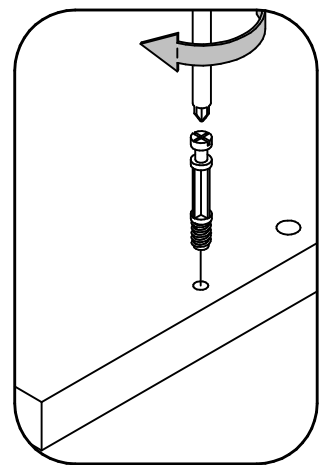
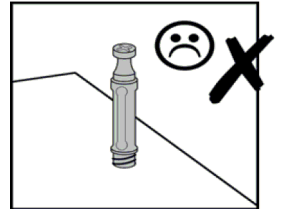
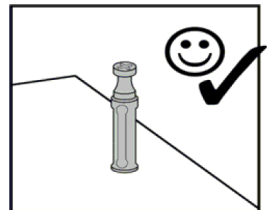
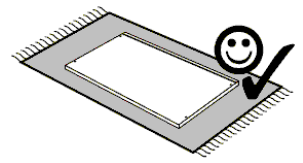








 BT1015 x14	 BT1016 x4	 MM1016 11mm x18	 MM1121 Ø8x30 x24	 BT1142 x4	 MM1048 Ø2.7x20 x8	 BT50585 x12	 BT50497 60x40x20 x4	 MM1102 Ø4x25 x8
 MM1134 Ø4x15 x6	 BT51367 Ø9x6 x6	 BT1089 x6	 MM1046 Ø3.5x13 x10	 BT51346 K=16 x3	 BT51347 K=16 x1	 BT51349 H=2 x4	 BT51332 BA=128 x1	 MM1022 M4x24 x2
 MM1070 Ø7x1.5 x2	 BT1121 x1	 ZU50923B_Trafo x1	 MM1018 x1	 BT50163.xxx Ø8 x1				






1.

BT1016  ! x4	MM1121  Ø8x30 x16	MM1016  11mm x4	MM1018  x1	BT1015  ! x8
---	---	---	---	---





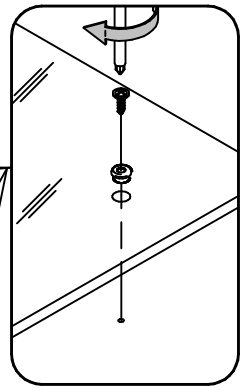
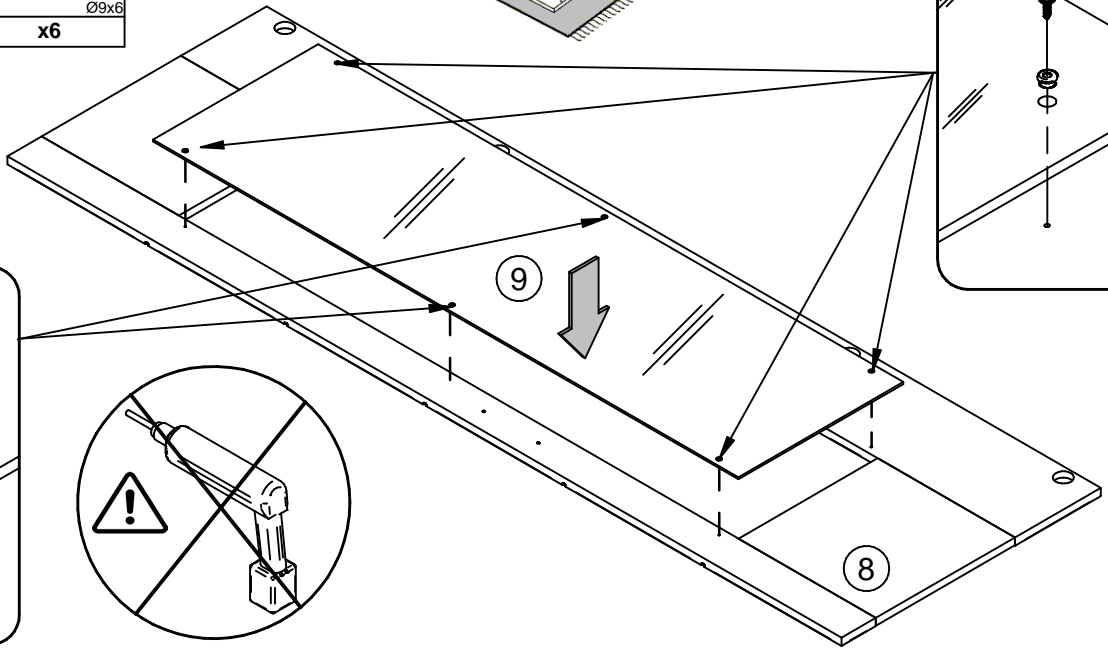
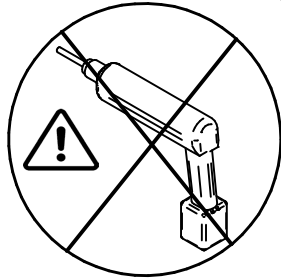
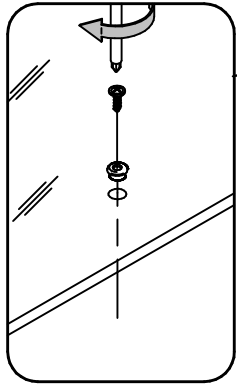
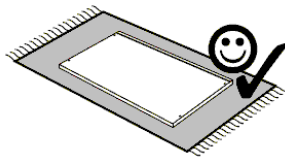
2.

BT1015  ! x6	MM1016  11mm x14	MM1121  Ø8x30 x8	BT51349  H=2 x4
--	---	---	--

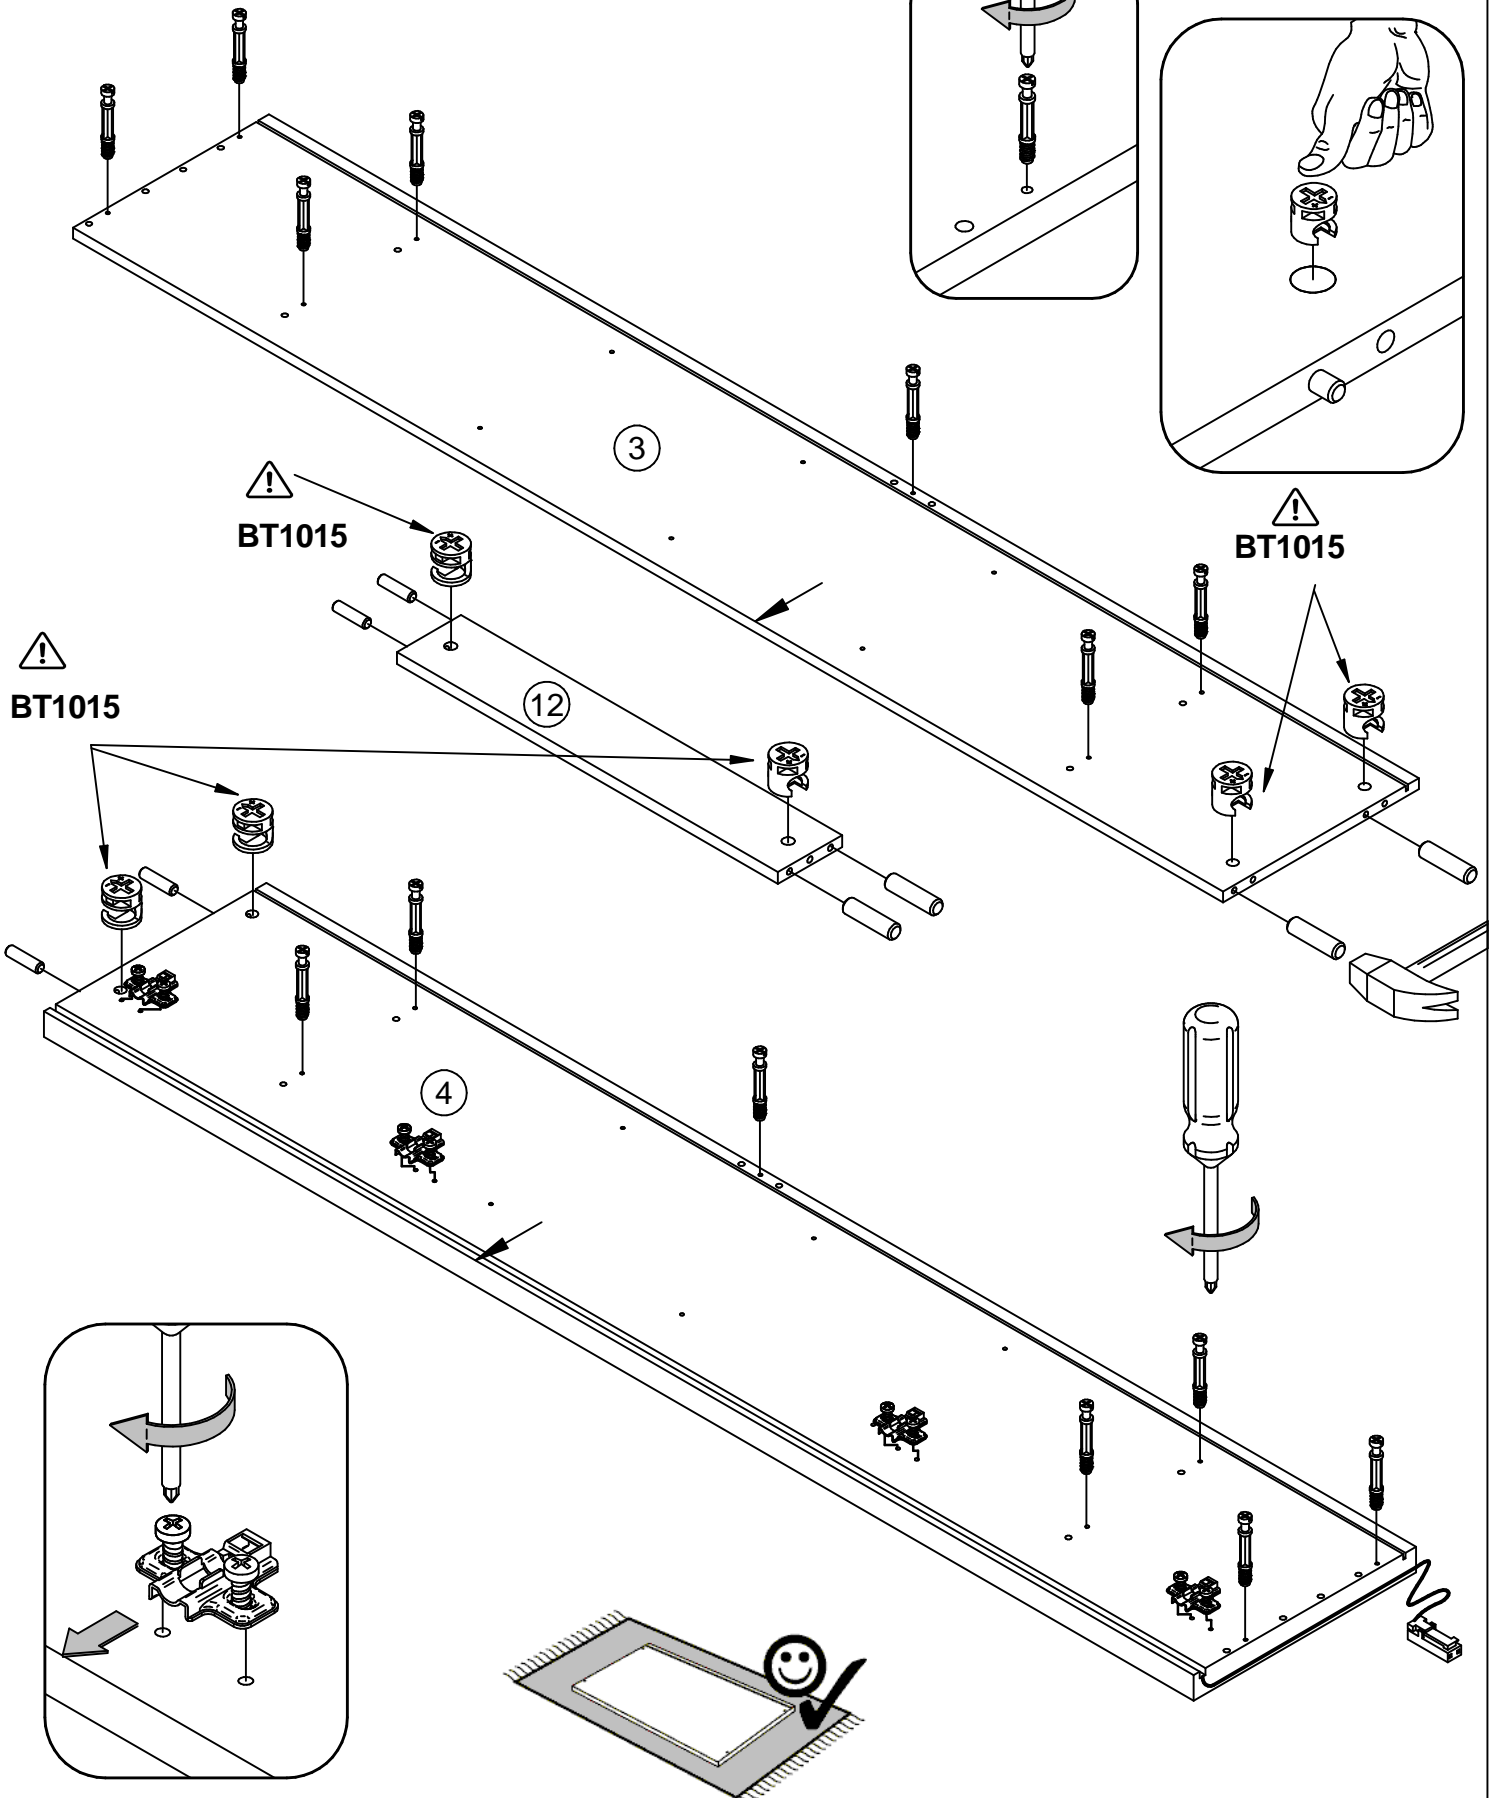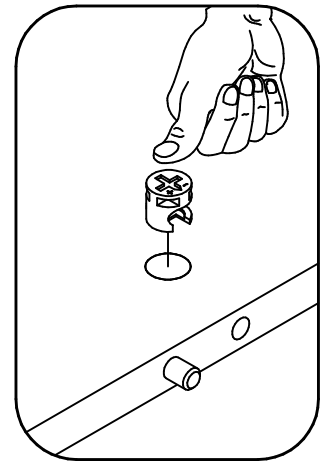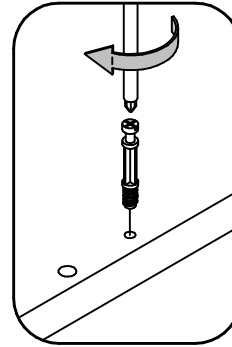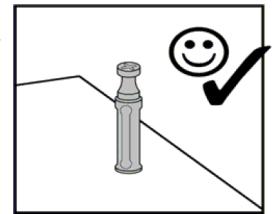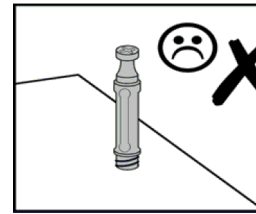






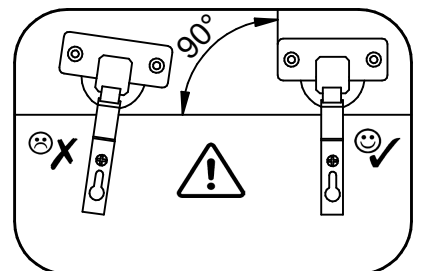
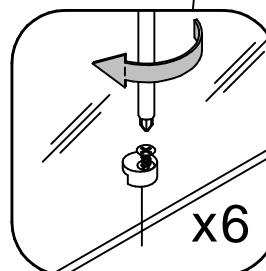
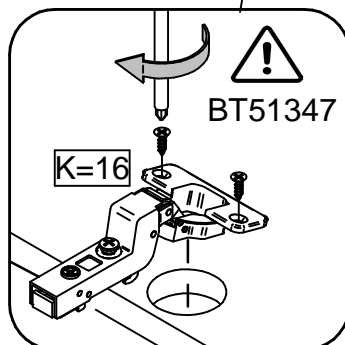
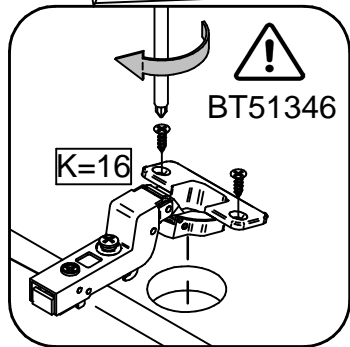
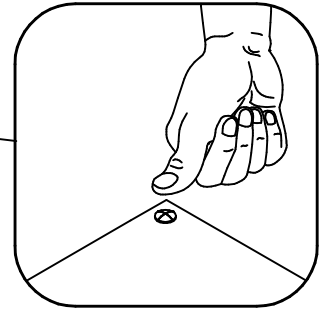
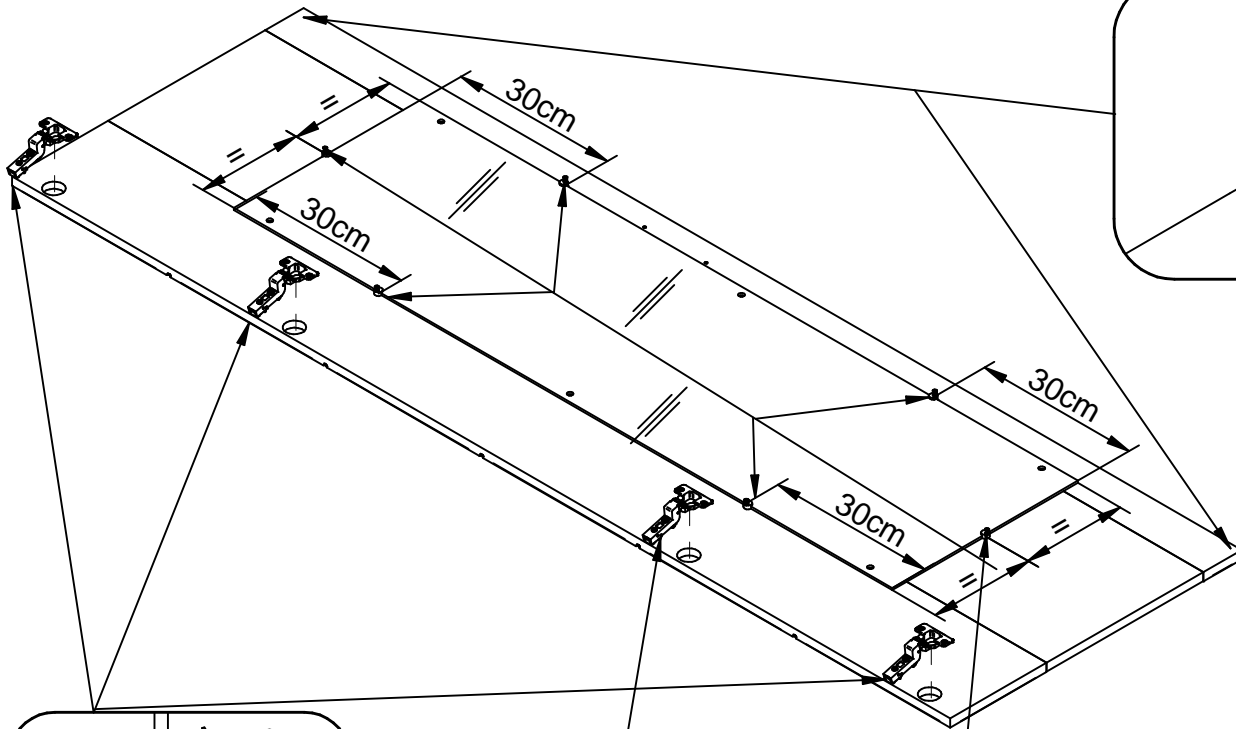
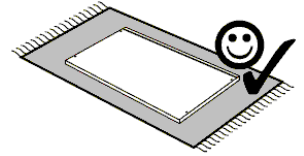
3.

MM1134	BT51367
	
Ø4x15	Ø9x6
x6	x6






4.





MM1046	BT51346	BT51347	MM1070	BT1089
				
Ø3,5x13	K=16	K=16	Ø7x1,5	
x8	x3	x1	x2	x6







5.








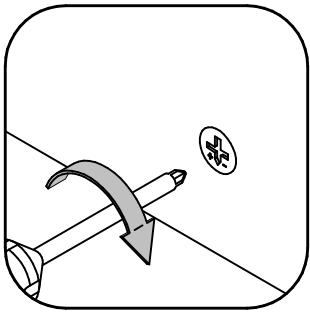
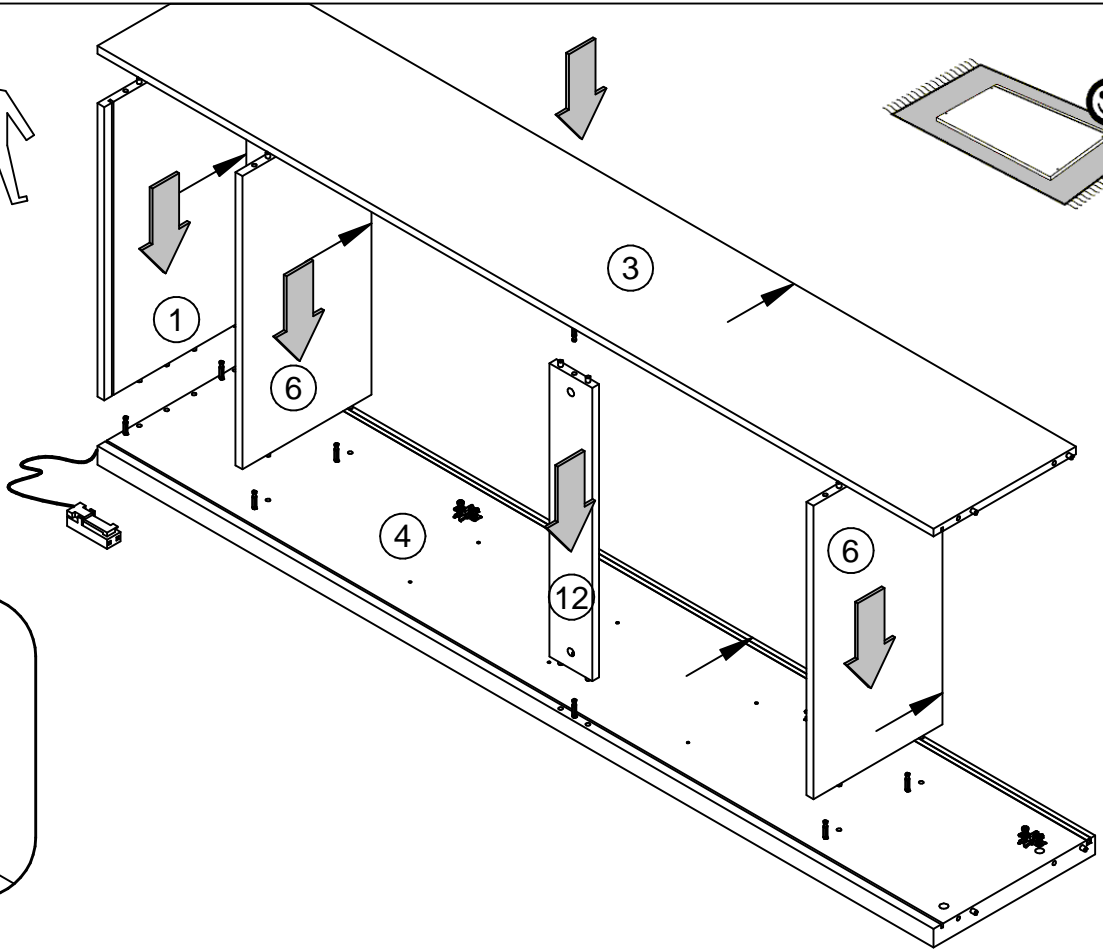
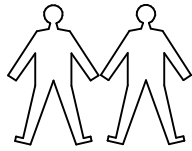



6.


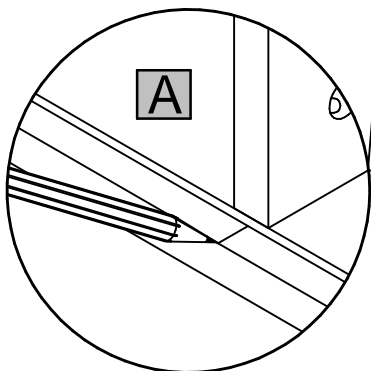
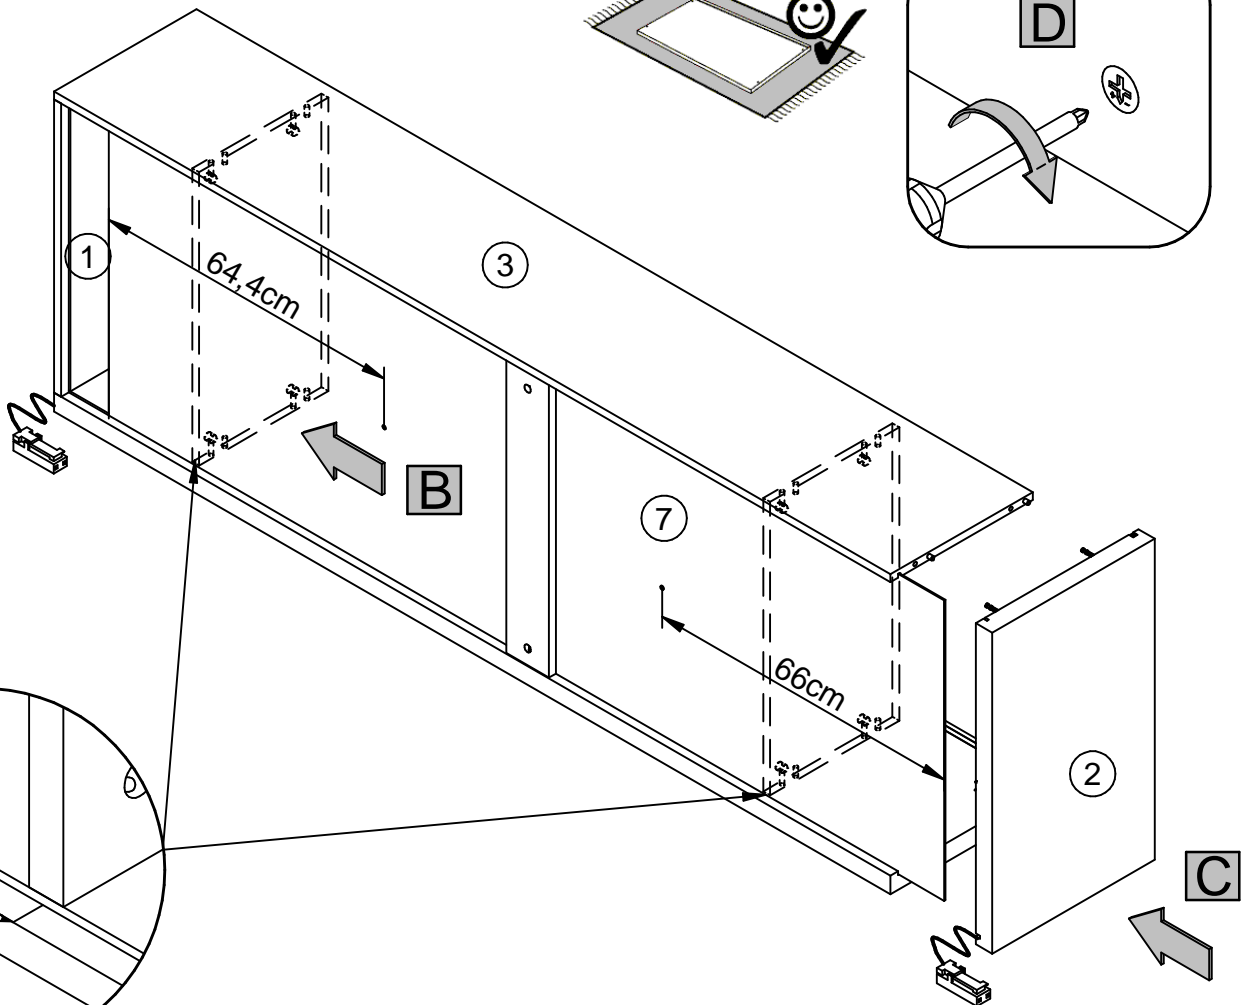
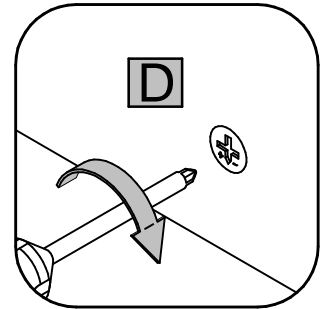
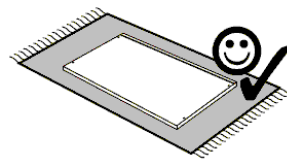


7.




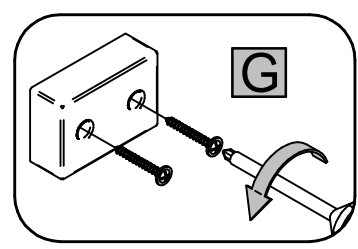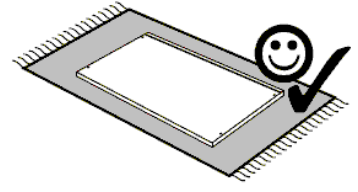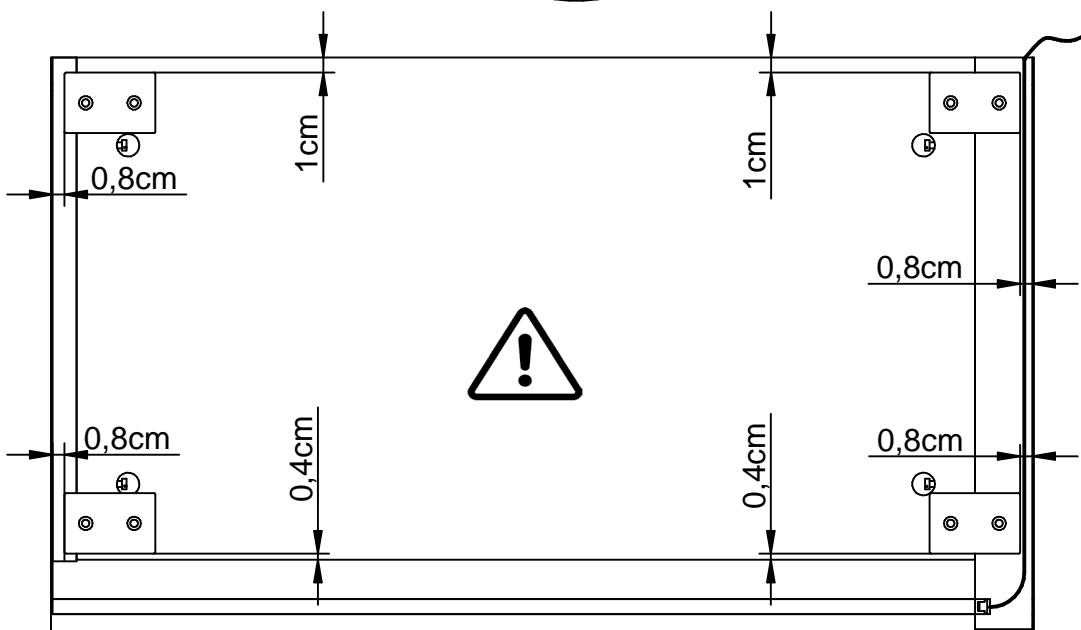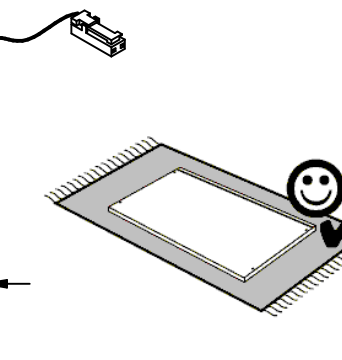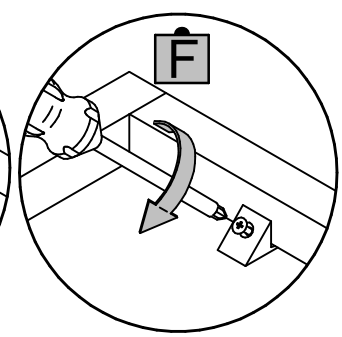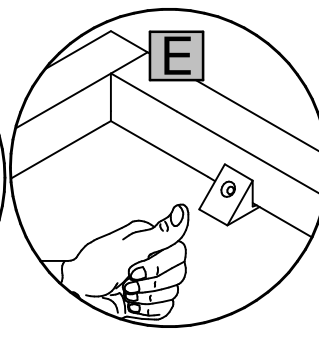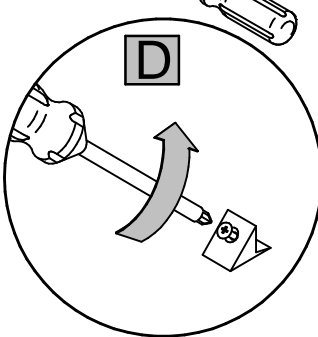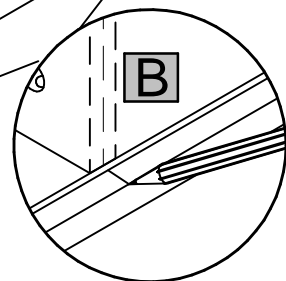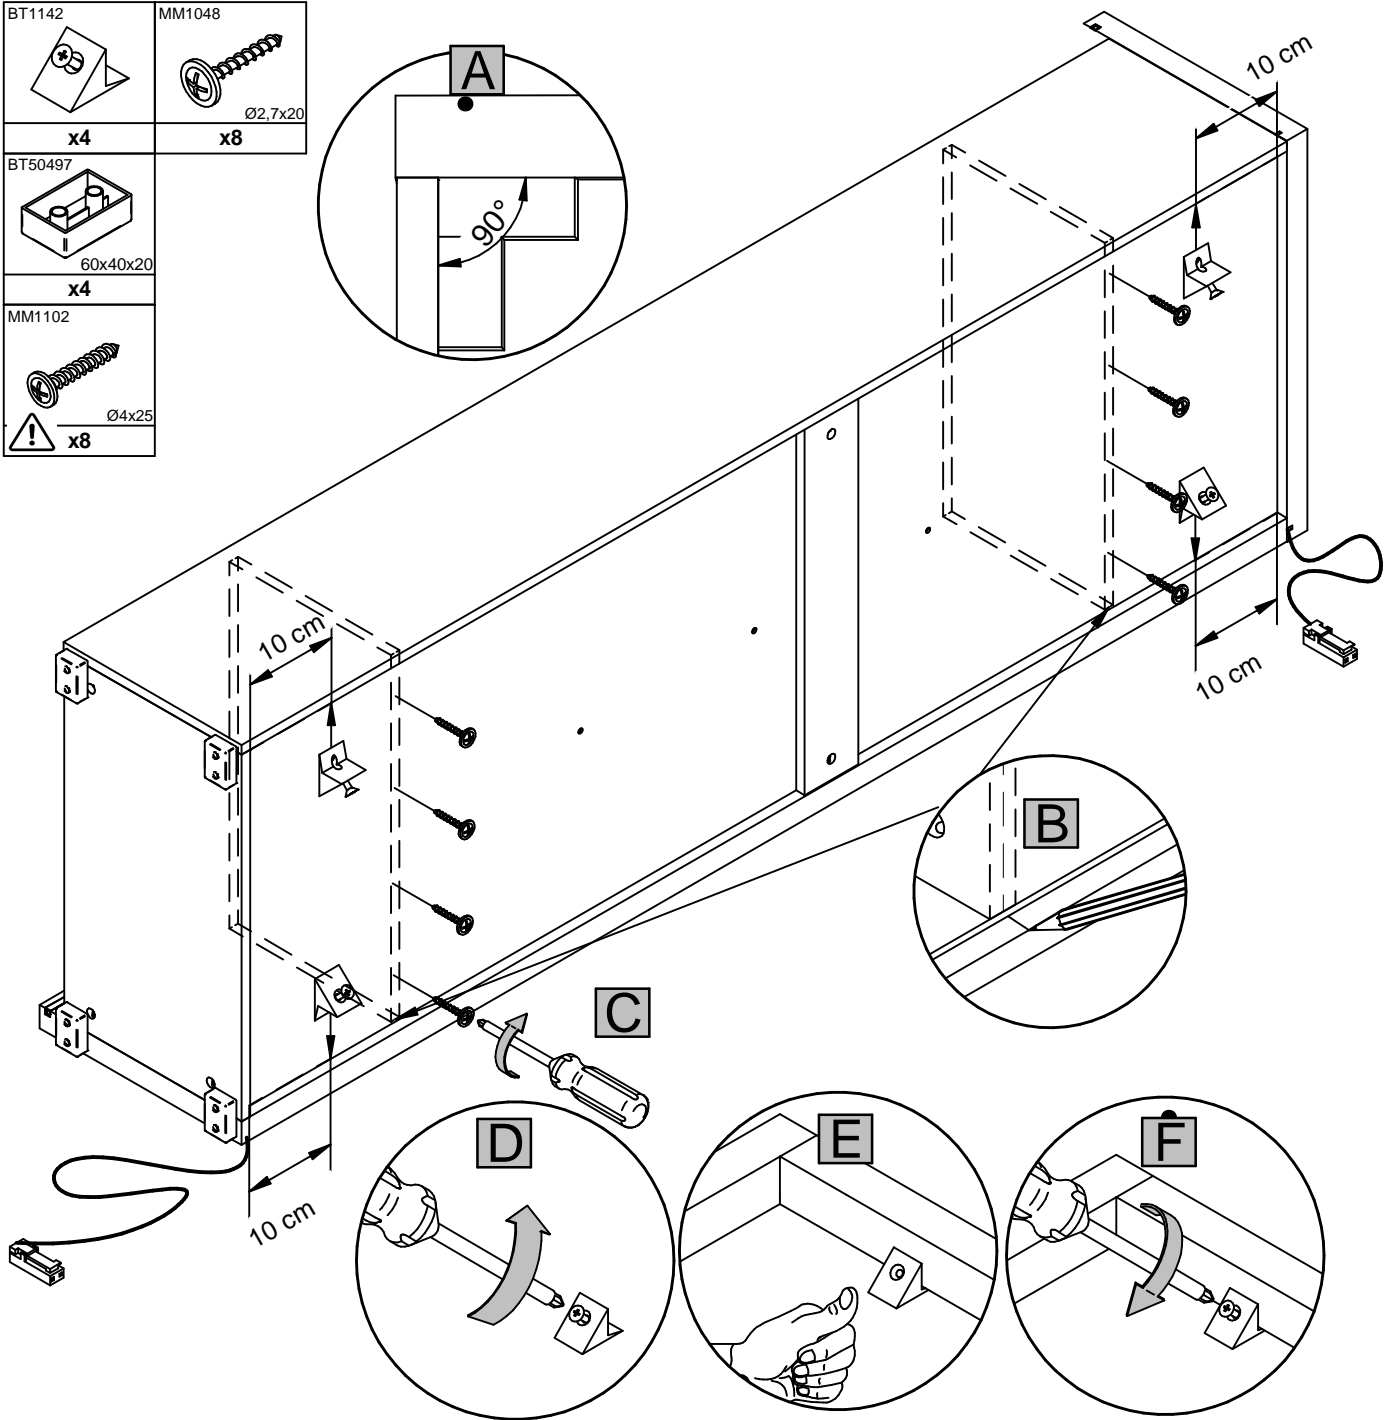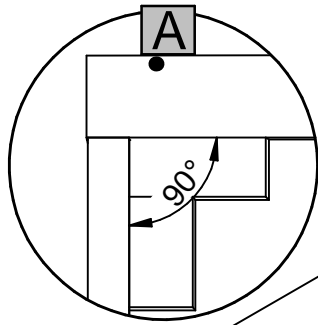BT1142  x4	MM1048  x8 Ø2,7x20
BT50497  60x40x20 x4	
MM1102  x8 Ø4x25	

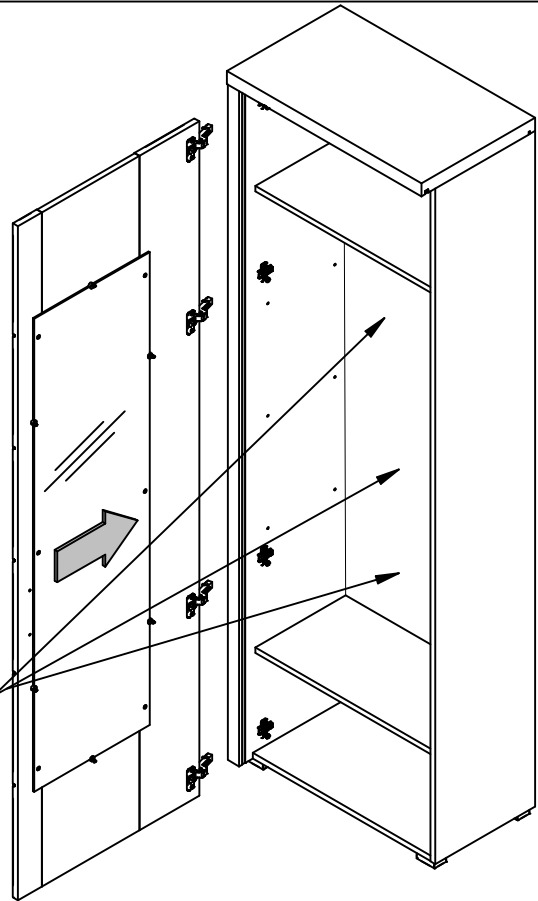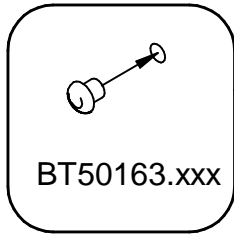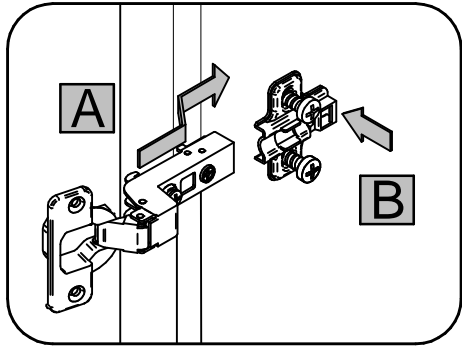
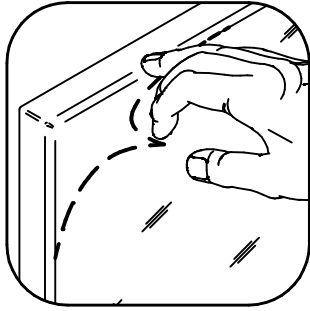
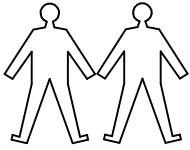


8. BT50163.xxx

 Ø8
 x3




9.

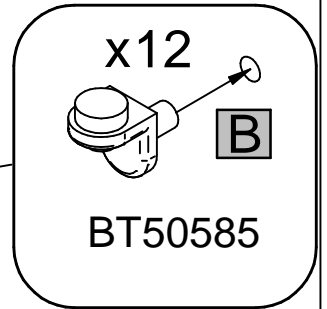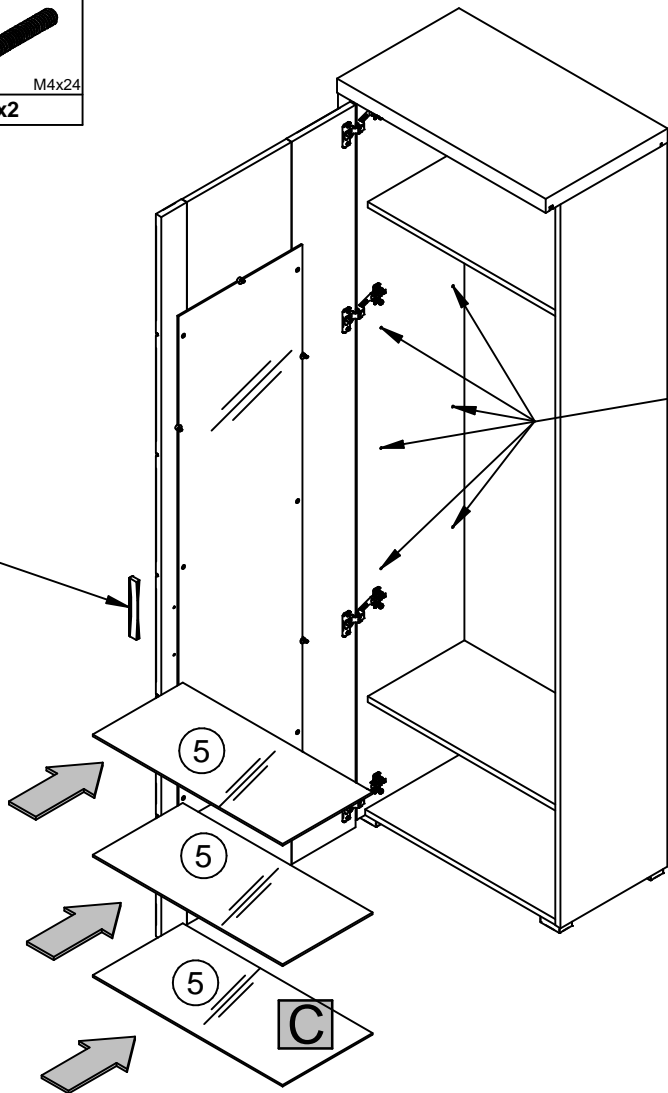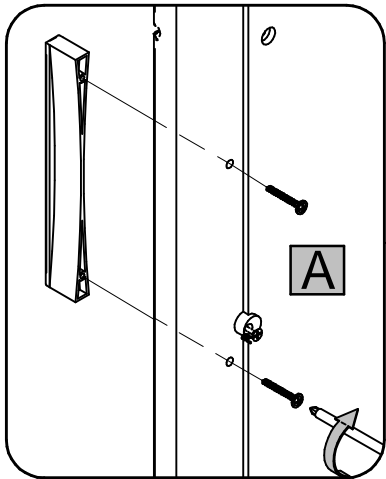


BT50585  x12	BT51332 BA=128  x1	MM1022 M4x24  x2
--	---	---



10.

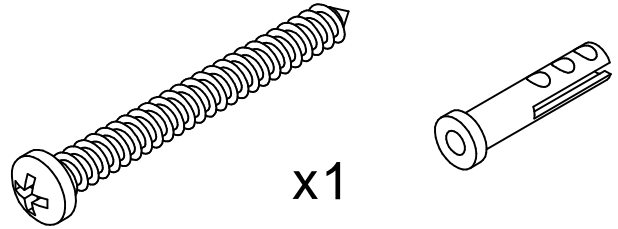

11.

BT1121 	MM1046 	ZU50323B_Trafo 
x1	x2 Ø3,5x13	x1

