

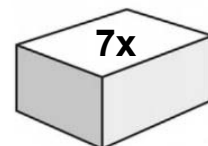
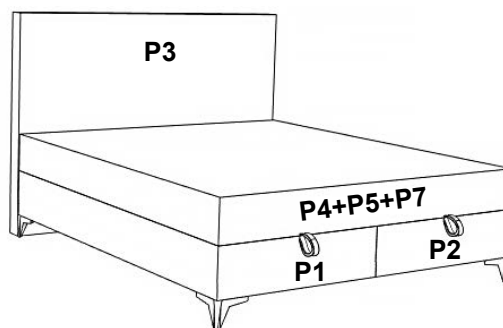







SANTI 160/180




	NO H120		NK H120		WZ 3,5x35		SK M8		M8x80		NS M8		PP M8	P6
4x		2x		16x		2x		1x		1x		4x		


1

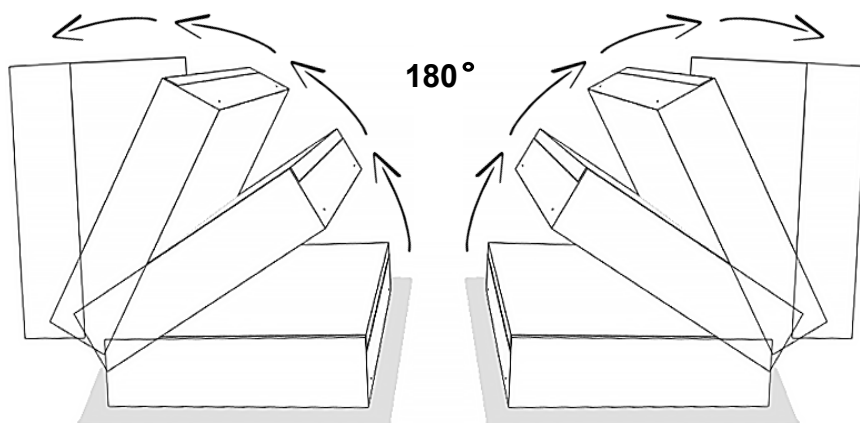


2

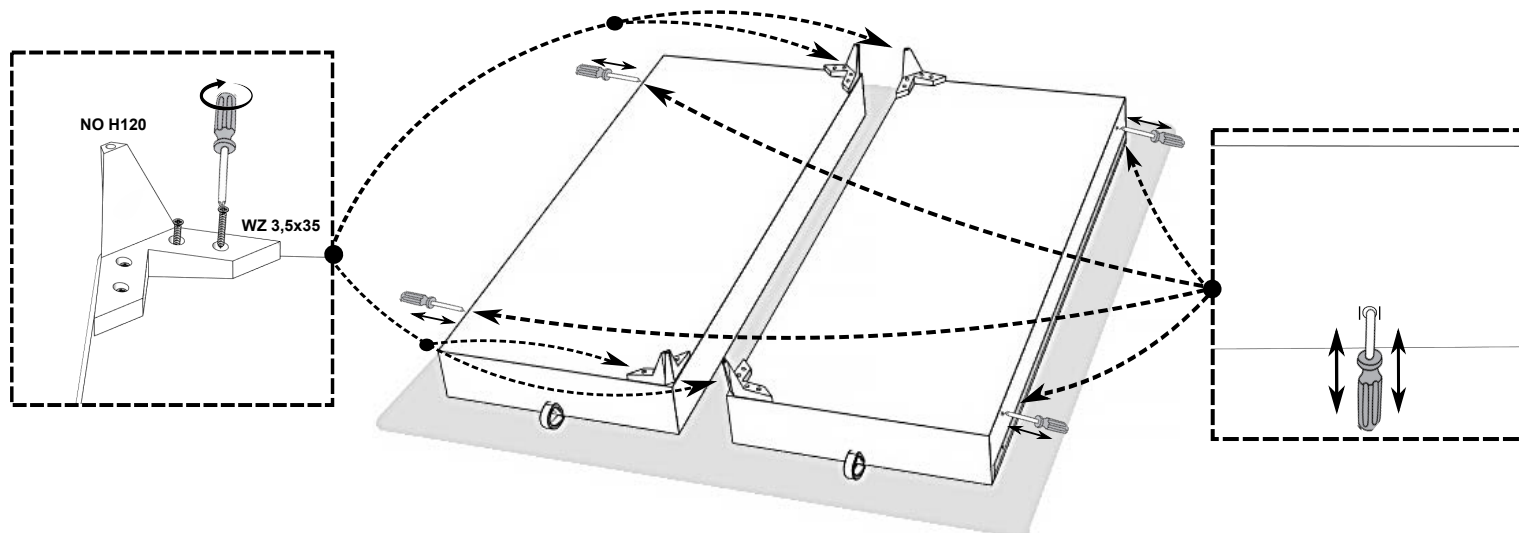


3

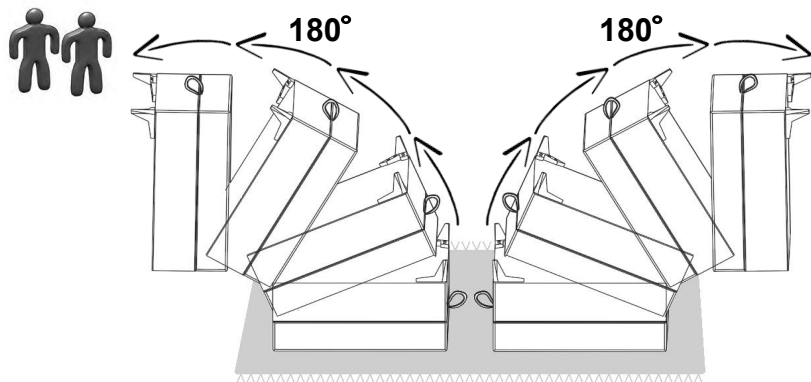


4

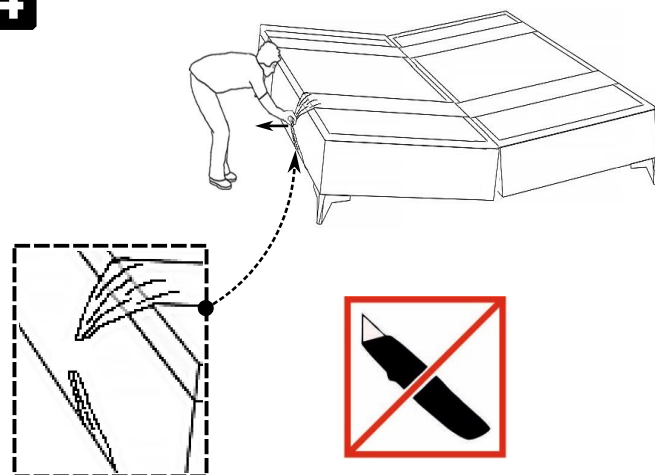


5

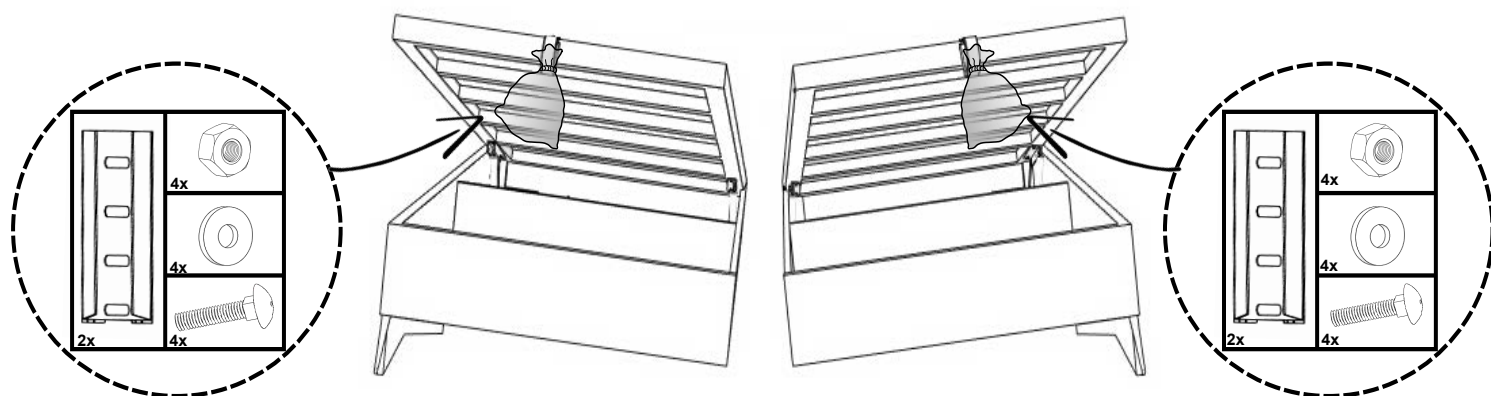




6

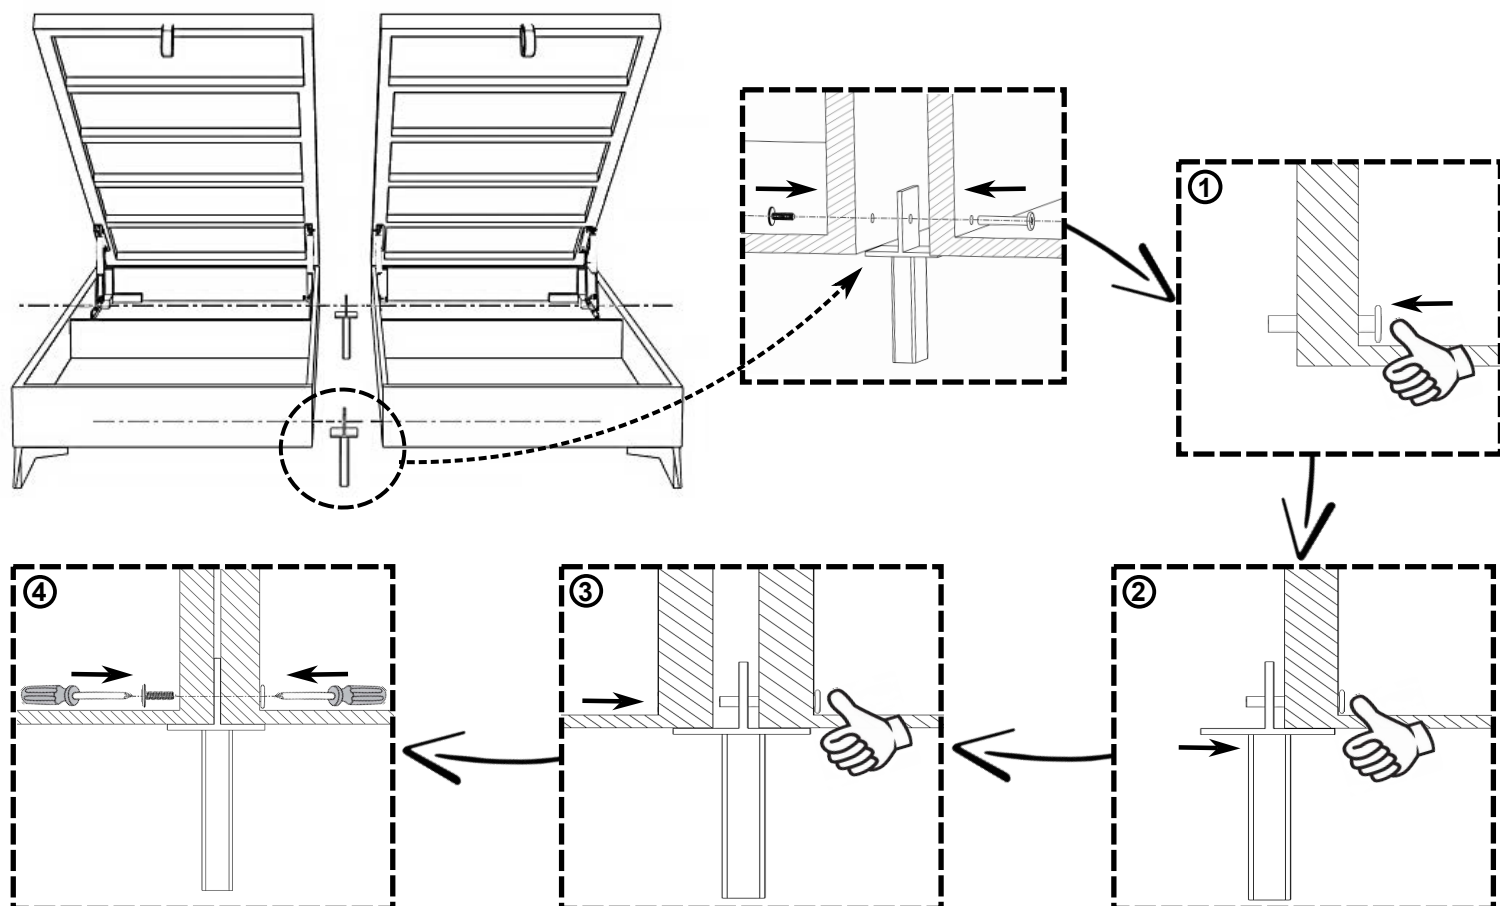






7

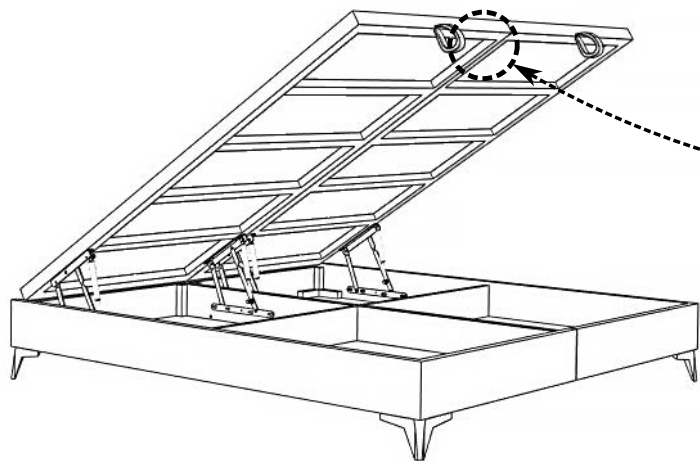



M8x80 + 3x PP M8 + PP M8 + NS M8

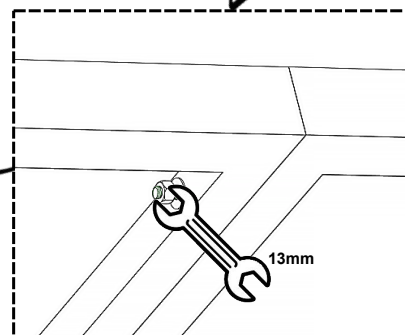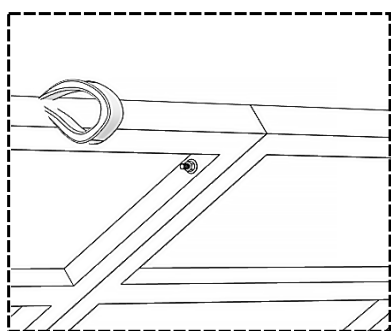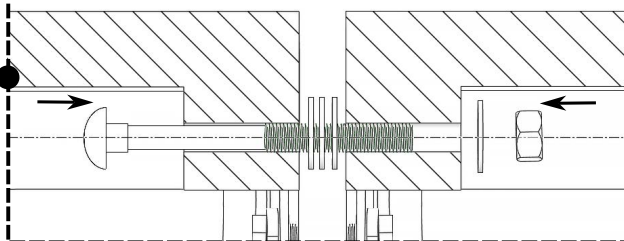




8

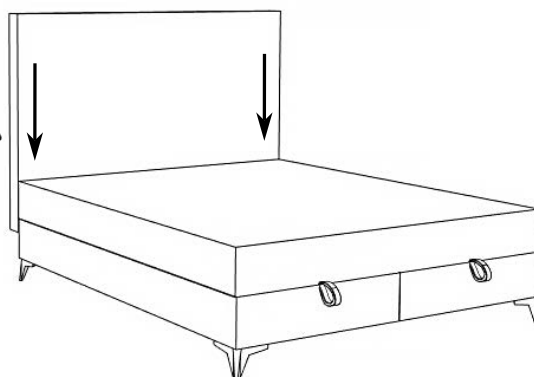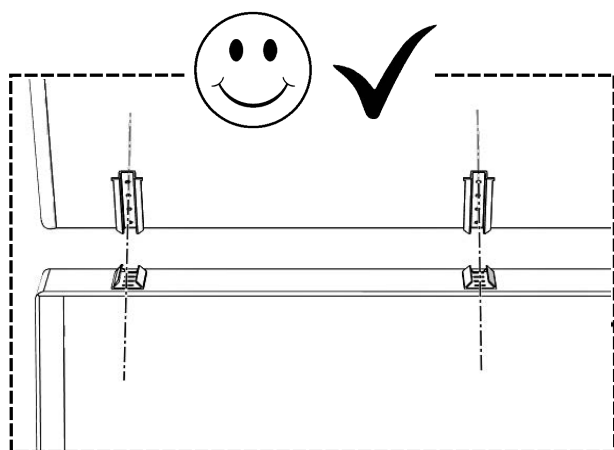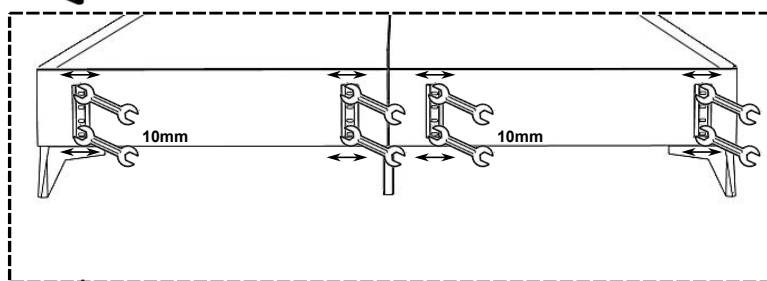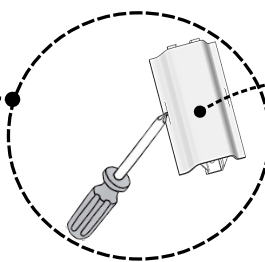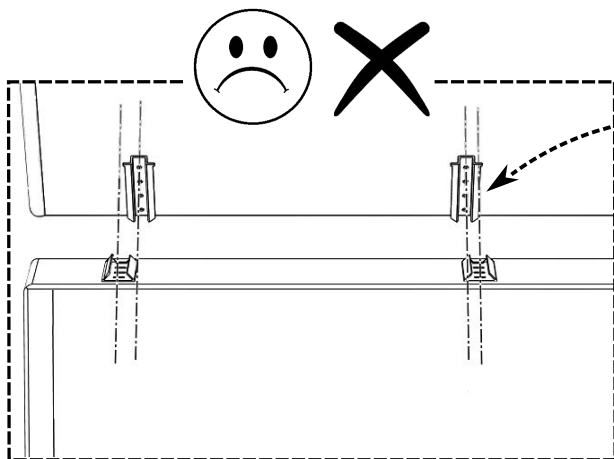





9

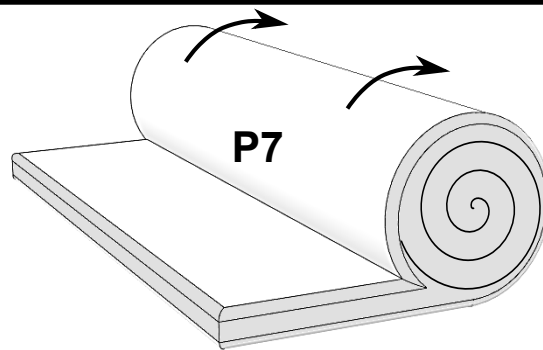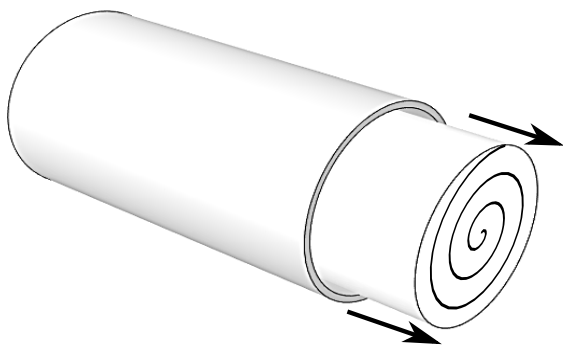

10

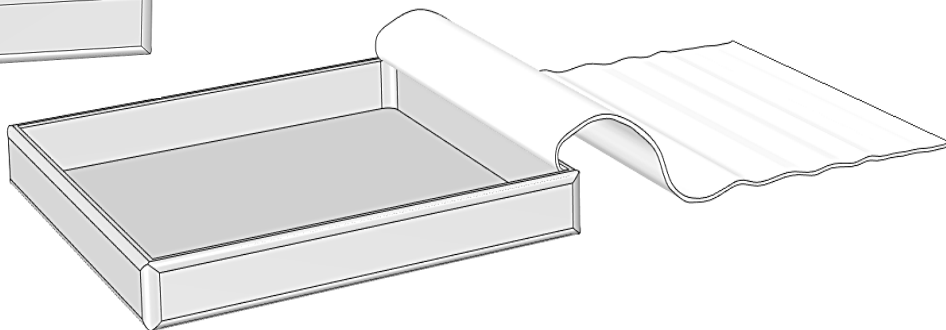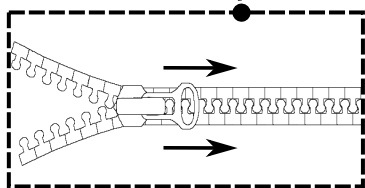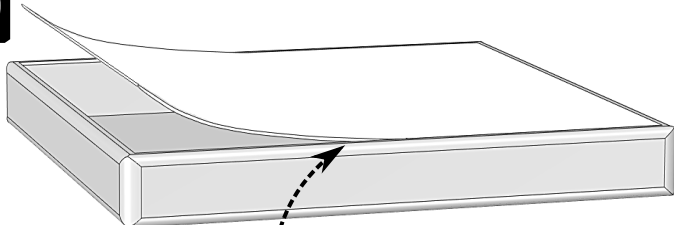

11

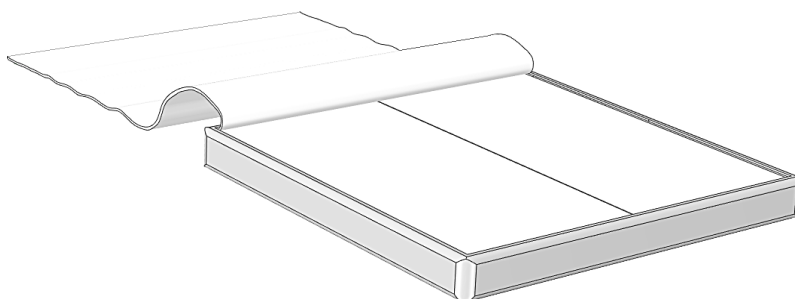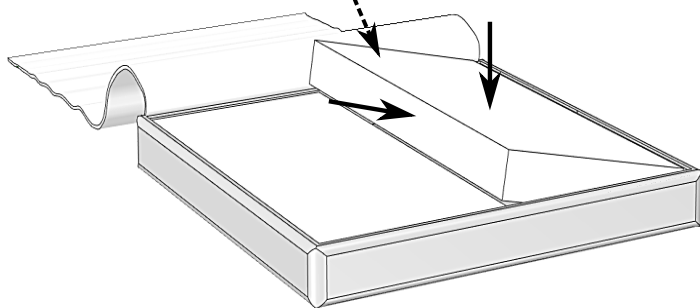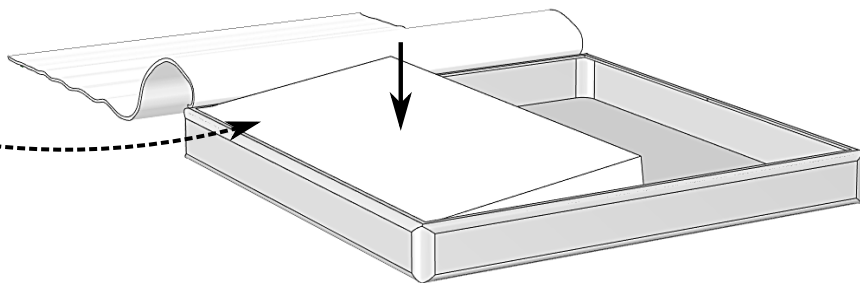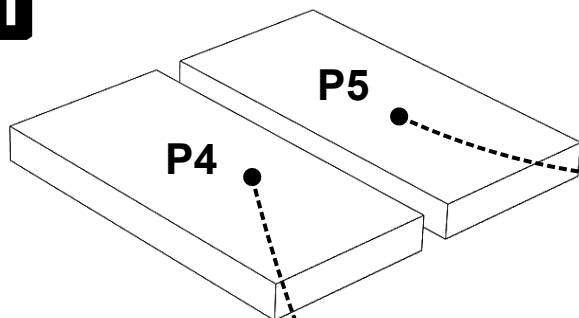

12

