




Assembling instruction

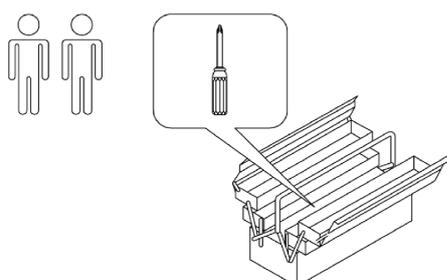


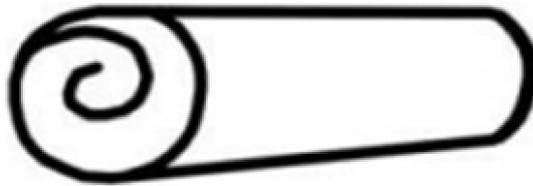

195 cm

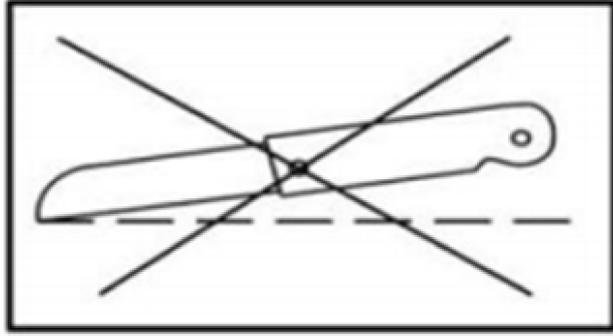

72h

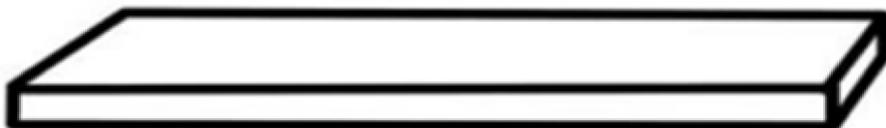



1







2



3



4

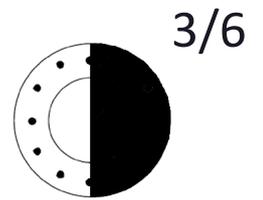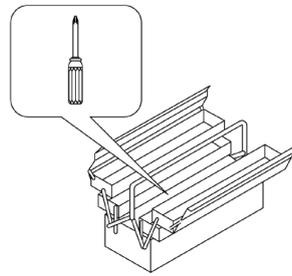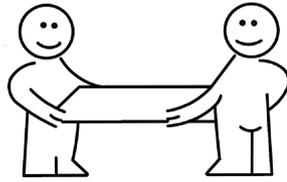

3/6



30 min

<p>Ax4 (C1)</p>	<p>Bx2 (C1)</p>	<p>Cx6 (C1)</p>	<p>Dx4 (C1)</p>
<p>Ex8 (C1)</p>	<p>Fx6 (C1)</p>	<p>Gx2 (C1)</p>	<p>Hx4 (C1)</p>
<p>Ix1 (C1)</p>			


<p>1 x 2 (C1)</p>	<p>2 x 1 (C3)</p>	<p>3 x 1 (C4)</p>
<p>4 x 1 (C3)</p>	<p>5 x 1 (C1)</p>	<p>6 x 1 (C5)</p>





1

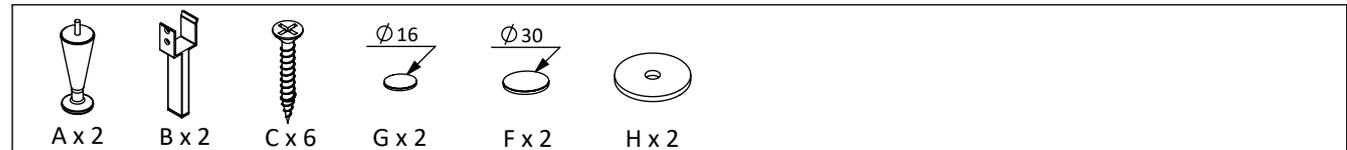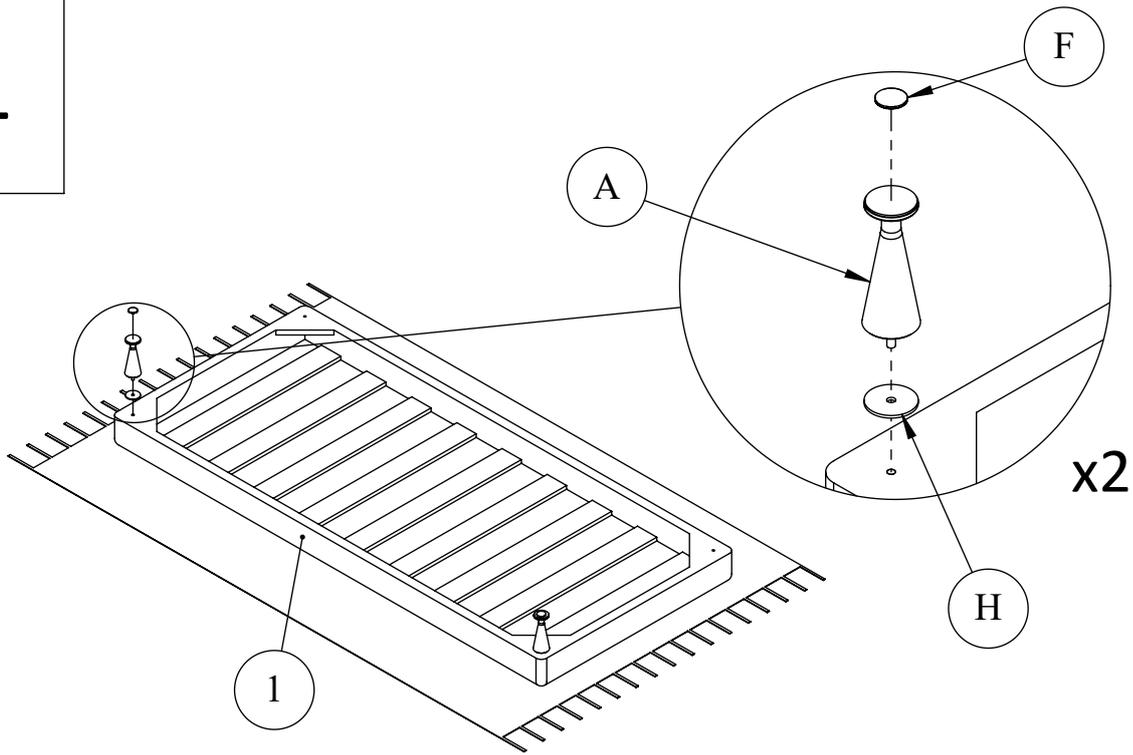


2

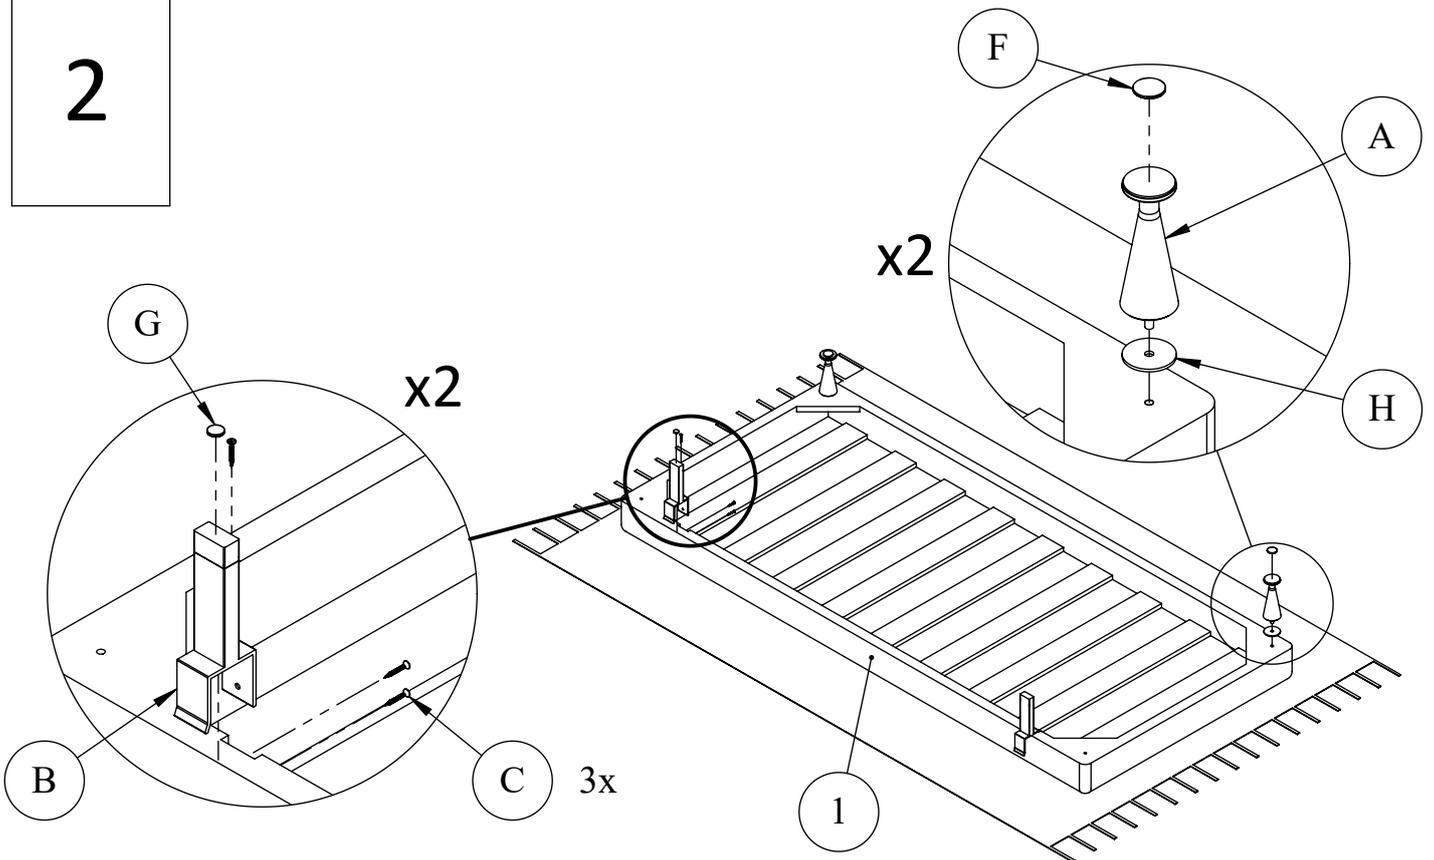

3

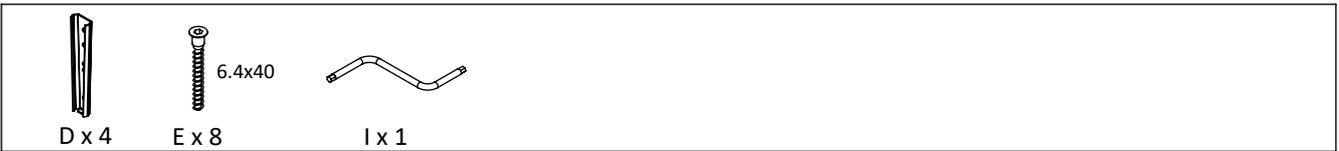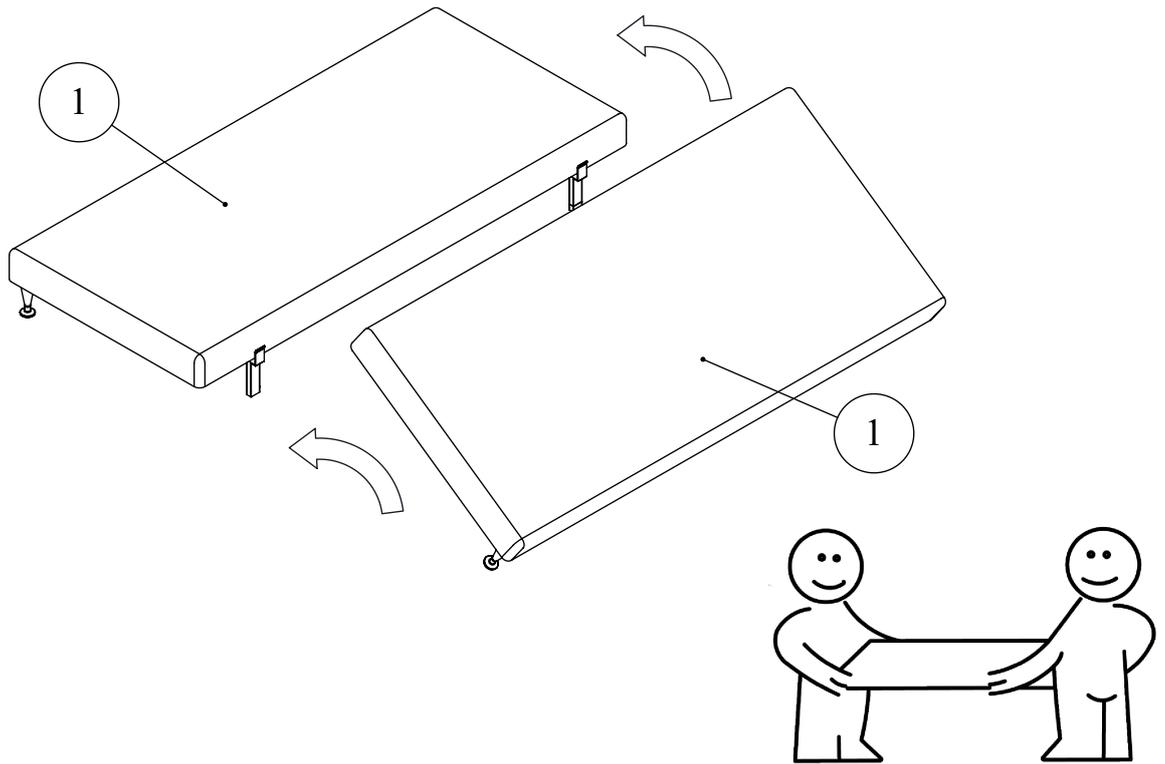

4

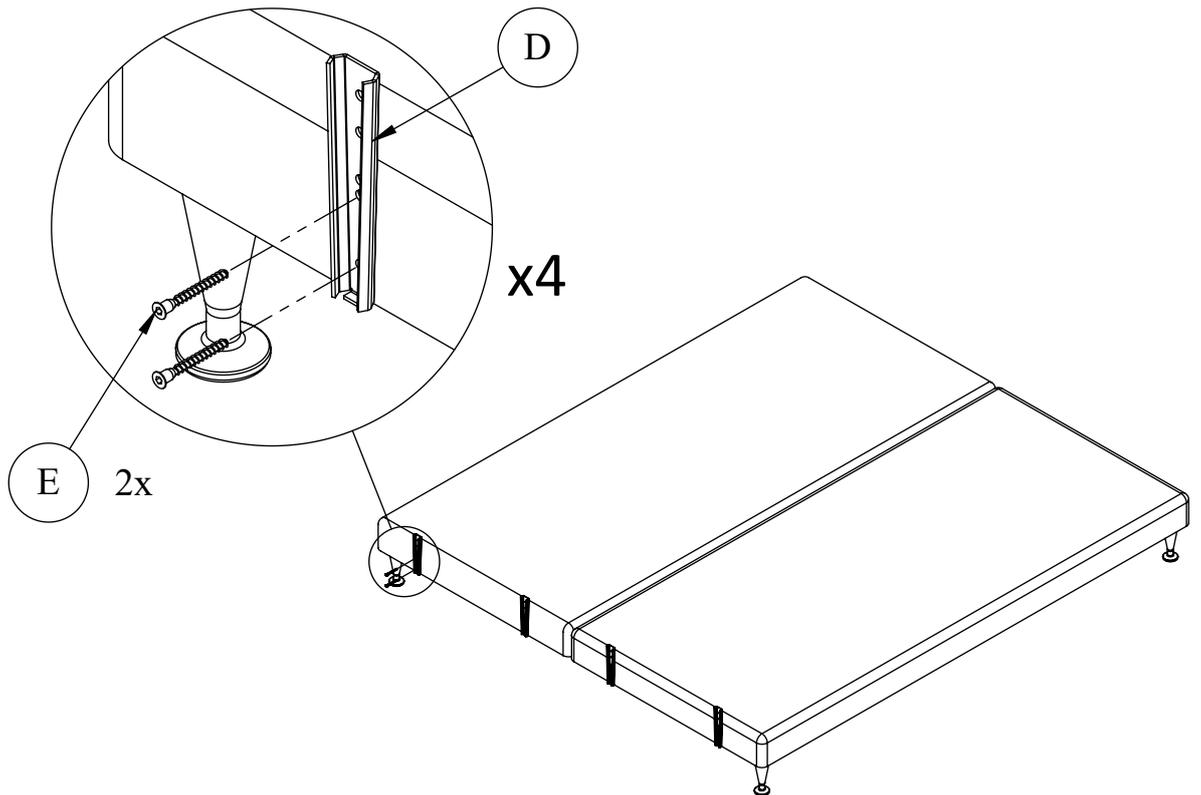


Ø30




F x 2


5

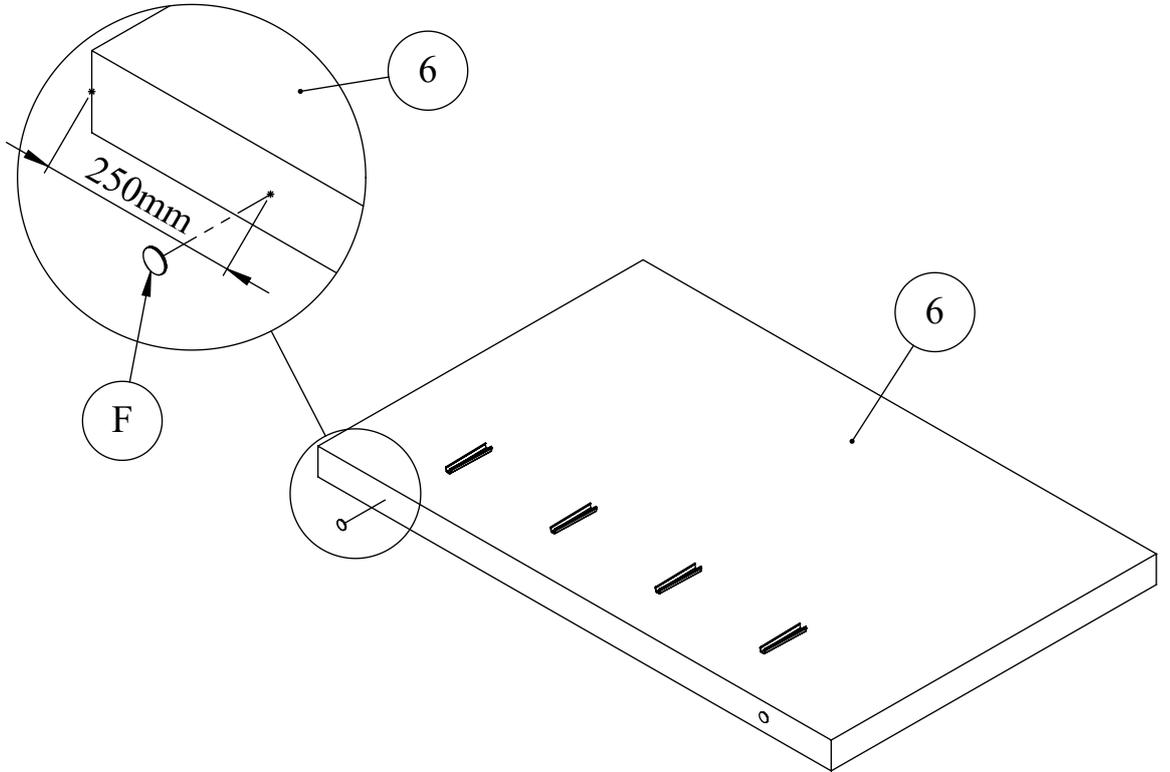


6

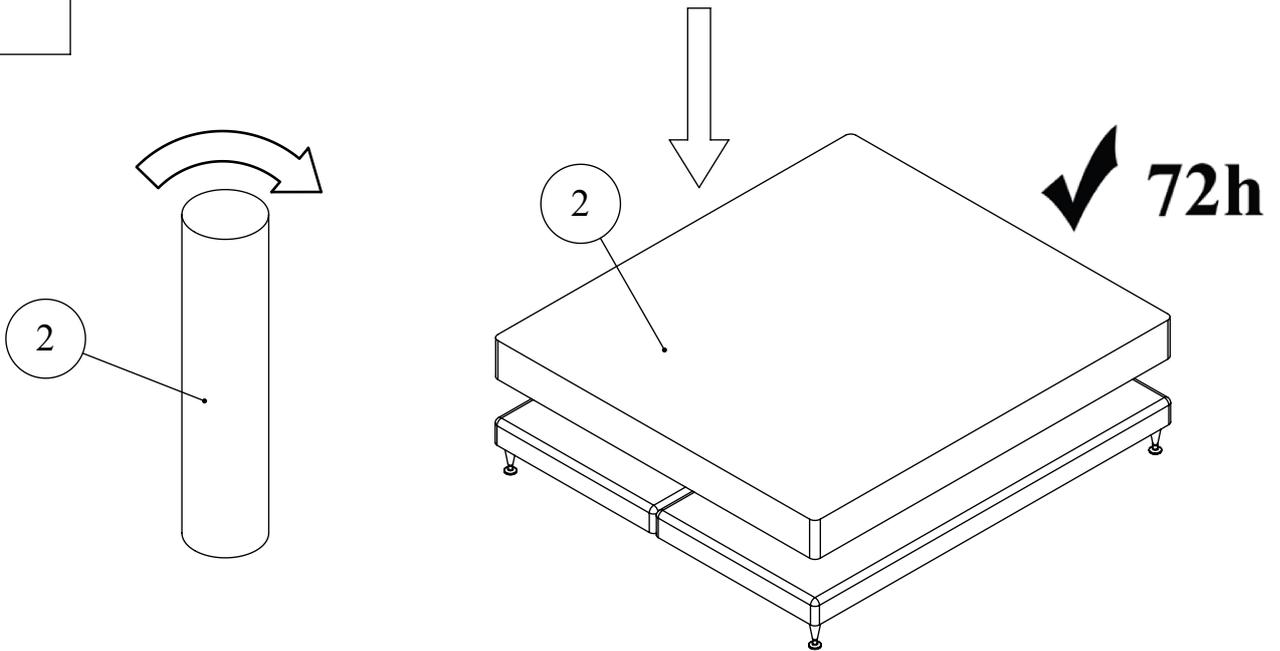


7

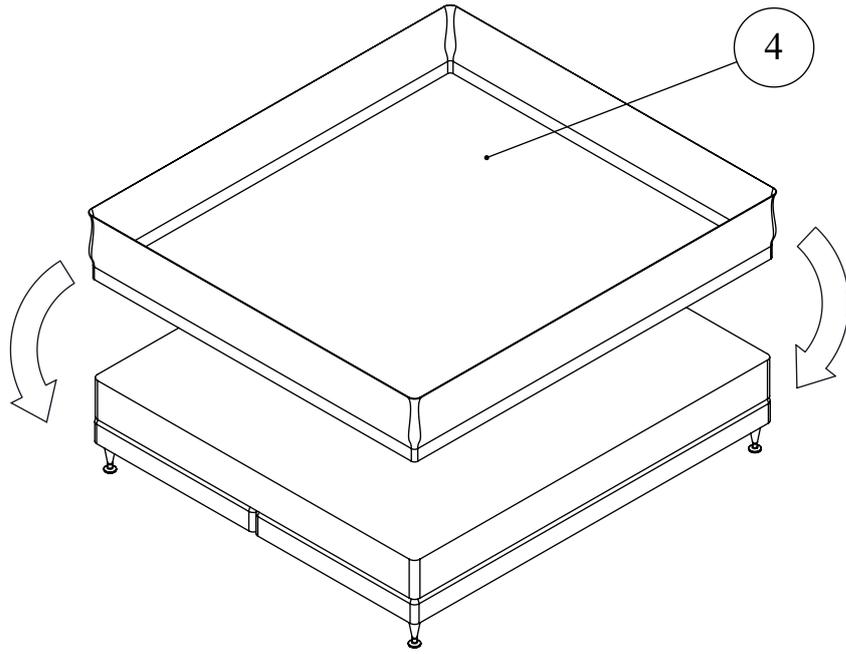

8

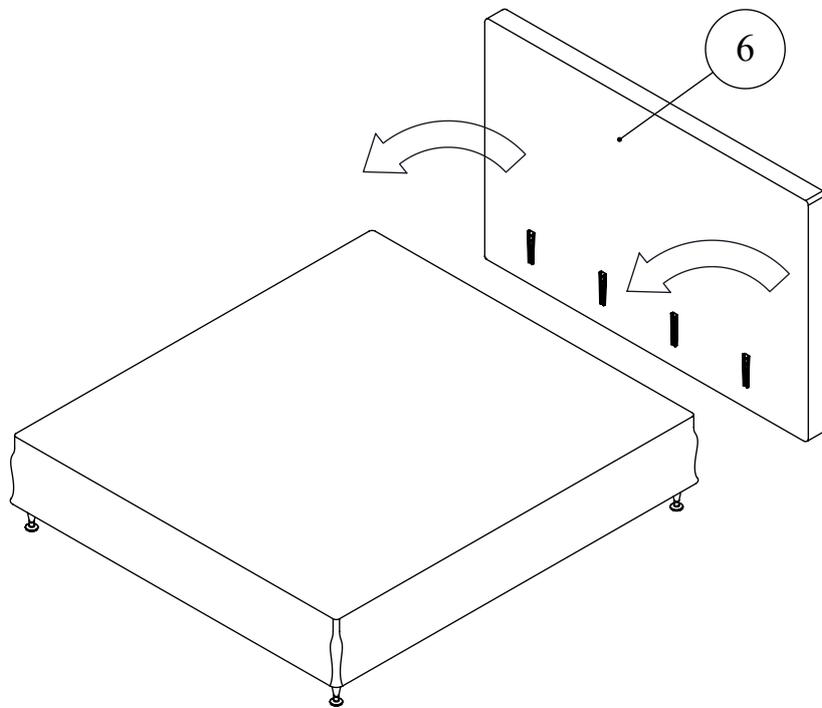

9

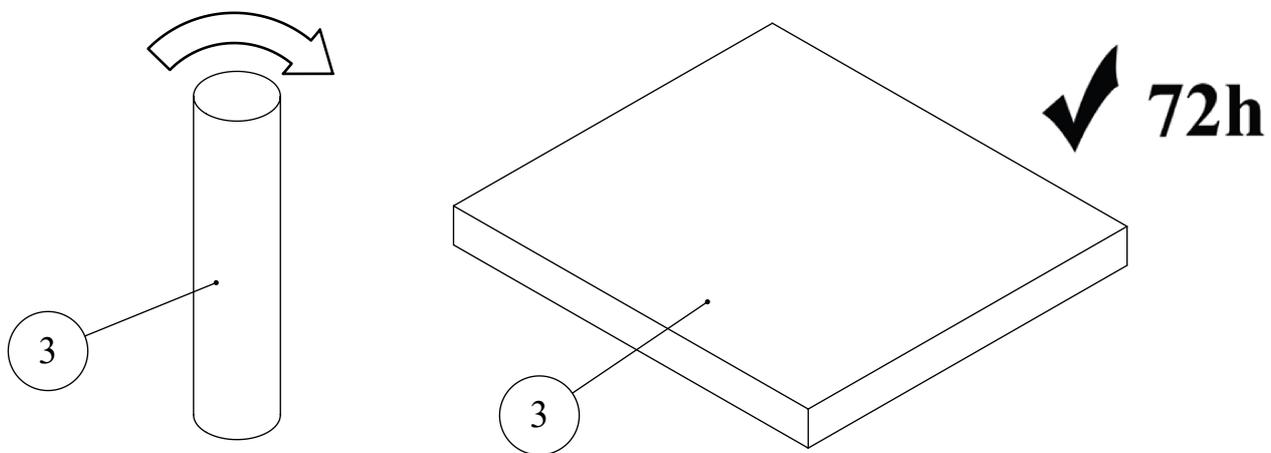

10

