

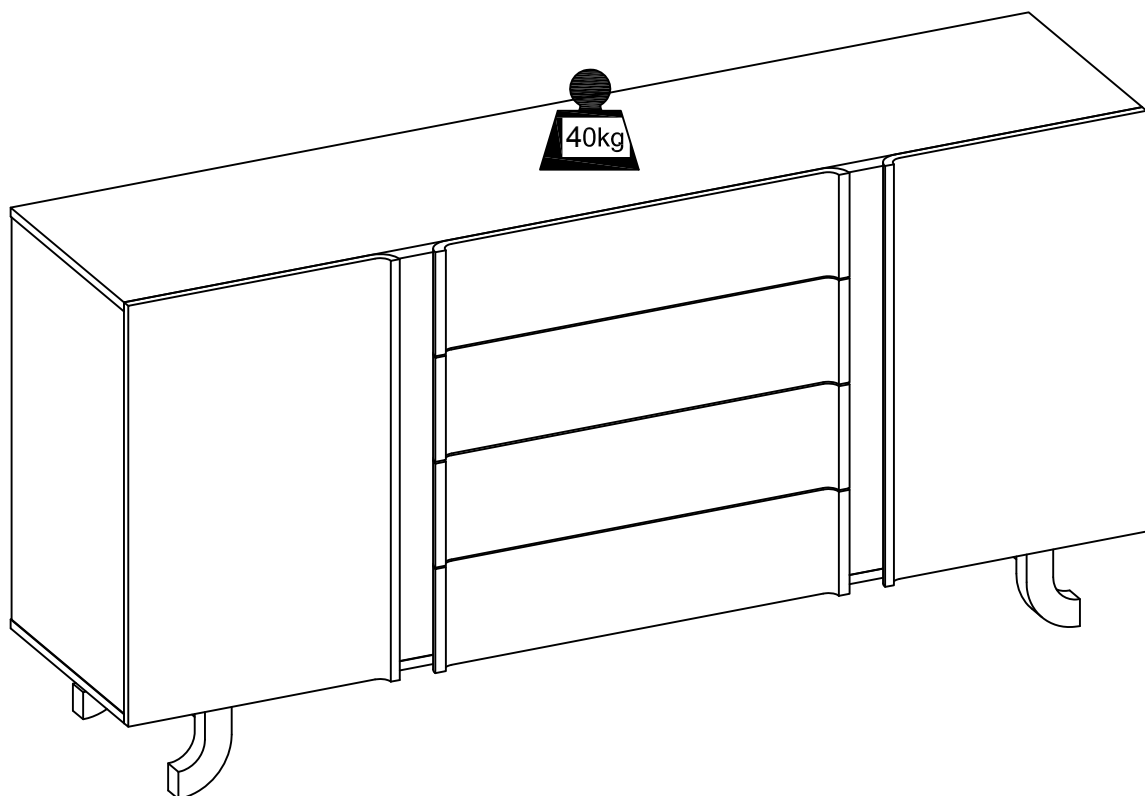


Assemble instruction

VIRA


27980069-01

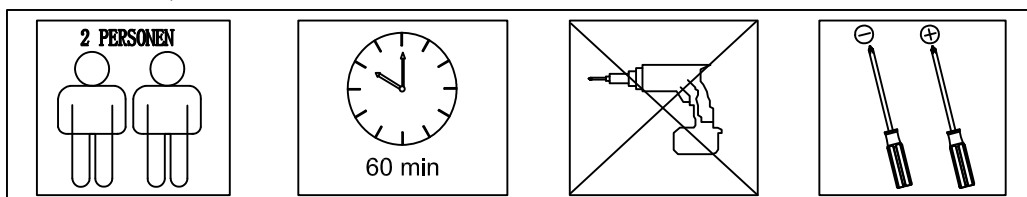


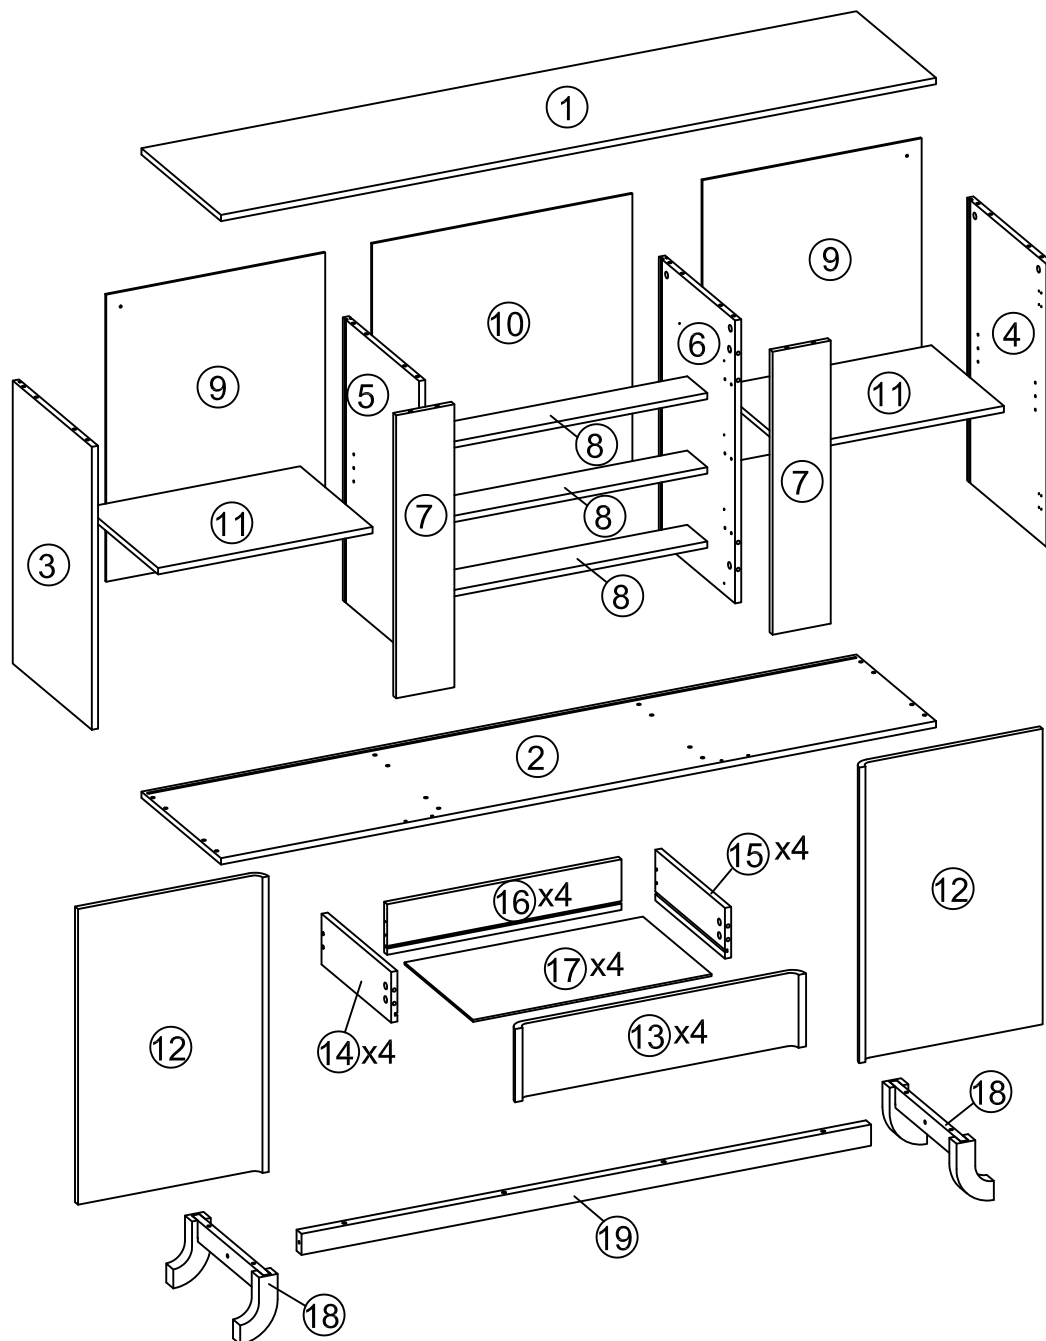


A	x48	B	x48	C	x8	D	x4	E	x2	F	x4	G	x4	H	x20
M6*35mm		ø15mm		M7*50mm		M6*60mm		M6*35mm		M6*50mm				ø8*30mm	
I	x76	J	x16	K	x20	L	x1	M	x12	N	x4	O	x4	P	x4
ø3 *14mm		M4*35mm													
Q	x4	R	x8	S	x4	T	x2	U	x2	V	x2				
										M4*45mm					

1



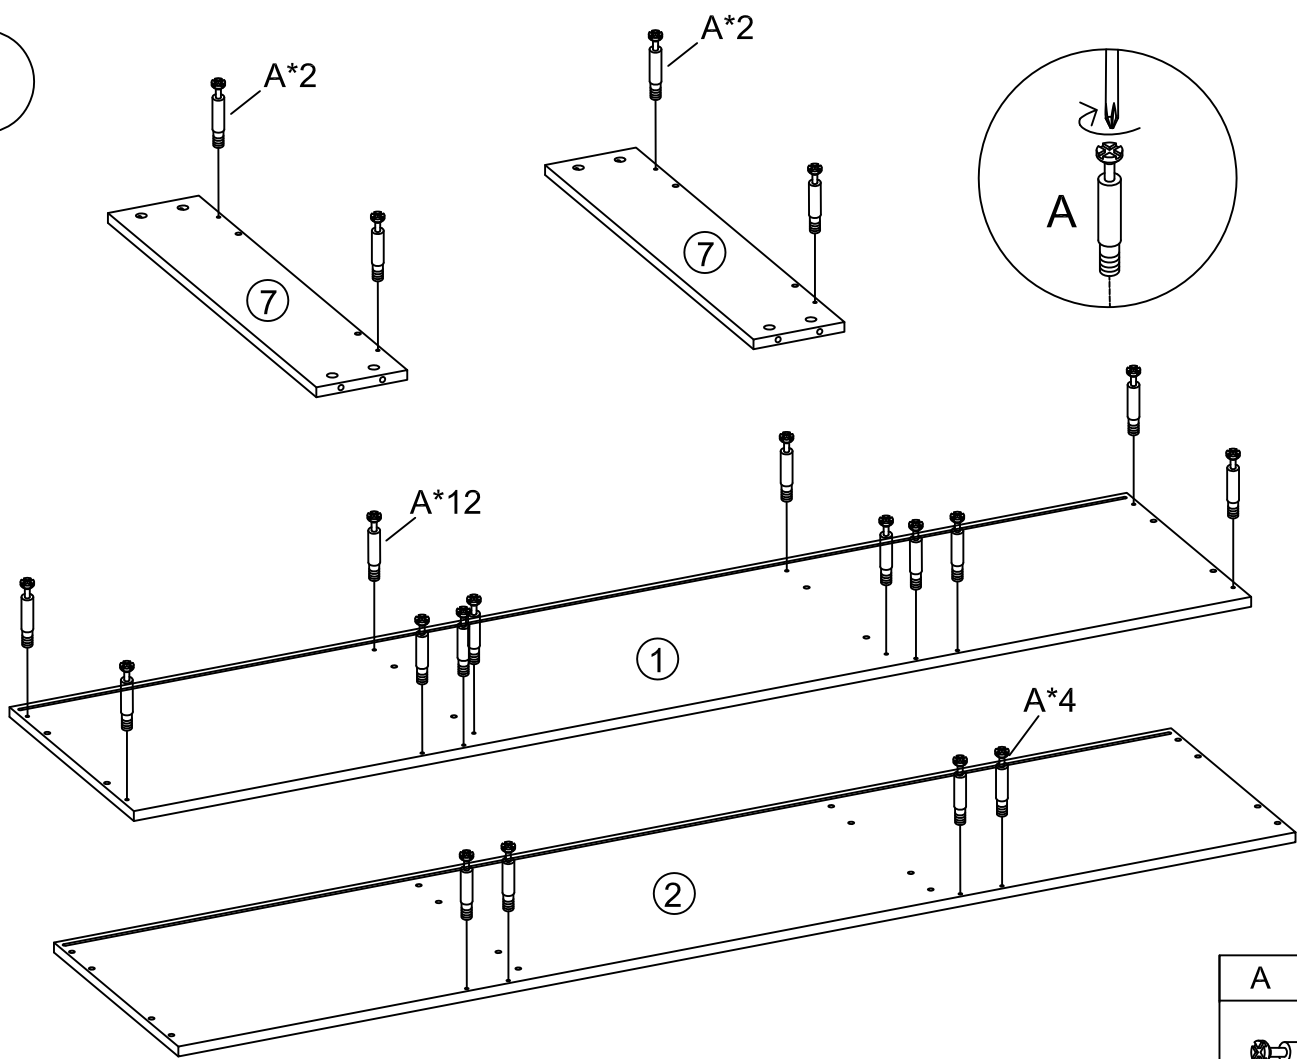



A	×20
	
M6*35mm	


2

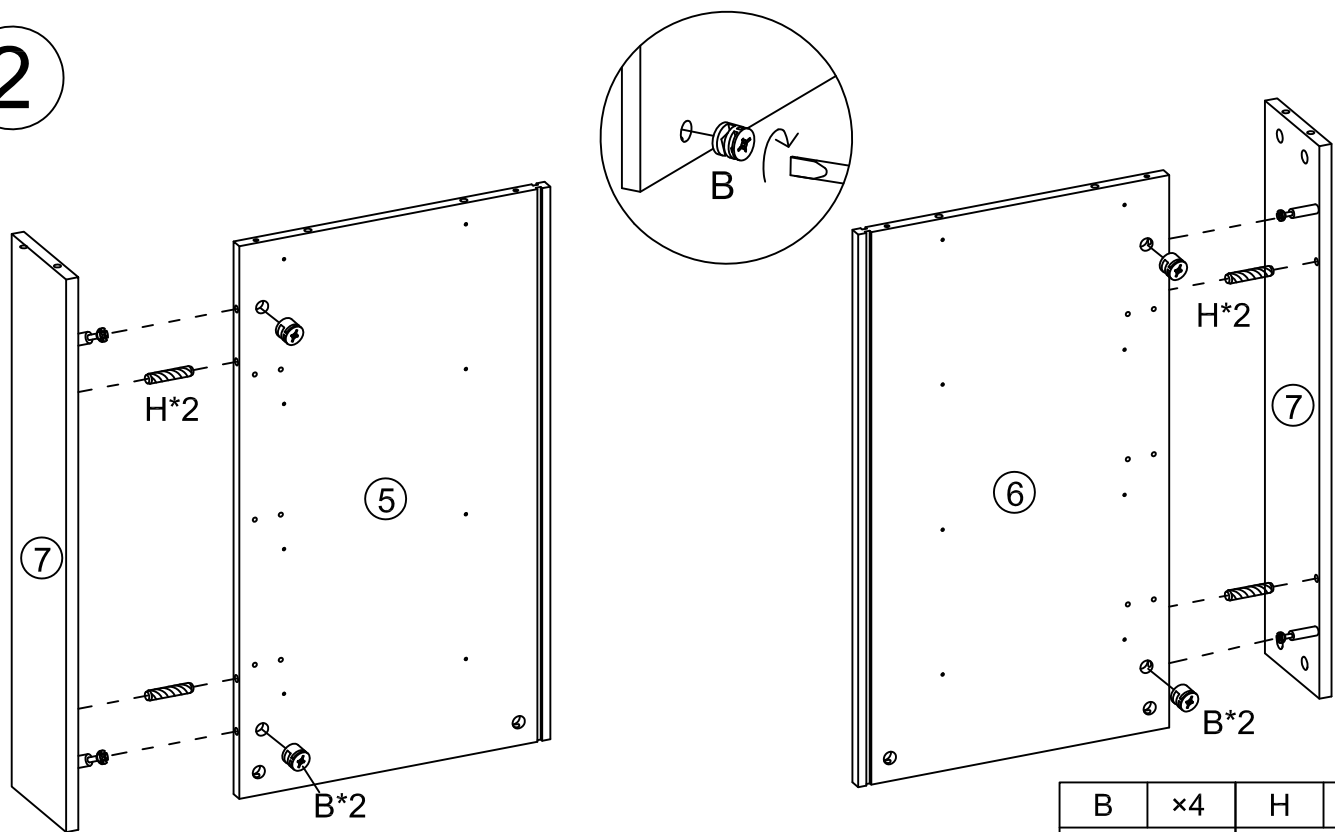

B	×4	H	×4
			
φ15mm		φ8*30mm	

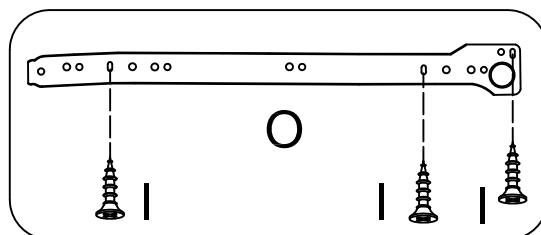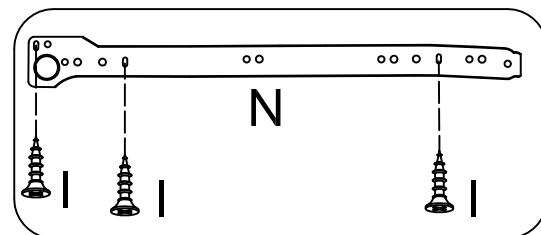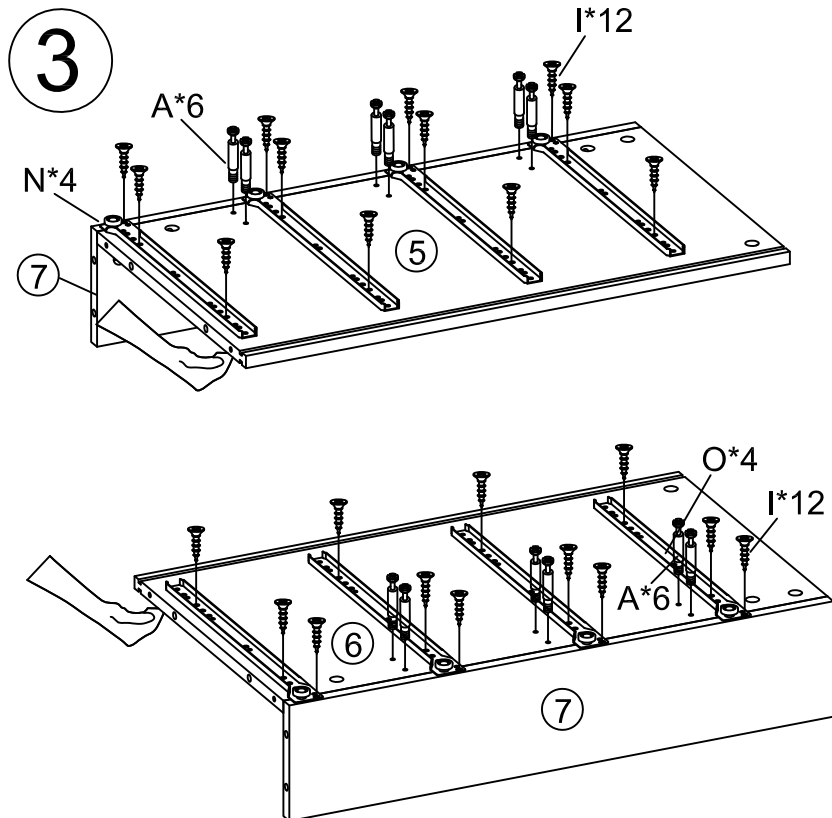



A	×12	I	×24	N	×4	O	×4
							
M6*35mm		φ3*14mm					

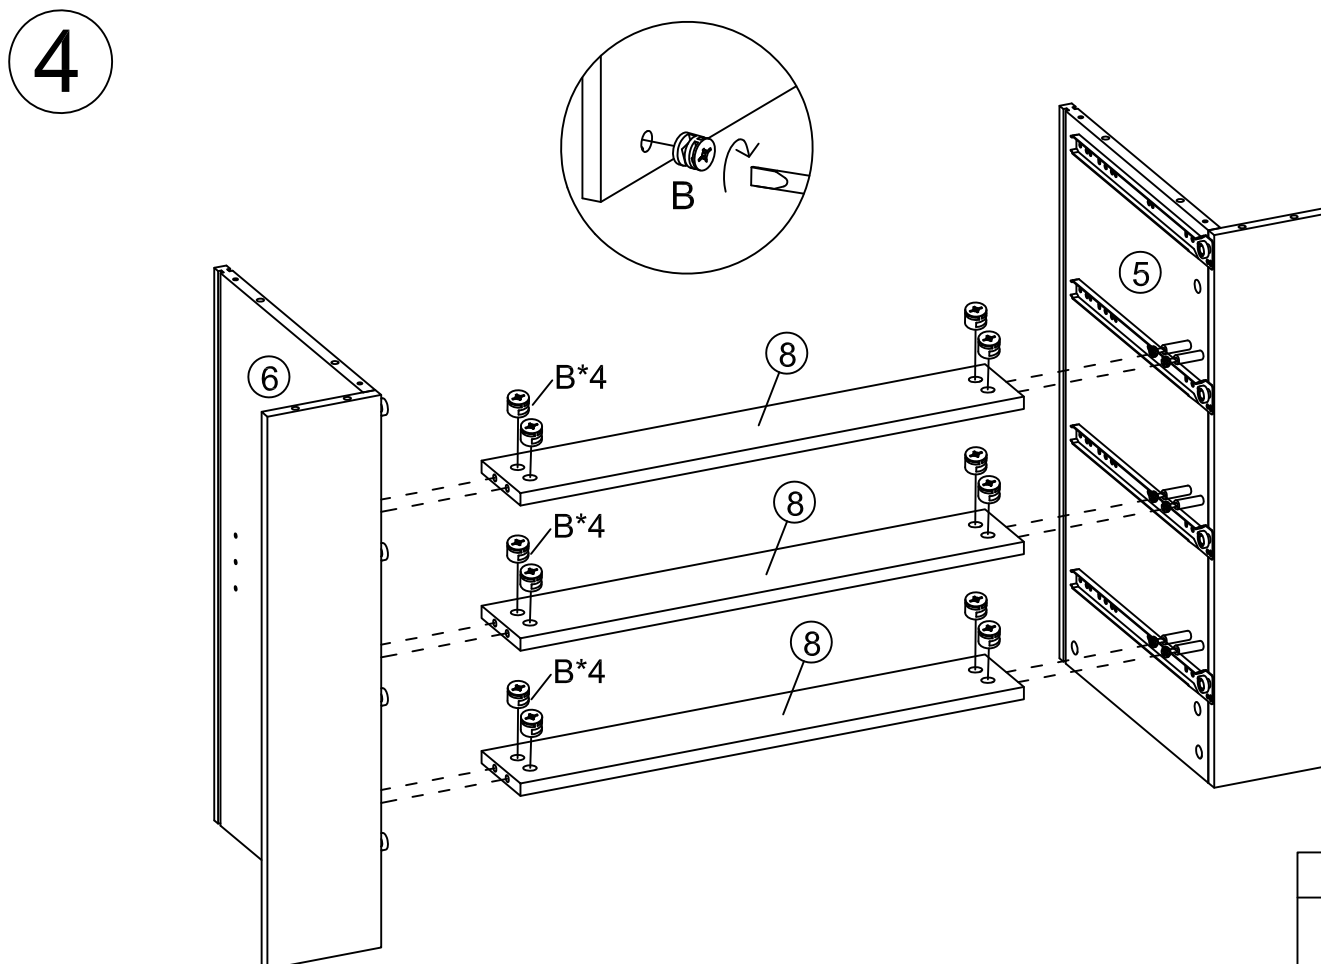


B	×12
	
φ15mm	

5

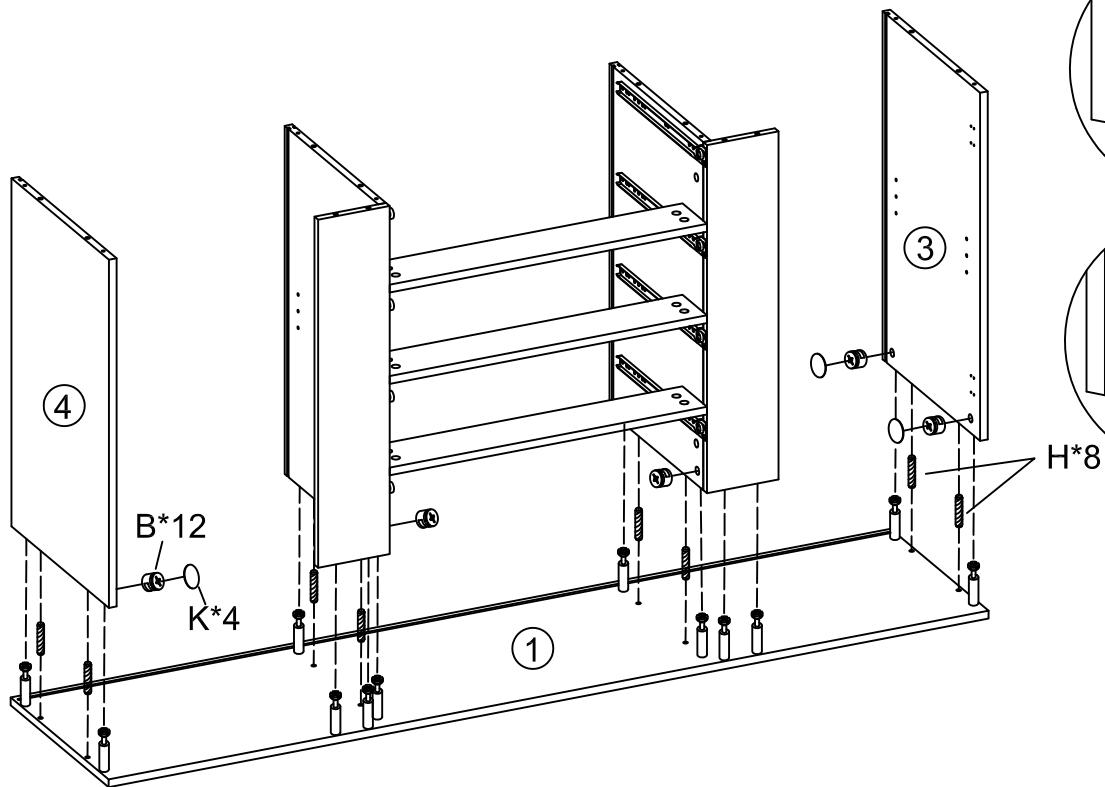


B	×12	H	×8	K	×4
					
ø15mm		ø8*30mm			

6




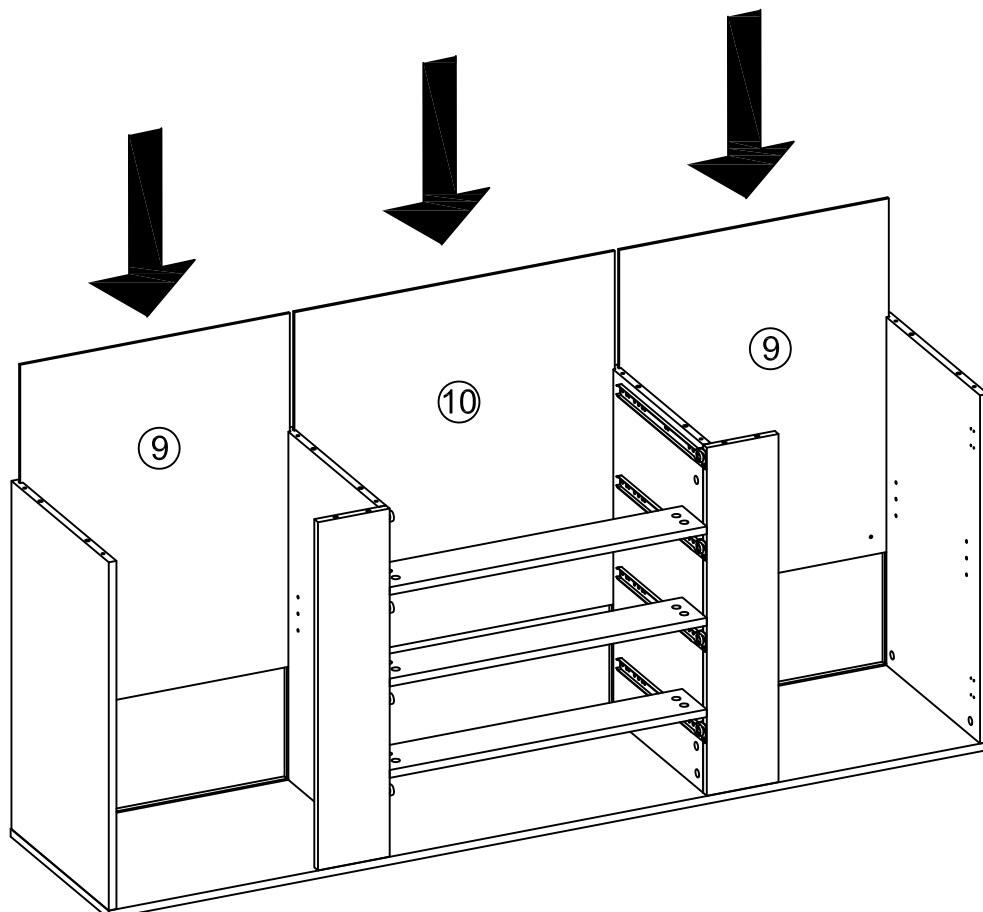


7

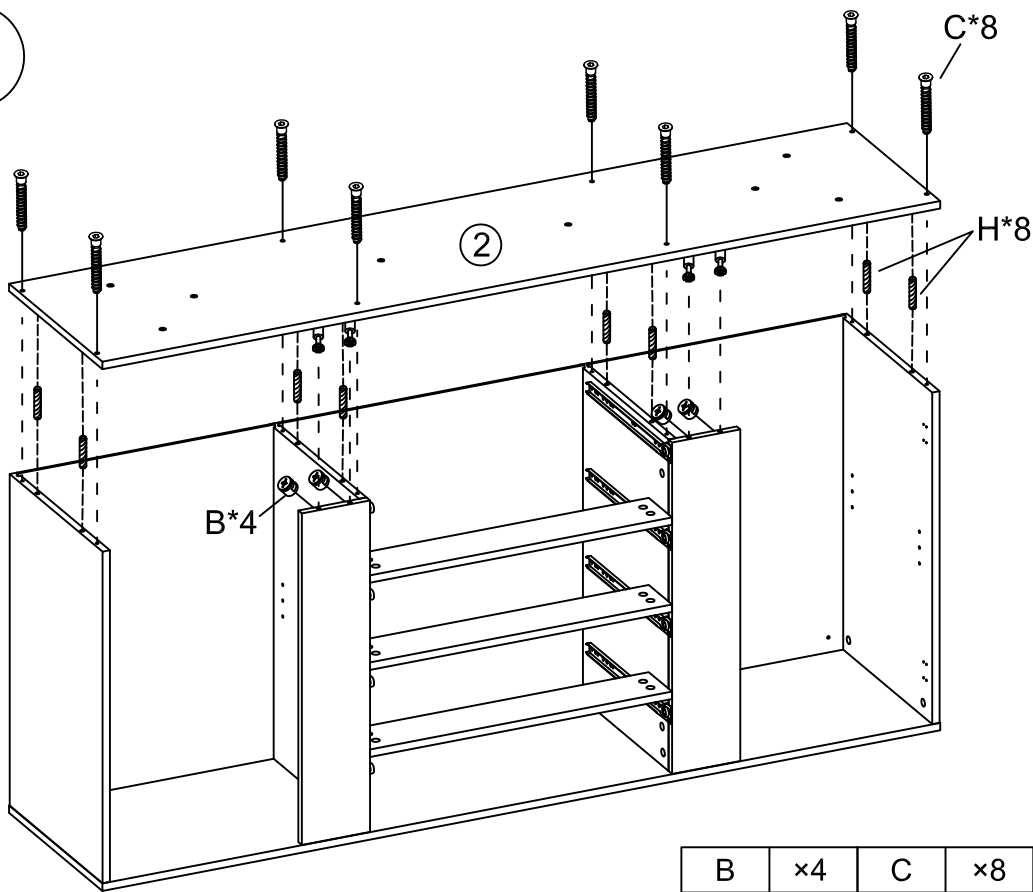



B	×4	C	×8	H	×8	L	×1
							
ø15mm		M7*50mm		ø8*30mm			

8

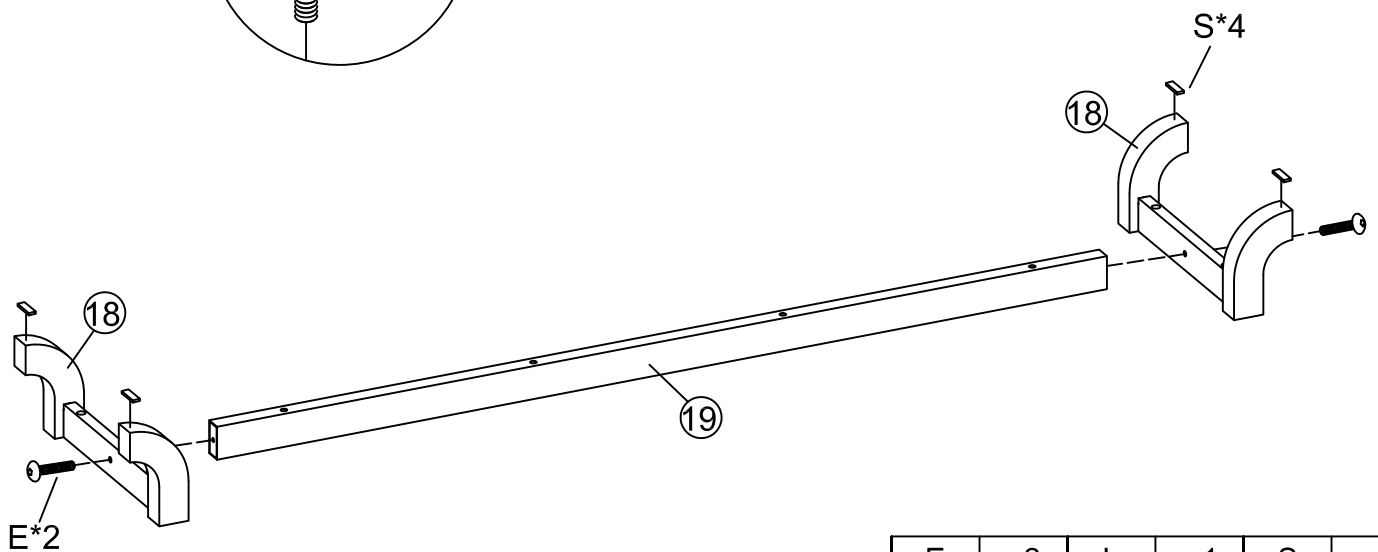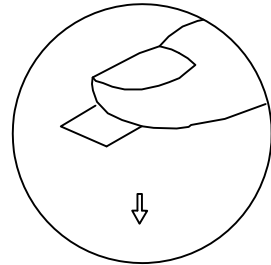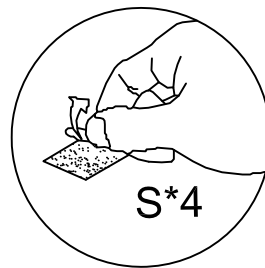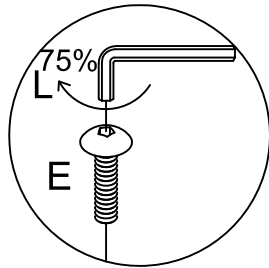





E	×2	L	×1	S	×4
					
M6*35mm					

9

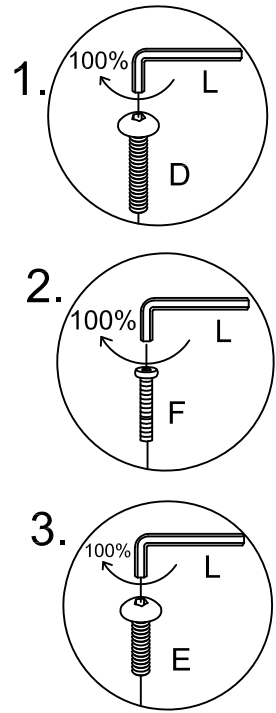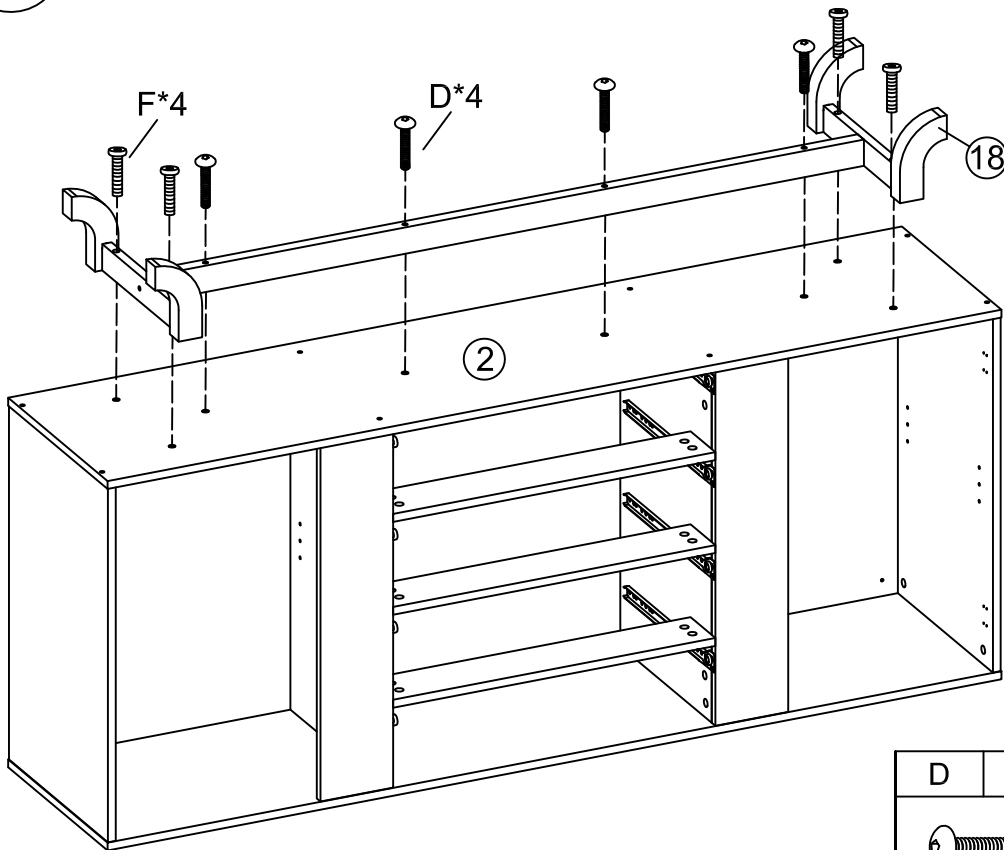



D	x4	F	x4	L	x1
M6*60mm		M6*50mm			

10

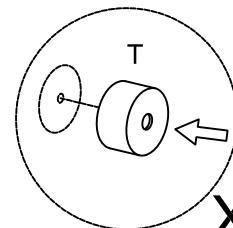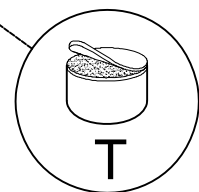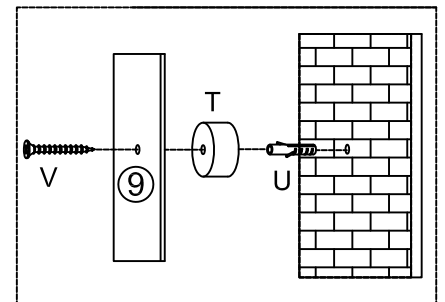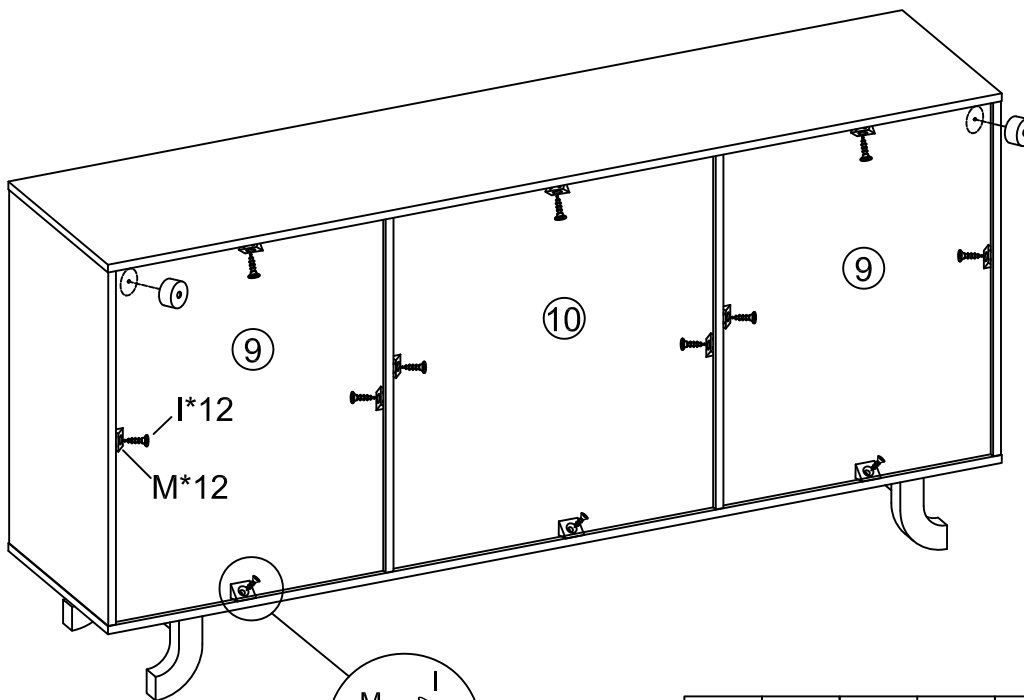




X2

I	x12	M	x12	T	x2	U	x2	V	x2
ø3*14mm								ø4*45mm	

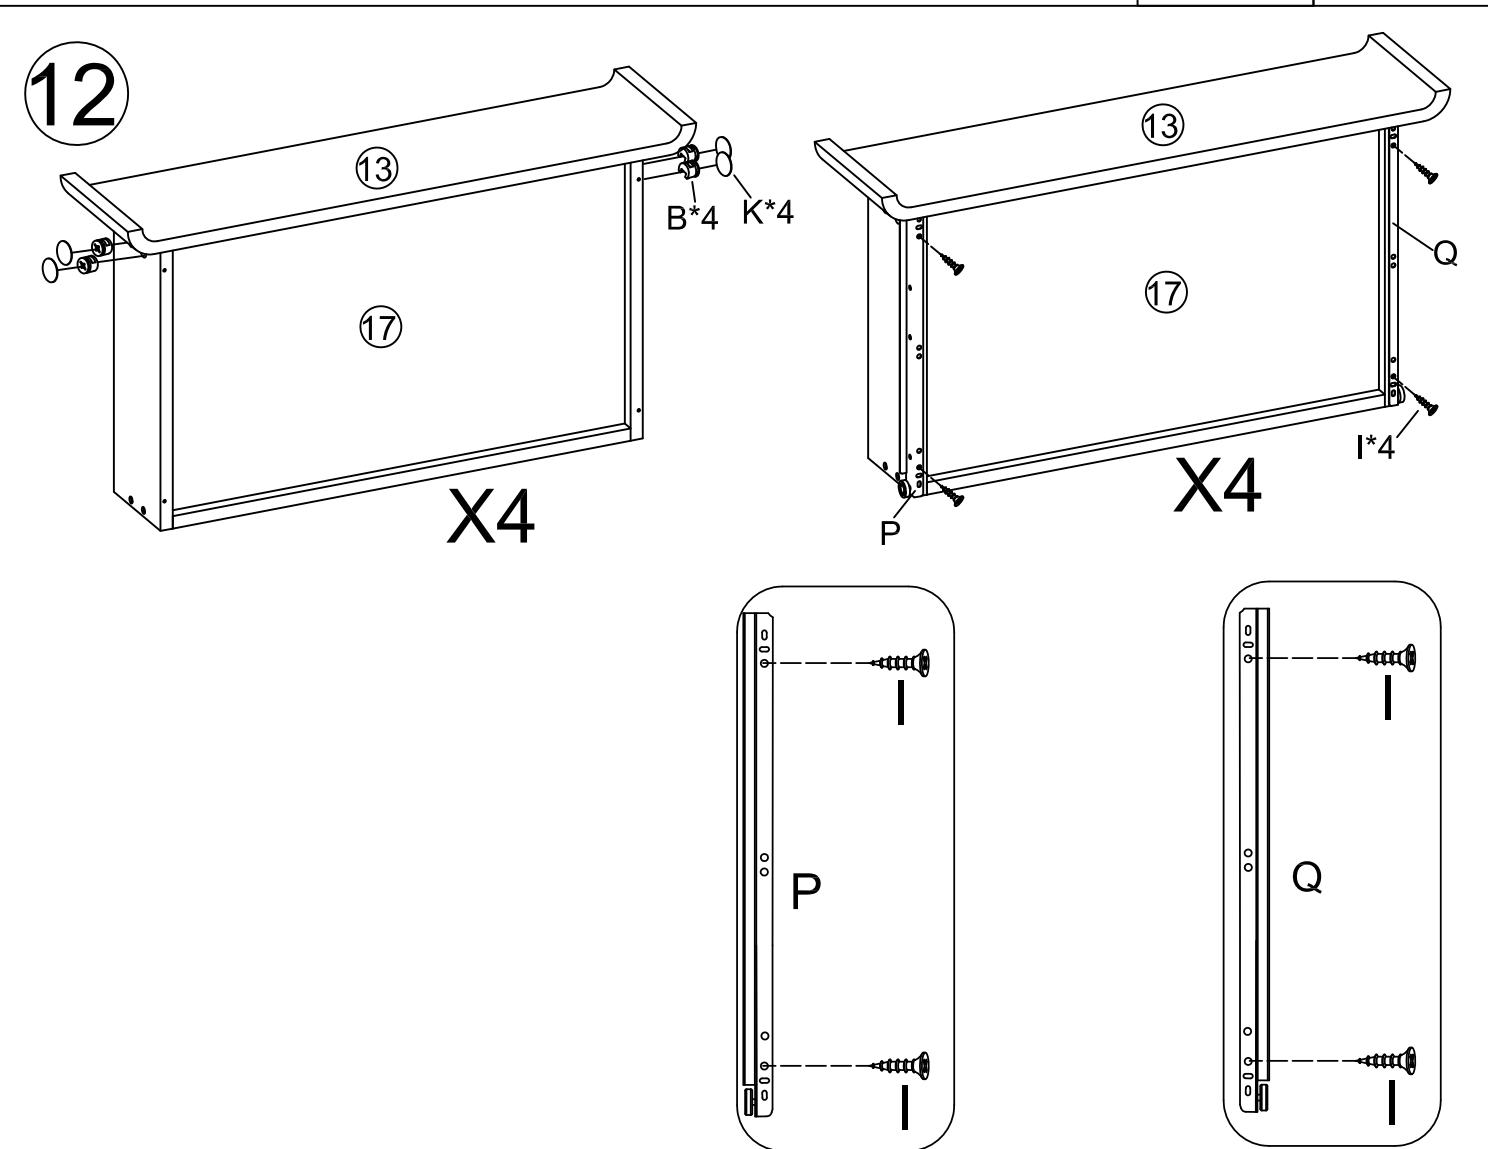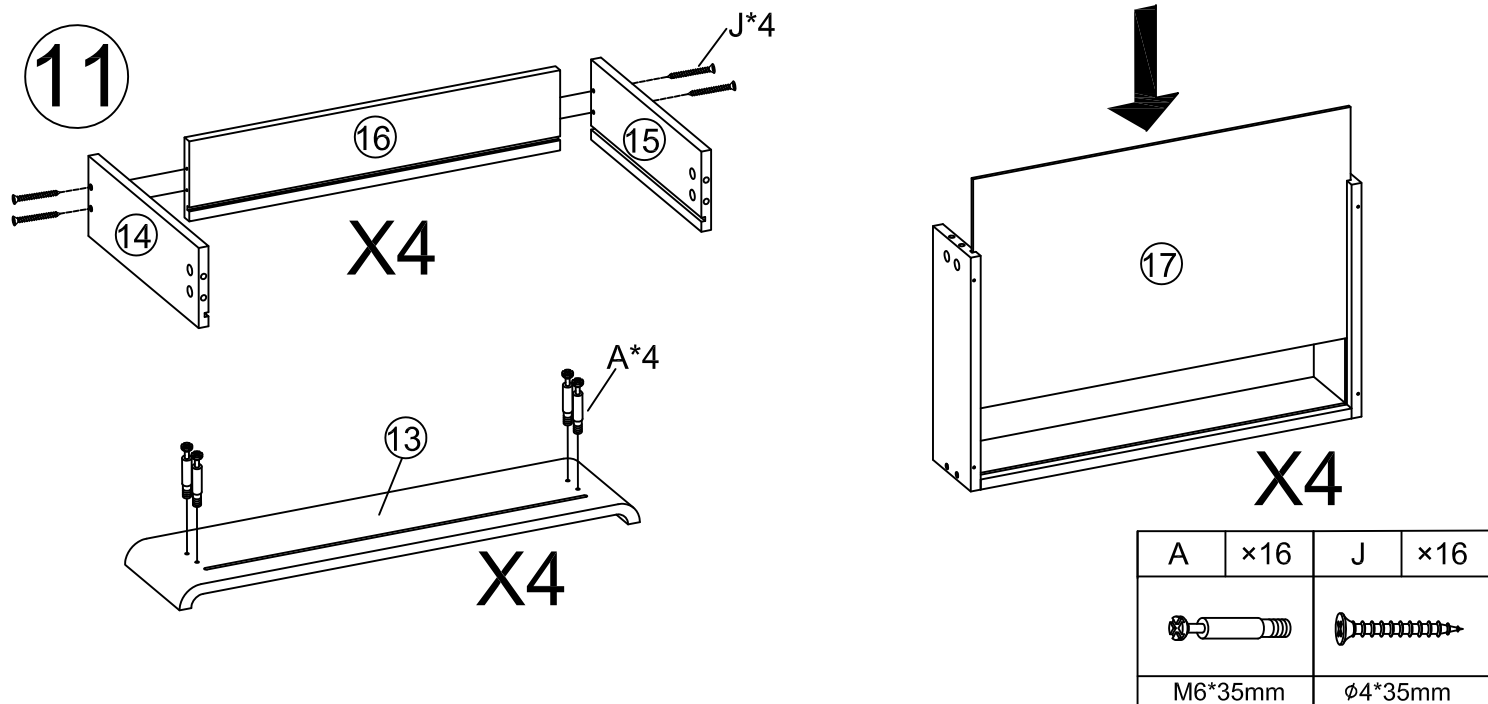


B	×16	I	×16	K	×16	P	×4	Q	×4
φ15mm		φ3*14mm							

13

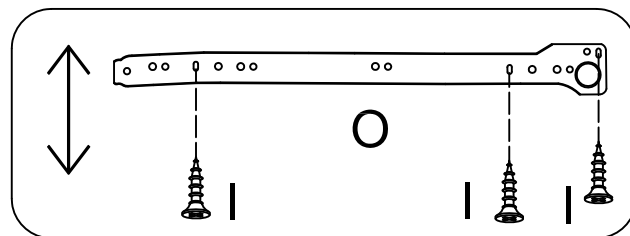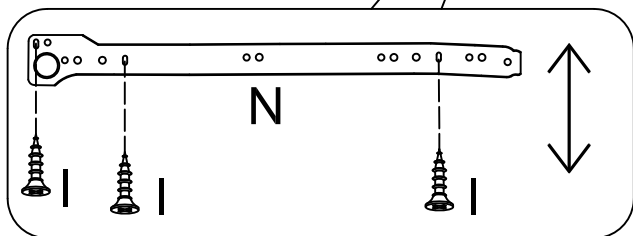
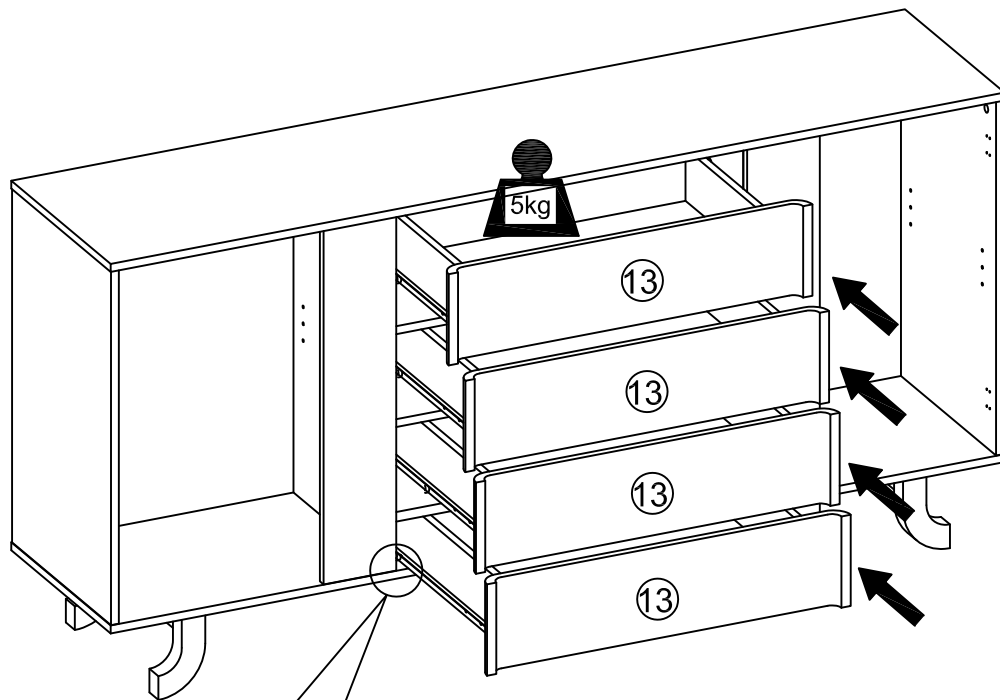


14

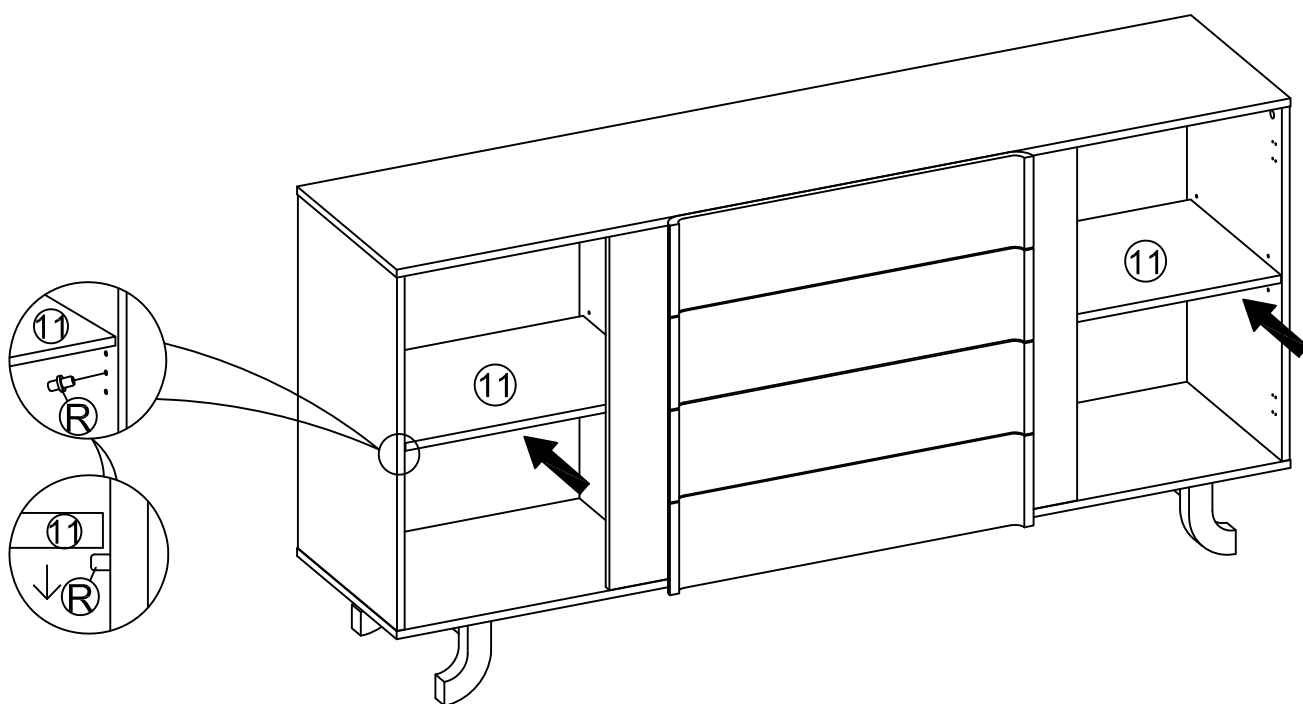



R	×8
	

15

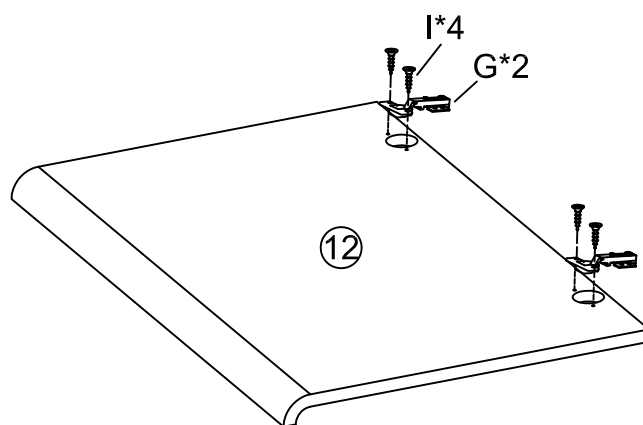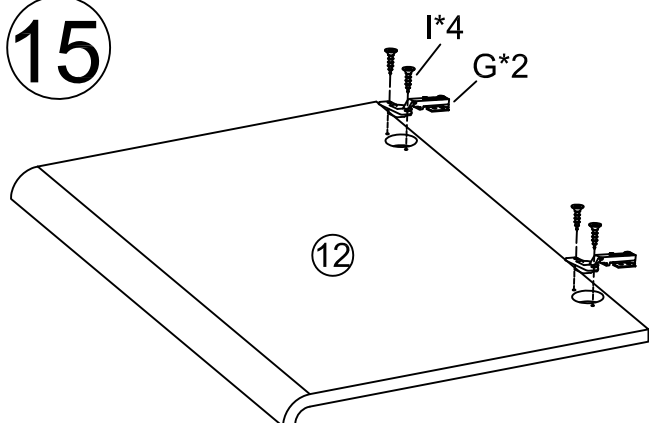

I	x8	G	x4
			
Ø3*14mm			

16

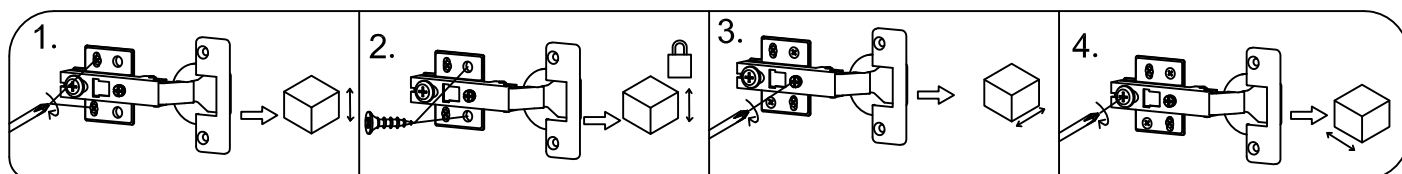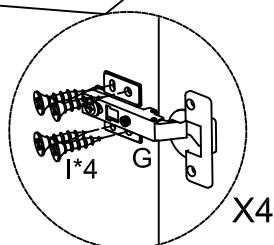

I	x16
	
Ø3*14mm	