

# ASSEMBLY INSTRUCTIONS-09540016/01

## HARDWARE LIST


1



**x 44**

Bolt (M6 x 20)

2

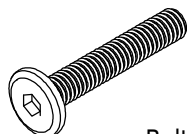

**x 12**

Bolt (M6 x 40)

3



**x 56**

16x7x1mm


4





**x 2**

Allen key

5

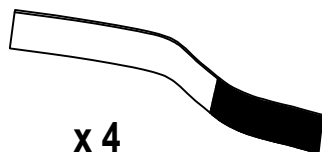


**x 4**

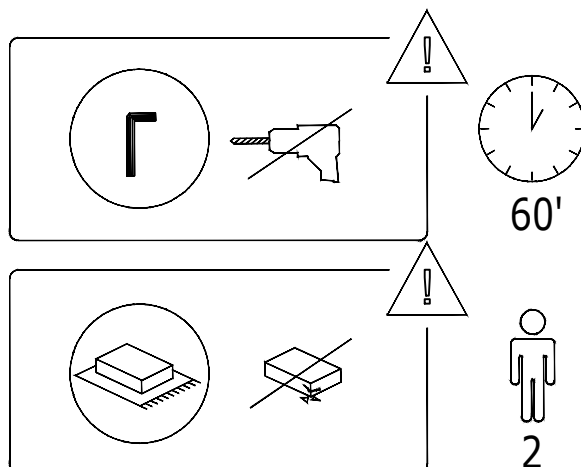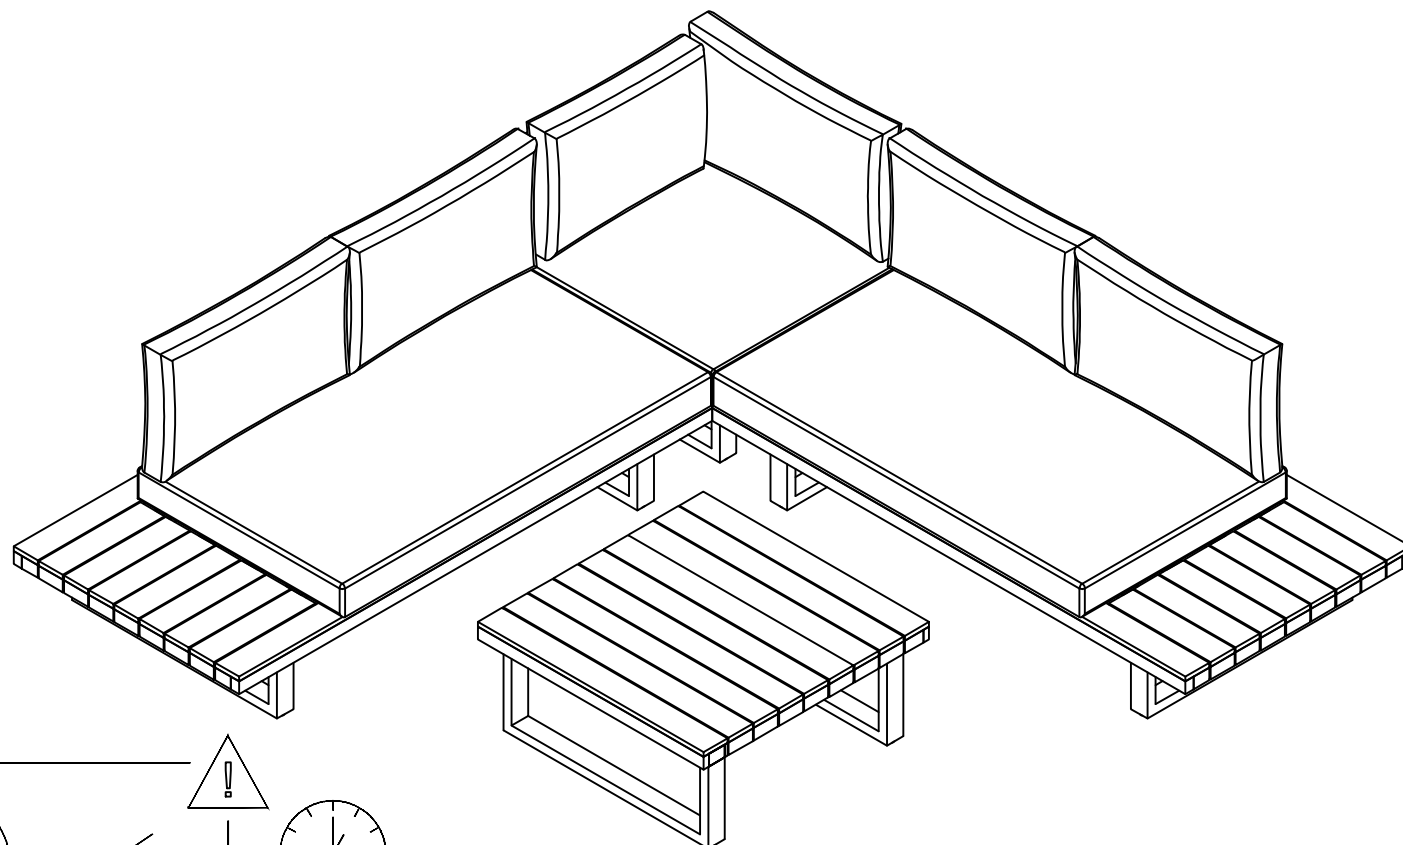


PART LIST


A x1

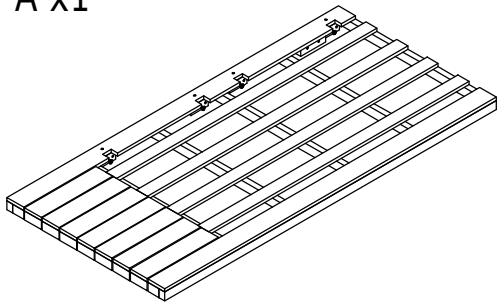


B x1

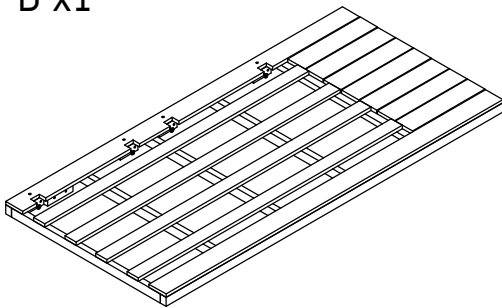


C x1

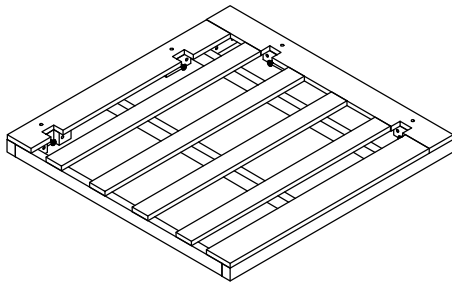


D x1

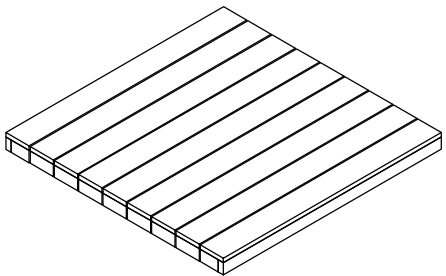


E x6

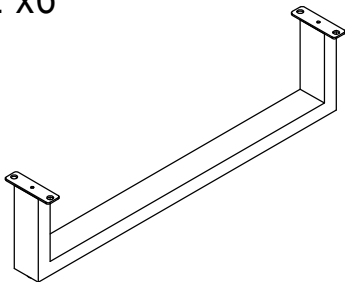


F x6

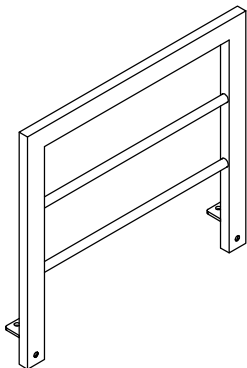


G x2

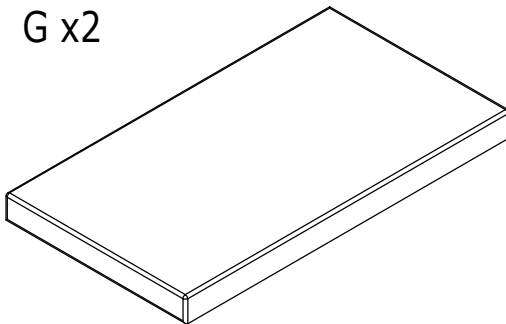


Hx1

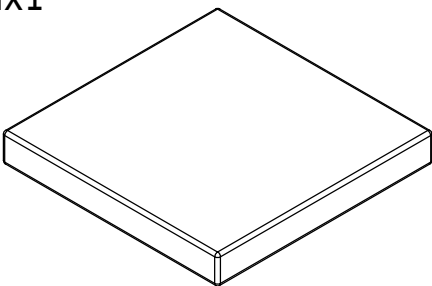


J x5

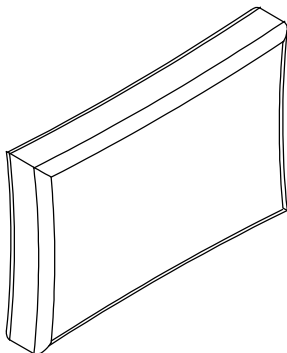


K x1

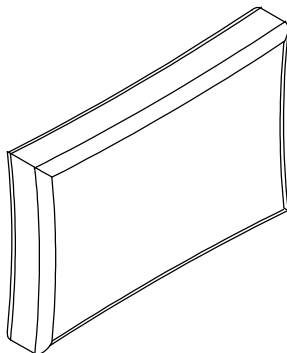

L x2


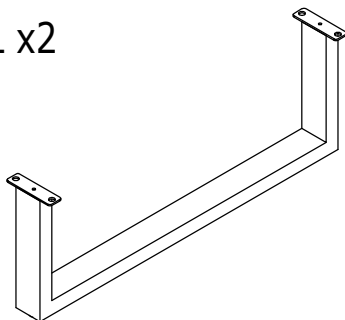


M x1


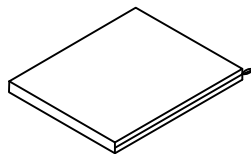


Cover

## STEP 1

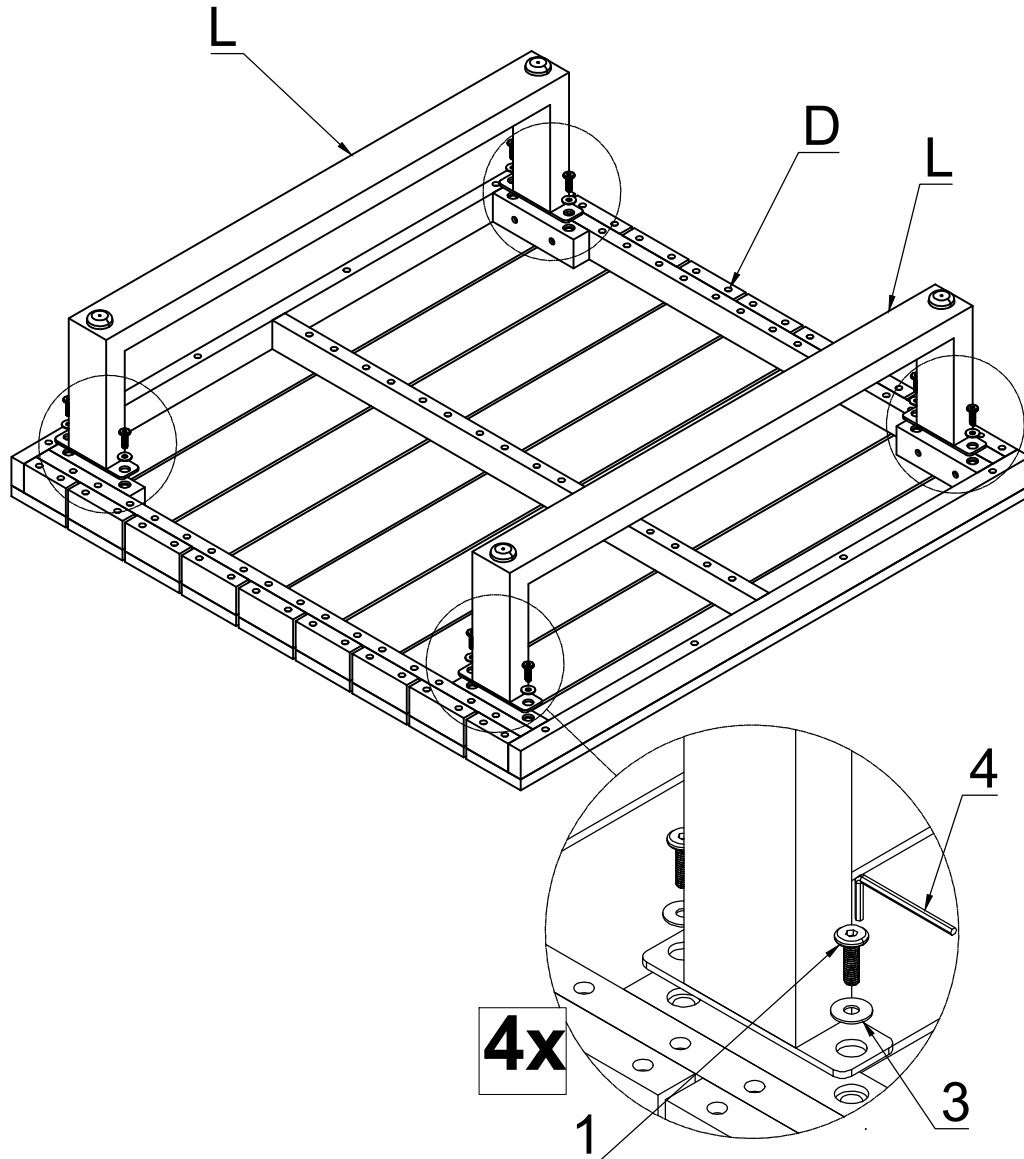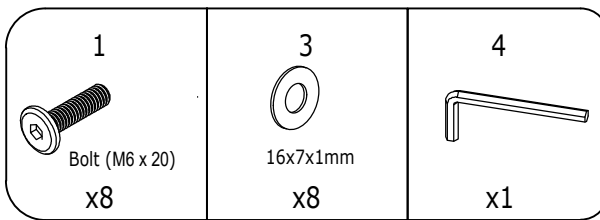


## STEP 2

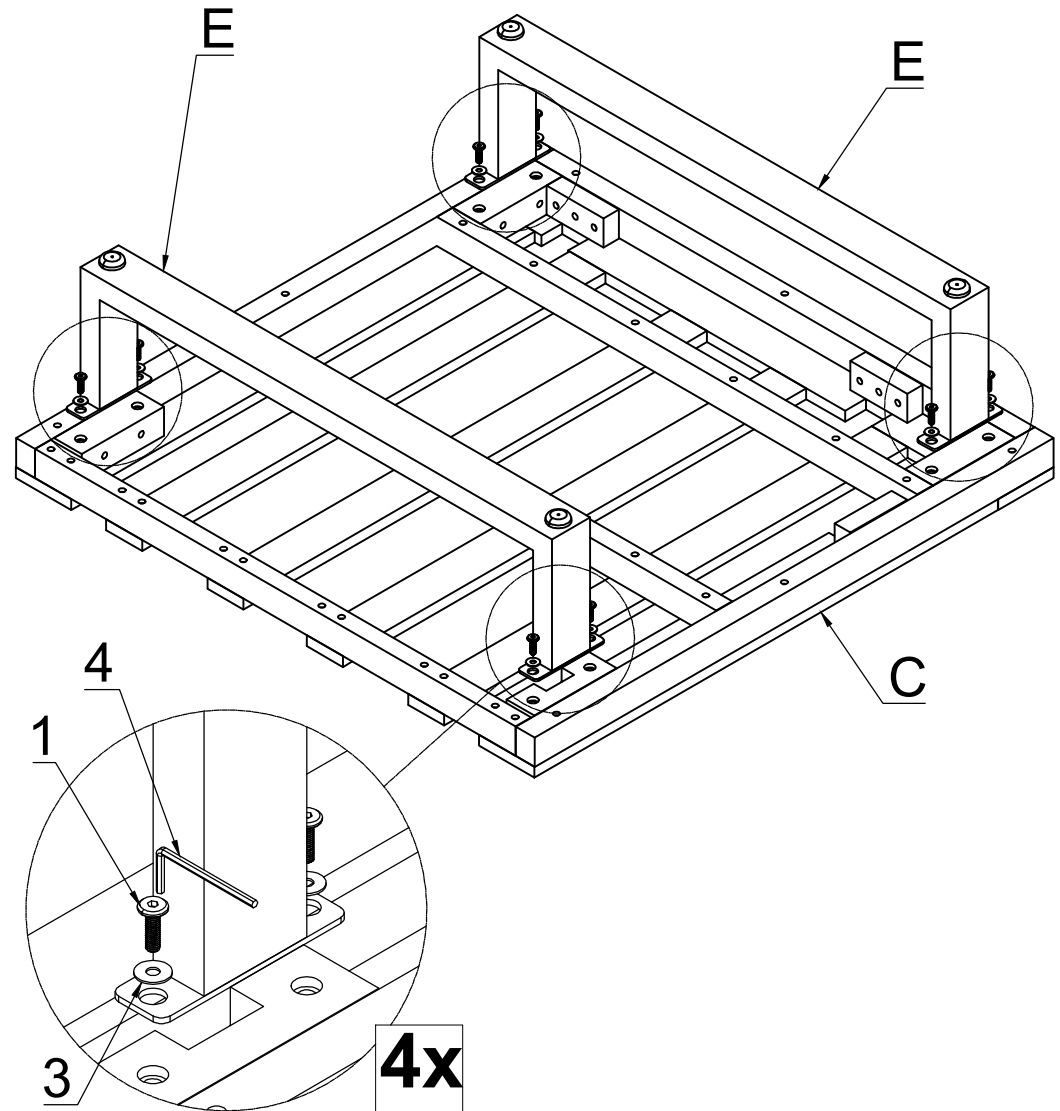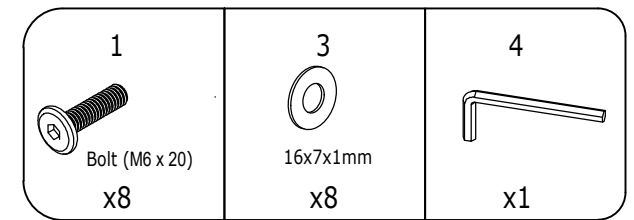


STEP 3

1	2	3	4
Bolt (M6 x 20) x4	Bolt (M6 x 40) x4	16x7x1mm x8	x1

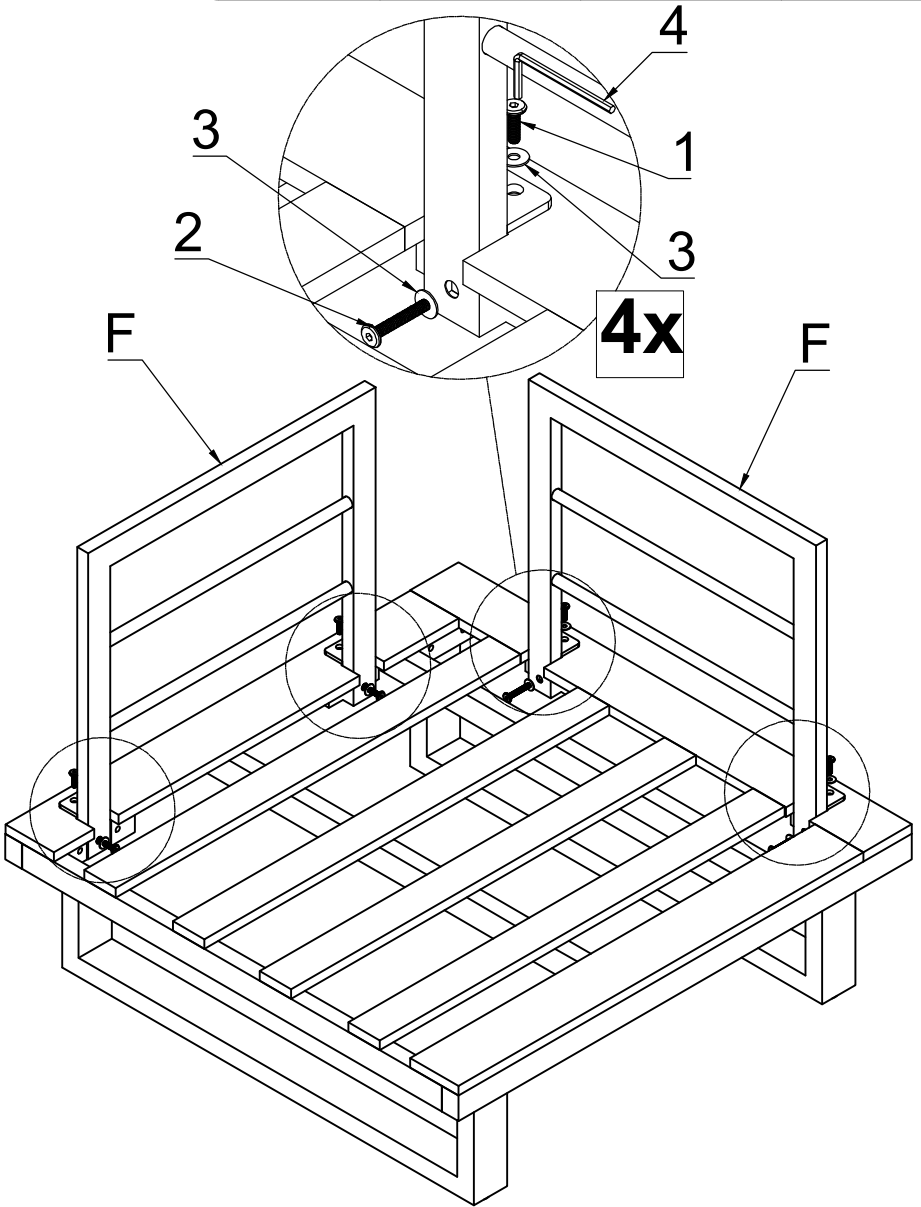


STEP 4

1	3	4
Bolt (M6 x 20) x8	16x7x1mm x8	x1

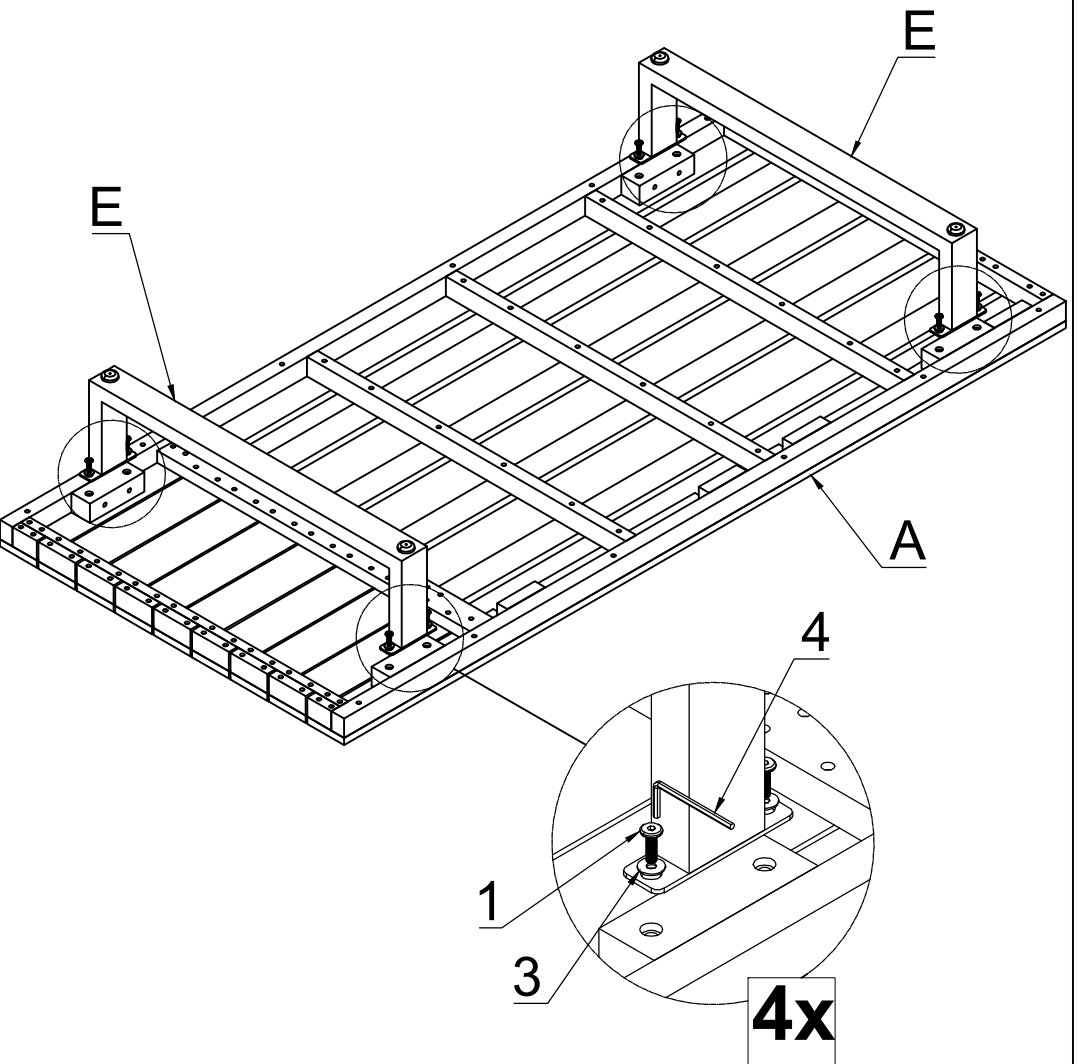


STEP 5

1	2	3	4
Bolt (M6 x 20) x4	Bolt (M6 x 40) x4	16x7x1mm x8	x1

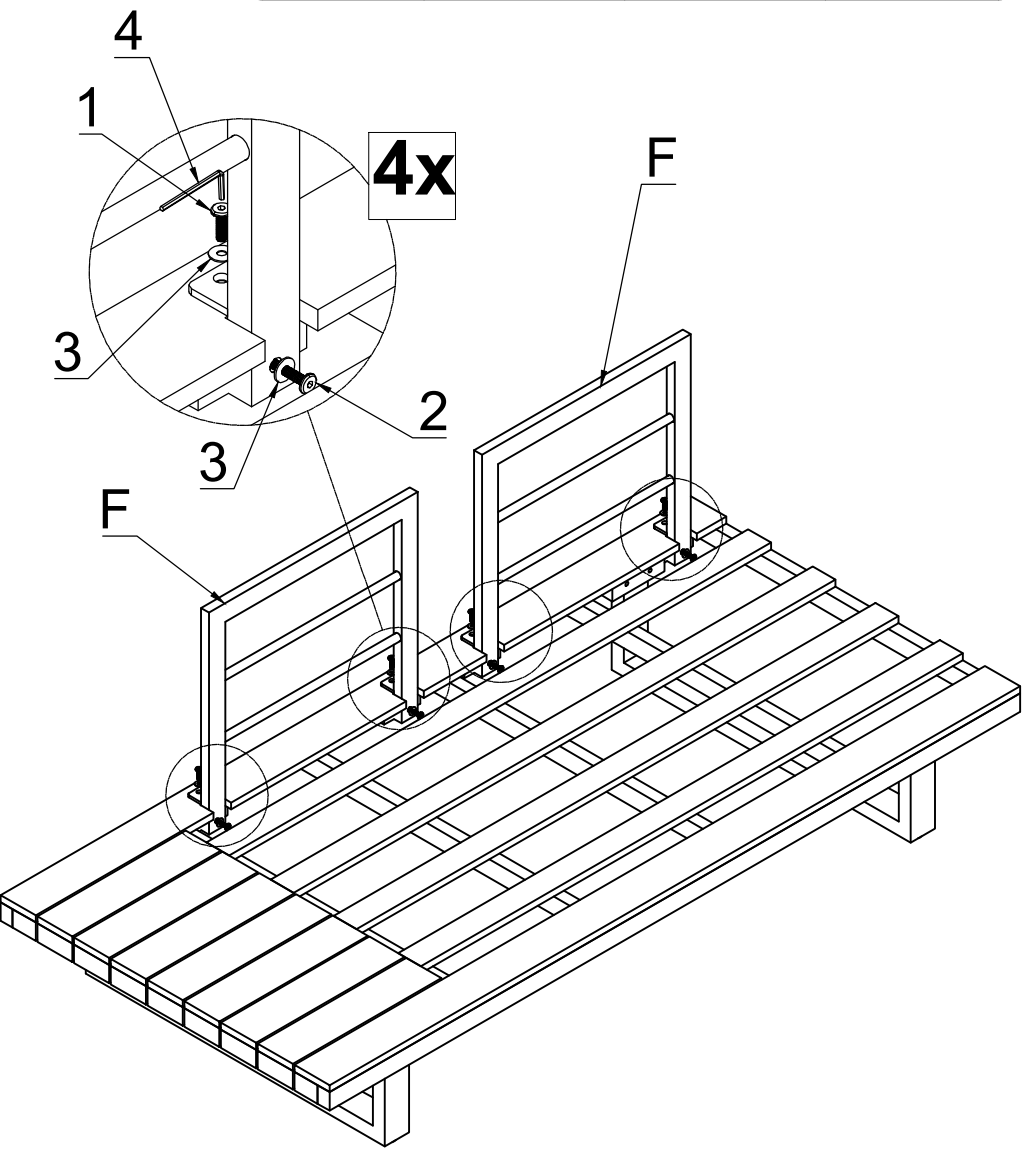


STEP 6

1	3	4
Bolt (M6 x 20) x8	16x7x1mm x8	x1

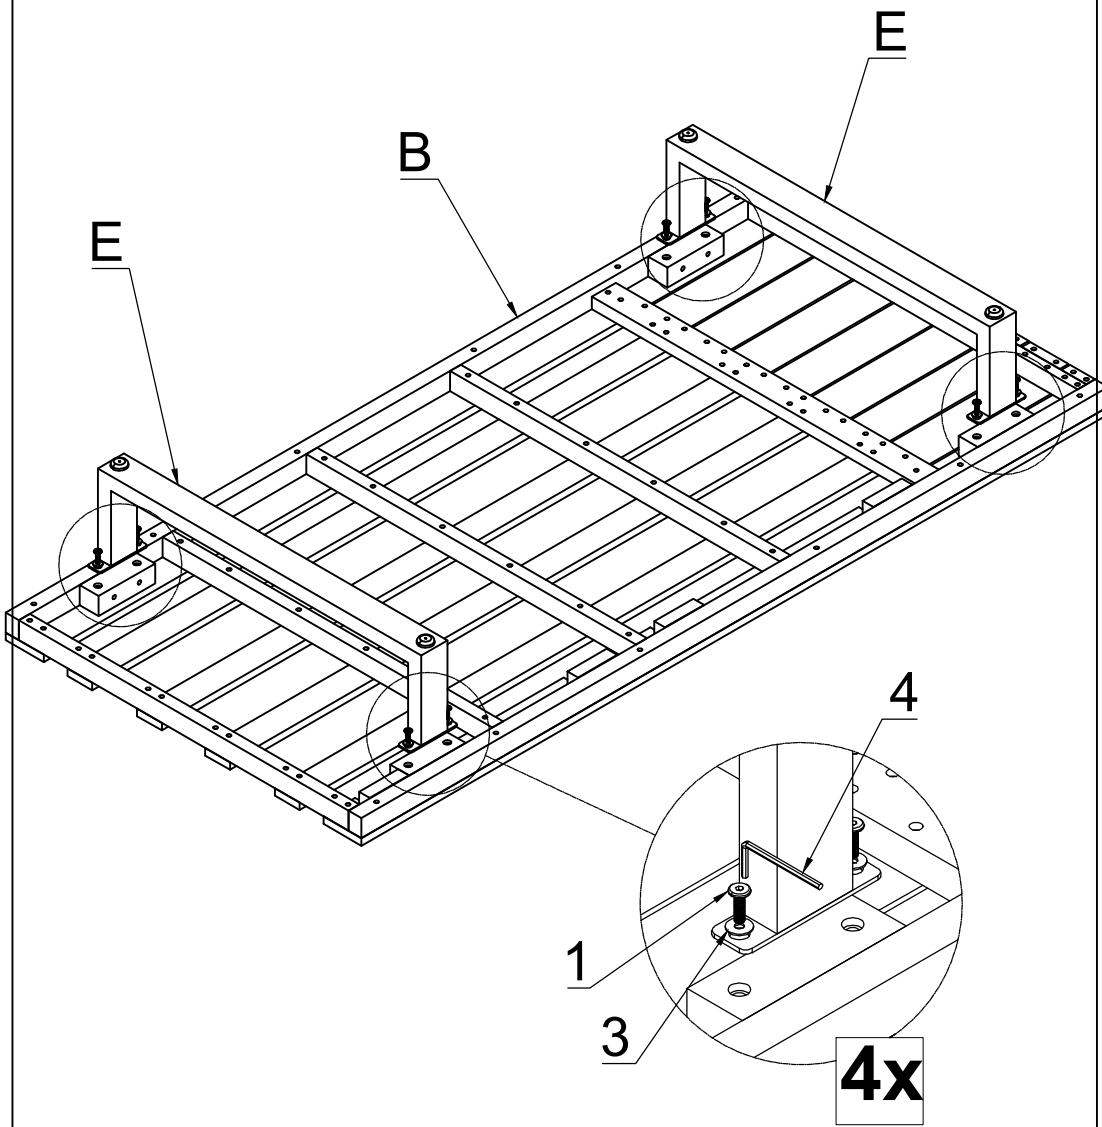


STEP 7

1	2	3	4
Bolt (M6 x 20) x4	Bolt (M6 x 40) x4	16x7x1mm x8	x1

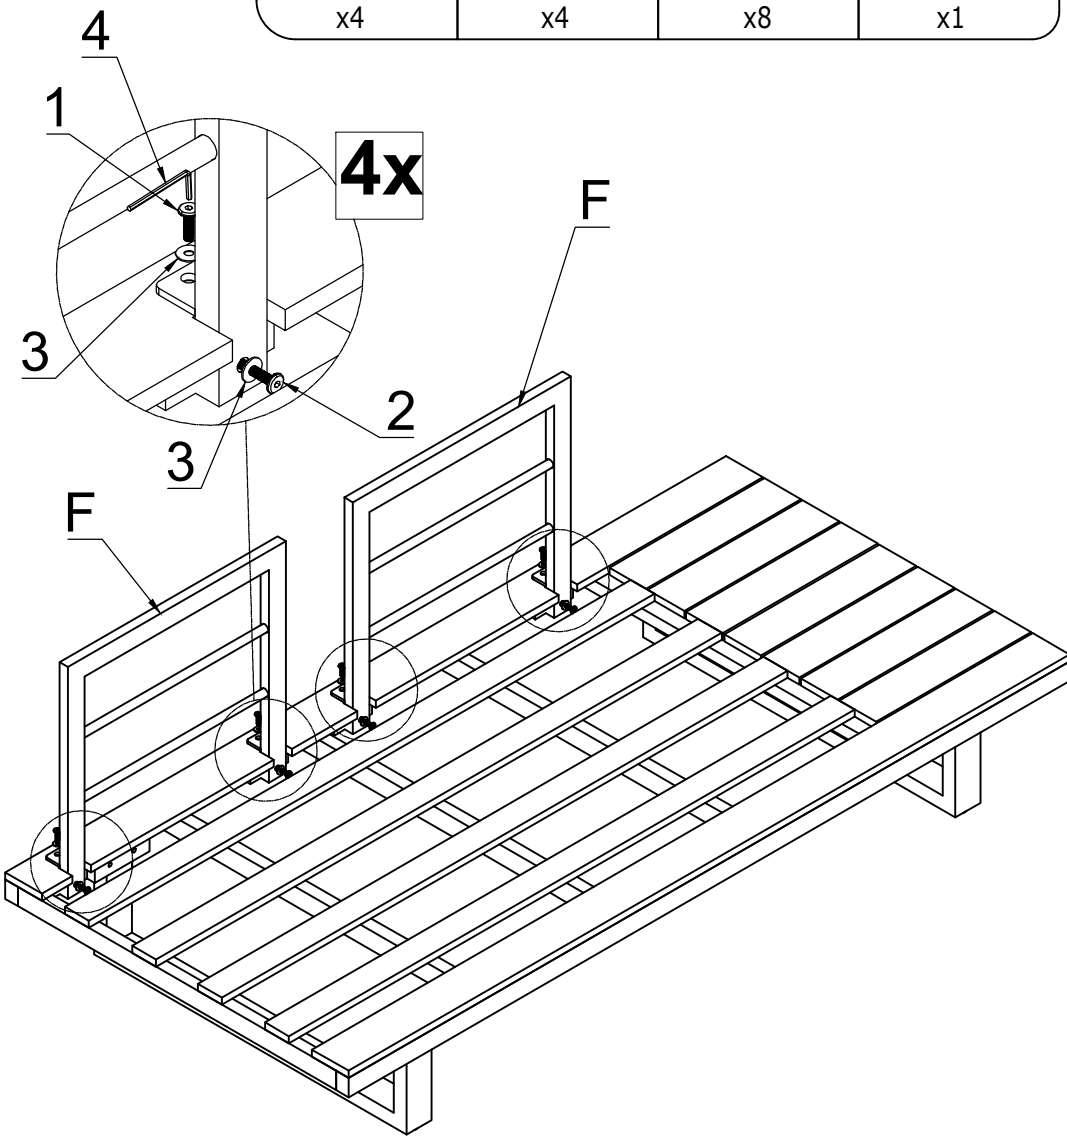


STEP 8

5
x4

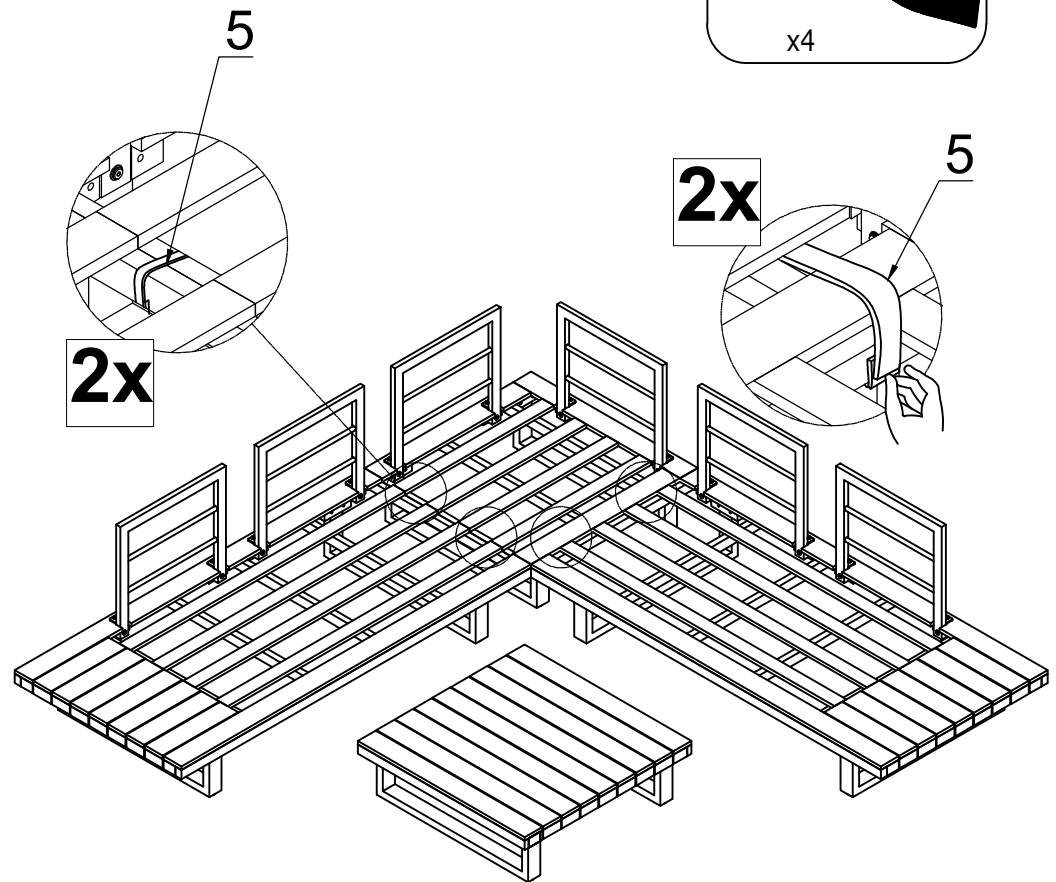

STEP 9

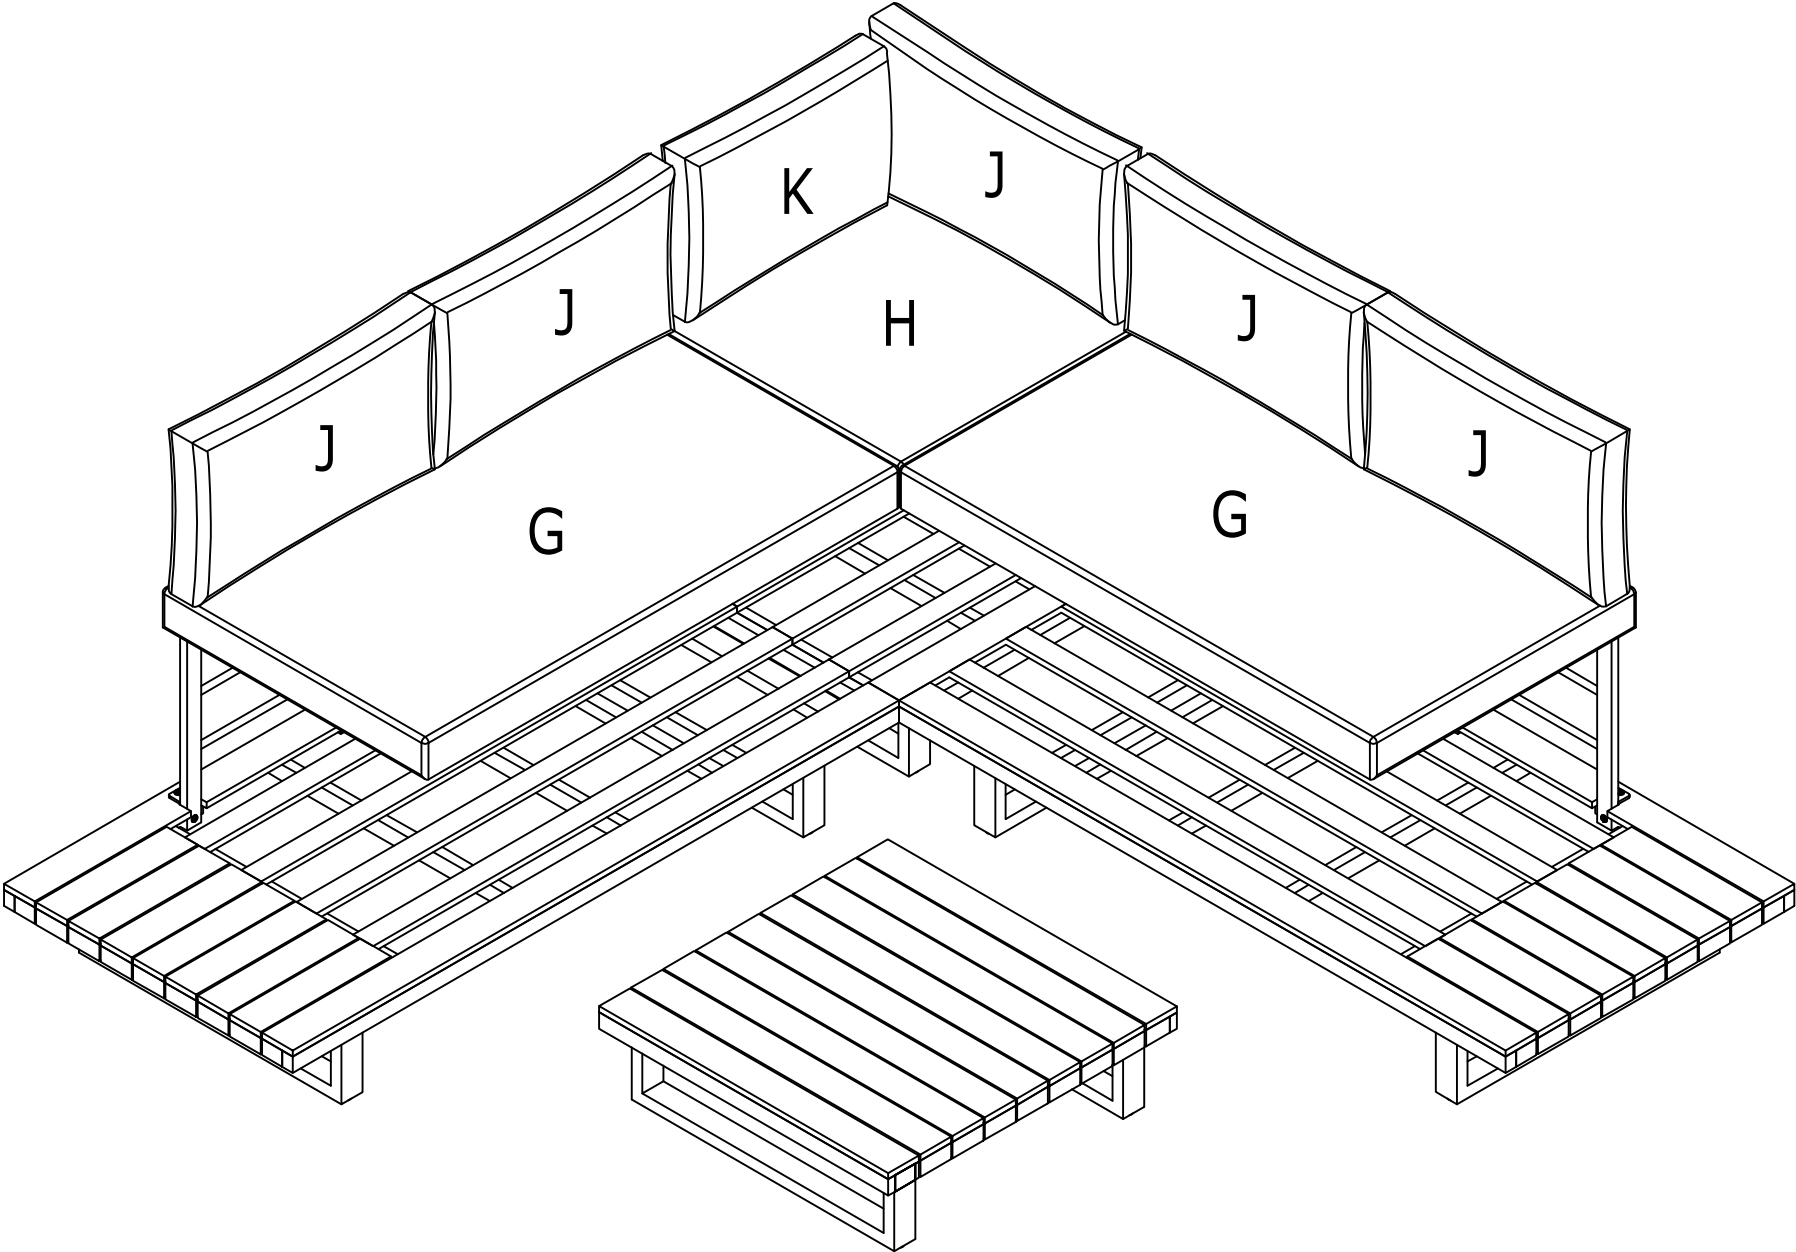

## Cover for Laska sofa set

