



Garderobe

WL6.901

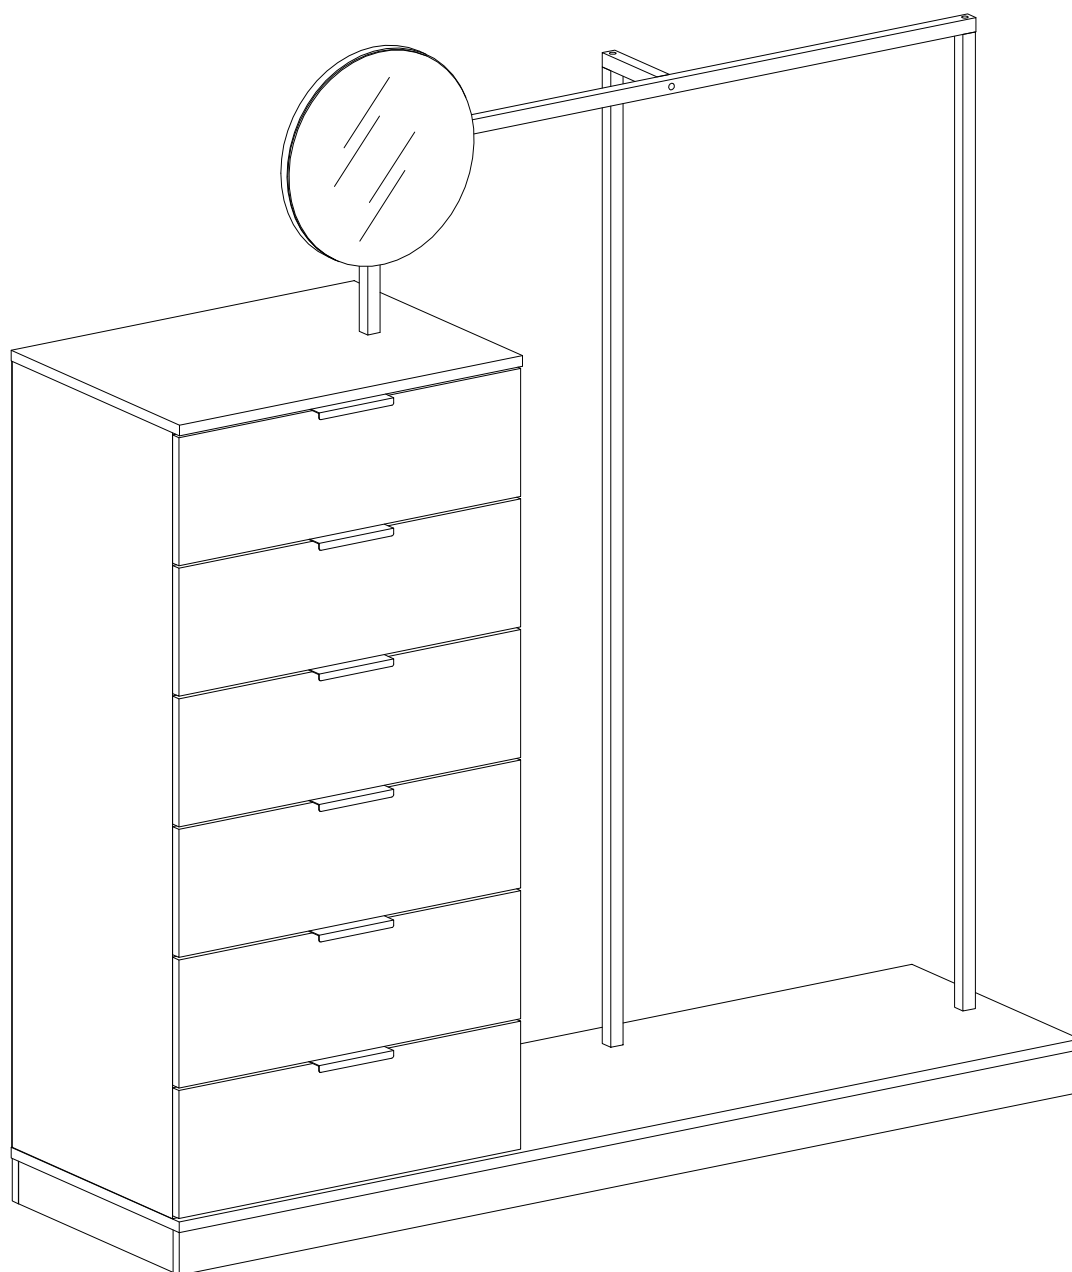


WOHNLING®
Möbel zum Wohlfühlen

Parts List

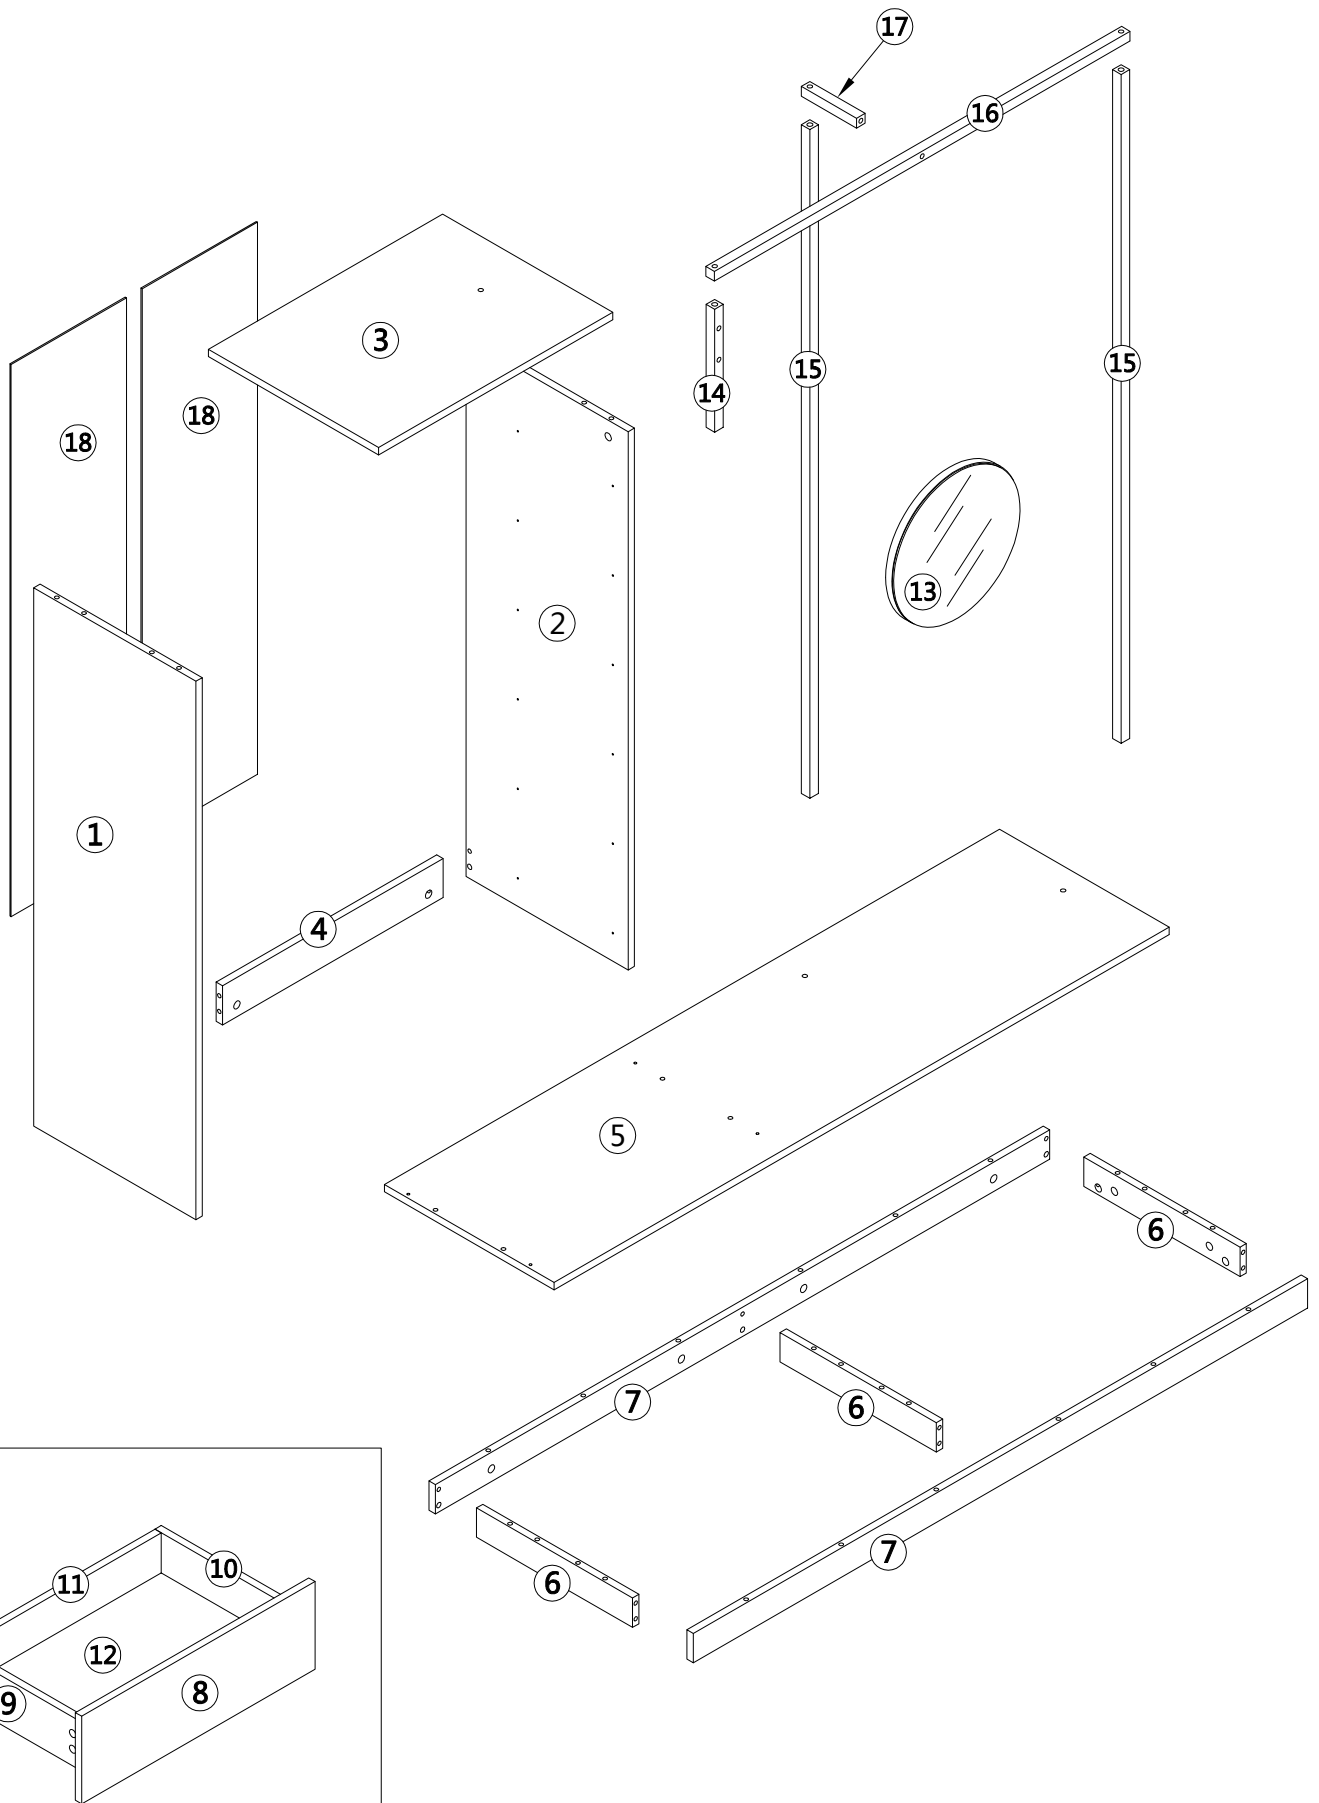

x 6


Hardware

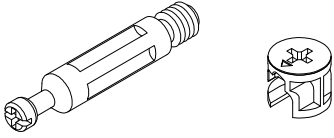

A1


A2

A x 50sets

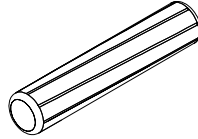


8 x 40MM

B x 26pcs




3.5 x 14MM

C x 60pcs

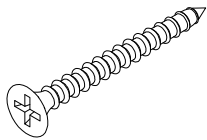


3.5 x 35MM

D x 28pcs

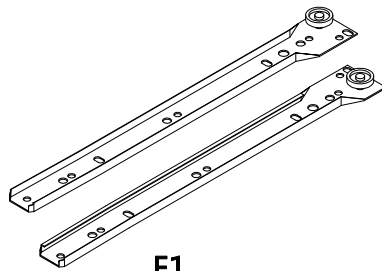


E1

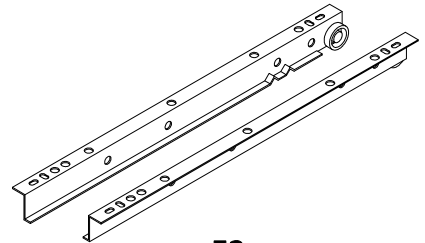


E2

E x 6sets

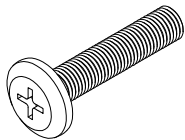


M6 x 30MM

F x 2pcs

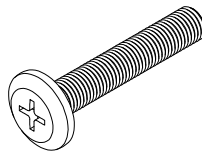


M6 x 35MM


G x 7pcs

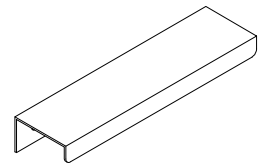


H x 6pcs

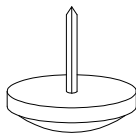

J x 9pcs

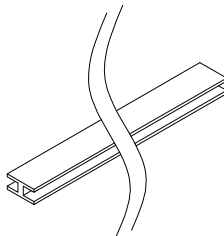



K x 1pc

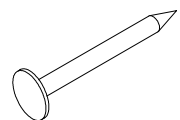

L x 26pcs





Step 1

A1 x 6 B x 10 C x 24 E1 x 12

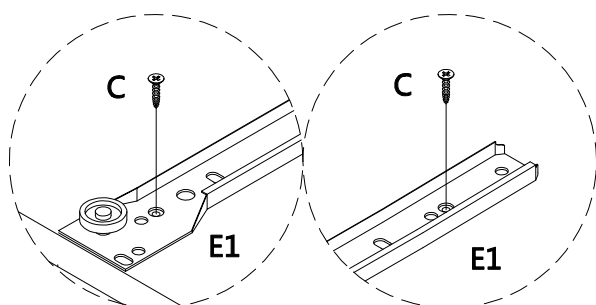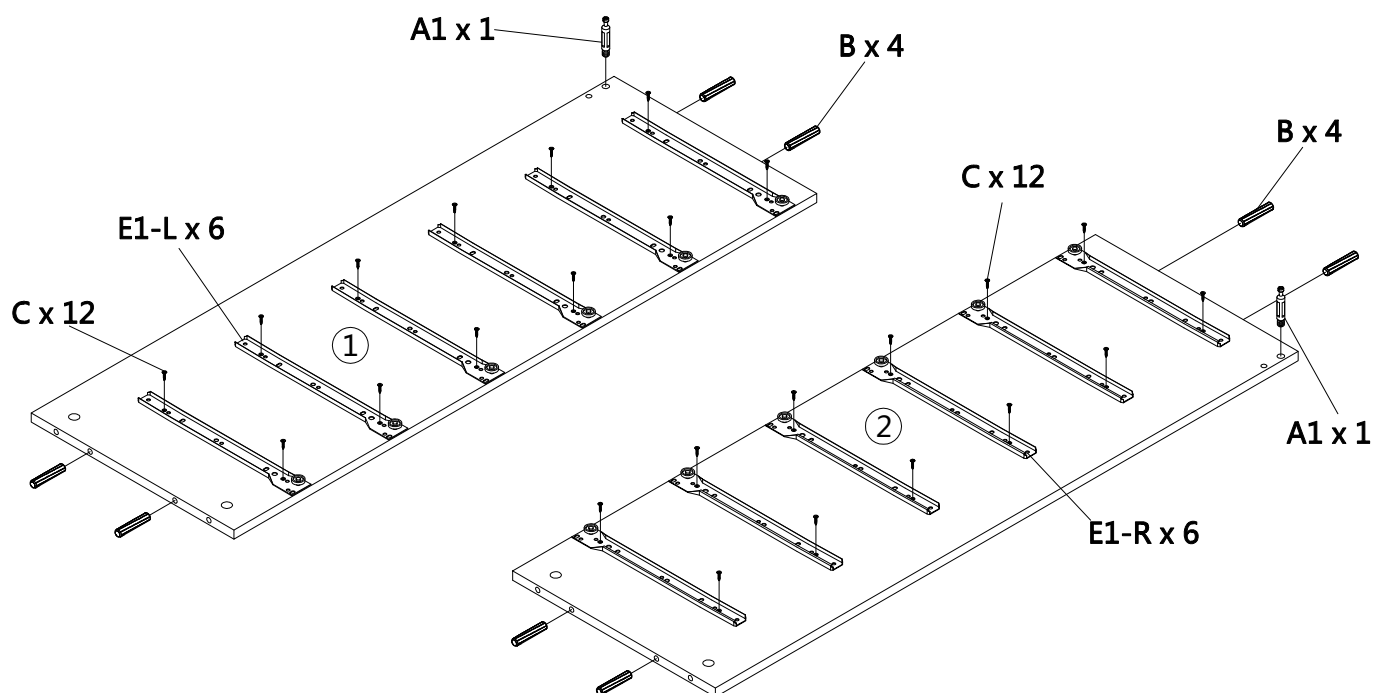


REMARK:

When installing, please make sure the screws are flattened, Not crooked; Otherwise the drawers will not be installed perfectly.

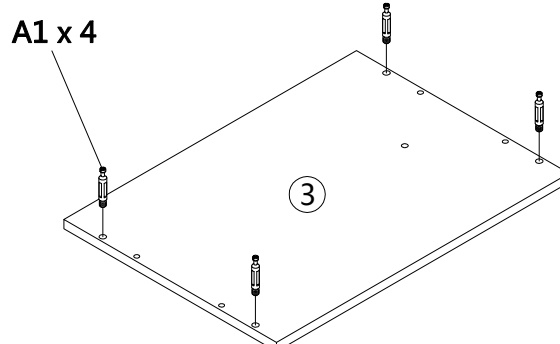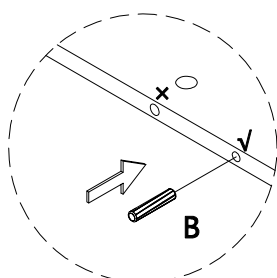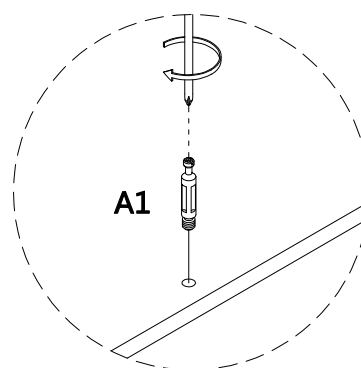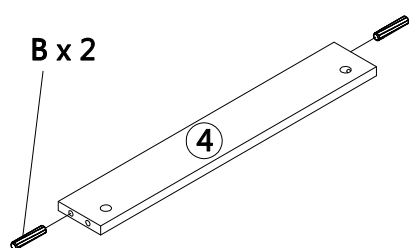



Step 2

A2 x 6

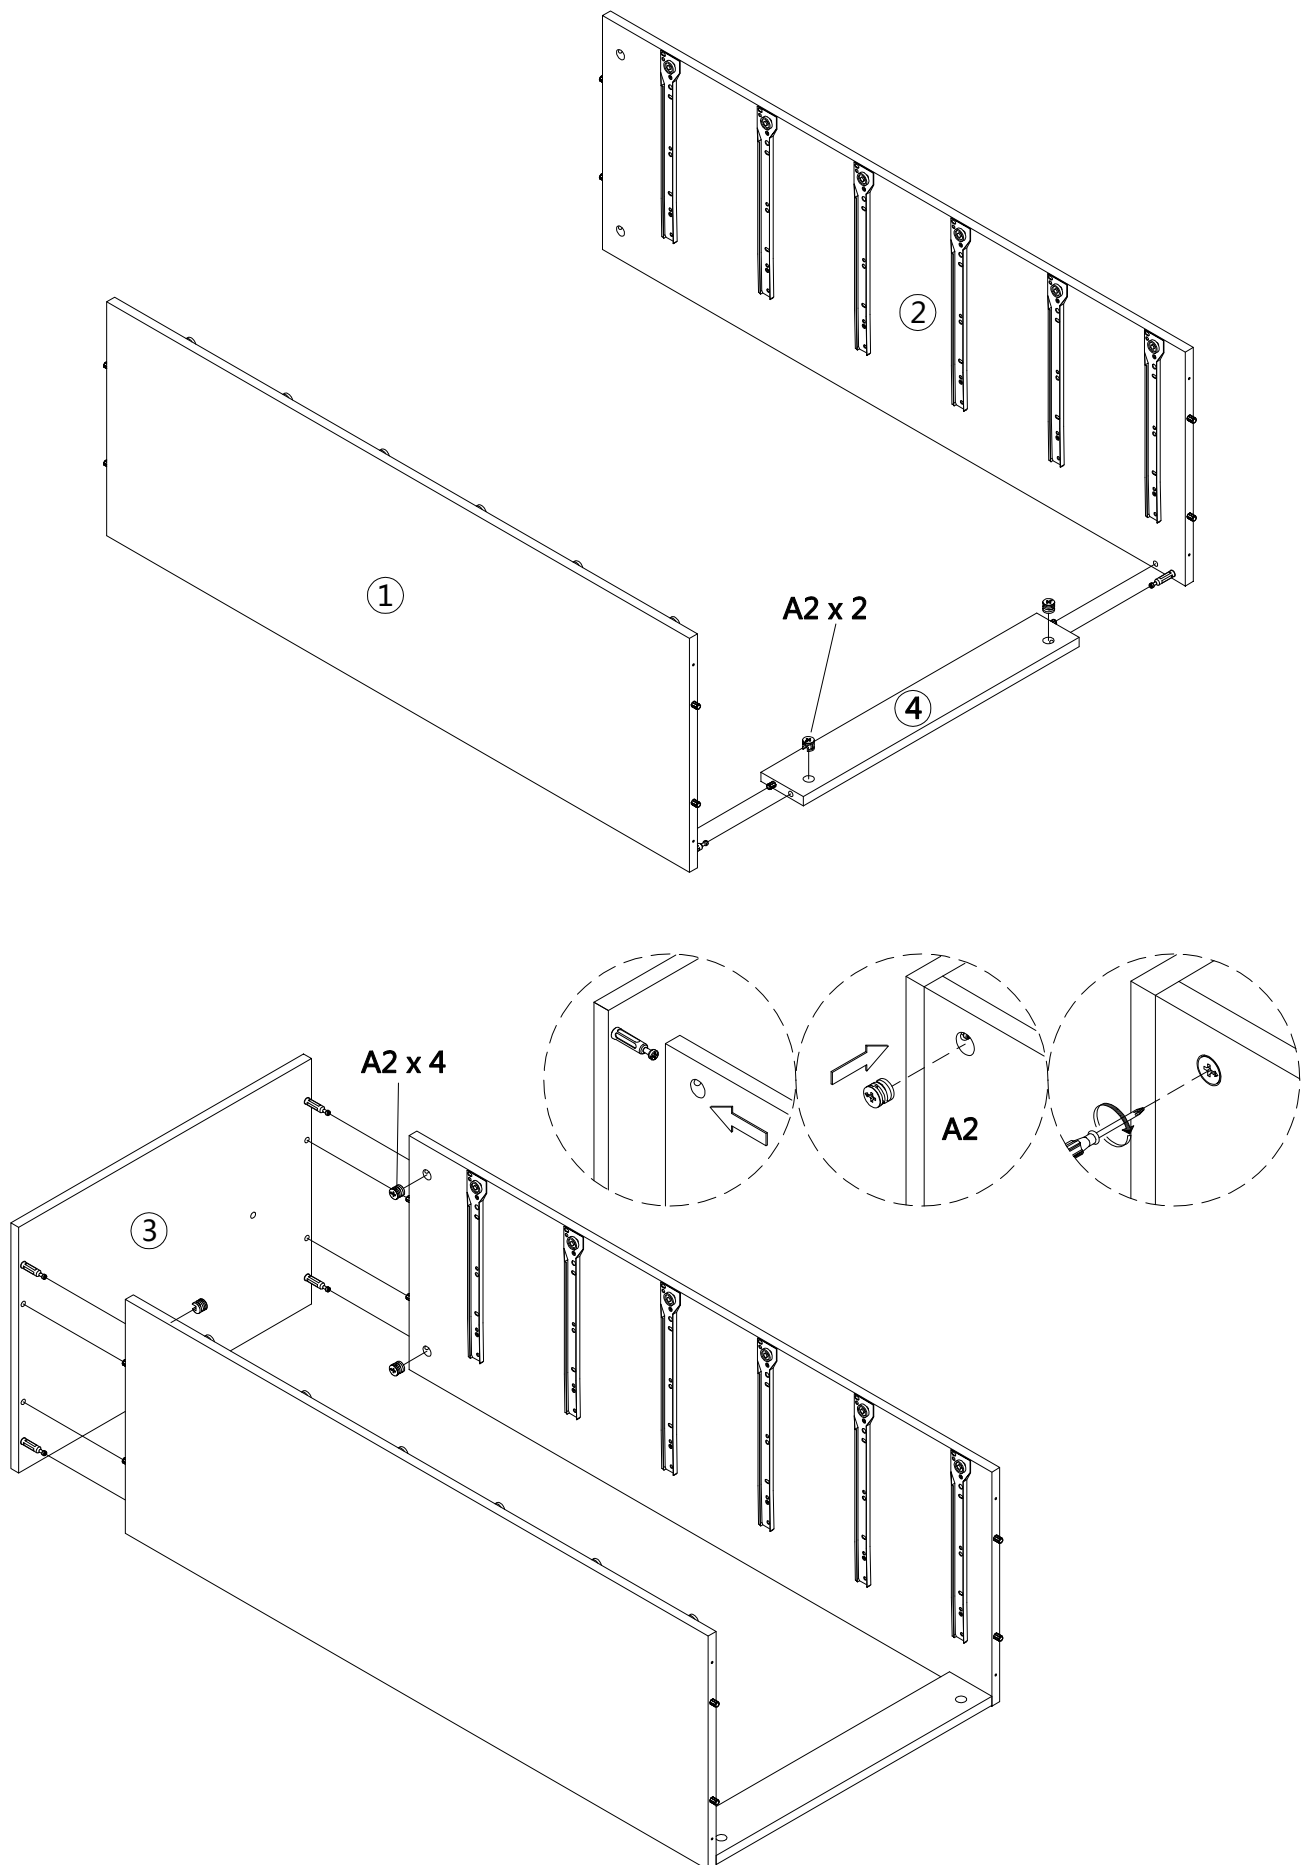








Step 3

A1 x 14 D x 4

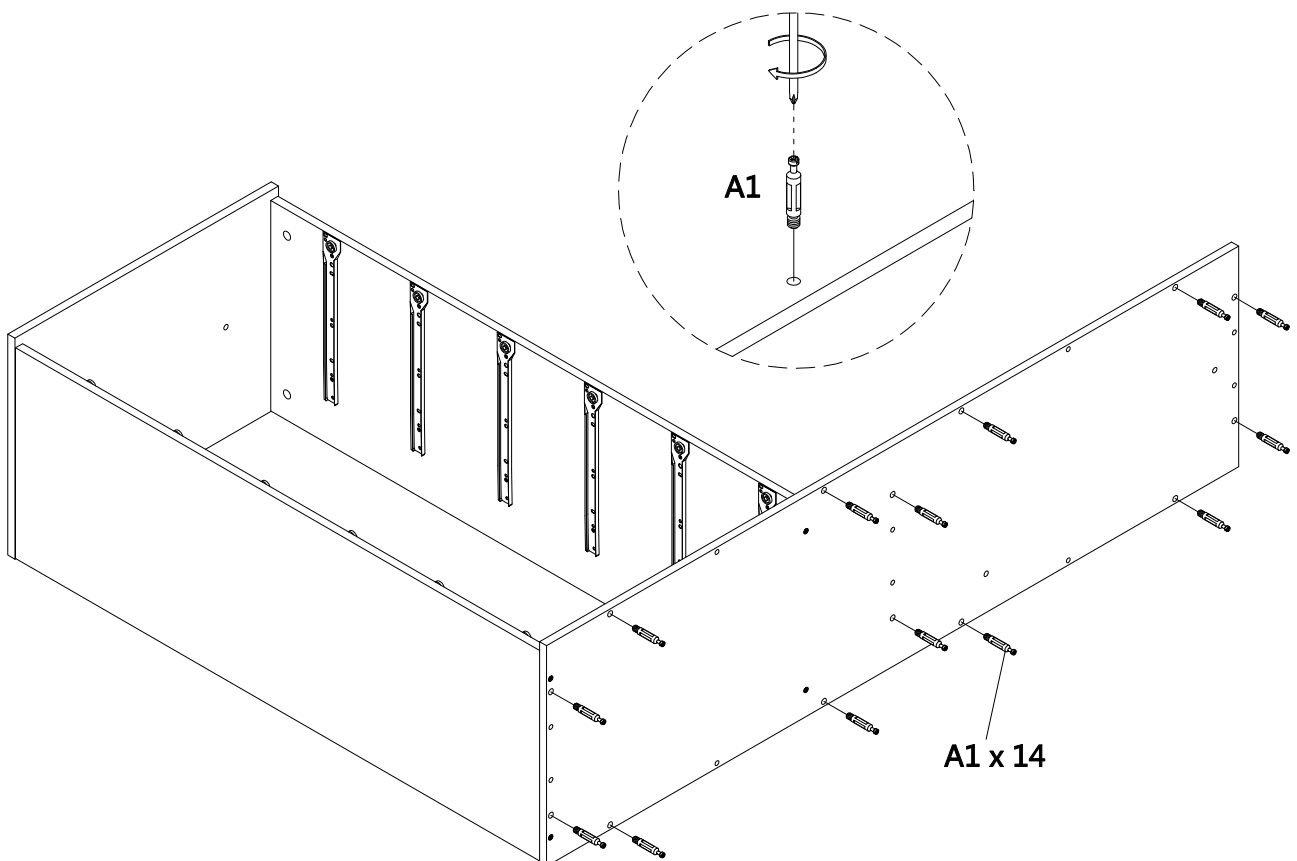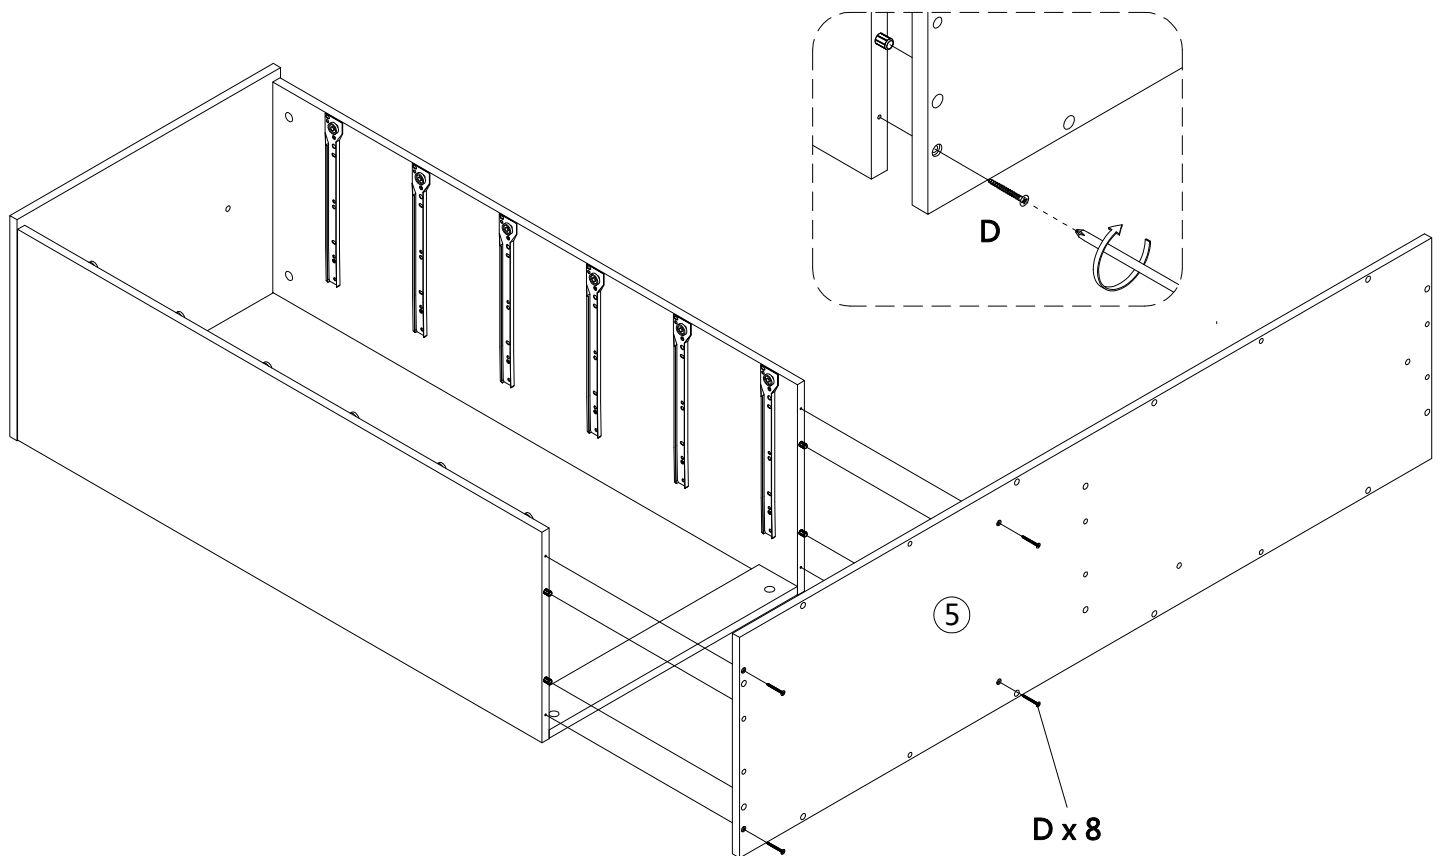


Step 4

A x 6 B x 16 J x 9

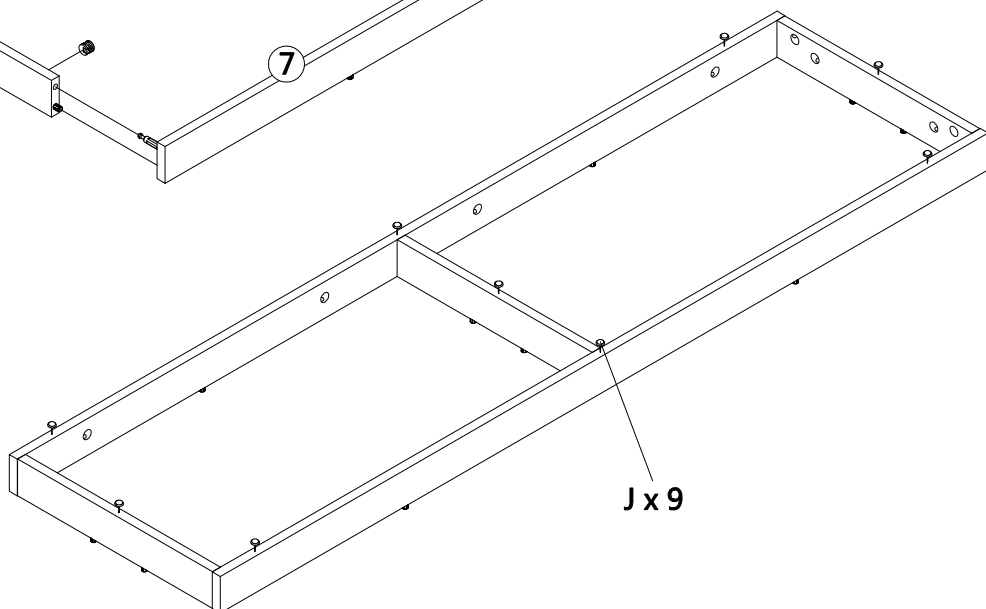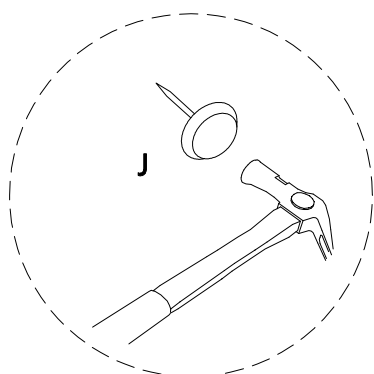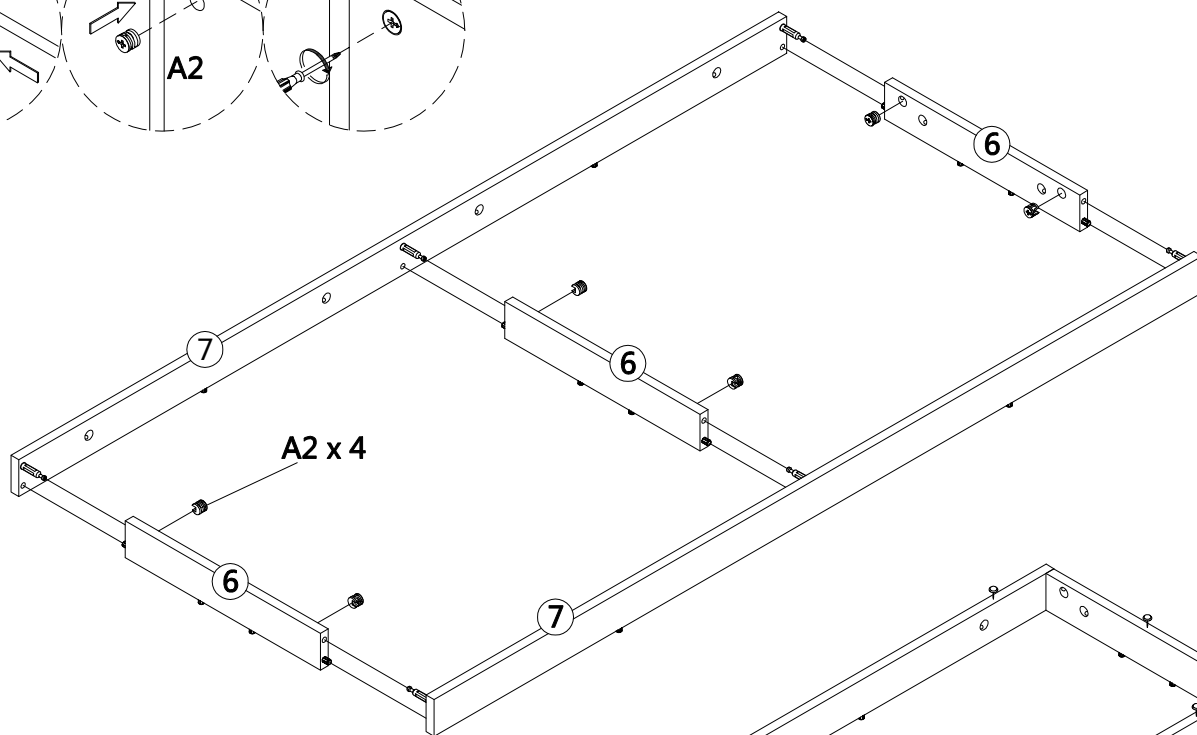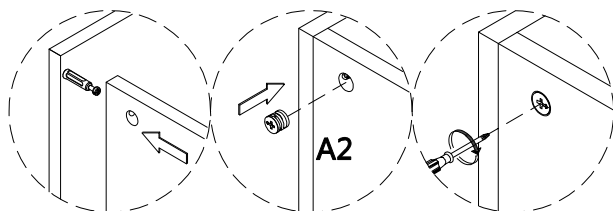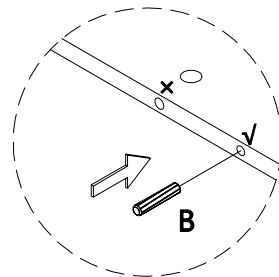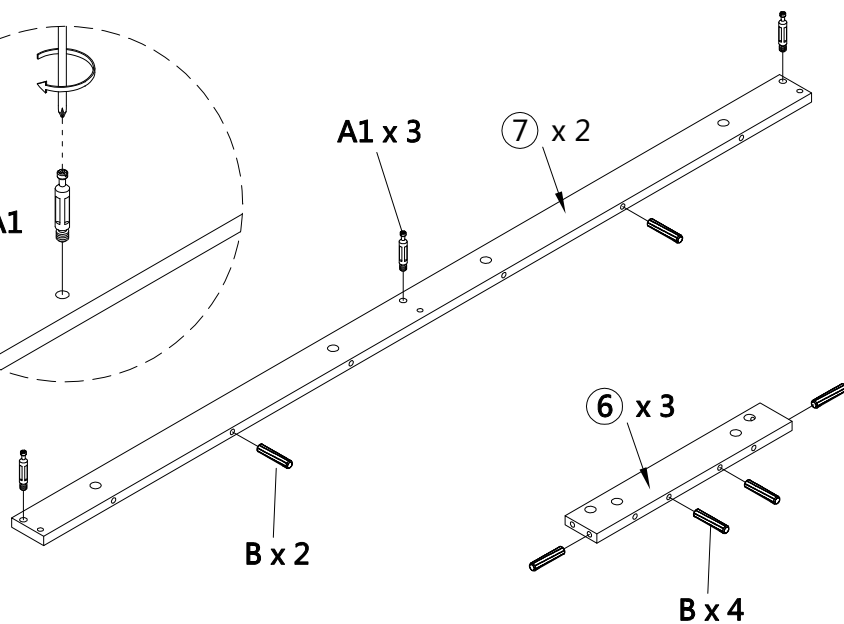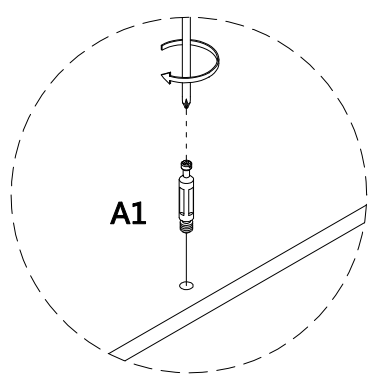


Step 5

A2 x 14

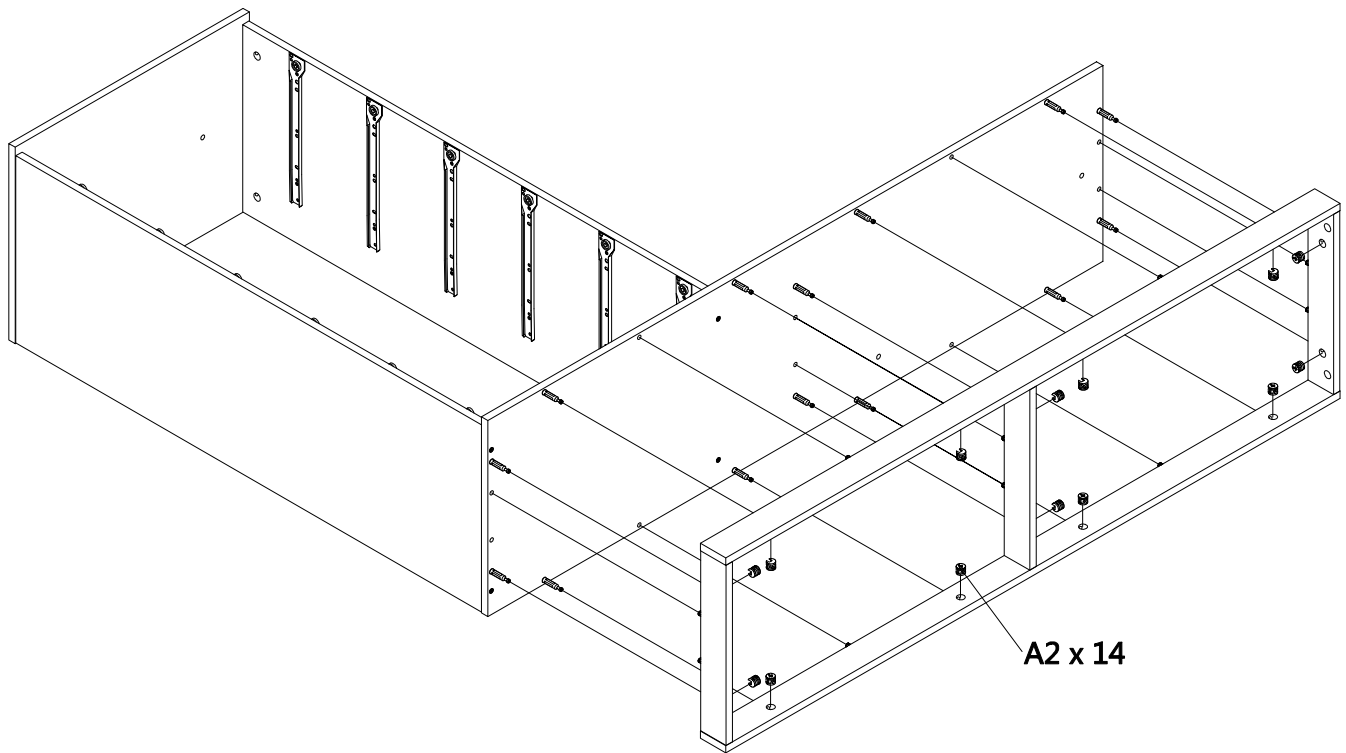




Step 6

G x 4

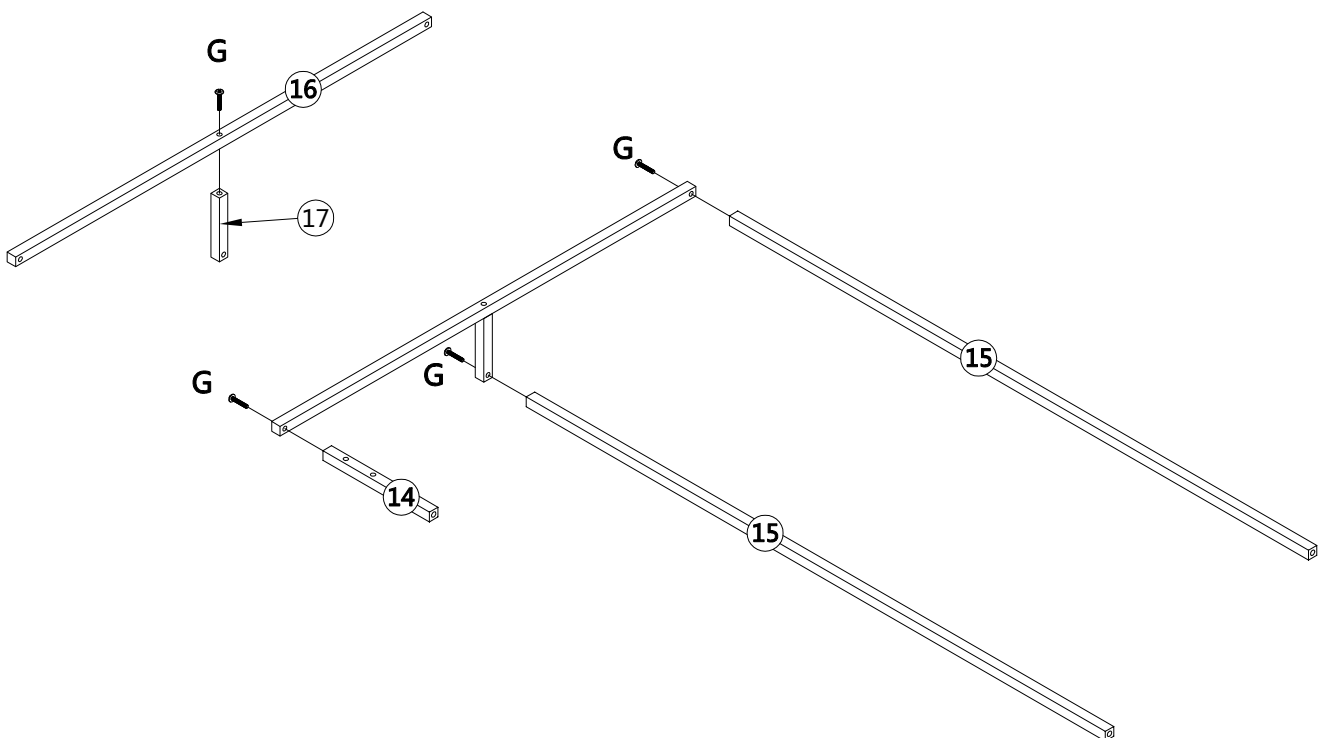




Step 7

F x 2 G x 3

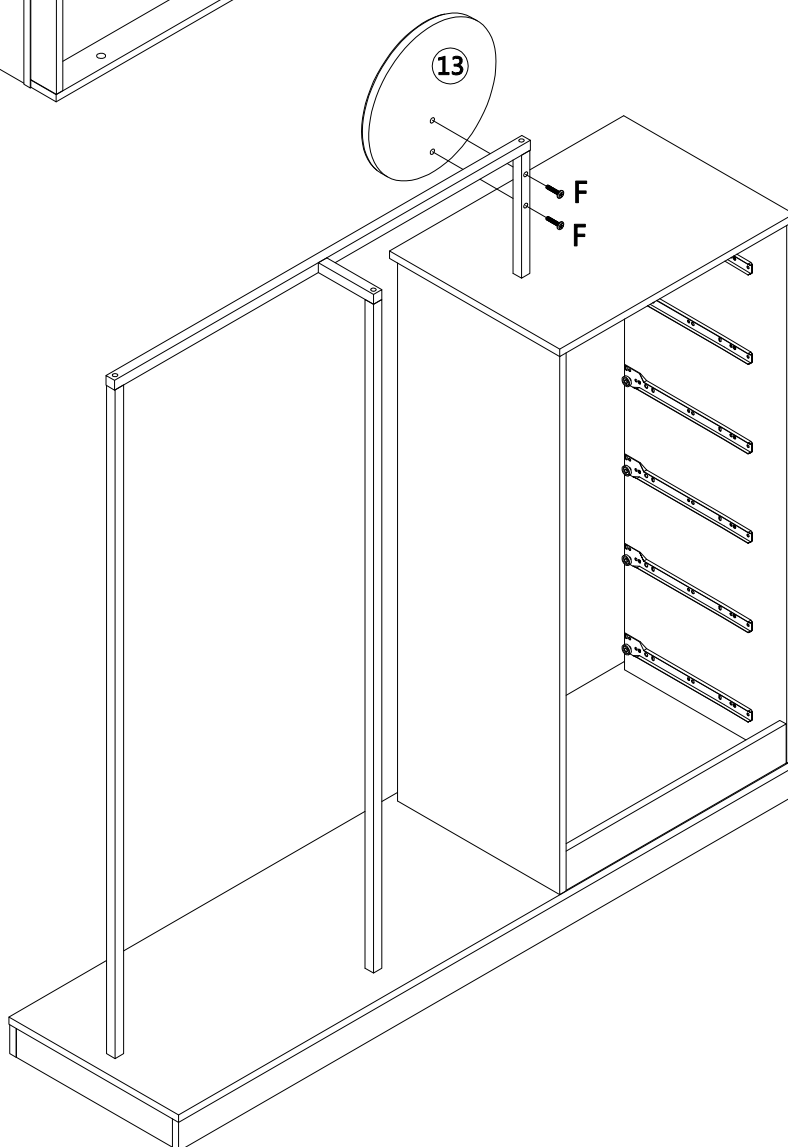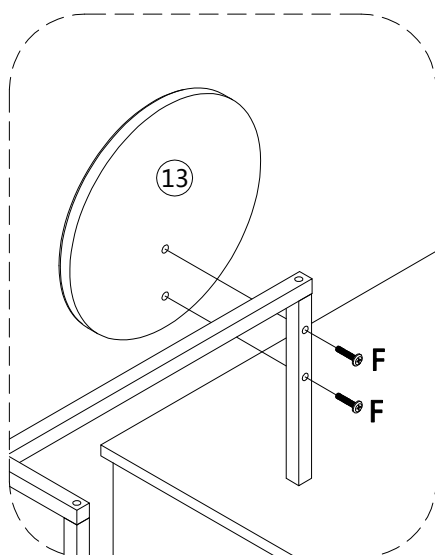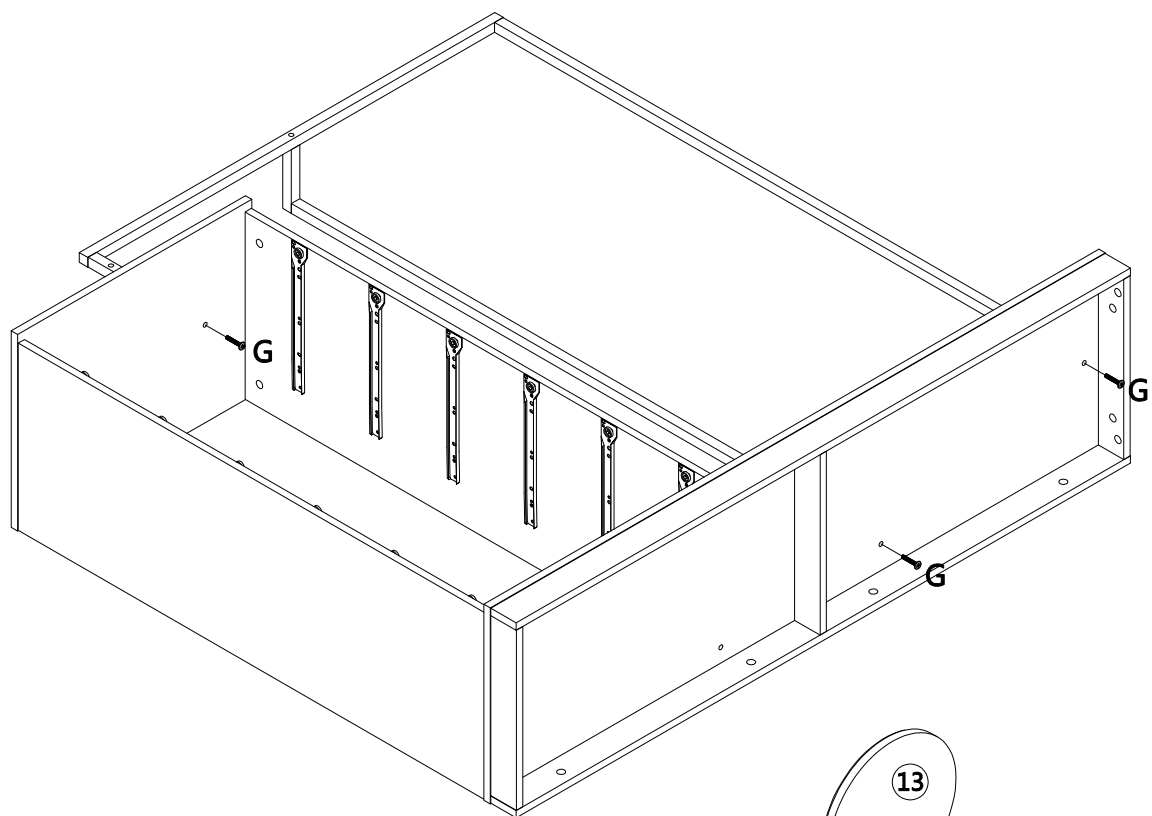

Step 8










K x 1 L x 50

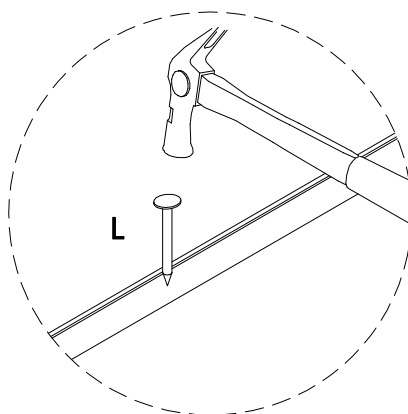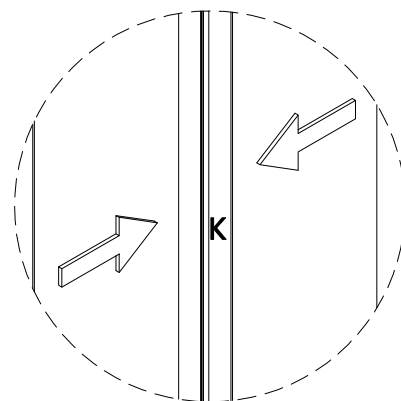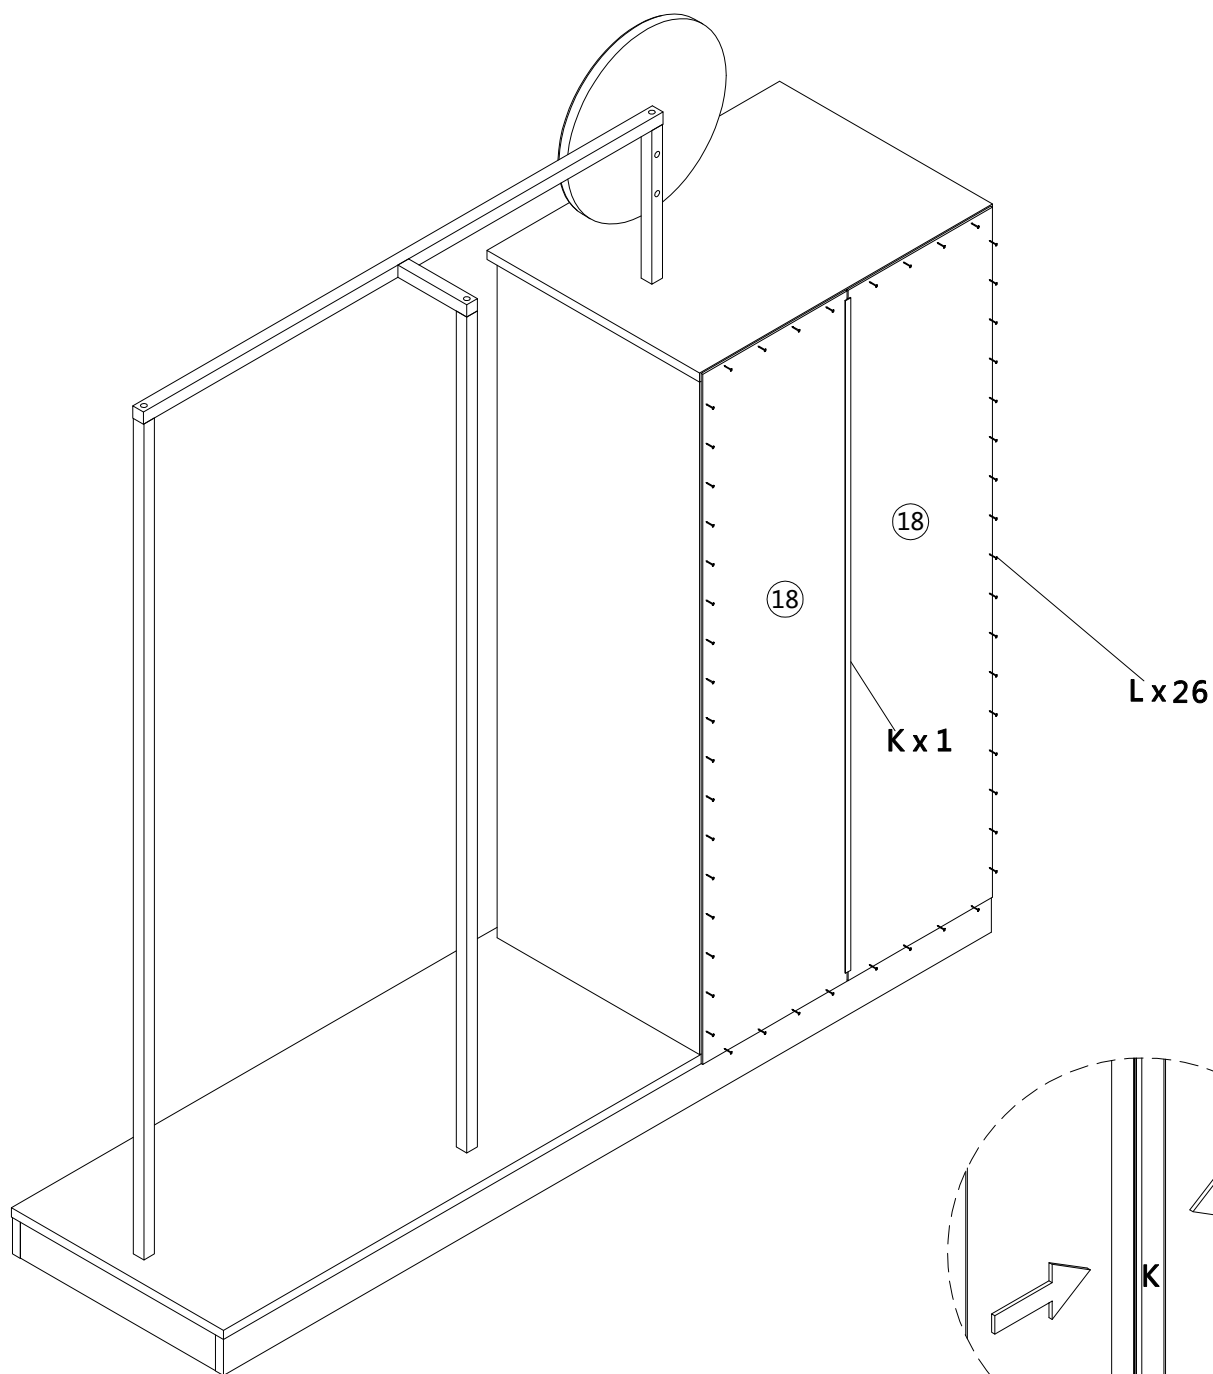

Step 9

A x 24 C x 36 D x 24 E2 x 12 H x 6

x 6

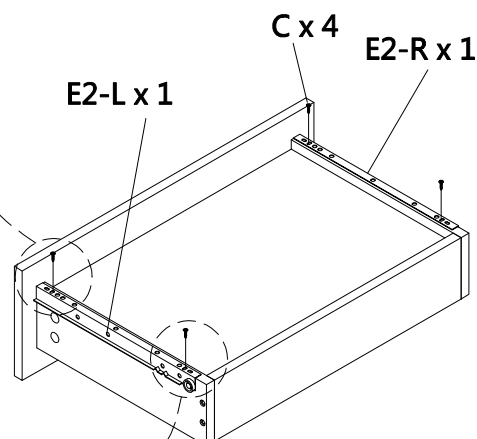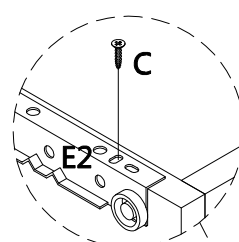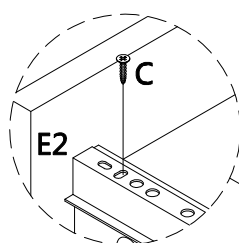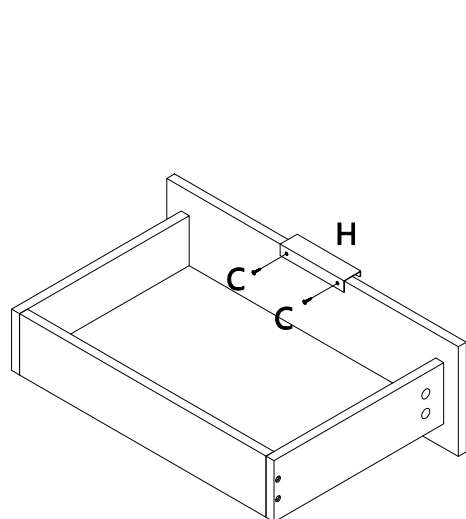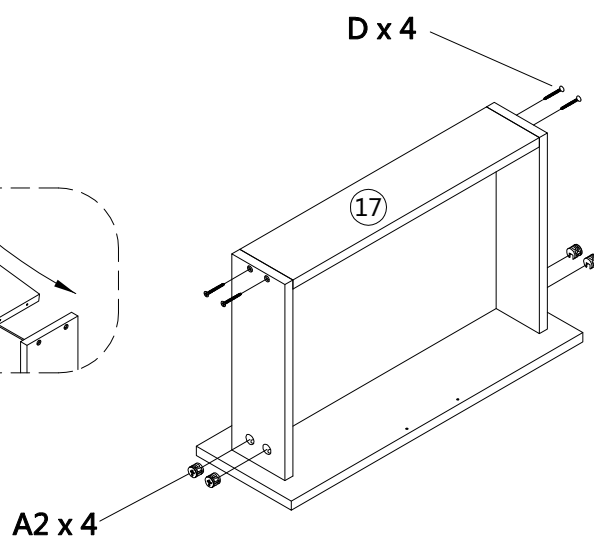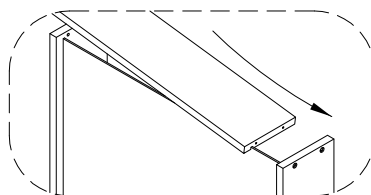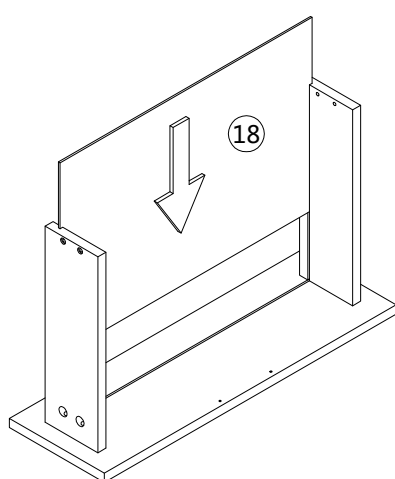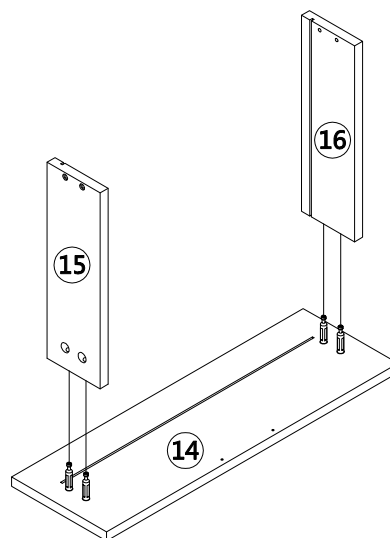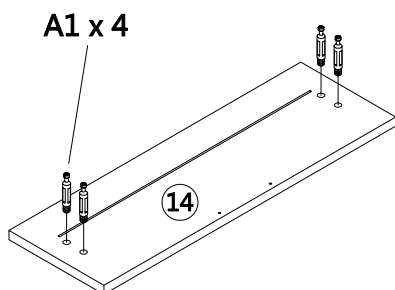

Step 10

