
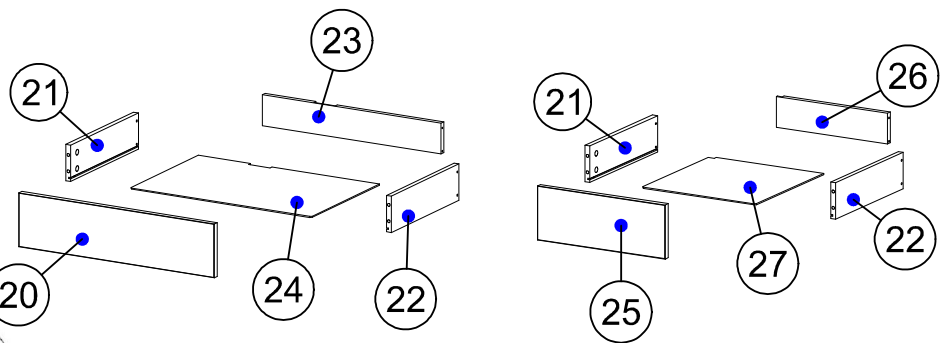
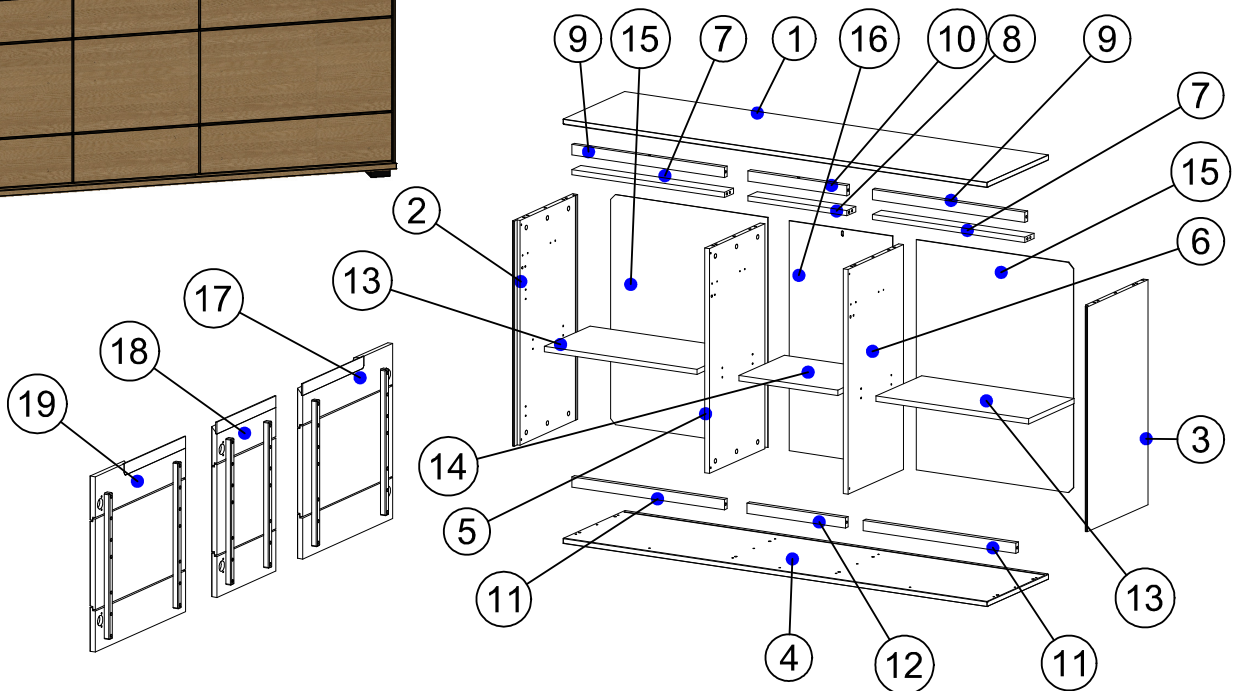


3996


Versionsnummer:

06.2023



Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.



x2 120 Min



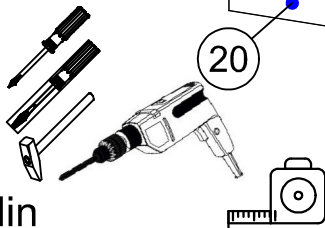


A Ø 8x30 18	A1 Ø 8x50 2	B 42	D 42	D1 12/12	D2 6/6	E Ø 6.3x13 6	F 6	G Ø 4x30 10
H 25	I 12	J Ø 5x13 36	L Ø 7x50 12	O 3SET/KPL	T Ø 3x16 6	P 18 10	V 5	U 1

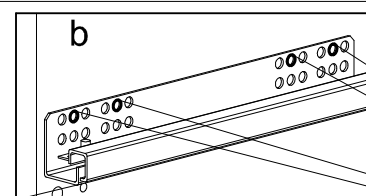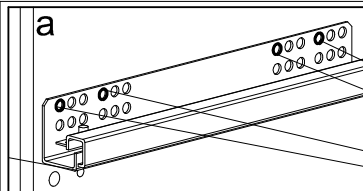



Links

Recht

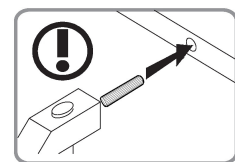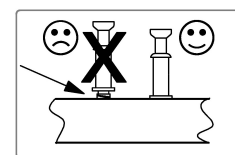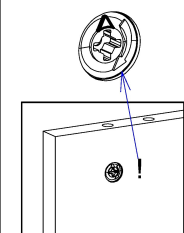

Links


Recht

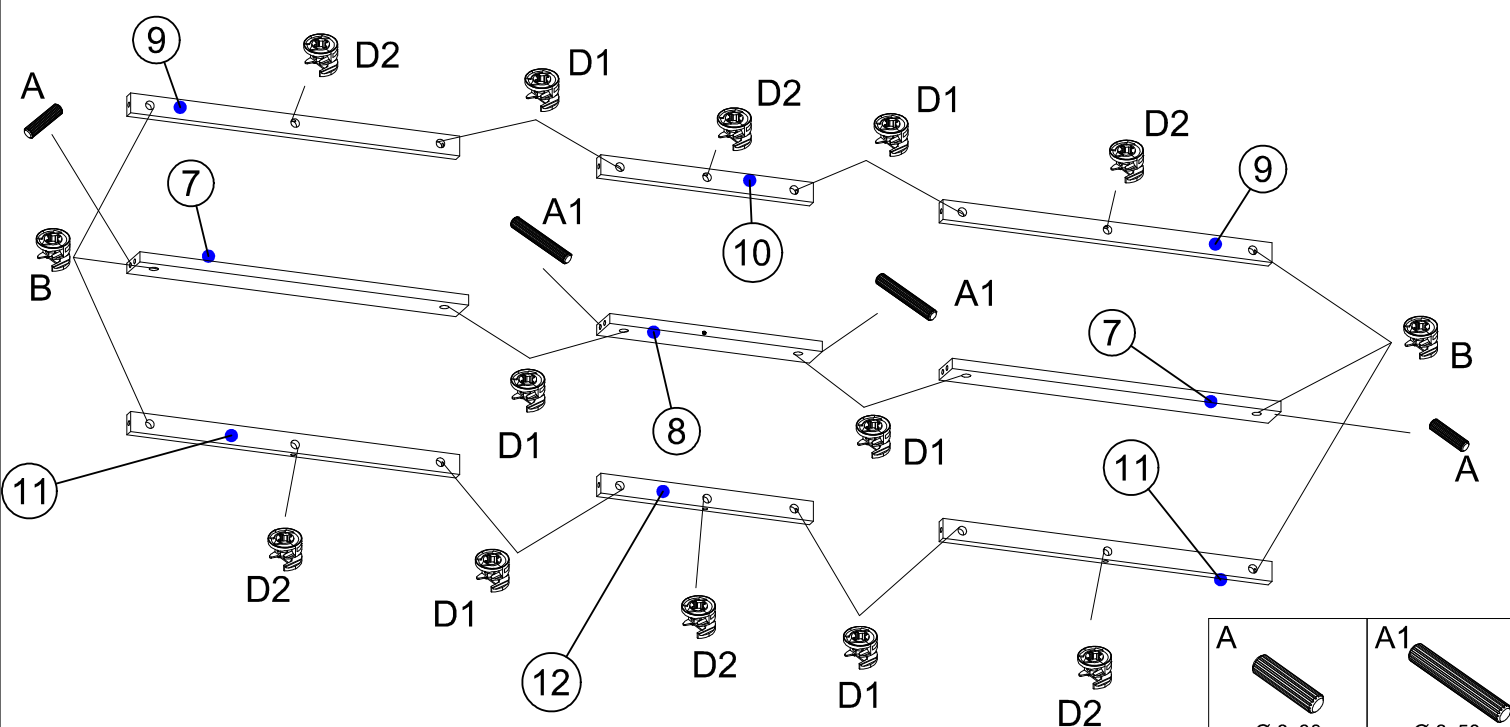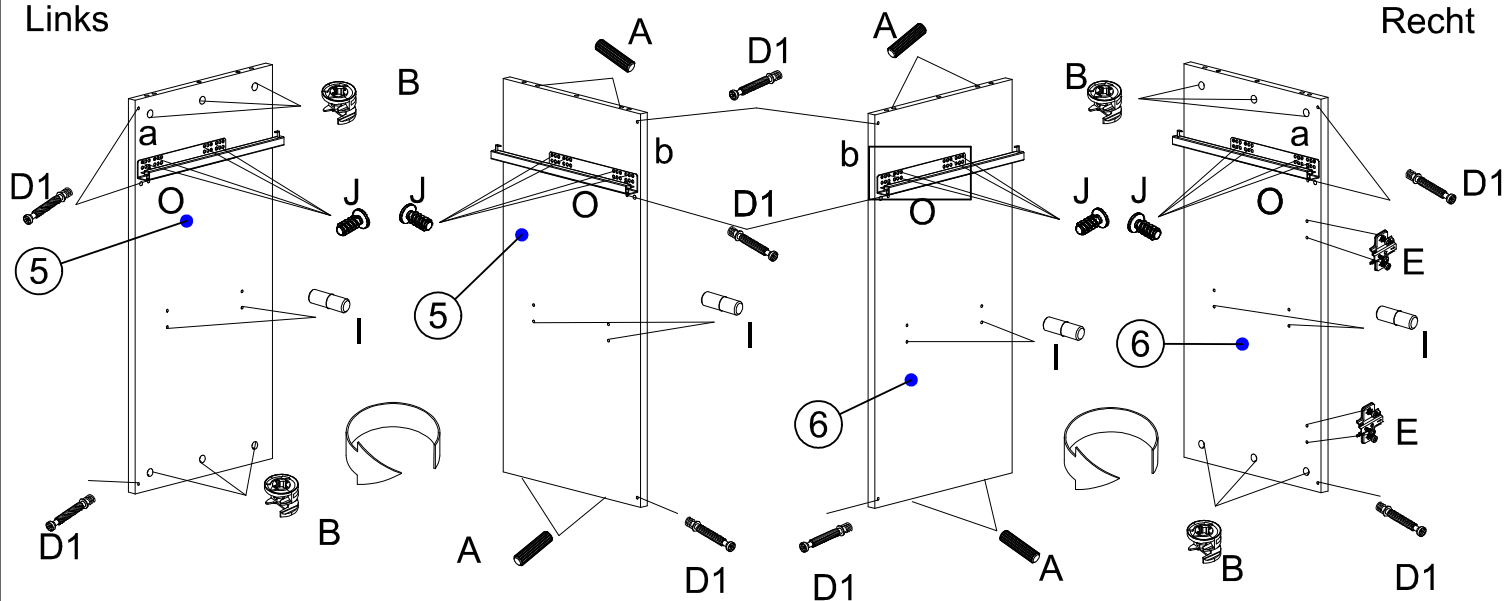


A	A1
Ø 8x30 18	Ø 8x50 2

I	B	D	D1	D2	E	I	J	O
	30	6	12/12	6/0	6	12	Ø 5x13 24	3SET/KPL


4

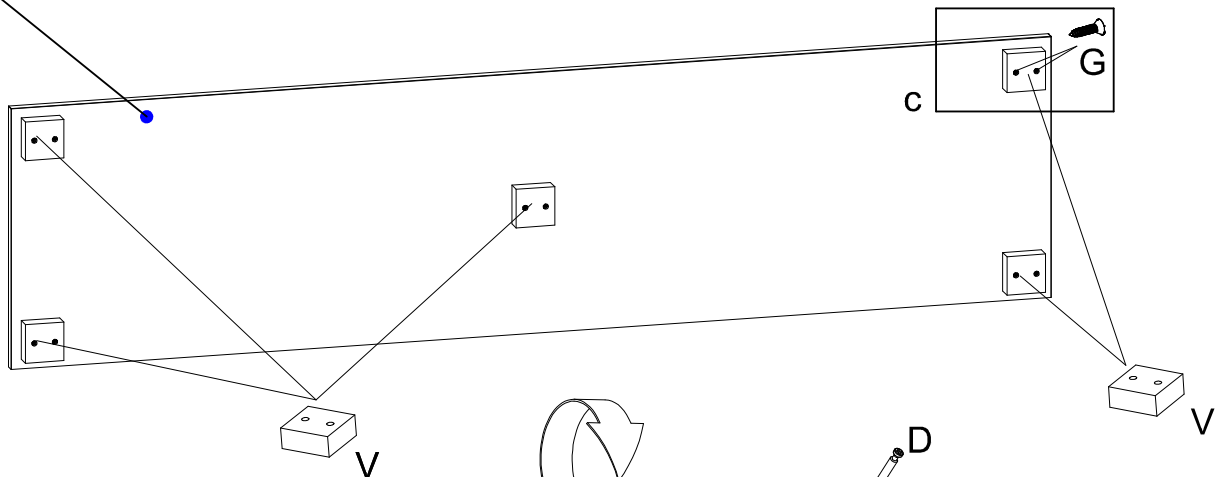





4



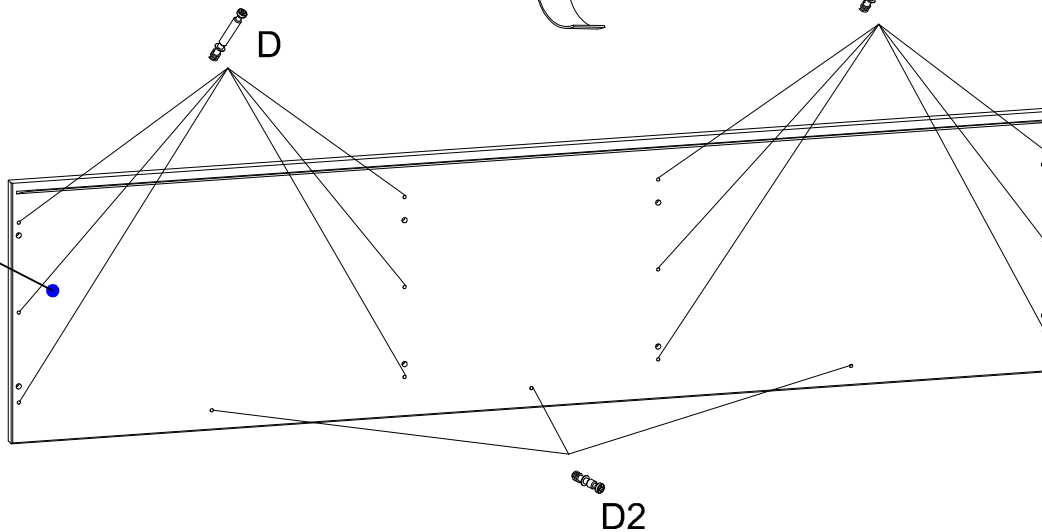


1



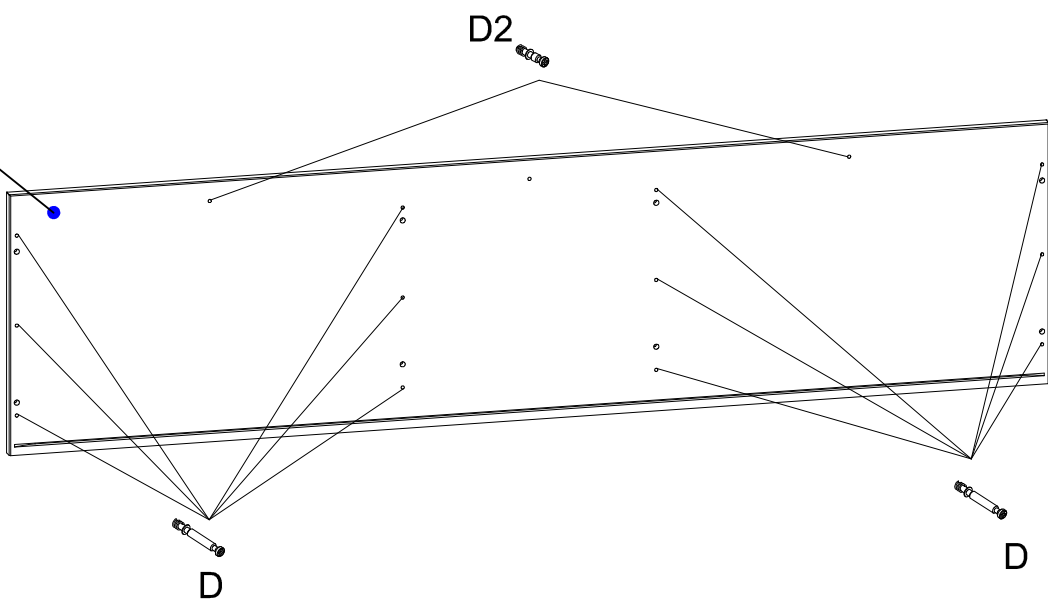





II

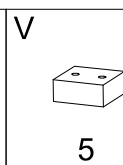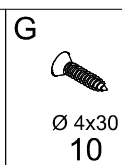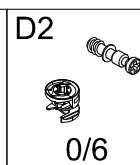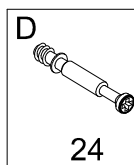


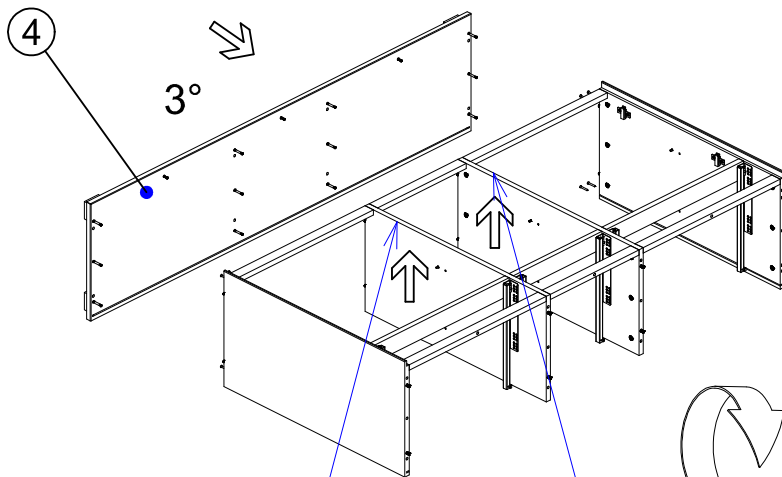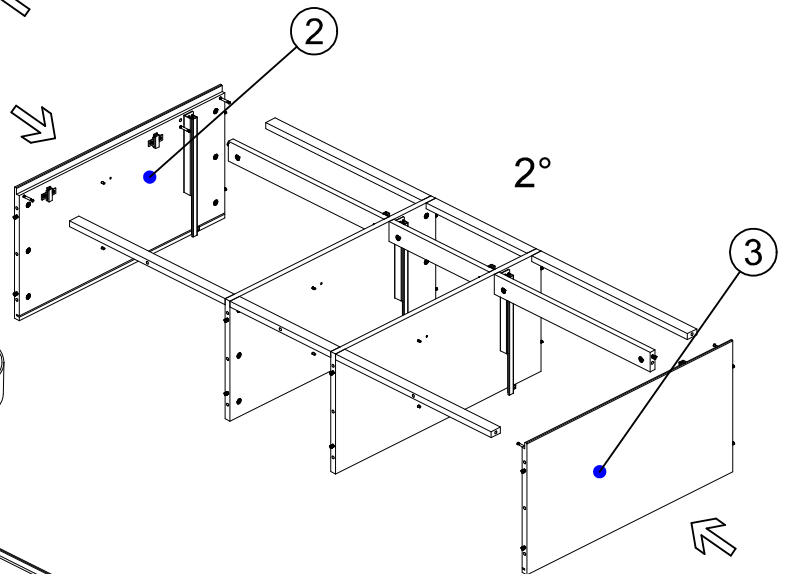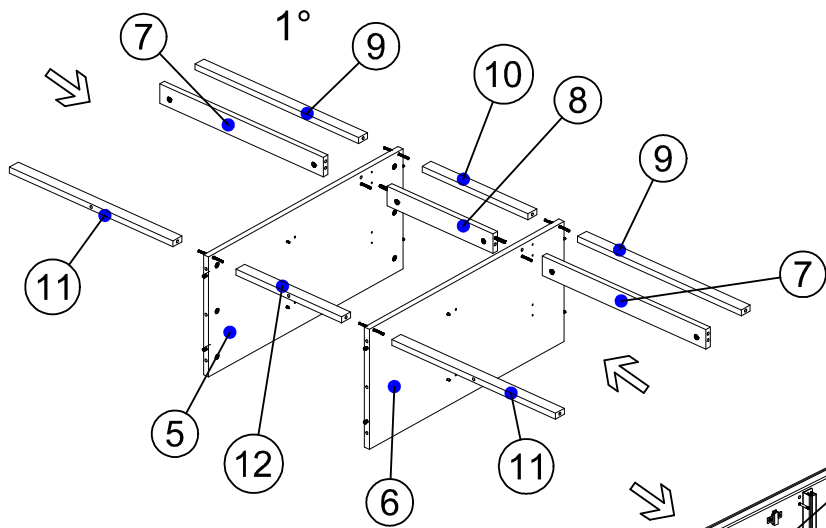

Heben Sie vor dem Zusammenbau des Elements 4 die Elemente 5 und 6 um 2 cm an.

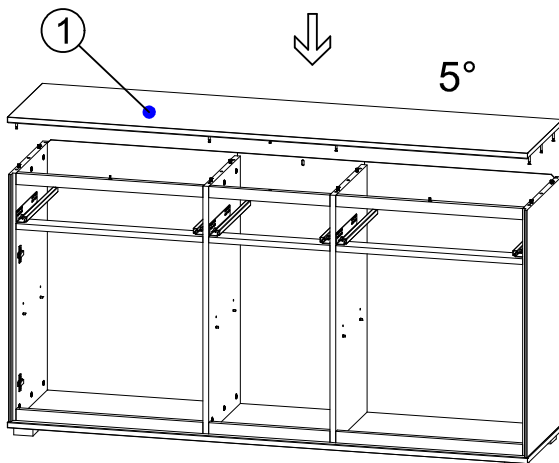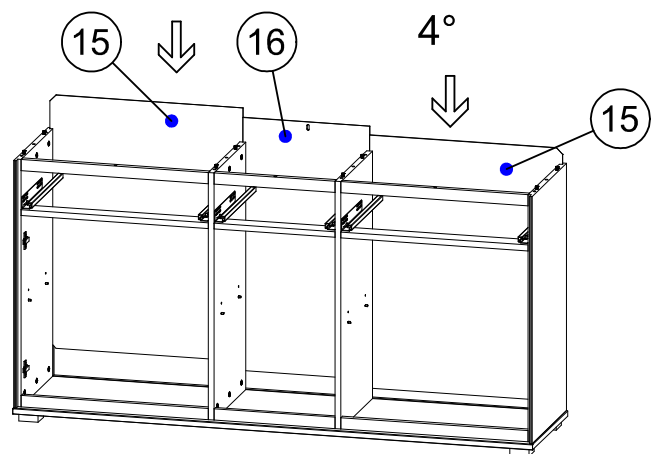

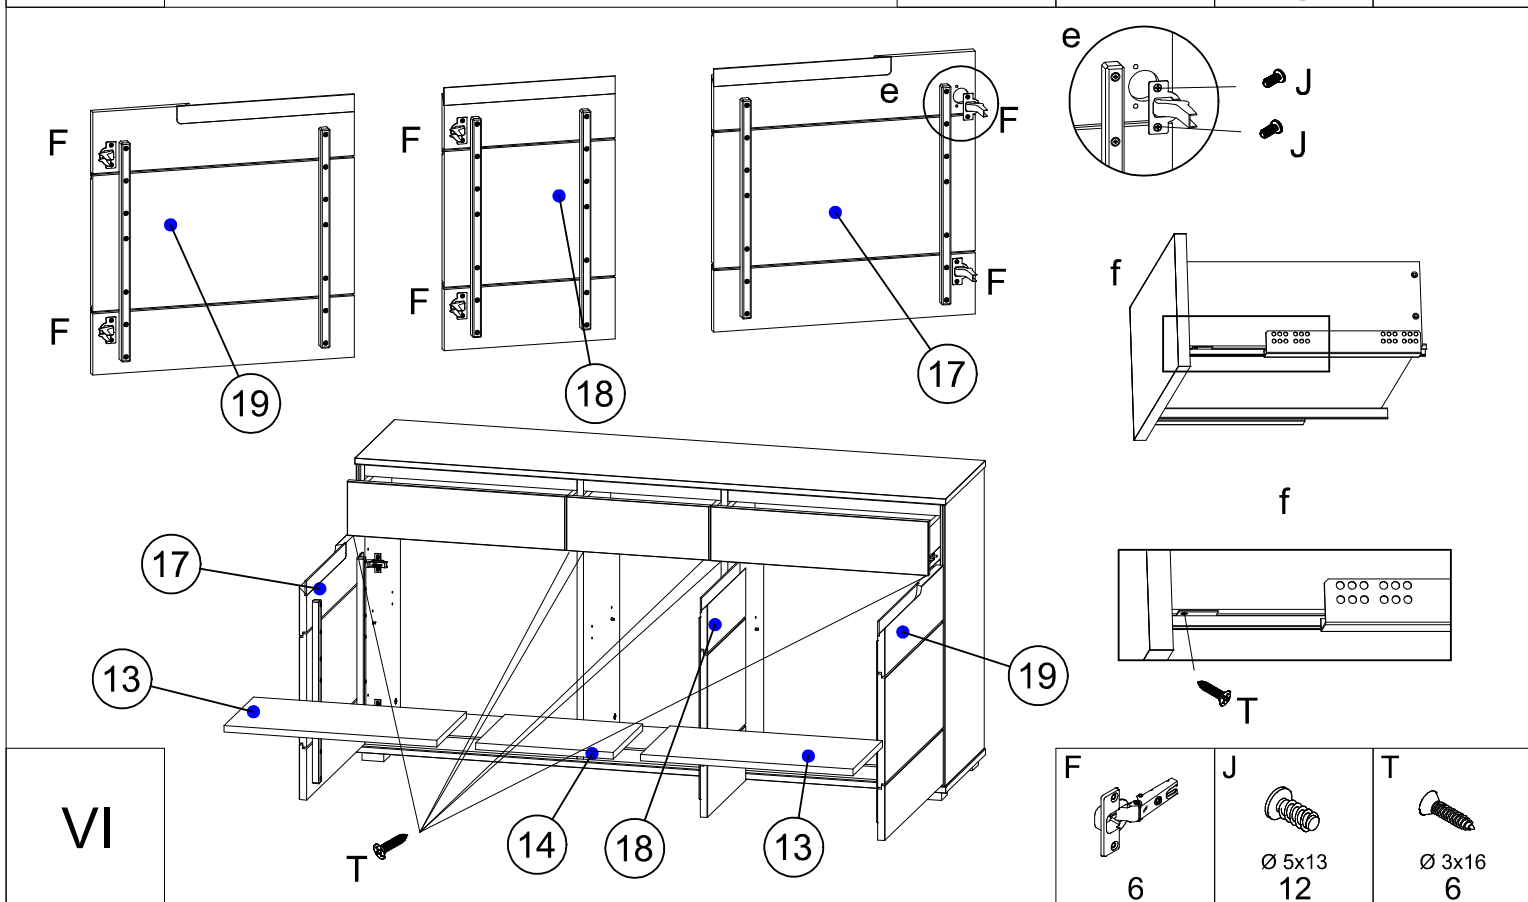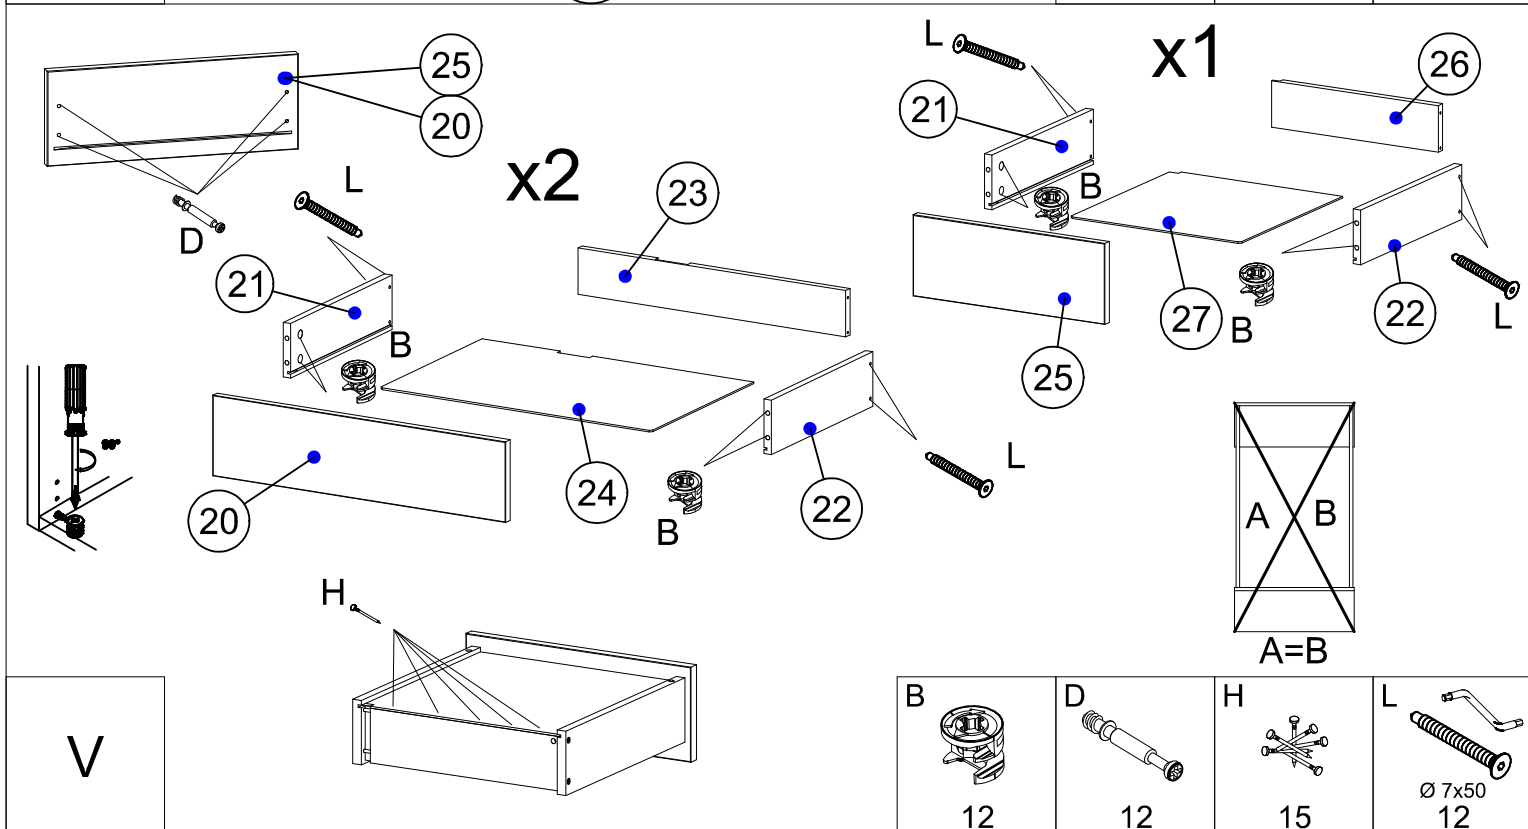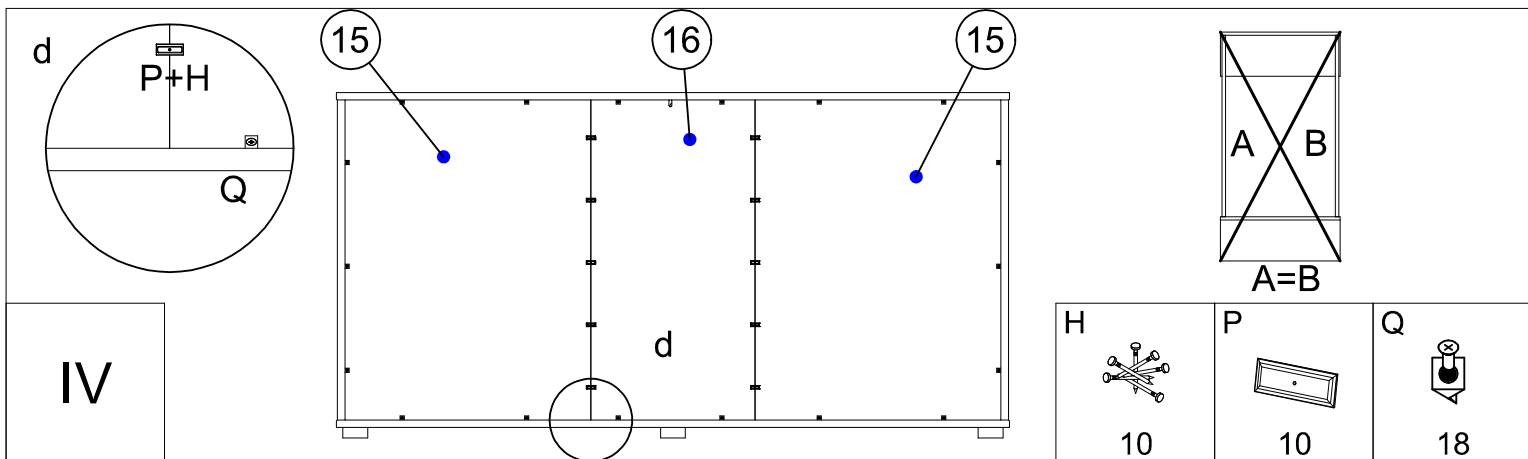

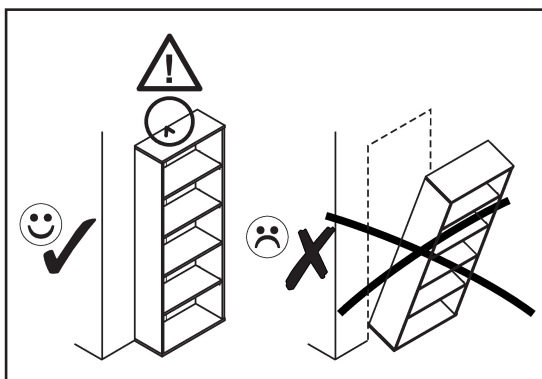

U g

