




ASSEMBLY INSTRUCTION 24590032/01

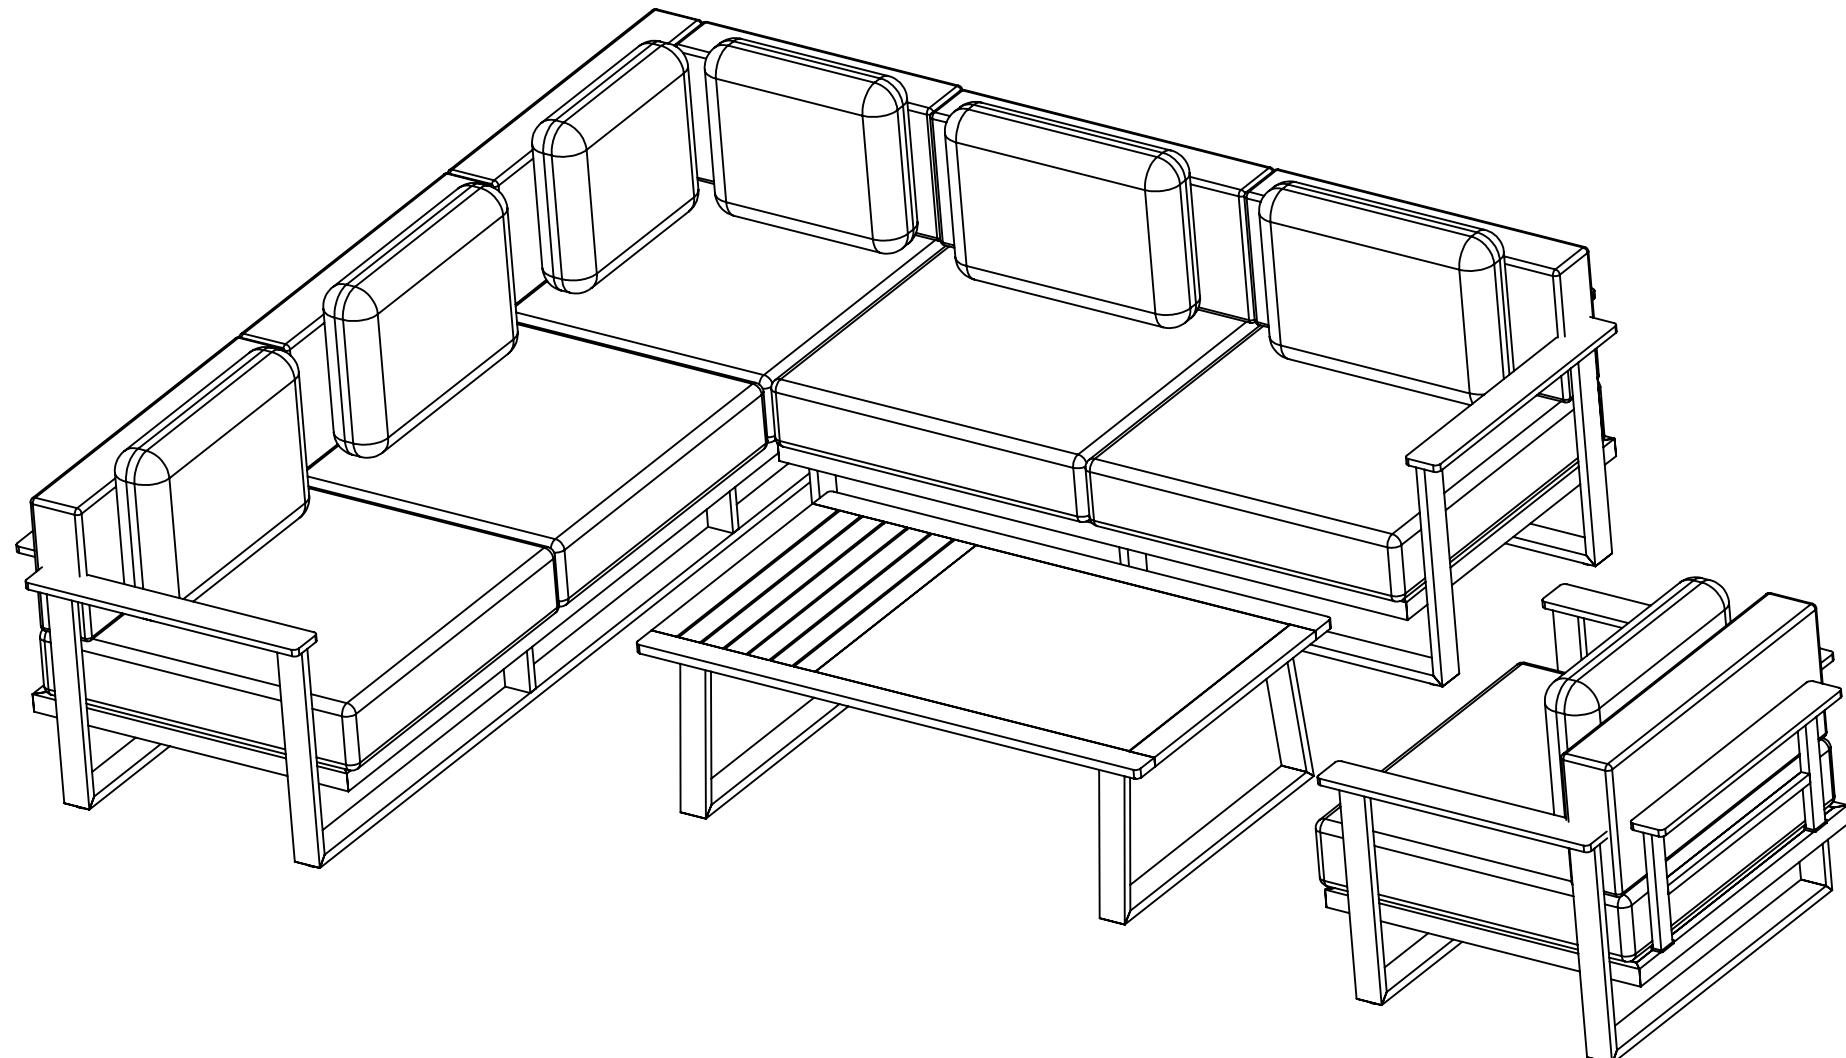


A x 1

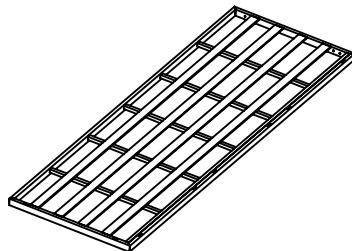


B x 1

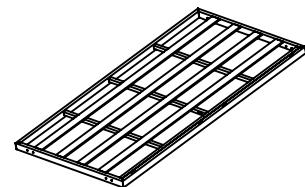


C x 1

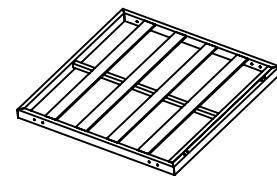


D x 1

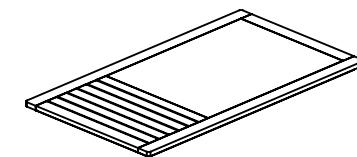


E x 2

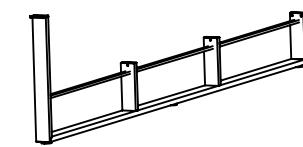


F x 2

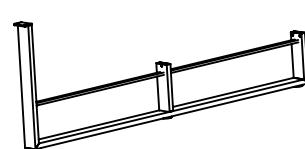


G x 2

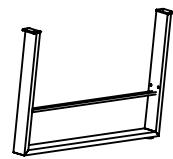


H x 2

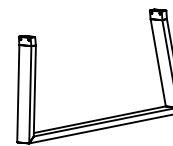


I x 4

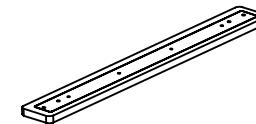


K x 7

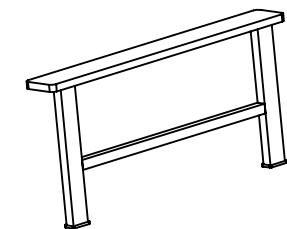


L x 6

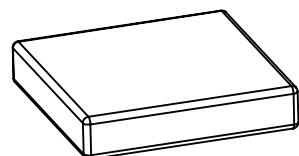


M x 6

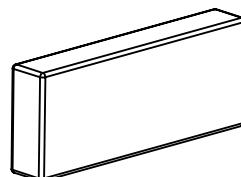

N x 1

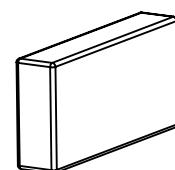

O x 7

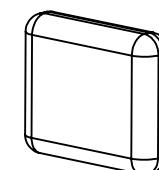

① x 28



Bolt M6*55

② x 38



Bolt M6*35

③ x 16




Bolt M6*10

④ x 66




Washer M6

⑤ x 1

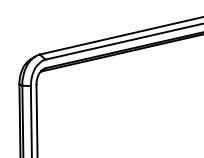


Allenkey

⑥ x 2




Velcro


STEP 1

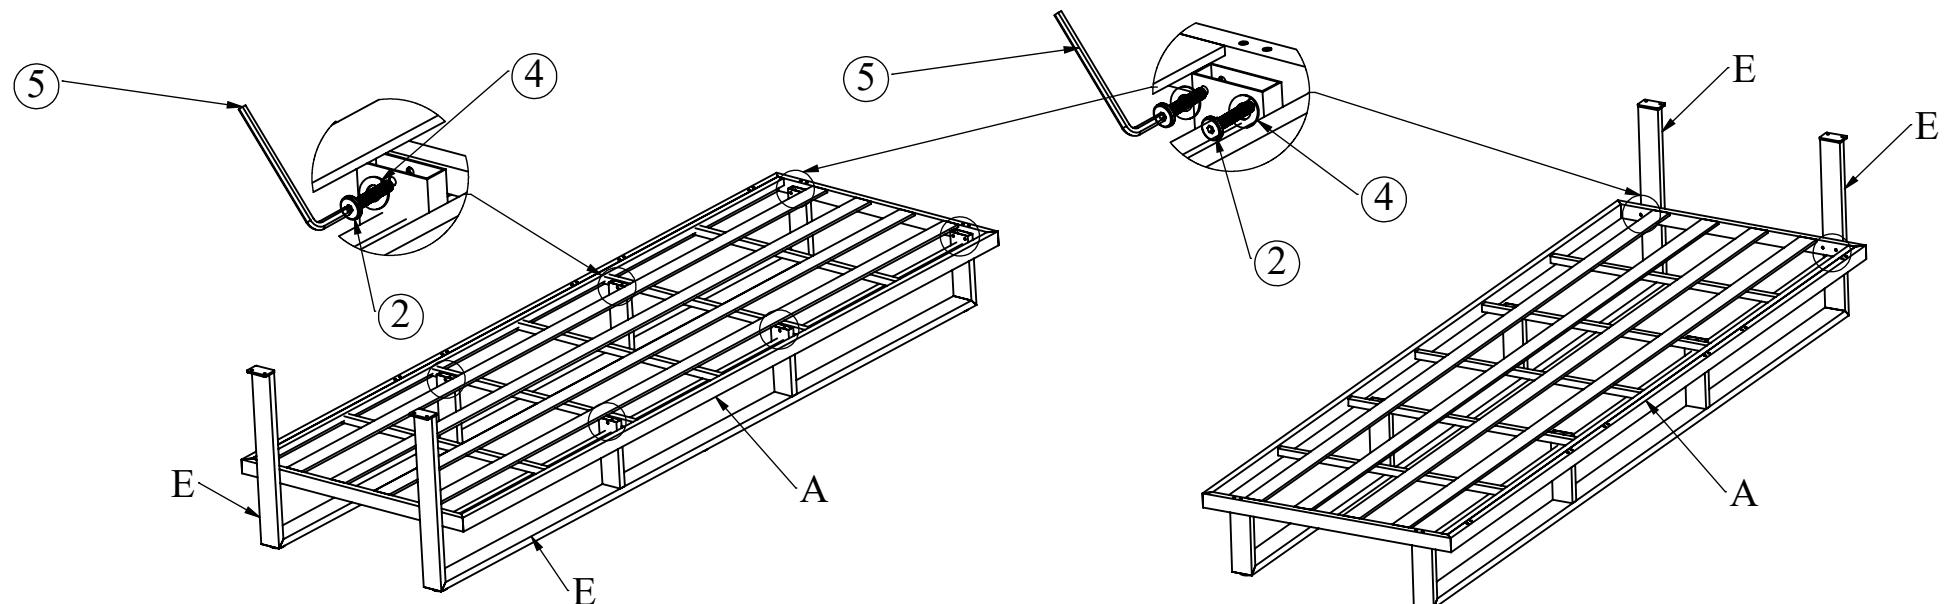


STEP 2

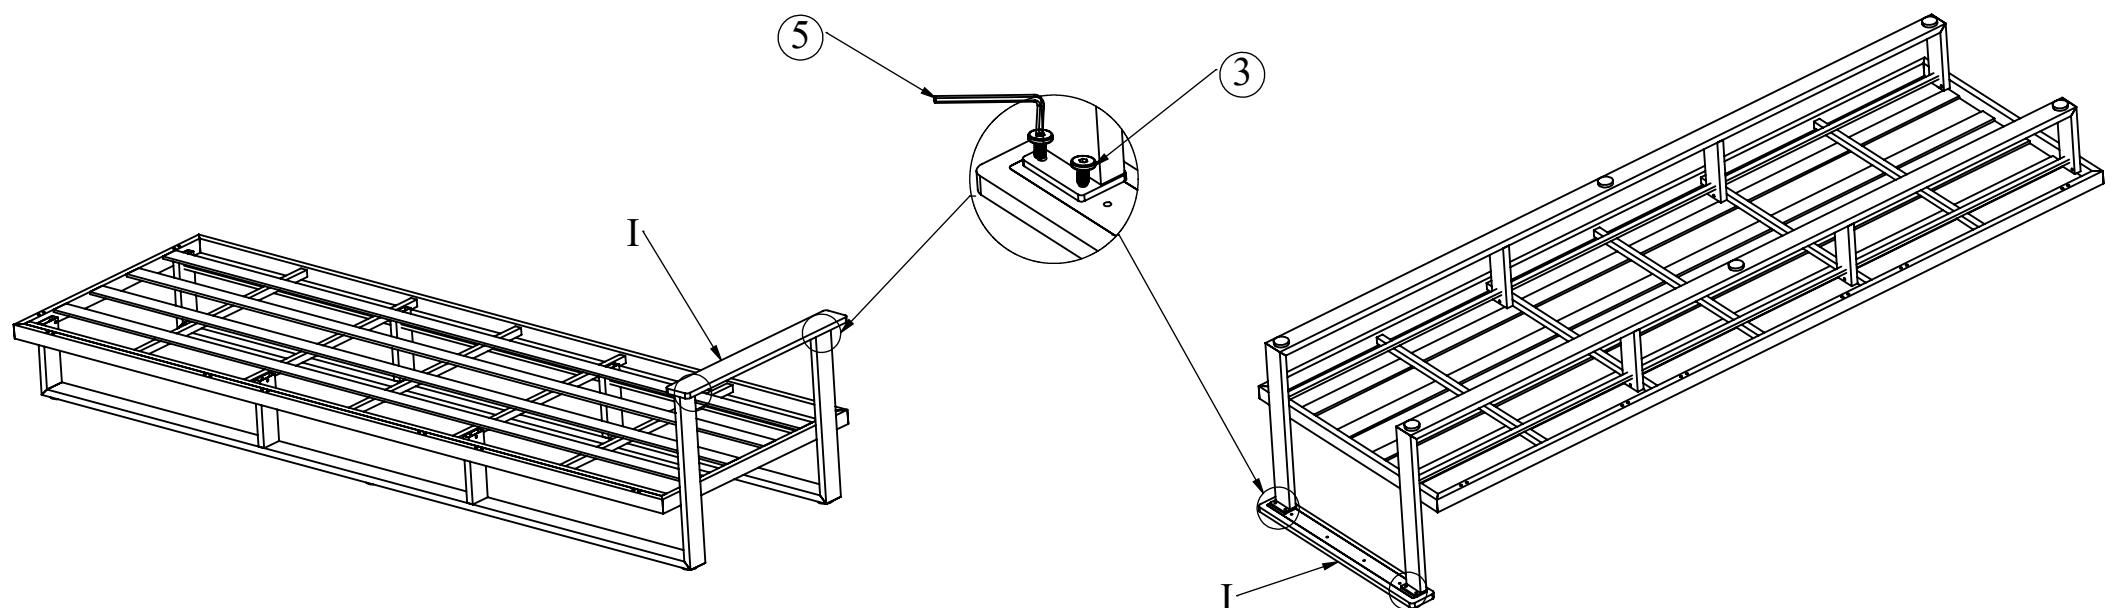


STEP 3

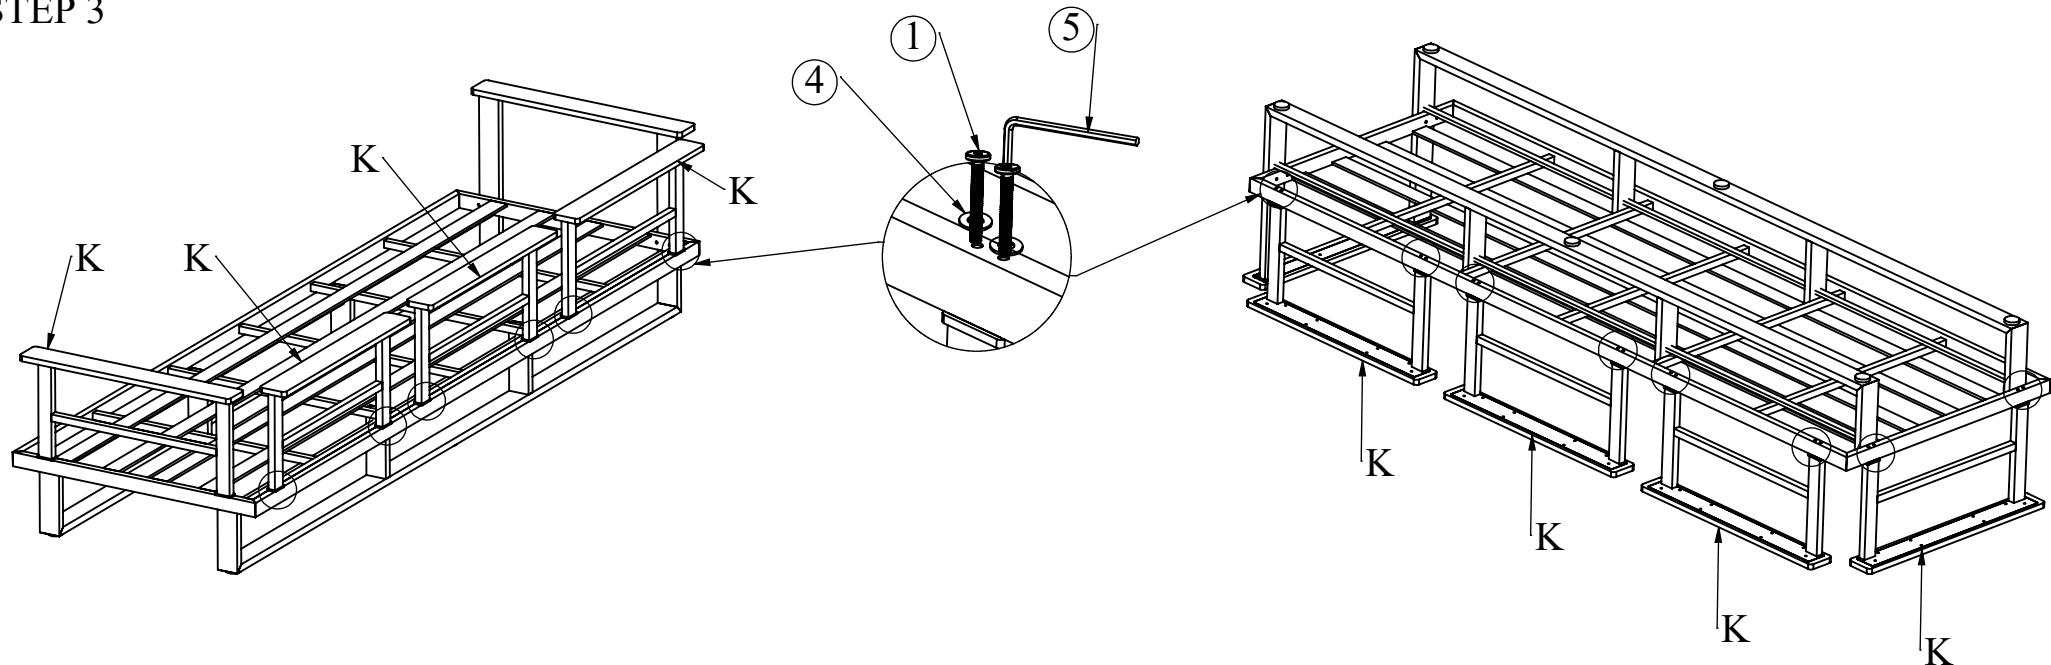


STEP 4

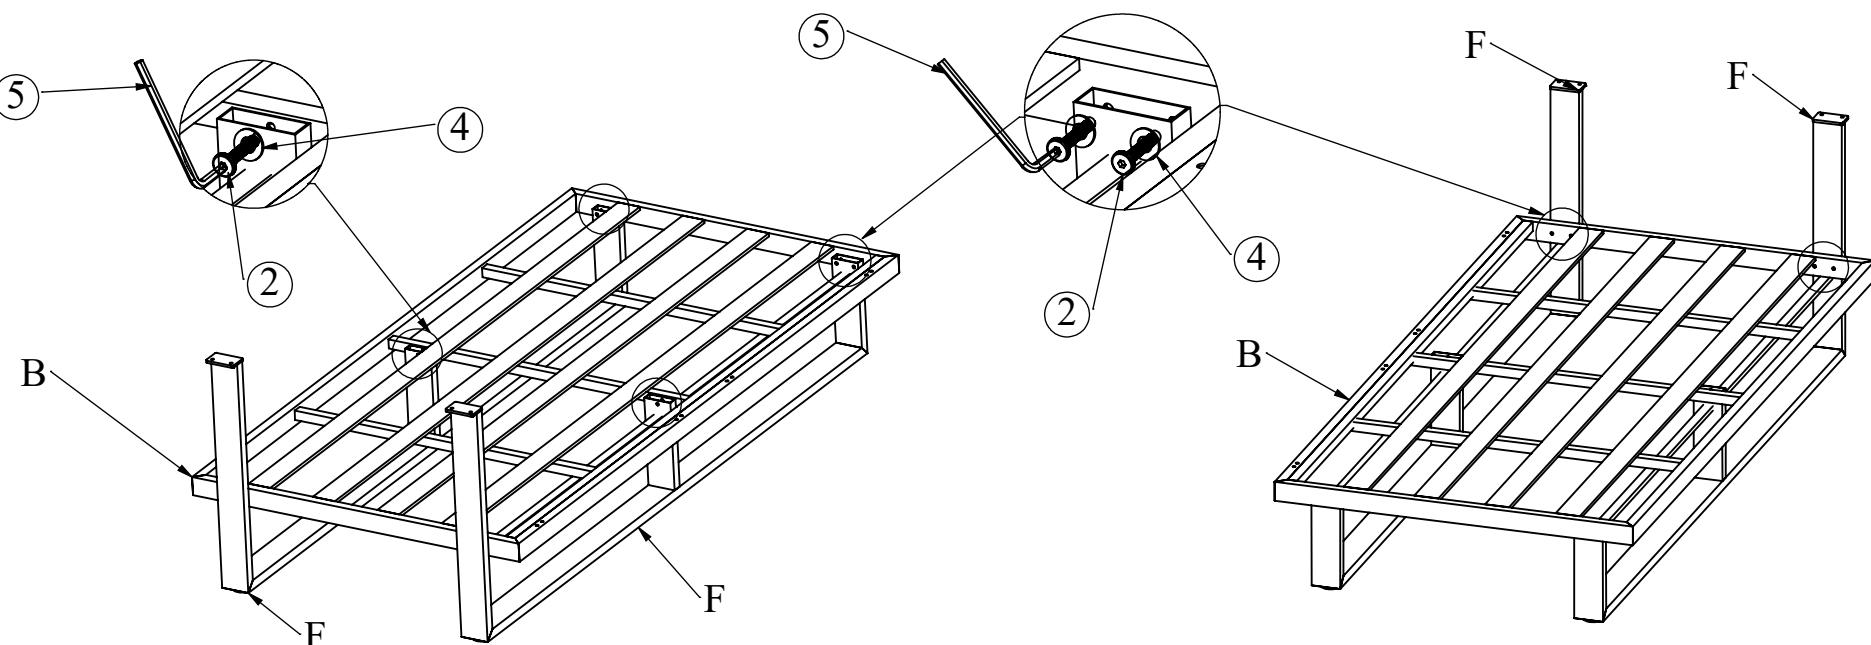



STEP 5

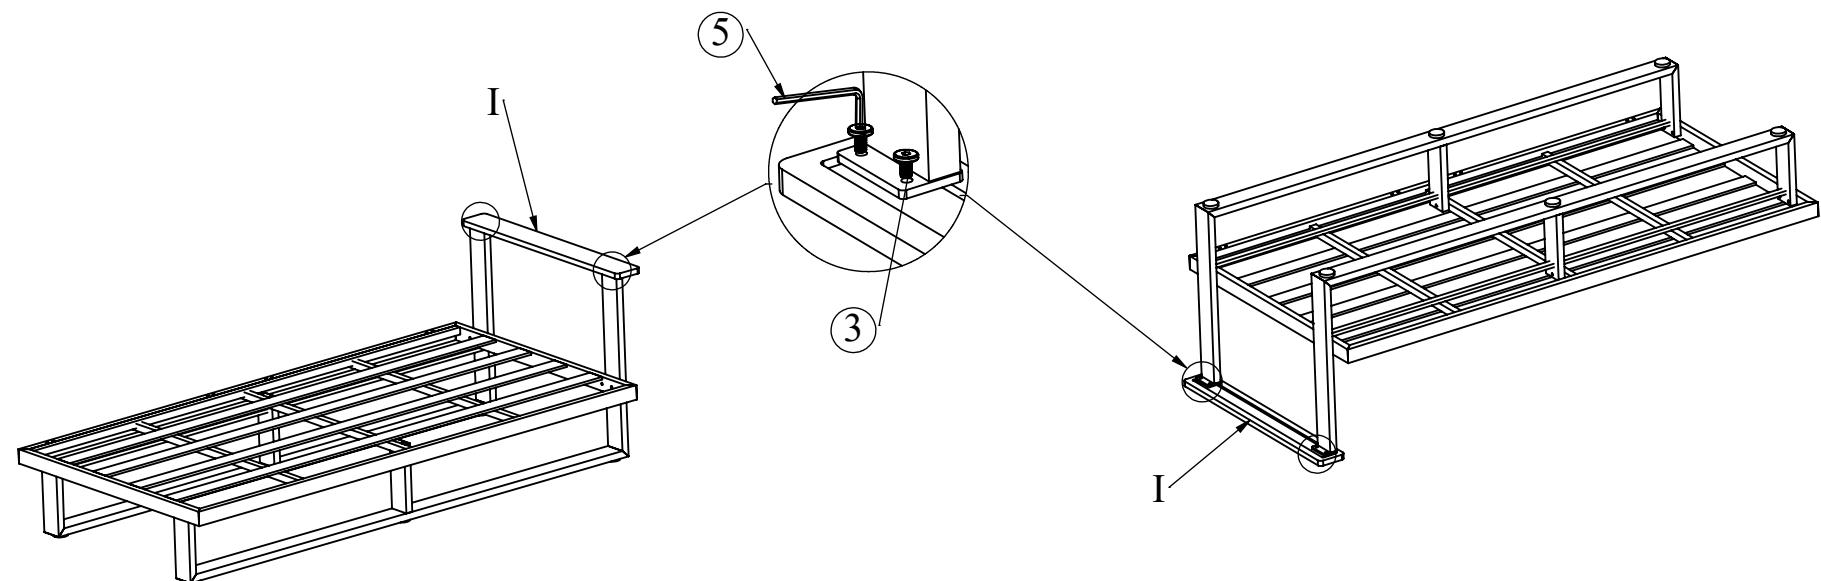




STEP 6

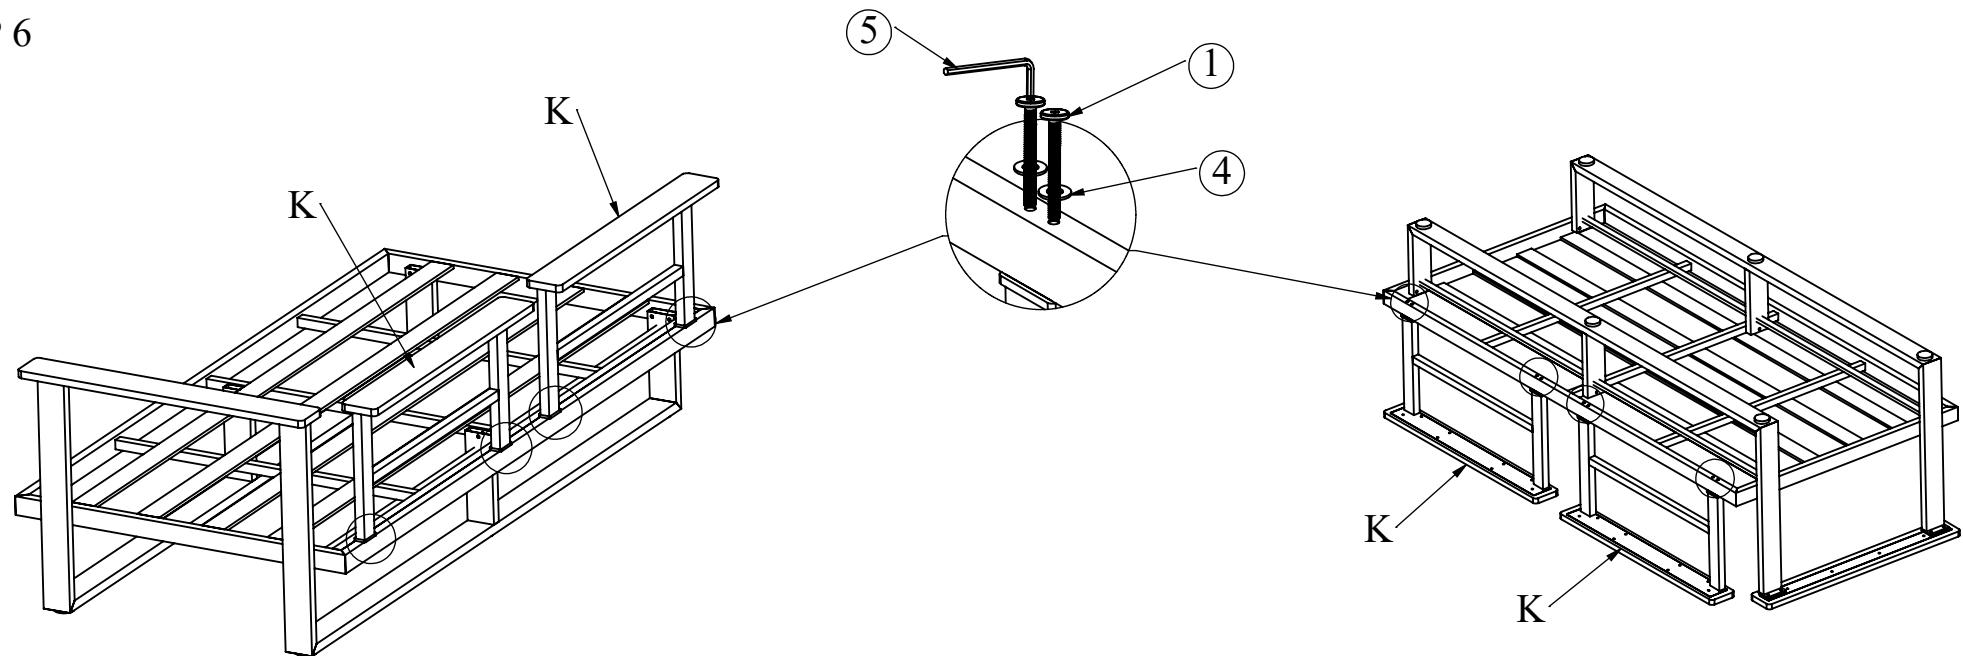


STEP 7

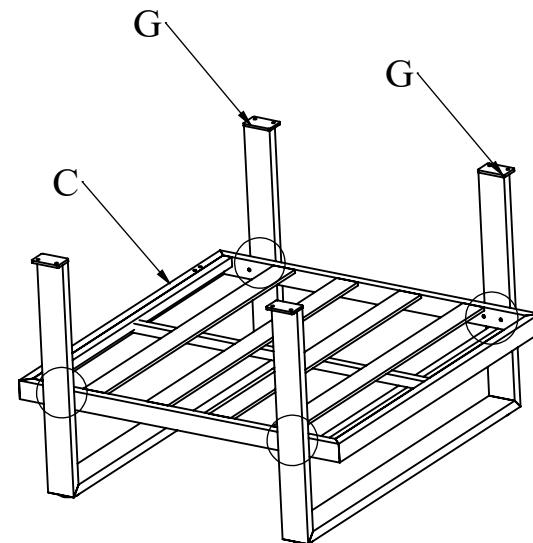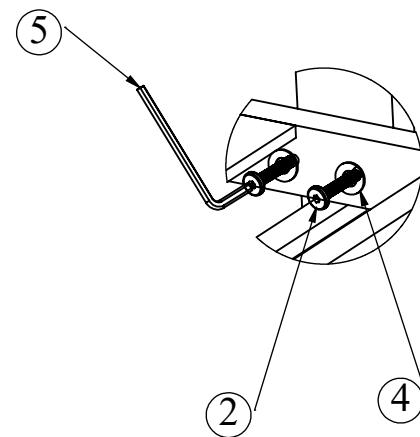


STEP 8

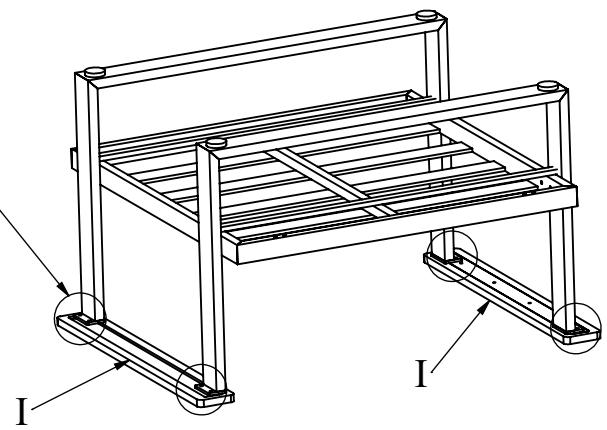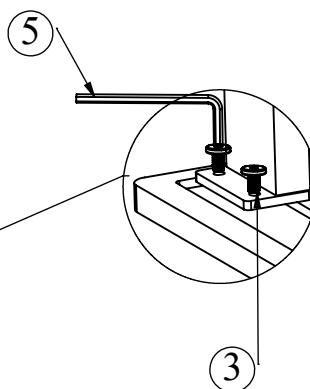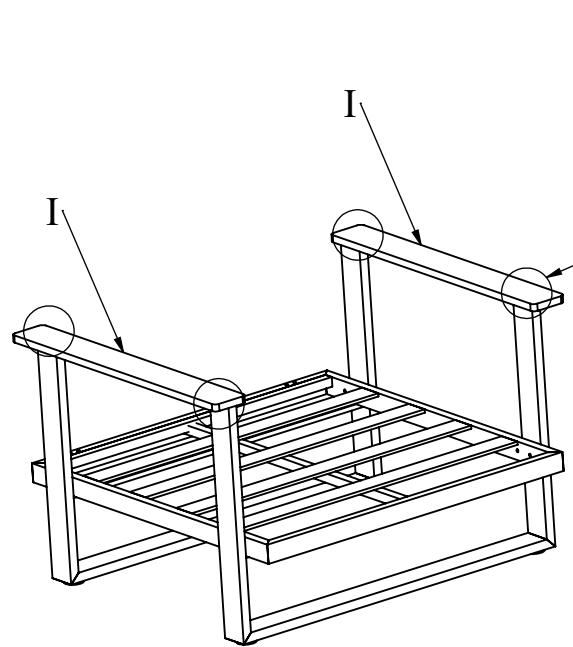


STEP 9

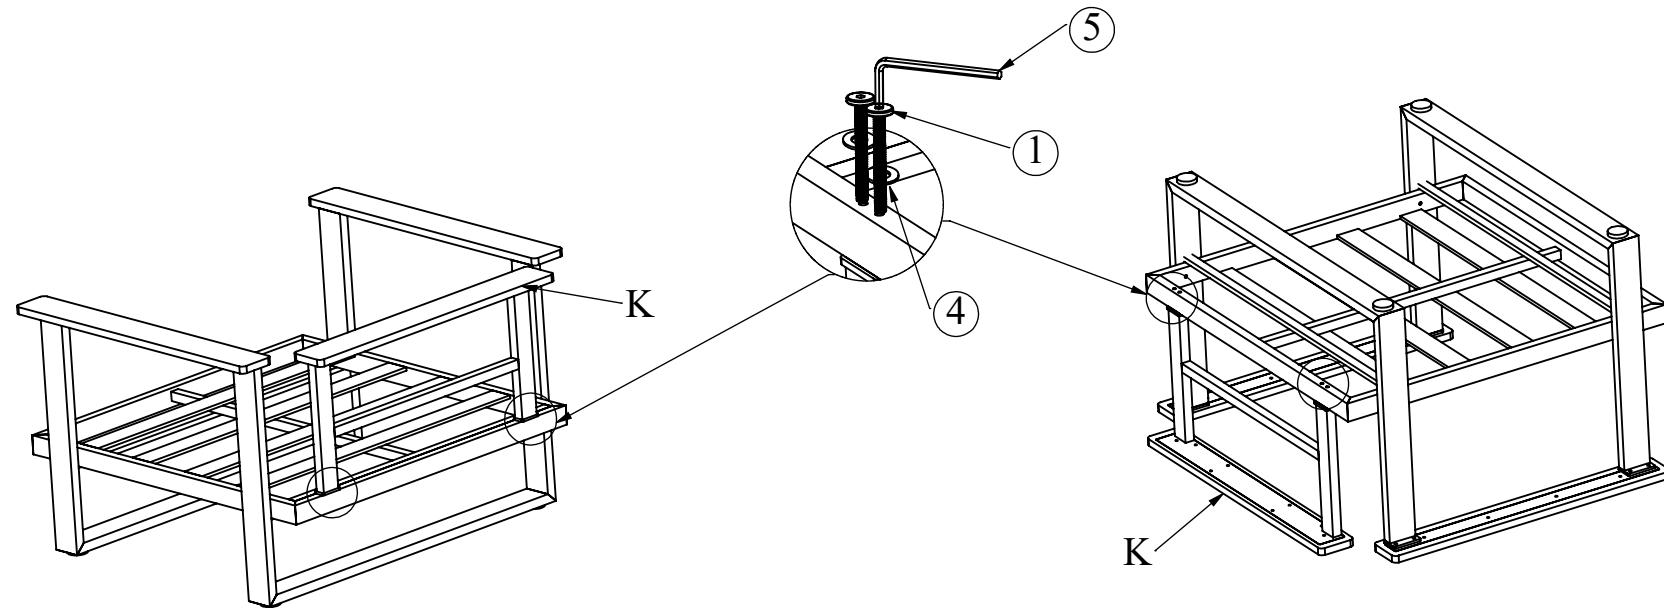

STEP 10

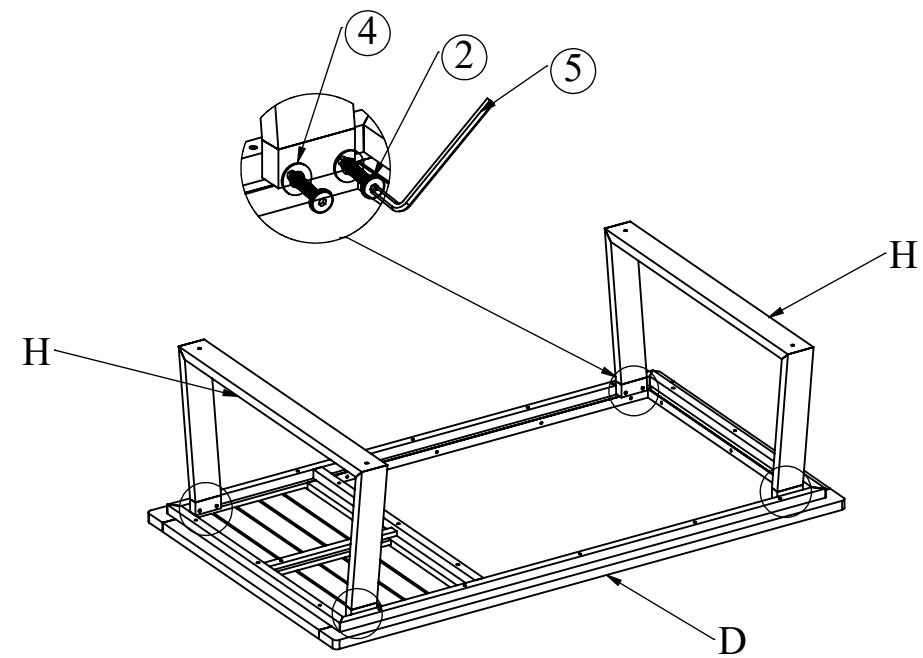

STEP 11

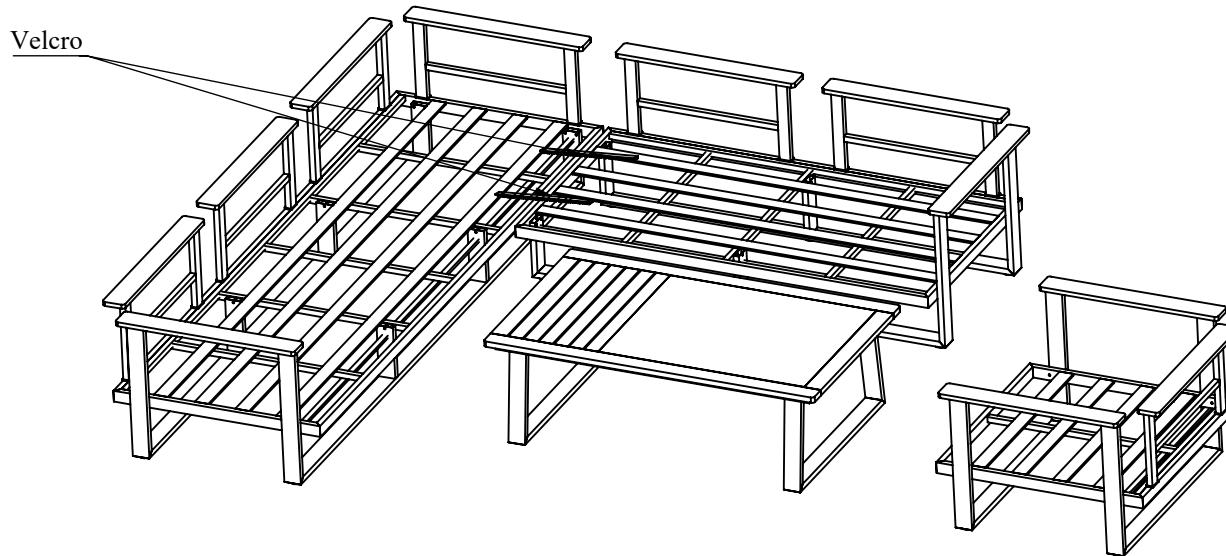

FINISH

