

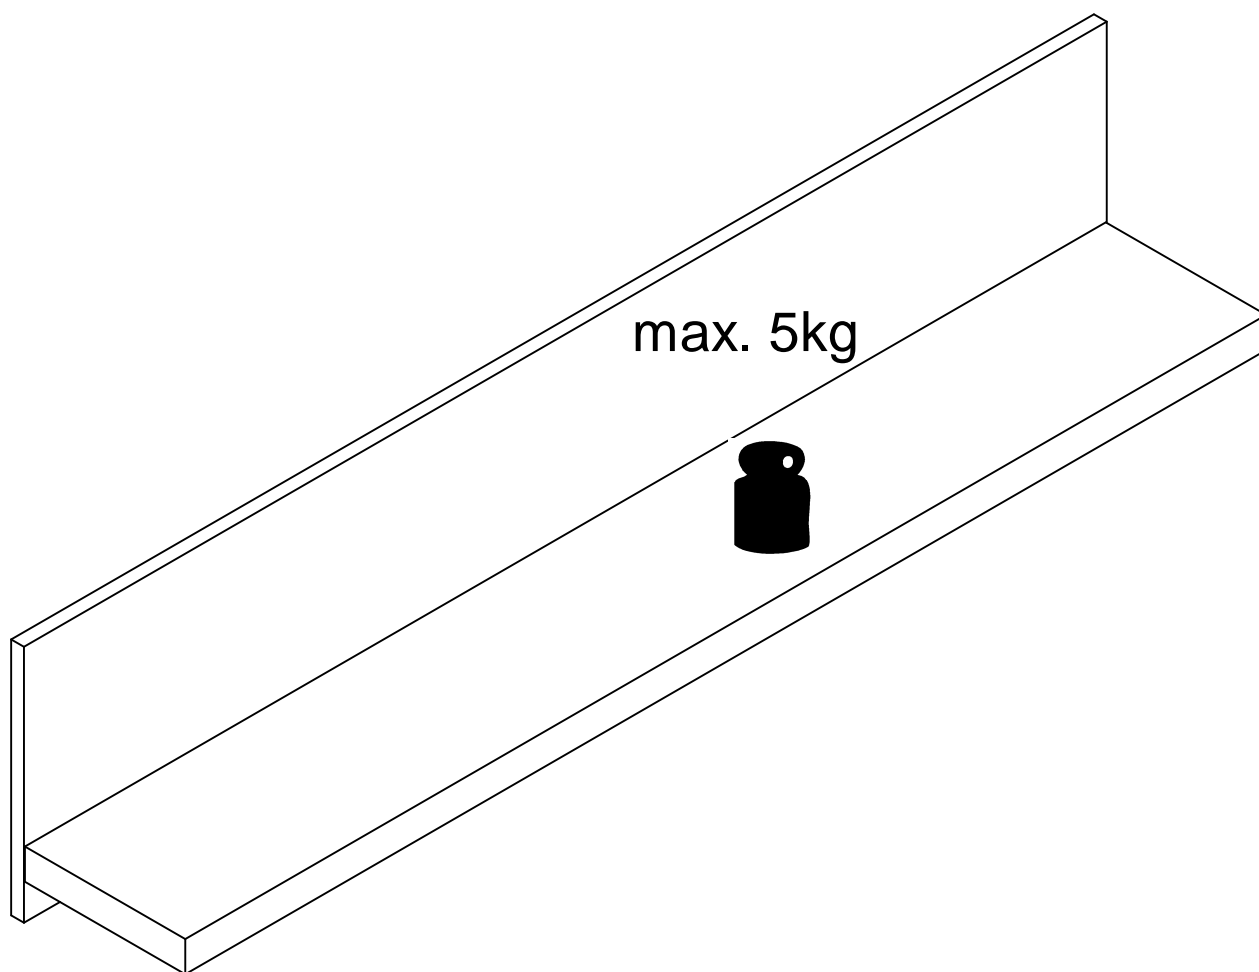
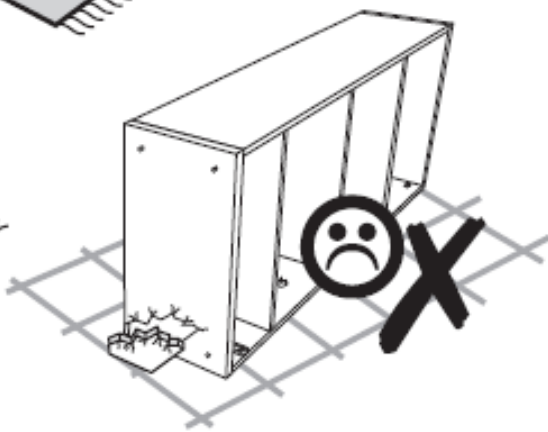
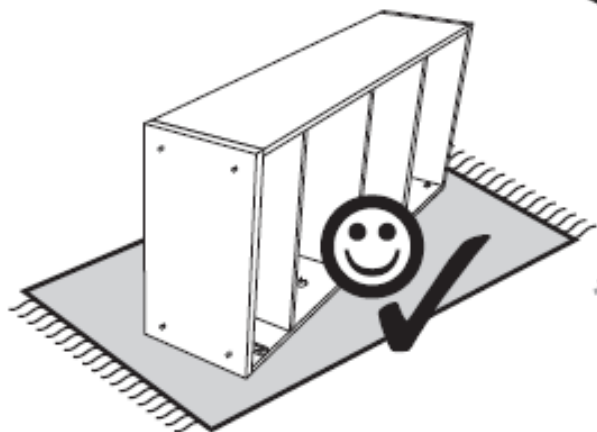
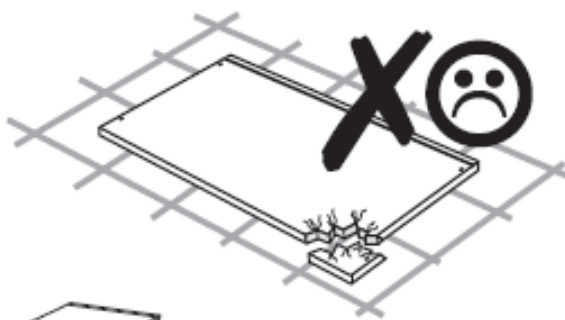
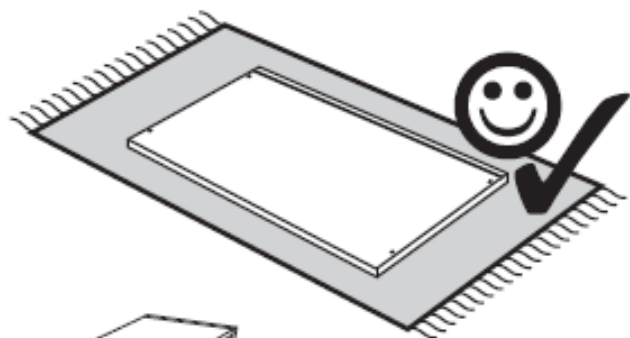
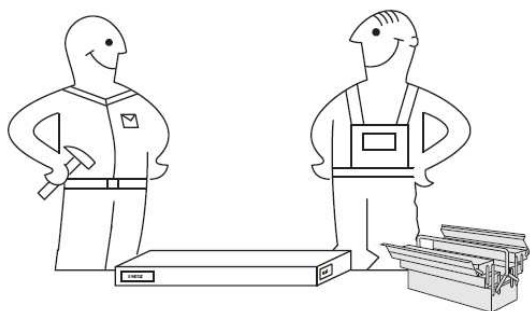



# Eleganza

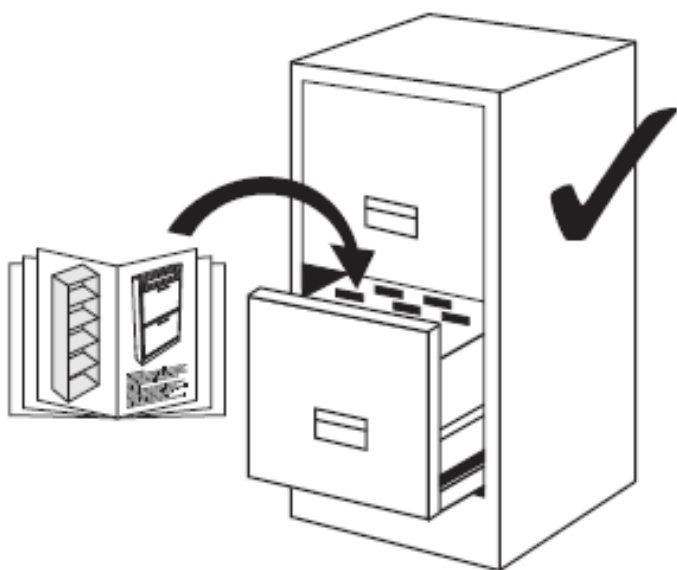





3044HW Wotaneiche  
(Rustica Oak)

# 30

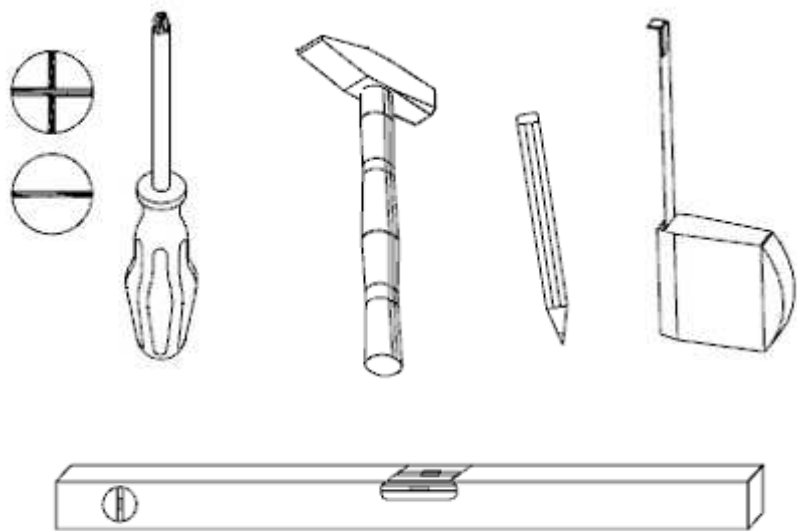




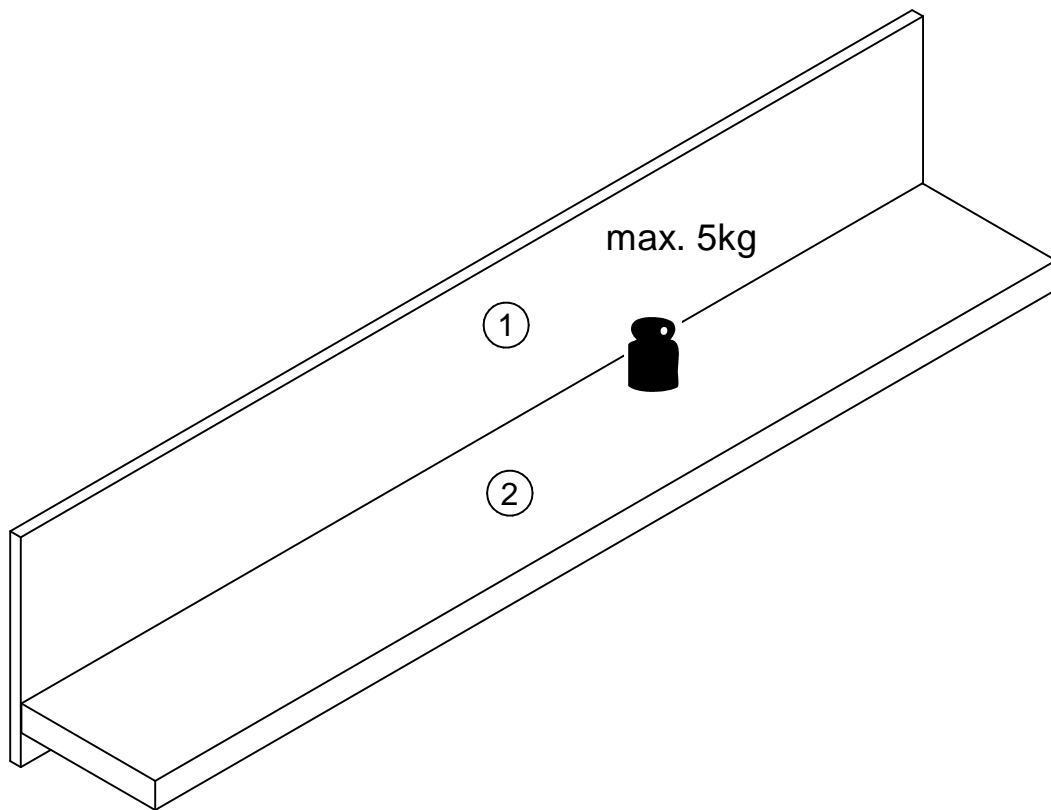




BT1007	MM1188	MM1070	MM1001	BT1008	MM1007
					
x2	x4 Ø6,3x9	x2 Ø7x1,5	x7 Ø7,7x45	x2 5,8x50	x1 4mm




1.



BT1007	MM1188	MM1070
x2	x4	x2

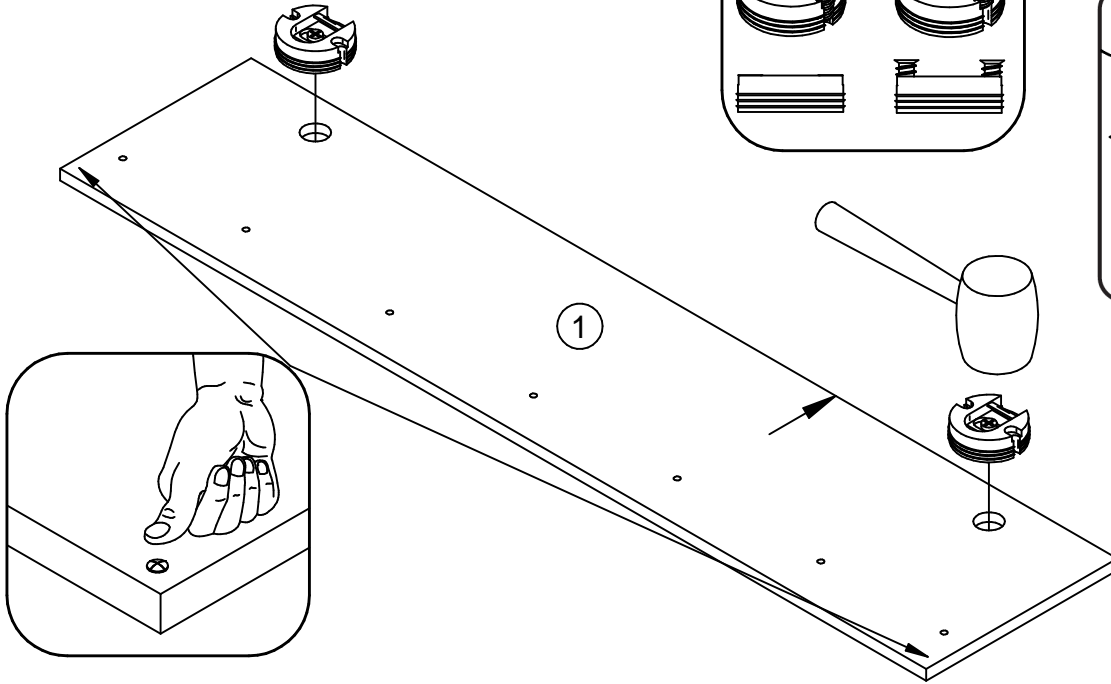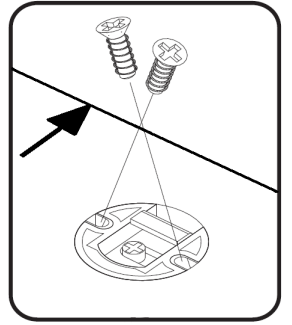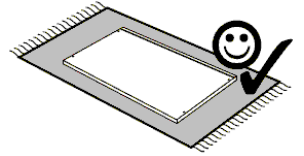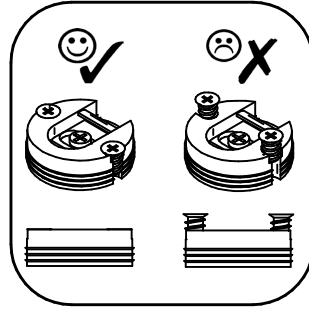


2.

MM1001	MM1007
Ø7,7x45	4mm
x7	x1

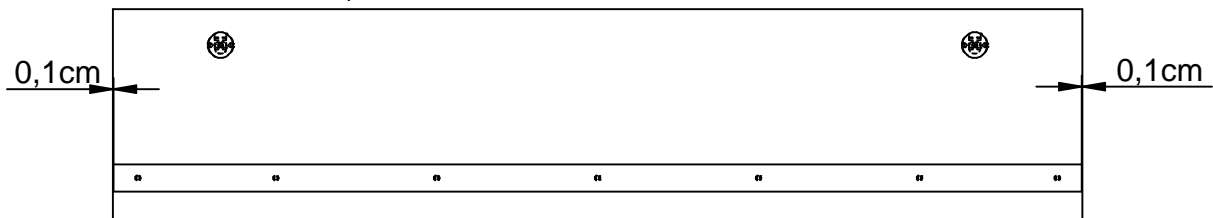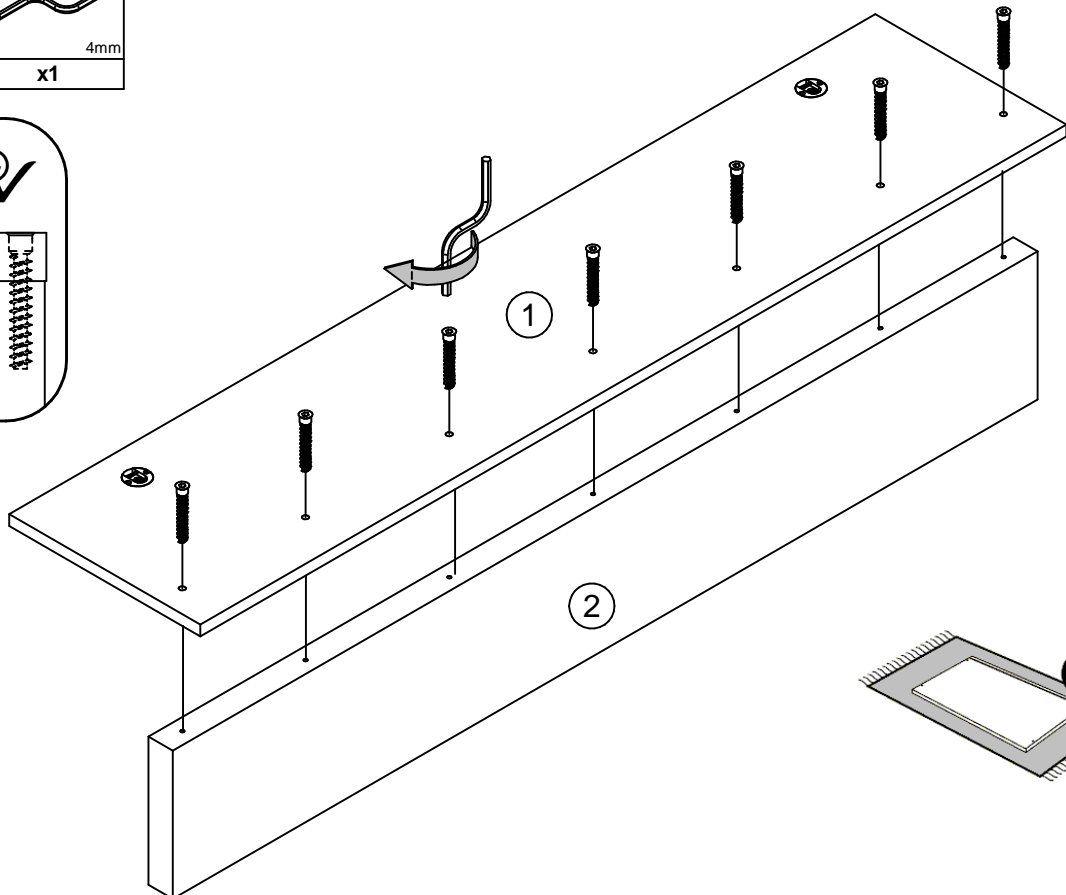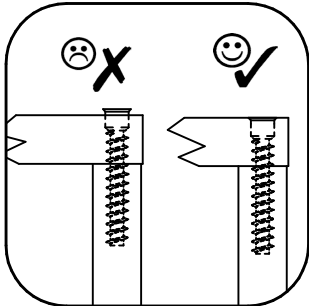


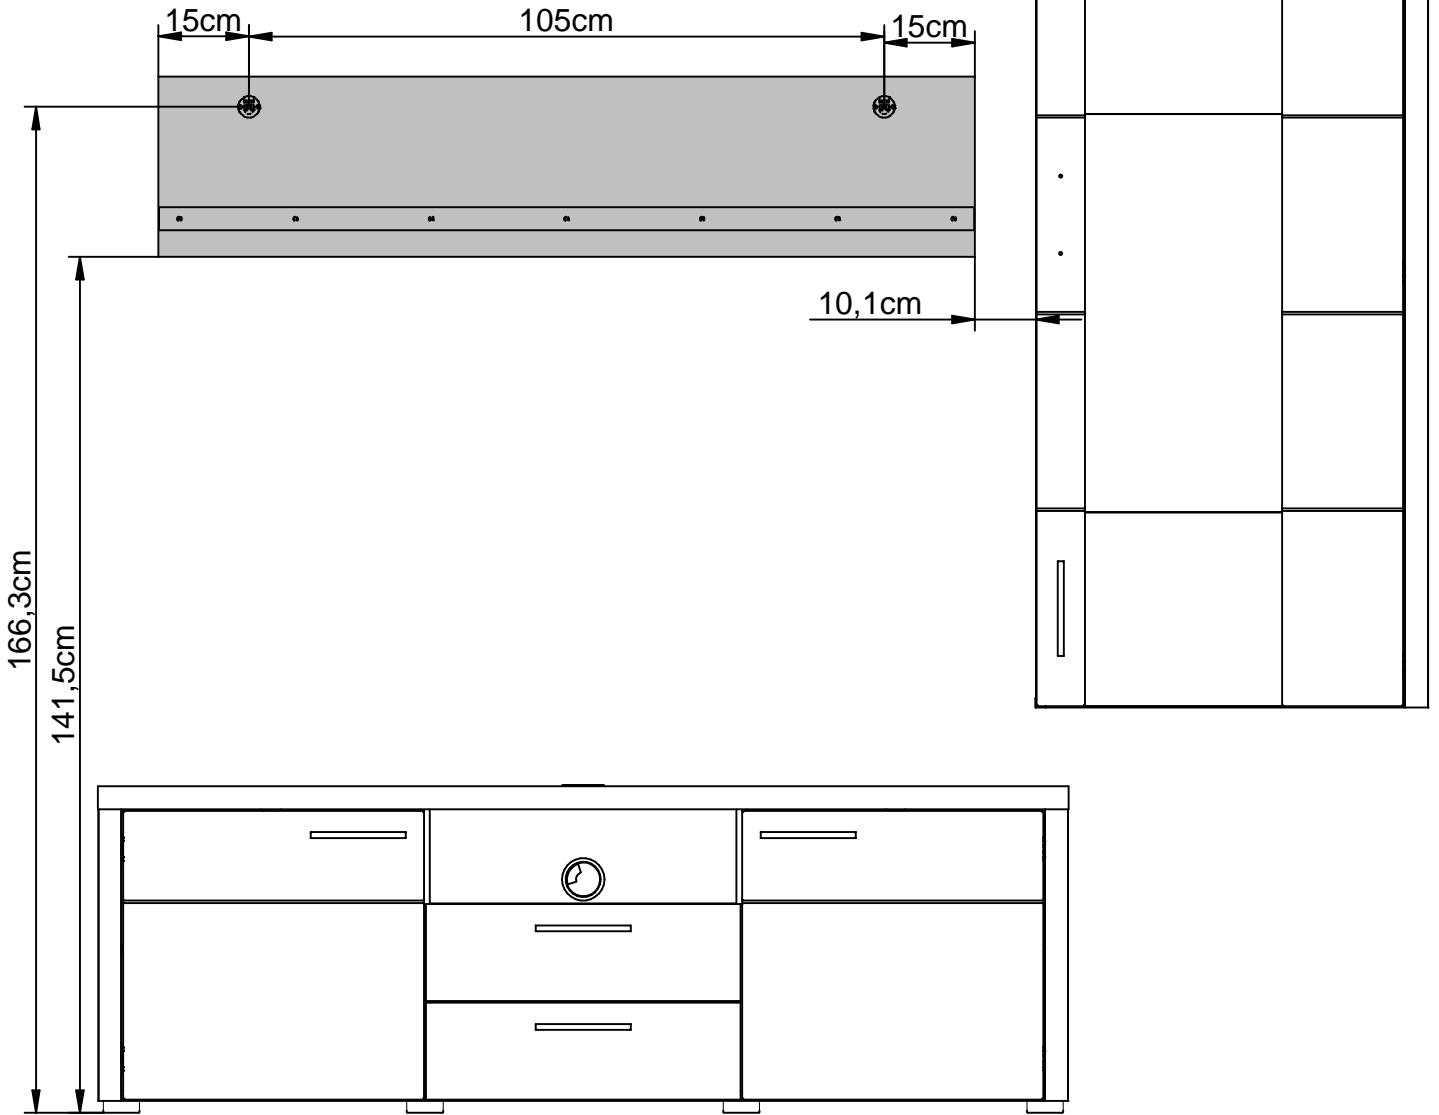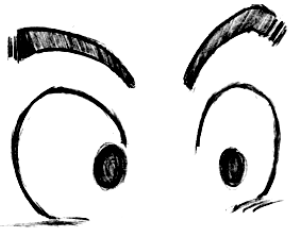

3.



2x

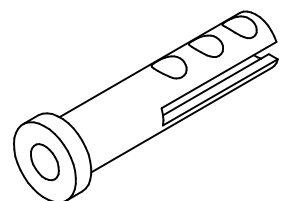

4.

