


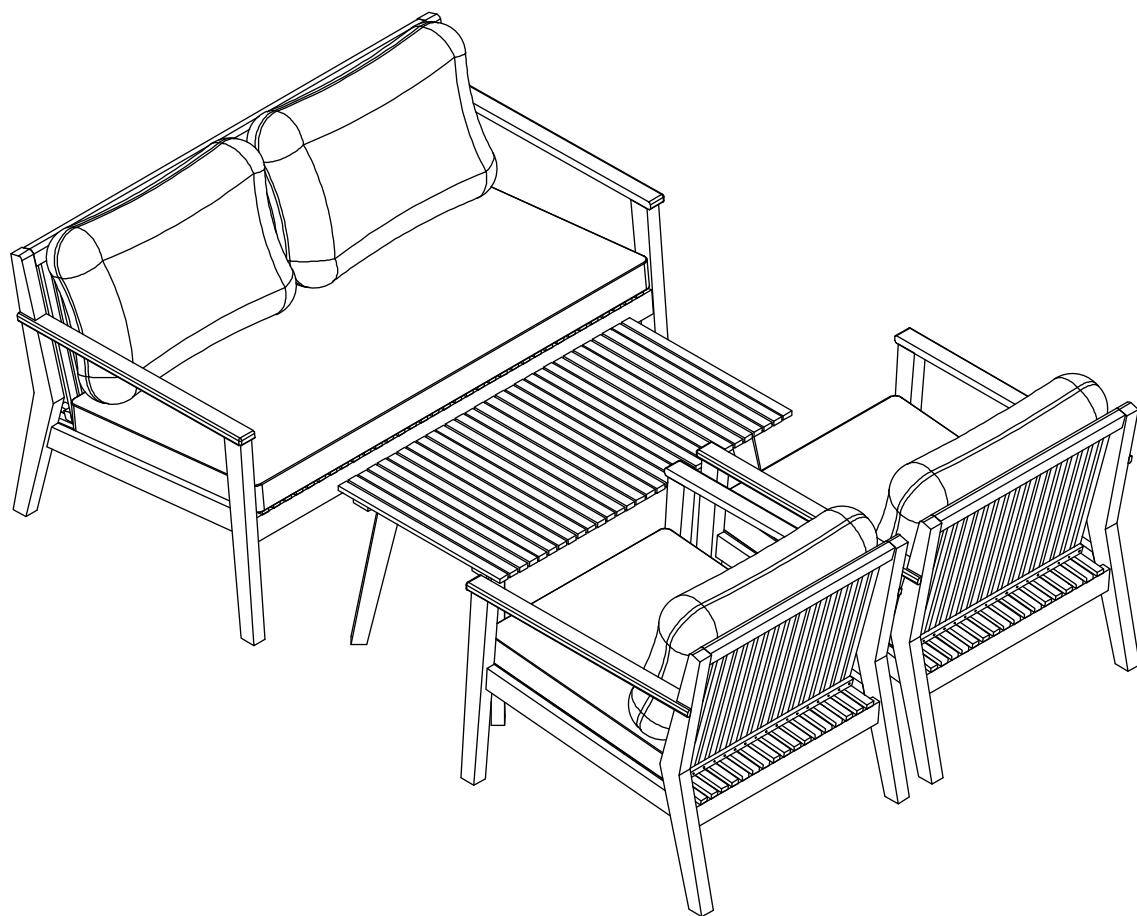


ASSEMBLY INSTRUCTION: 12540080/01

BELDANO


MX Logistika SL, spol.s.r.o
Rožnavská 32
SK-82104 Bratislava, Slovakia




ASSEMBLY INSTRUCTION: 12540080/01

No	Name of hardware	Fig	Qty
1	Bolt M6x45 mm		8
2	Washer		8
3	Allen Key		1


A x 1

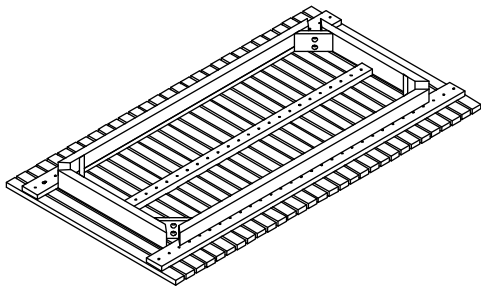


B x 4



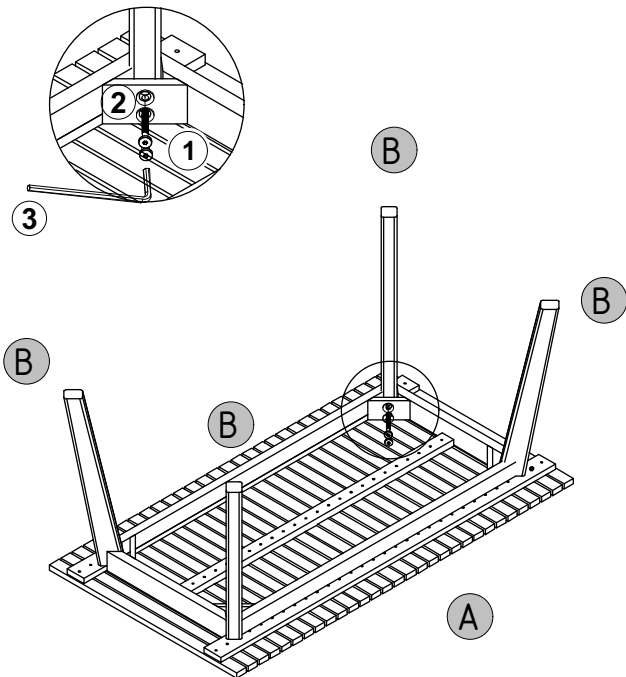


Step 1:

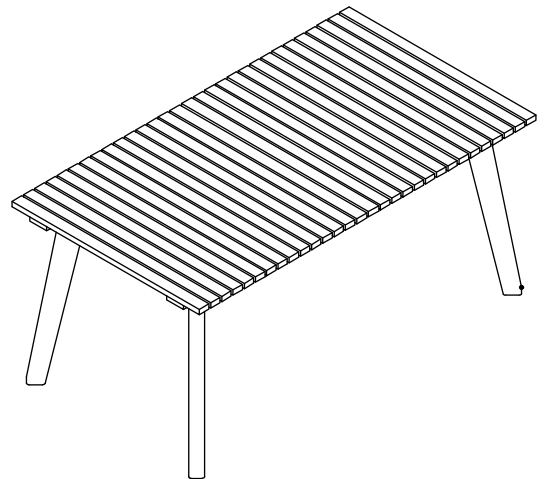

Step 2:



ASSEMBLY INSTRUCTION: 12540080/01






No	Name of hardware	Fig	Qty
1	Screw M6x60 mm		6
2	Screw M6x30 mm		2
3	Allen Key		1

A x1


B x1

C x1

D x1

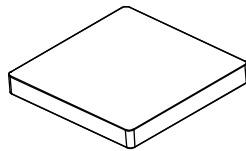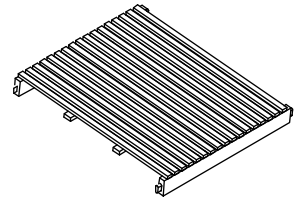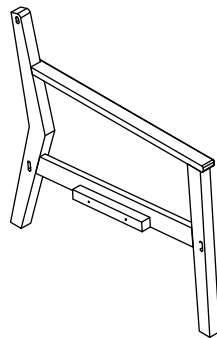
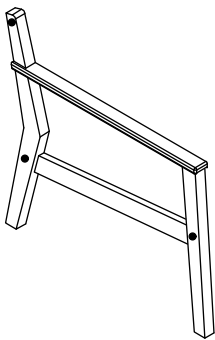


E x1

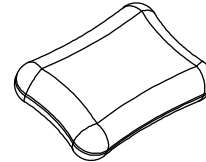

F x1


Step 1:

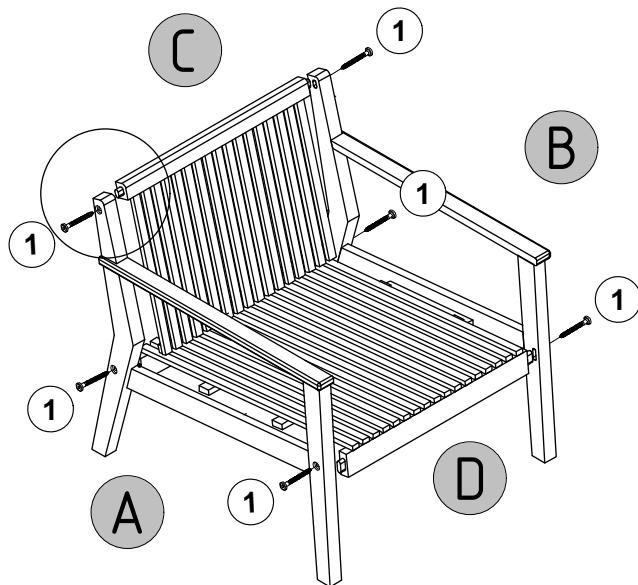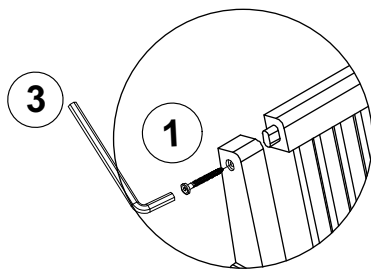

X2


ASSEMBLY INSTRUCTION: 12540080/01

Step 2:

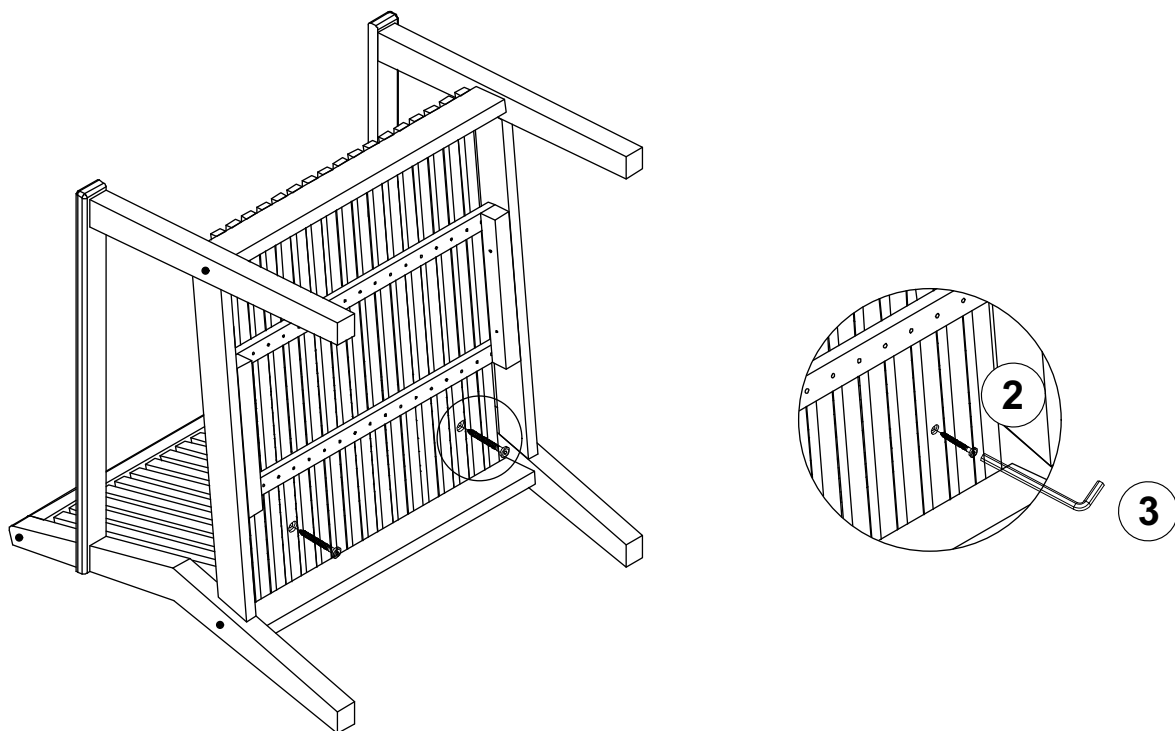



X2

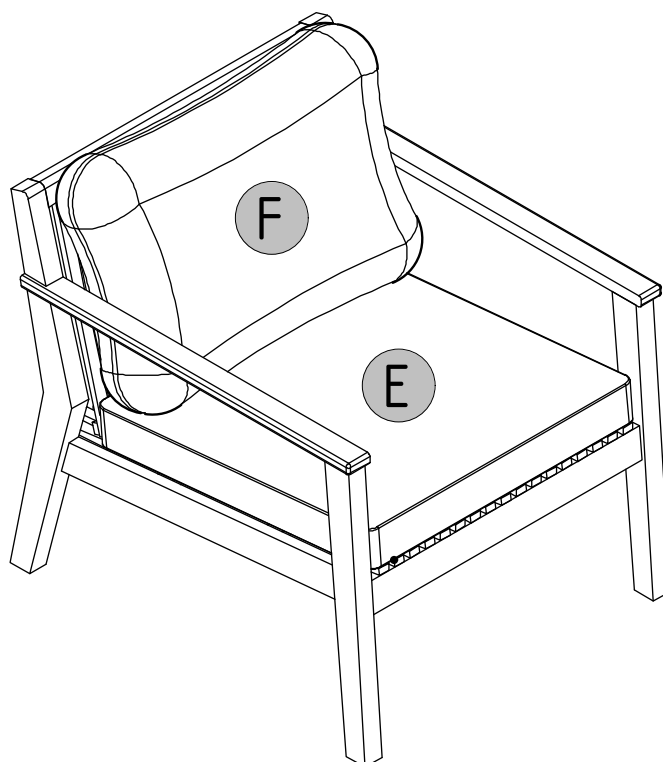Step 3:




X2


ASSEMBLY INSTRUCTION: 12540080/01

No	Name of hardware	Fig	Qty
1	Screw M6x60 mm		6
2	Screw M6x30 mm		3
3	Allen Key		1


A x1

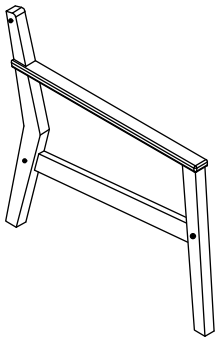


B x1

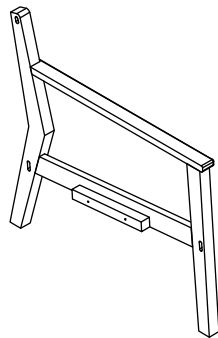


C x1

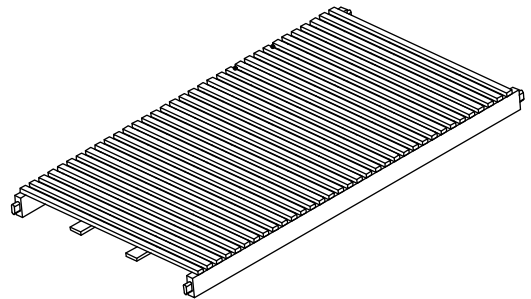


D x1

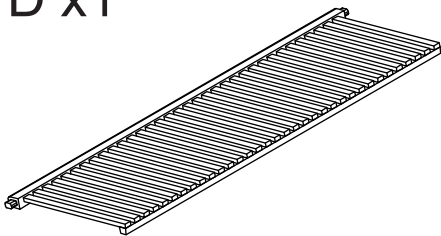



E x1

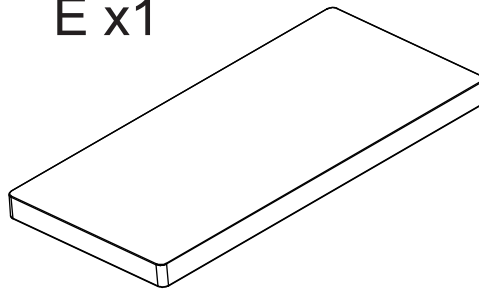

F x2

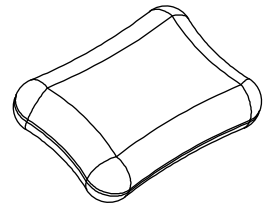


Step 1:

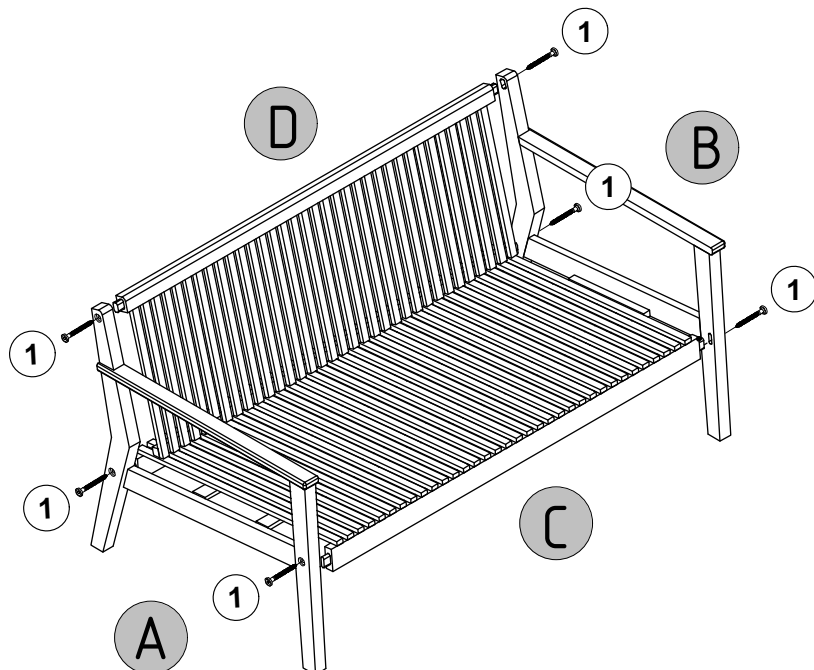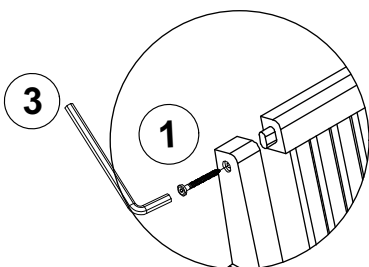

ASSEMBLY INSTRUCTION: 12540080/01

Step 2:

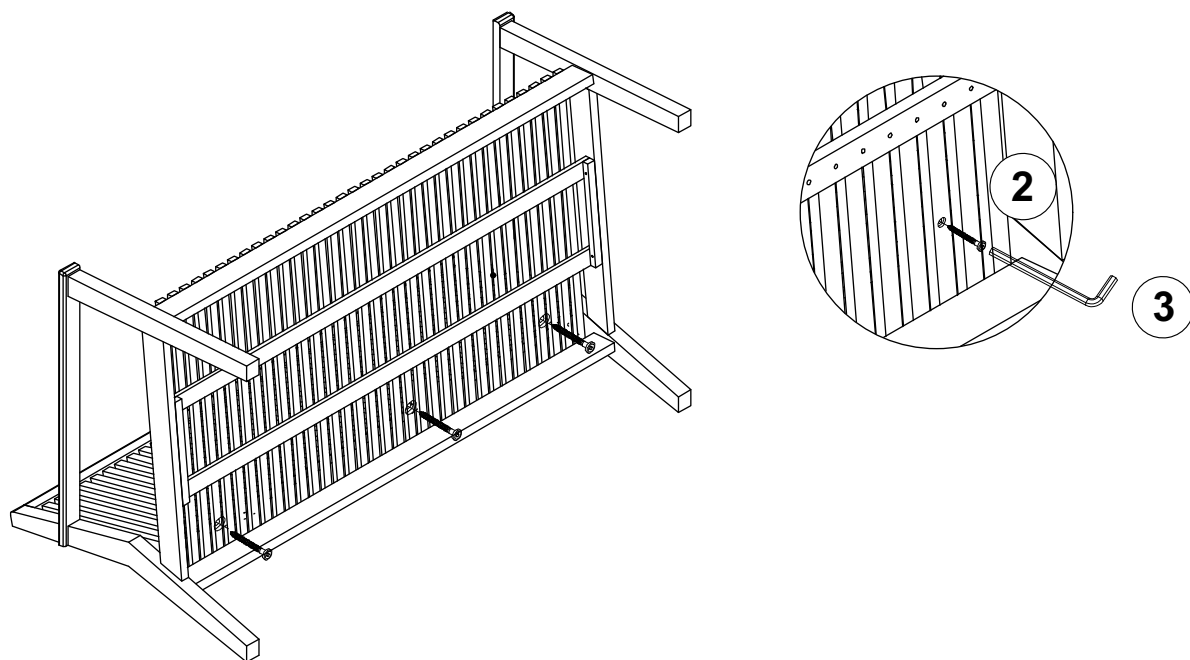

Step 3:

