
ASSEMBLY INSTRUCTIONS RETURN SPRING







2



<u>Loosen the side panels Step 1:</u> Carefully unscrew the adjustment handle







<u>Loosen the side panels Step 2:</u> Carefully unscrew the carrying handle



6



<u>Loosen the side panels Step 3:</u> Carefully unscrew all the remaining screws on the side panel






Slowly tilt the upper basket all the way back (ATTENTION, please carry out the work step with two people!)



Insert the deflection roller in the **recess** recess (all the way to the front), **pre-drill holes (3 mm)** and then screw tight


ASSEMBLY INSTRUCTIONS RETURN SPRING








Place the bracket on the upper basket (hook down), pre-drill holes (3 mm) and then screw tight

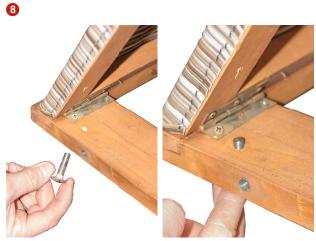

Put the screw through the hole in the <u>lower basket</u> (ATTENTION: tilt the beach chair slightly with 2 people to do this)



Screw the spring tight

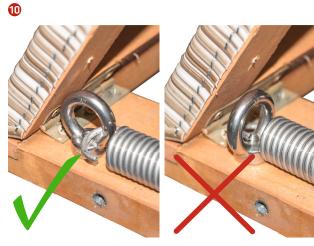

<u>ATTENTION:</u> Pay attention to the orientation of the eyelet!



Thread the wire rope through the pulley and hook it into the hook on the upper basket (ATTENTION: thread the rope in at the front)



Carefully bend the hooks on the upper basket together with pliers. Reassemble the side parts, handles and adjustment handles.